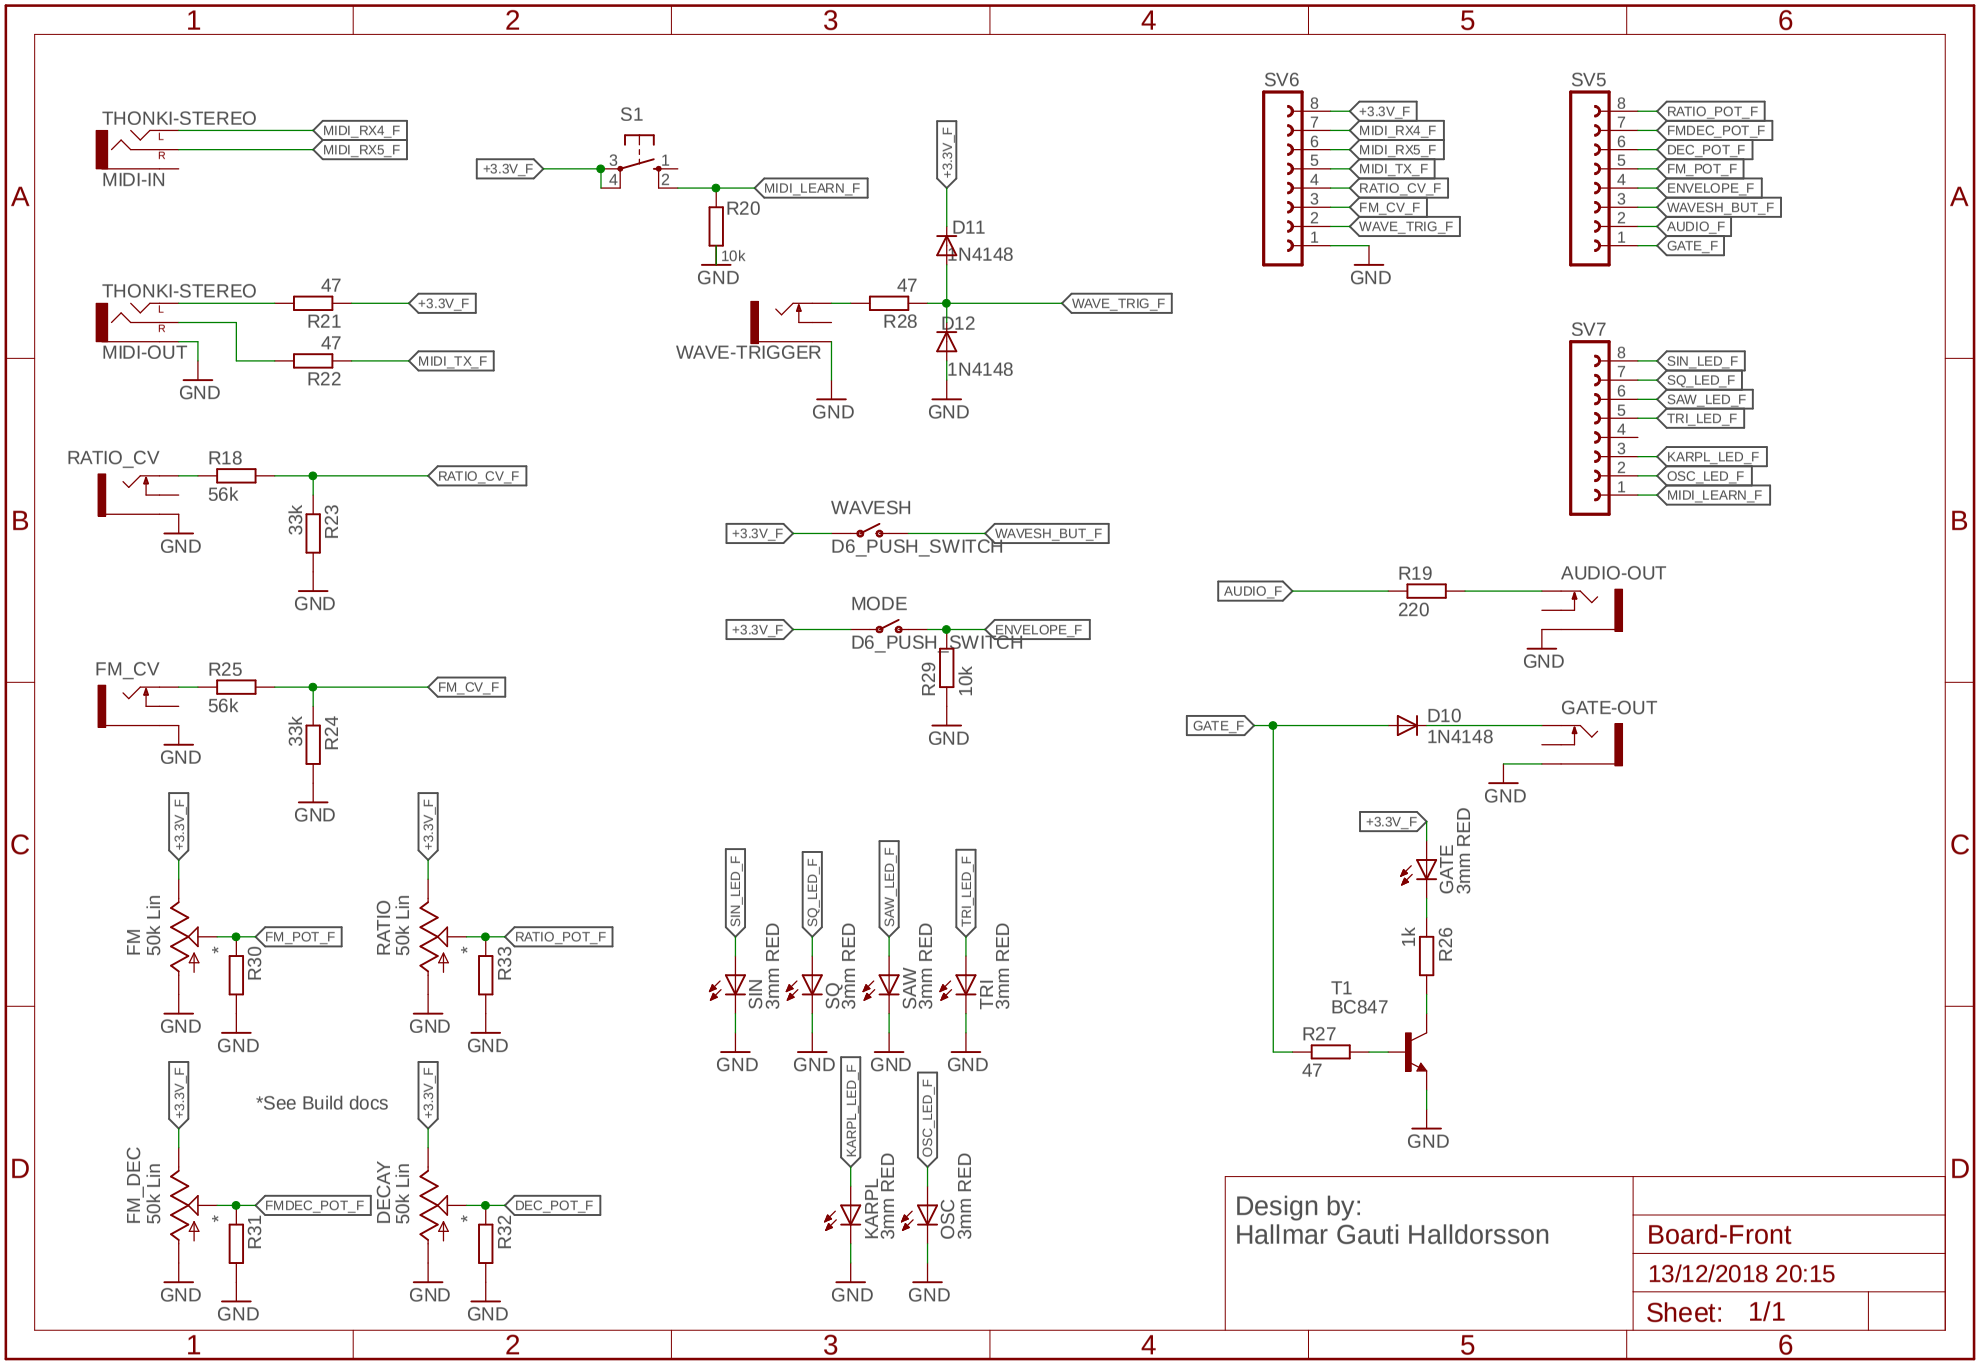
THONKI-STEREO
MIDI-IN
MIDI_RX4_F
MIDI_RX5_F
S1
+3.3V_F
MIDI_LEARN_F
R20
10k
GND
D11
1N4148
D12
1N4148
47
R28
WAVE_TRIG_F
WAVE-TRIGGER
THONKI-STEREO
MIDI-OUT
R21
R22
MIDI_TX_F
RATIO_CV
R18
56k
33k
R23
RATIO_CV_F
WAVESH
D6_PUSH_SWITCH
WAVESH_BUT_F
MODE
ENVELOPE_F
R29
10k
FM_CV
R25
R24
FM_CV_F
FM
50k Lin
FM_POT_F
R30
RATIO
50k Lin
RATIO_POT_F
R33
FM_DEC
50k Lin
FMDEC_POT_F
R31
DECAY
50k Lin
DEC_POT_F
R32
*See Build docs
SIN_LED_F
SQ_LED_F
SAW_LED_F
TRI_LED_F
KARPL_LED_F
OSC_LED_F
SIN
3mm RED
SQ
3mm RED
SAW
3mm RED
TRI
3mm RED
KARPL
3mm RED
OSC
3mm RED
SV6
MIDI_TX_F
RATIO_CV_F
FM_CV_F
WAVE_TRIG_F
SV5
RATIO_POT_F
FMDEC_POT_F
DEC_POT_F
FM_POT_F
ENVELOPE_F
WAVESH_BUT_F
AUDIO_F
GATE_F
SV7
SIN_LED_F
SQ_LED_F
SAW_LED_F
TRI_LED_F
KARPL_LED_F
OSC_LED_F
MIDI_LEARN_F
AUDIO_F
R19
220
AUDIO-OUT
GATE_F
D10
1N4148
GATE-OUT
GATE
3mm RED
1k
R26
T1
BC847
R27
47
Design by:
Hallmar Gauti Halldorsson
Board-Front
13/12/2018 20:15
Sheet: 1/1