6328 RE-BOT DEMO CONTROLS

ENABLE "DEMO CONTROLS" ON THE DASHBOARD

LOWER ELEVATOR

LOWER INTAKE

TOGGLE DRIVE DISABLE

TOGGLE OPEN LOOP DRIVE*

RAISE ELEVATOR

RAISE INTAKE

CARGO EJECT

CARGO INTAKE

DRIVE

HATCH EJECT

STANDARD DIRECTION

HATCH INTAKE

REVERSE DIRECTION

DRIVE
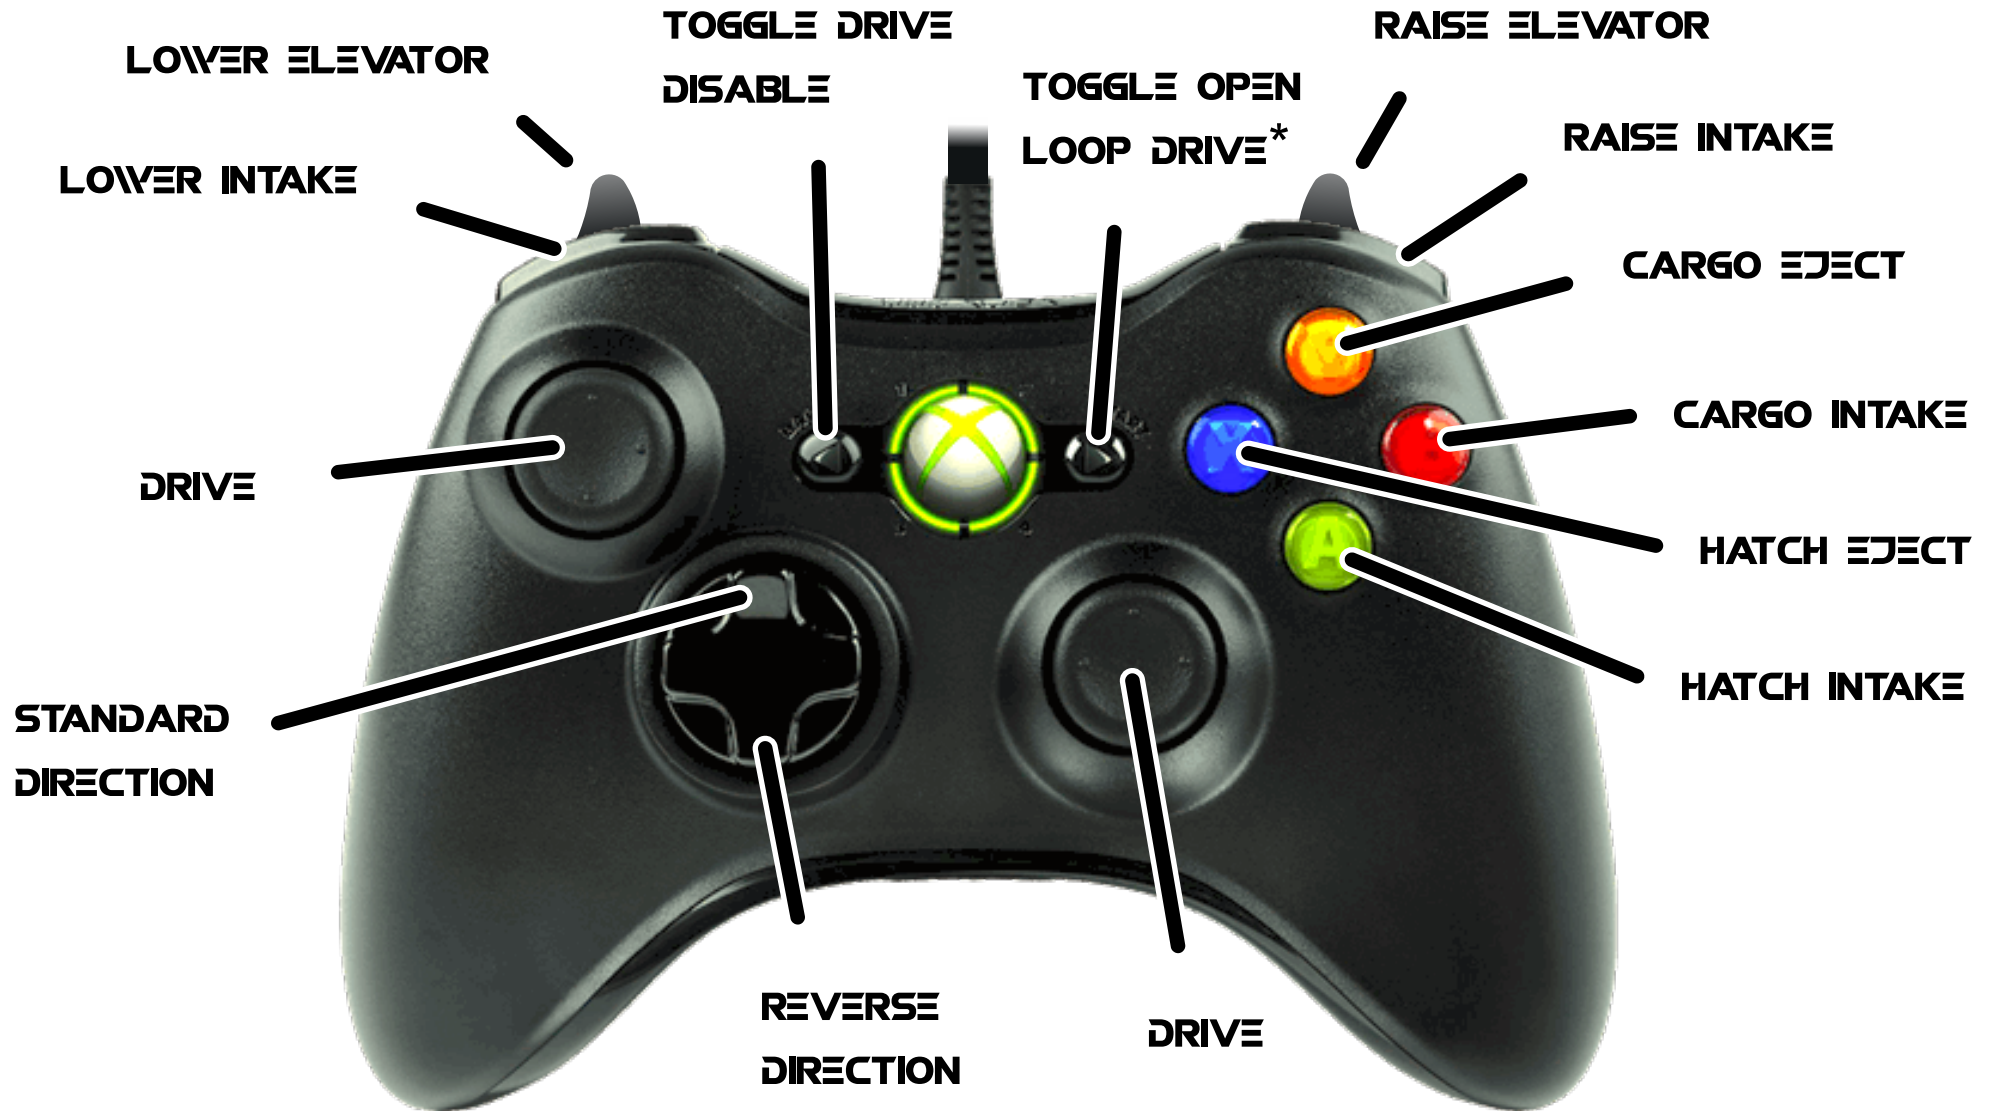
* CAN LEAVE IN DEFAULT SETTING

SPEED LIMITS CAN BE DISABLED BY PUSHING
THE LEFT POV BUTTON

PUSHING THE RIGHT POV BUTTON WILL RE-
ENABLE