


## SCL SDA A0 CRIT\_TEMP LM75AD U1 22 O SCL 23 O SDA 24 O IN1 9 RESET PC1/SDA PC2/TCK 12 25 IN1 26 IN2 27 IN3 27 IN4 28 BUZZER 29 BRAKE\_LIGHTS XTAL2 PC4/TDO PA0/ADC0 PA1/ADC1 PC5/TDI PC6/TOSC1 PA2/ADC2 PC7/TOSC2 PA3/ADC3 15 TERMINAL\_TXD TERMINAL\_RXD PA4/ADC4 PD0/RXD PA5/ADC5 PD1/TXD PA6/ADC6 PD2/INT0 PA7/ADC7 PD3/INT1 PD4/OC1B PD5/OC1A PB0/T0/XCK 2 PB1/T1 PB2/AIN0/INT2 PD6/ICP1 MANUAL\_BRAKE O-PB3/AIN1/OC0 5 PB4/SS IN2-2 O-PB5/MOSI PB6/MISO AREF AVCC PB7/SCK ATMEGA32

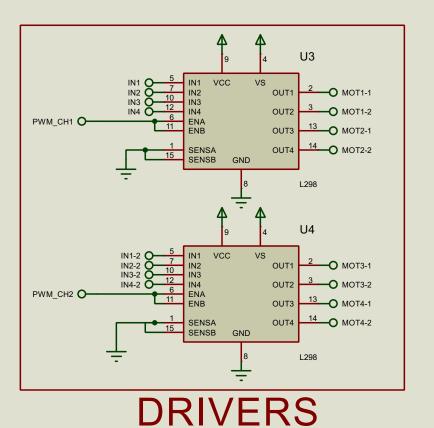

## **DISPLAY & CONTROL**

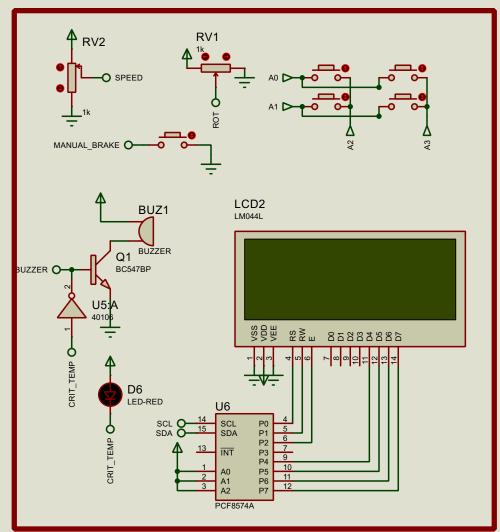

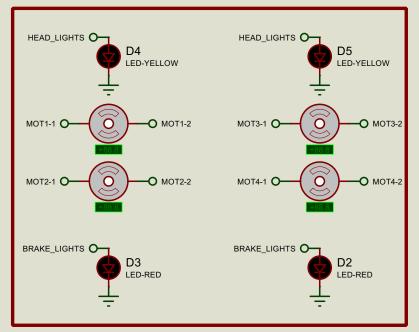

MOTORS

## **DEBUGGING**

