



StrataField User Manual

How to keep borewell records, bring in your Excel drilling logs, see the water level across Lucknow, and keep your data safe.

The pictures in this manual use made-up borewells. Your screens will show your own.

What is in this manual


1. The screen, and where things are
2. Add a borewell by hand
3. Bring in Excel drilling logs
4. Find a borewell
5. A borewell's page
6. Change layers and pipes
7. The map
8. Cross-sections
9. Make PDF reports and Excel files
10. Backups
11. Zones and soil types
12. See what changed, and undo a delete
13. Updates
14. If something goes wrong

Three things worth knowing first

- Everything is saved on this computer as you go. There is no Save button to forget, except where a screen has its own (for example **Save borewell**).
- All depths are in feet. Logs written in metres are converted when you import them.
- Nothing is sent anywhere. Only the street map and address look-up use the internet.

1. The screen, and where things are

The menu on the left is always there. Click a name to go to that screen.

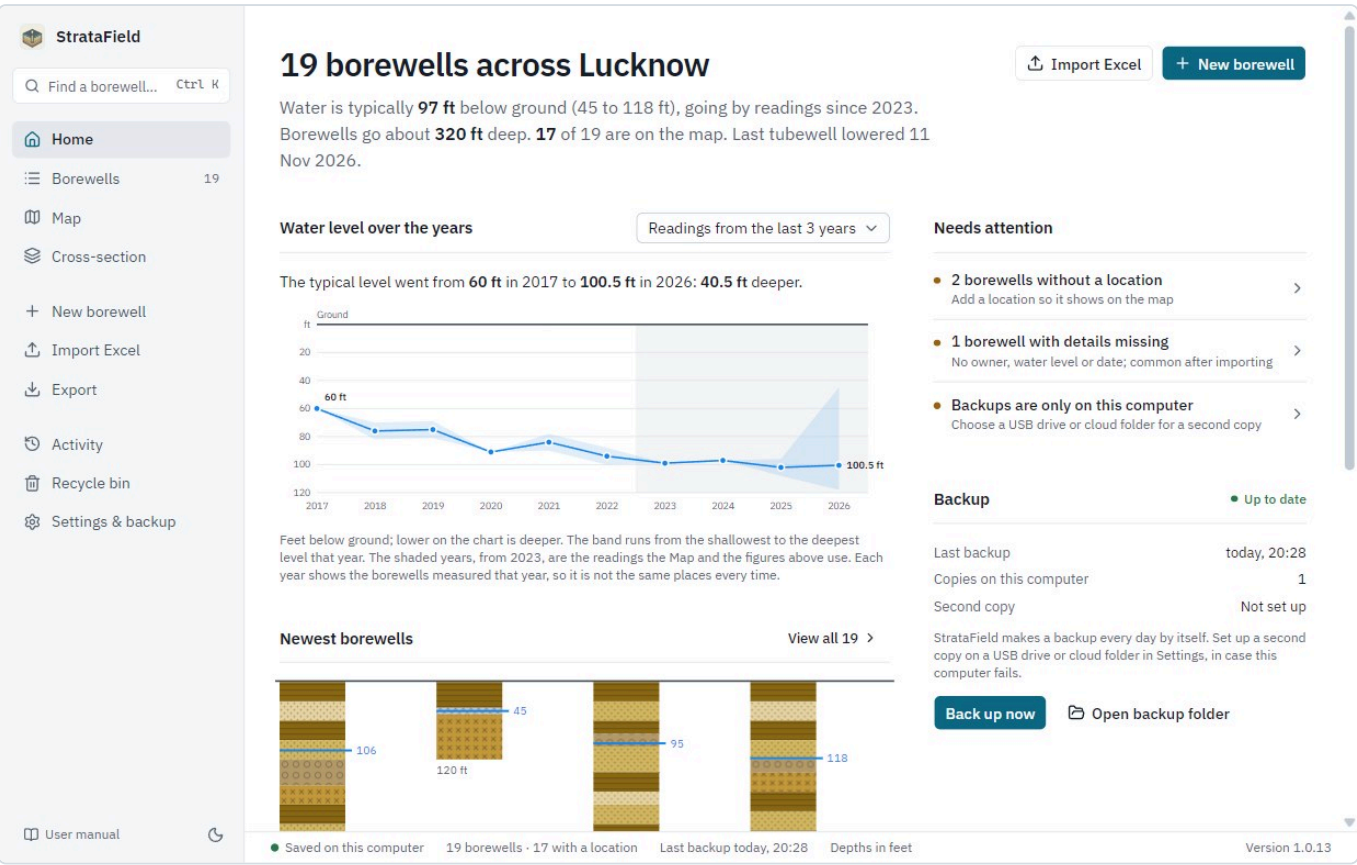

Home. The heading says how many borewells you have and how deep the water typically is.

In the menu	What it is for
Find a borewell	Jump to the search box from anywhere. <code>Ctrl</code> + <code>K</code> does the same.
Home	The picture at a glance: water level over the years, the newest borewells, each zone, and anything that needs your attention.
Borewells	The full list, with search and filters.
Map	Where the borewells are, coloured by how deep the water is.
Cross-section	The soil layers underground along a line you draw on the map.
New borewell	Type in one borewell, step by step.
Import Excel	Bring in drilling logs from Excel files.
Export	Make PDF reports to print or share, or one Excel file with everything.
Activity	Everything that was added or changed, newest first.
Recycle bin	Deleted borewells, which can be put back.
Settings & backup	Backups, zones, soil types, light or dark colours, updates.

The strip along the bottom shows that your data is saved, how many borewells there are, and when the last backup was made. The small sun or moon at the bottom of the menu switches between light and dark colours.

Needs attention

On Home, **Needs attention** lists things worth fixing: borewells with no location, with no soil layers, with an owner, water level or date missing, soil names that were not recognised, and backups that are getting old. Click a line to go straight to the borewells it means.

2. Add a borewell by hand

Choose **New borewell**. There are six short steps; only the ID is required.

The screenshot shows the 'StrataField' application interface. On the left is a sidebar with navigation options: Home, Borewells (16), Map, Cross-section, + New borewell (highlighted), Import Excel, Export, Activity, Recycle bin, and Settings & backup. At the bottom of the sidebar is a 'User manual' link. The main content area is titled 'New borewell' with a subtitle 'Enter a borewell's details step by step.' Below this is a progress bar with six steps: 1. Basics (active), 2. Location, 3. Drilling & water, 4. Layers & pipes, 5. Photos & files, and 6. Check & save. The 'Basics' section contains four input fields: 'Borewell ID' (with the value 'BW-2026-012' and a note 'Suggested automatically. You can change it.'), 'Owner's name' (with the value 'Lake View Homes'), 'Zone' (with the value 'Zone 3 - Trans-Gomti' and a note 'A name for a group of borewells, such as a part of the city. Pick one you used before, or type a new one.'), and 'Tubewell lowering date' (with the value '08-10-2026'). A 'Next: Location' button is at the bottom right. The footer shows status information: 'Saved on this computer', '16 borewells - 16 with a location', 'Last backup today, 20:28', 'Depths in feet', and 'Version 1.0.13'.

Step 1, Basics. The ID is suggested for you; change it if you use your own numbering.

1. **Basics.** The borewell's ID, the owner's name, the zone and the date the tubewell was lowered. A **zone** is your own name for a group of borewells, such as a part of the city; it is what the Home screen's "By zone" table and the zone filter use. Pick one you have used before or type a new name. The address, on the next step, only describes this one borewell.
2. **Location.** Type the area, then give the position in whichever way is easiest:
 - paste or type coordinates copied from a phone or Google Maps, for example **26.8742, 80.9480**;
 - click **Pick on the map**, type a place, colony or road in the search box to go there (needs internet), and click the spot;
 - click **Use a photo's GPS** and choose a photo taken at the site;
 - click **Search for the address** to open the map with the typed address already searched. A found place is approximate, so click the exact spot if you can see it.
3. **Drilling & water.** Total depth, water level, hole size and pipe size. Under **Pump**, choose the pump's type, its company and its model from the lists, then its power in HP, whether it runs on single phase or three phase, and how deep it was lowered. **Column pipe** is the pipe the pump hangs on: give its size and whether it is PVC or MS (mild steel). The model list shows the models you have used from that company. If something is not on a list, pick **Add a new company...** (or

type, or model) at the bottom of it and type the name; it is on the list from then on. Leave the pump empty if none was fitted.

4. **Layers & pipes.** Click **Add layer** for each soil layer and type where it starts and ends. The drawing on the right fills in as you go.

5. **Photos & files.** Optional. Site photos, the drilling log, permits.

6. **Check & save.** Read it through, then click **Save borewell**.

StrataField

Find a borewell... Ctrl K

Home

Borewells 16

Map

Cross-section

+ New borewell

Import Excel

Export

Activity

Recycle bin

Settings & backup

User manual

New borewell

Enter a borewell's details step by step.

1. Basics

2. Location

3. Drilling & water

4. Layers & pipes

5. Photos & files

6. Check & save

Address

House or plot no.

Street or colony

Area

City

Kapoorthala, Aliganj

Lucknow

Where is the borewell?

Typed in

Choose the most accurate way you have. A photo taken at the borewell with GPS on is best.

Use a photo's GPS
Most accurate

Search for the address
Approximate · needs internet

Pick on the map
Search for a place, then click the spot

Or paste coordinates

Latitude

Longitude

26.8742, 80.9480

26.8742

80.948

From a phone or GPS unit, for example "26.8930, 80.9420"

Clear location

Back

Next: Drilling & water

Saved on this computer

16 borewells · 16 with a location

Last backup today, 20:28

Depths in feet

Version 1.0.13

Step 2, Location. Pasted coordinates fill in the latitude and longitude.

StrataField

Find a borewell... Ctrl K

Home

Borewells 16

Map

Cross-section

+ New borewell

Import Excel

Export

Activity

Recycle bin

Settings & backup

User manual

New borewell

Enter a borewell's details step by step.

1. Basics

2. Location

3. Drilling & water

4. Layers & pipes

5. Photos & files

6. Check & save

Drilling & water

Total depth (ft)

120

Water level (ft)

45

Depth to water, measured from the ground.

Water level while pumping (ft)

Optional

Hole size (inch)

Pipe size (inch)

Drilling method

Choose...

Notes

Anything the driller noticed

Pump

Pump type

Borewell submersible, 4 inch (100 mm)

Pump company

KSB

Pump model

3C/20

Models you have used from KSB, or add a new one.

Power (HP)

2

Power supply

Single phase

Pump lowered to (ft)

100

How deep the pump hangs, from the ground.

Column pipe size (inch)

Column pipe material

Saved on this computer

16 borewells · 16 with a location

Last backup today, 20:28

Depths in feet

Version 1.0.13

Step 3. The pump's type, company and model are chosen from lists, each with a way to add a new one.

StrataField

Find a borewell... Ctrl K

Home

Borewells 16

Map

Cross-section

+ New borewell

Import Excel

Export

Activity

Recycle bin

Settings & backup

User manual

New borewell

Enter a borewell's details step by step.

1. Basics

2. Location

3. Drilling & water

4. Layers & pipes

5. Photos & files

6. Check & save

Soil layers

From (ft)

To (ft)

Soil type

Notes

Holds water

0

40

Clay

Optional

50

120

Coarse Sand

Optional

Nothing is filled in from 40 to 50 ft.

Mark 40–50 ft as not recorded

Pipes

No pipes yet.

Add pipe piece

Preview

ft

LAYERS

PIPE

0

40

50

120

Total depth 120 ft

Clay 0–40

Water 45 ft

Coarse Sand 50–120

Pump 100 ft

Back

Next: Photos & files

Saved on this computer

16 borewells · 16 with a location

Last backup today, 20:28

Depths in feet

Version 1.0.13

Step 4. Here nothing was typed for 40 to 50 ft, so StrataField points it out.

Gaps between layers. If a depth was not logged, do not guess. Click

Mark 40–50 ft as not recorded . It is drawn as "Not recorded" and is never filled in by estimates.

You can stop part-way. If you close StrataField before saving, the next time you open **New borewell** it picks up where you left off.

3. Bring in Excel drilling logs

Choose **Import Excel**, then **Choose Excel files**. You can choose many files at once. Nothing is saved until you press Import.

Import Excel

Add borewells from Excel drilling logs. Check each one before importing. The original file is kept with the borewell.

[Add more files](#)

Files (1)

File	Borewell ID	Owner	Zone	Location (coordinates)
☒ Riverside Apartments.xlsx Ready	Riverside Apartmen	Riverside Apartmer		Paste, or pick

[Import 1 borewell](#) Each row is imported as one borewell; only ticked rows are imported. Click a file's name to check its depths, pump and drawing below.

Borewell details From the file

Borewell ID	Owner's name	Tubewell lowering date
Riverside Apartments	Riverside Apartments	12-08-2026
Zone	Area or address	City
	Sector 12, Vikas Nagar	Lucknow
Total depth (ft)	Water level (ft)	Hole / pipe size (inch)
240	95	12 6
Pump company	Pump model	Pump power (HP)
Pump lowered to (ft)	Location	Pick on the map

Optional. Paste coordinates, for example "26.8930, 80.9420", or pick the spot on the map.

● Saved on this computer 17 borewells · 17 with a location Last backup today, 20:28 Depths in feet Version 1.0.13

Every file is a row in the table. Under it are the details and drawing of the row you clicked.

In the table you can type each borewell's **ID**, **owner**, **zone** and **location** straight into its row, so many files can be checked in one go. To give every file the same zone, type it in **A zone for every file** and click **Use for all**. Click a file's name to see its depths, pump and drawing underneath.

A sheet with two logs, one under the other, gives two rows, the second marked **(log 2)**. If the second has the same layers as the first, or no site of its own, it is the same borewell drawn again: it is listed as **Same as the first log** and left unticked. A word such as "Good" written beside a soil is kept as that layer's note.

StrataField reads the soil layers, the plain pipe and screens, the site name, address, date, hole and pipe sizes and the water level. Rows of the same soil are joined into one layer. Logs in metres are converted to feet.

Under its name, each file says:

It says

What it means

Ready

Everything was found. Have a quick look and import.

Needs a look

It can be imported, but something is noted: no water level in the file, depths converted from metres, a second log on the same sheet. Read the notes; type in anything missing if you know it.

Check the columns

The file is laid out differently, so StrataField guessed where things are. It is left out until you have checked the guess and clicked

These columns are right, import this file. See below.

Cannot be read

The file could not be opened. Add the borewell by hand and attach the file to it.

Untick a file to leave it out. Then click **Import ... borewells**. The original Excel file is kept with each borewell, under its **Files** tab.

A file laid out differently

StrataField

Find a borewell... Ctrl K

Home

Borewells 17

Map

Cross-section

+ New borewell

Import Excel

Export

Activity

Recycle bin

Settings & backup

User manual

Import Excel

Add borewells from Excel drilling logs. Check each one before importing. The original file is kept with the borewell.

Add more files

Files (2)

A zone for every file Use for all

File	Borewell ID	Owner	Zone	Location (coordinates)
☒ Riverside Apartments.xlsx Ready	Riverside Apartmen	Riverside Apartmer		Paste, or pick
☐ Kalyanpur site.xlsx Check the columns	Kalyanpur site			Paste, or pick

Import 1 borewell

Each row is imported as one borewell; only ticked rows are imported. Click a file's name to check its depths, pump and drawing below.

Where the layers are in this file

This file is not laid out like the drilling logs StrataField knows, so it made a guess. Check each choice against the start of the file, shown below. The columns in use are shaded.

Depth where each layer ends: Column B · To (ft)

Soil name: Column C · Soil type

Row of the first layer: Row 3

Depth where each layer starts: Column A · From (ft)

Pipe type: Column D · Pipe

Depths are in: Feet


Row	A	B	C	D
1	Borewell at Kalyanpur			
2	From (ft)	To (ft)	Soil type	Pipe
3	0	40	Clay	Plain pipe
4	40	90	Fine Sand	Plain pipe

● Saved on this computer 17 borewells · 17 with a location Last backup today, 20:28 Depths in feet Version 1.0.13

The start of the file is shown, with the columns in use shaded. Change a choice and the drawing updates.

Under **Where the layers are in this file**, check that each box points at the right column: where a layer ends, the soil name, the first row with a layer, and, if the file has them, where a layer starts and the pipe type. Say whether the depths are in feet or metres.

After importing

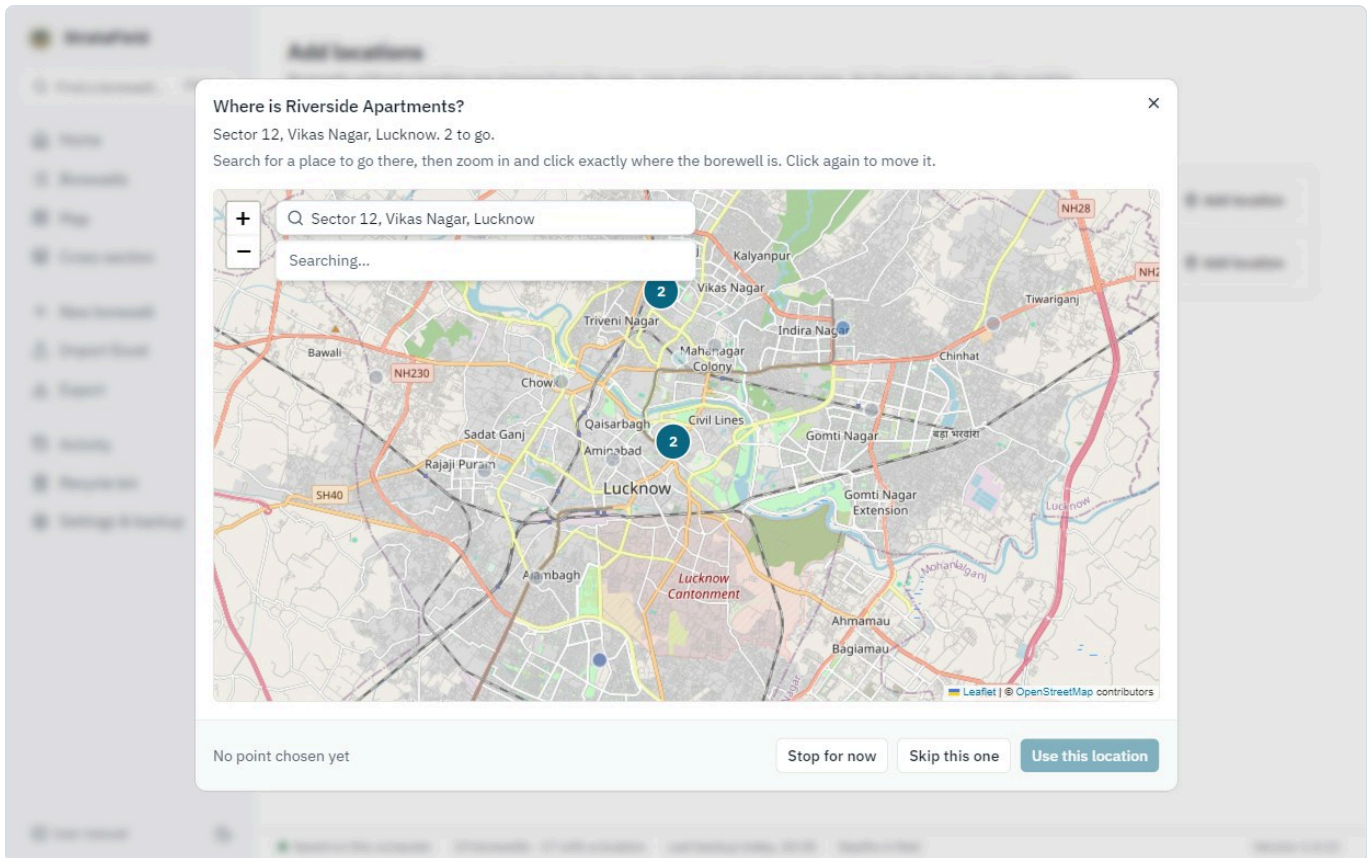

Add locations: the map opens for each borewell in turn, with its address already searched.

The file does not say where the borewell is. After importing, click **Add their locations** (or the "without a location" line on Home). StrataField goes through every borewell that has no location: search or zoom to the place, click the spot and **Use this location**, and the next one comes up. **Skip this one** leaves a borewell for later; **Stop for now** closes the map.

Give each file its **Zone** on the Import screen, the same way as for a new borewell. Under **Location** on the Import screen you can paste its coordinates or click **Pick on the map** before importing; left empty, the borewell has no position on the map until you add one. It may also have no owner, water level or date if the file did not say. To find them, open **Borewells** and click **No location** or **Missing details**. The notes from the Import screen are kept in each borewell's **History** tab.

4. Find a borewell

Open **Borewells**, or press **Ctrl** + **K** from anywhere and start typing.

StrataField

Find a borewell... Ctrl K

Home

Borewells19

Map

Cross-section

New borewell

Import Excel

Export

Activity

Recycle bin

Settings & backup

User manual

Borewells

All your borewells. Click a row to open it.

Import ExcelNew borewell

Search ID, owner, area or zoneAll zonesAny soil typeNo locationMissing details

More filters

Borewell ID	Owner	Area	Lowering date	Total depth (ft)	Water level (ft)	Layers (blue = water)	Status
BW-2026-011	City Clinic	Ashiyana Zone 5 · S...	11 Nov 2026	280	106		Complete
Kalyanpur site	Not entered	No zone	—	200	—		No location +3
BW-2026-012	Lake View H...	Kapoorth... Zone 3 · Tr...	8 Oct 2026	120	45		Complete
Riverside Apartm...	Riverside A...	Sector 1... No zone	12 Aug 2026	240	95		No location
BW-2026-001	Example Sc...	Aliganj Zone 3 · Tr...	1 Jan 2026	260	118		Complete
BW-2025-004	Verma Apar...	Indira N... Zone 3 · Tr...	4 Apr 2025	320	96		Complete
BW-2025-014	Model Hosp...	Telibagh Zone 5 · S...	14 Mar 2025	340	108		Complete
BW-2024-007	Sunrise Hotel	Hazratganj Zone 1 · Ol...	7 Jul 2024	380	97		Complete
BW-2023-010	Sharma Res...	Alambagh Zone 5 · S...	10 Oct 2023	260	99		Complete
BW-2022-003	City Clinic	Chowk Zone 1 · Ol...	3 Mar 2022	300	88		Complete

Saved on this computer

19 borewells · 17 with a location

Last backup today, 20:28

Depths in feet

Version 1.0.13

Click a row to open that borewell. Click a column heading to sort by it.

- **Search** looks in the ID, owner, area, address and zone.
- **All zones** and **Any soil type** narrow the list to one zone, or to borewells that have a given soil.
- **More filters** adds depth, water level and date ranges.
- The coloured strip in each row is the borewell's layers from top to bottom; the blue line is the water level. Click a colour to see that layer.
- **Status** says what a record still lacks, for example "No location" or "No owner, water level".

 **StrataField**

Ctrl K

Home

Borewells 19

Map

Cross-section

+ New borewell

Import Excel

Export

Activity

Recycle bin

Settings & backup

User manual

Borewells

All your borewells. Click a row to open it.

Import Excel

New borewell

All zones

Any soil type

No location

Missing details

More filters

Clear filters

Borewell ID	Owner	Area	Lowering date	Total depth (ft)	Water level (ft)	Layers (blue = water)	Status
Kalyanpur site	Not entered	No zone	—	200	—		No location +3

Showing 1 of 1 found (19 in all)

All depths in feet

Saved on this computer

19 borewells · 17 with a location

Last backup today, 20:28

Depths in feet

Version 1.0.13

Missing details lists only the borewells with an owner, water level or date missing.

5. A borewell's page

StrataField

Find a borewell... Ctrl K

Home
Borewells 19
Map
Cross-section
+ New borewell
Import Excel
Export
Activity
Recycle bin
Settings & backup

BW-2019-002 · Sharma Residence
Zone 4 · Gomti Nagar · Gomti Nagar, Lucknow · tubewell lowered 2 Feb 2019

Edit details Edit layers & pipes Make PDF report

Overview Layers & pipes (9) Water (0) Photos (0) Files (0) History

Borewell details Complete

Total depth	Water level	Hole size
280 ft	81 ft	12 inch
Pipe size	Drilling method	Tubewell lowering date
6 inch	Rotary	2 Feb 2019
Zone	Added by	
Zone 4 · Gomti Nagar	Typed in	

Owner & location Show on map

Owner: Sharma Residence
Address: Gomti Nagar, Lucknow
GPS location: 26.86000° N, 81.00800° E
From GPS

Soil layers Edit

From (ft)	To (ft)	Soil type	Notes
0	30	Clay	

Borewell drawing Save as picture

ft

LAYERS PIPE

Clay 0-30
Fine Sand 30-60
Water 81 ft
Clay 60-90
Sand 90-120
Clay Kankar 120-160
Coarse Sand 160-190
Clay 190-220
Sand 220-250


User manual Saved on this computer 19 borewells · 17 with a location Last backup today, 20:28 Depths in feet Version 1.0.13

Details on the left, the borewell drawing on the right: layers, pipe and water level.

The tabs across the top are:

- **Overview:** the details, owner and location, the layers, and the drawing.
- **Layers & pipes:** the layers and pipe pieces as tables.
- **Water:** every water reading. Add a new one whenever the level is measured again; the borewell always shows the newest.
- **Photos** and **Files:** add site photos, the drilling log or permits. They are copied into StrataField's own folder, so the originals can be moved or deleted.
- **History:** every change to this borewell, and the notes from when it was imported.

The buttons at the top right are **Edit details**, **Edit layers & pipes**, **Make PDF report**, and the bin, which moves the borewell to the Recycle bin.

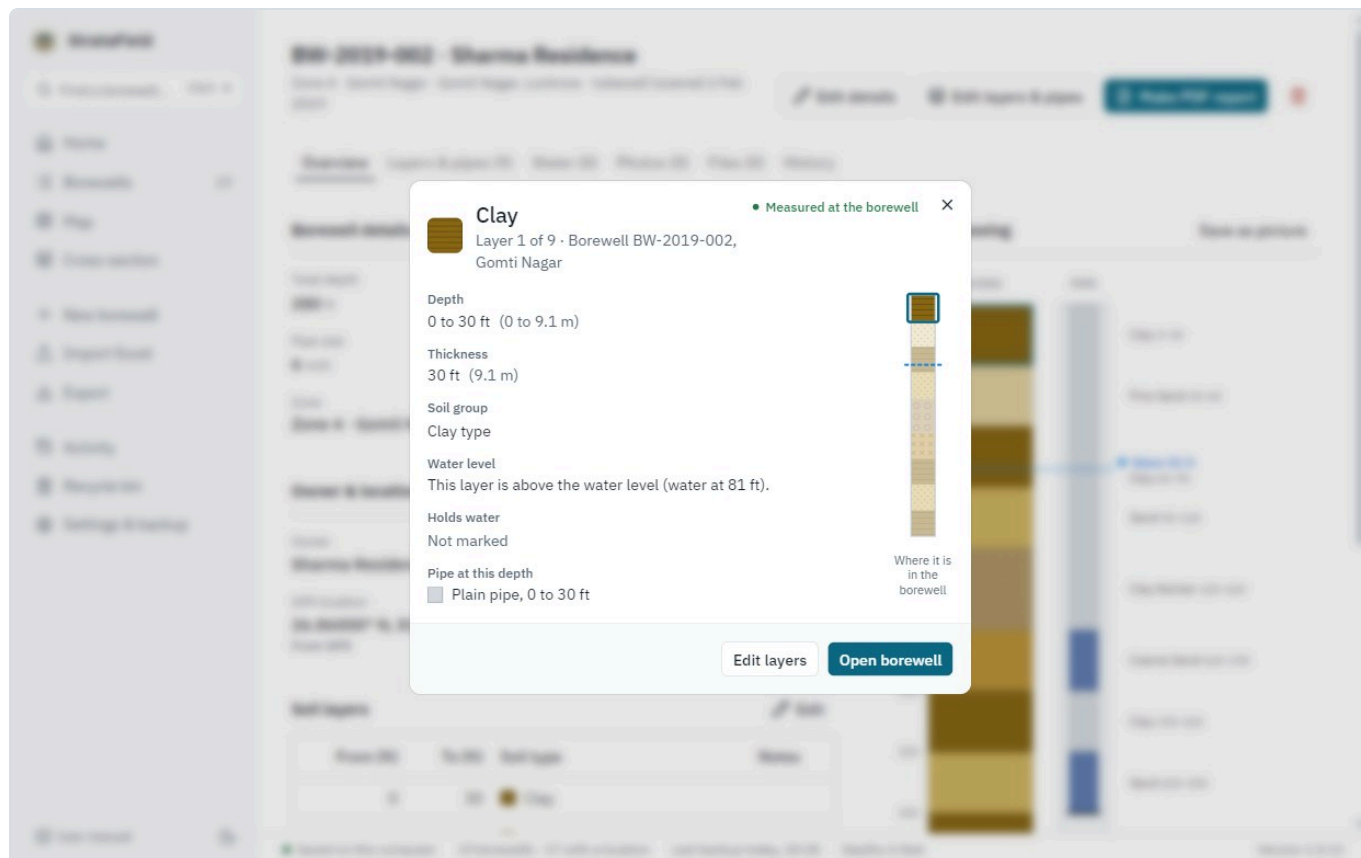

Click any layer in a drawing to see it: depth in feet and metres, thickness, whether it is above or below the water, and the pipe at that depth.

6. Change layers and pipes

On a borewell's page, click [Edit layers & pipes](#).

Edit layers & pipes · BW-2019-002

Type where each layer starts and ends, in feet. To change a soil type, click a row, then click a soil on the left. Total depth 280 ft.

✓ All changes saved Undo Redo **Done**

Soil types

- Clay types
 - Clay
 - Silty Clay
 - Sandy Clay
 - Silt
 - Kankar
 - Clay Kankar
 - Sandy Kankar
- Sand types
 - Fine Sand
 - Sand
 - Coarse Sand
 - Yellow Sand
 - Gravel
 - Sandy Gravel
- Rock
 - Rock
 - Boulder

Soil layers [+ Add layer](#)

From (ft)	To (ft)	Soil type	Notes	Holds water
0	30	Clay	Optional	☐
30	60	Fine Sand	Optional	☐
60	90	Clay	Optional	☐
90	120	Sand	Optional	☐
120	160	Clay Kankar	Optional	☐
160	190	Coarse Sand	Optional	☐
190	220	Clay	Optional	☐
220	250	Sand	Optional	☐
250	280	Clay	Optional	☐

Pipes [+ Add pipe piece](#)

Not recorded 0 160 ☐ Plain pipe ☒ Screen pipe


● Saved on this computer 19 borewells · 17 with a location Last backup today, 20:28 Depths in feet Version 1.0.13

Soil types on the left, the rows in the middle, the drawing on the right.

- Type where each layer starts and ends, in feet.
- To change a soil: click the row, then click a soil on the left. Or use the box in the row.
- Tick **Holds water** for a layer that gave water.
- Under **Pipes**, add each piece and choose **Plain pipe** or **Screen pipe** (where water enters).
- Changes are saved as you type; the top right says **All changes saved**. [Undo](#) and [Redo](#) step back and forward.

If two layers cover the same depth, or a layer ends above where it starts, the row is marked and the change is not saved until it is fixed.

7. The map

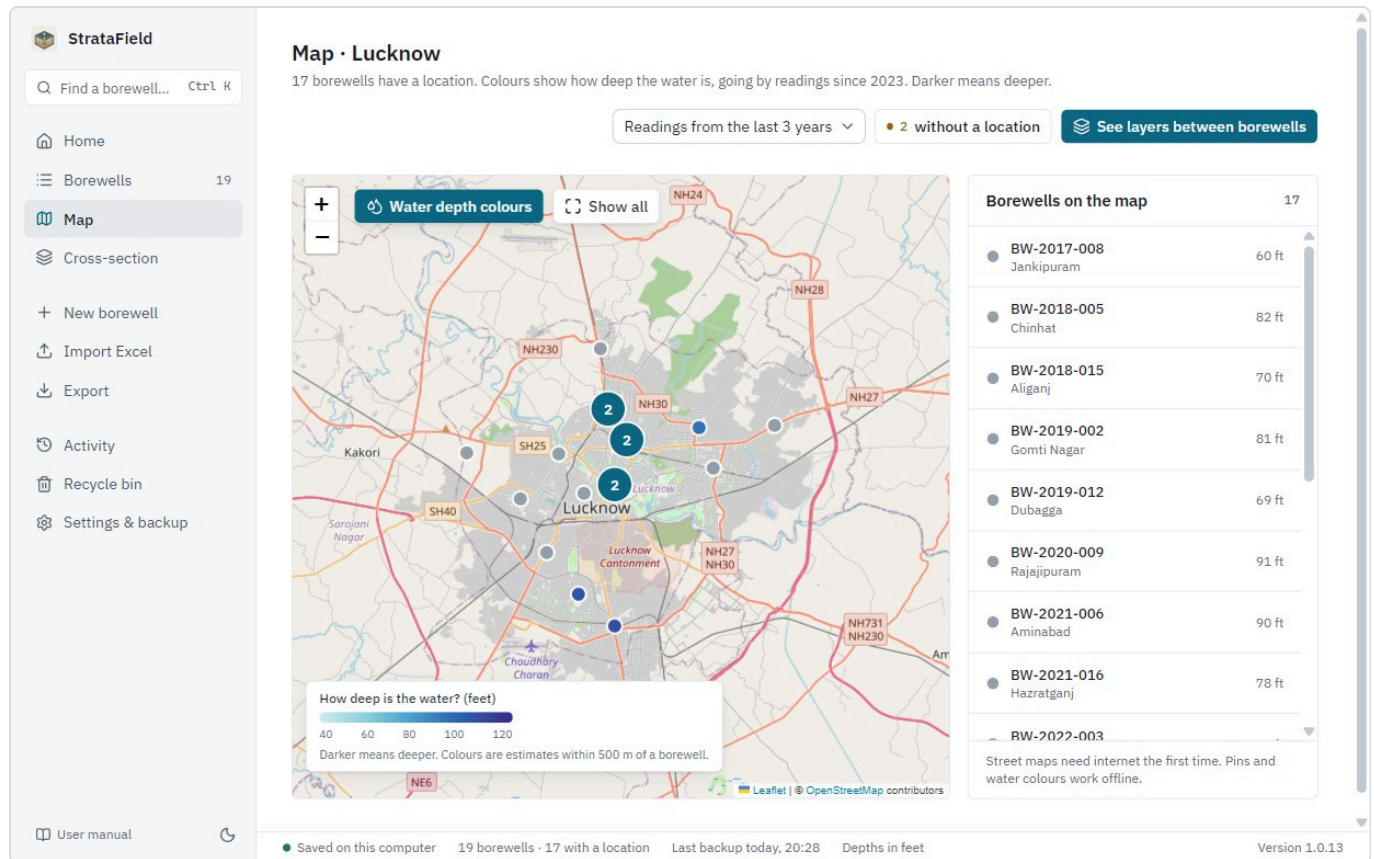


Each dot is a borewell. The colour shows how deep the water is: pale is shallow, dark is deep.

- Click a dot to see that borewell; click its name in the list on the right to find it on the map.
- A circle with a number is several borewells close together. Click it to zoom in.
- The colours are estimates and are only drawn within 500 m of a borewell, so zoom in to see them. Further away nothing is coloured.
- **Water depth colours** turns the colours off and on. **Show all** zooms back out to every borewell.

Which water readings count

Water levels measured years apart cannot be compared, because the water moves. The box at the top (**Readings from the last 3 years**) chooses which readings the colours use: the last year, 3 years, 5 years, or all of them. Borewells with older readings stay on the map as grey dots. The same choice is used on Home.

Several borewells at the same spot

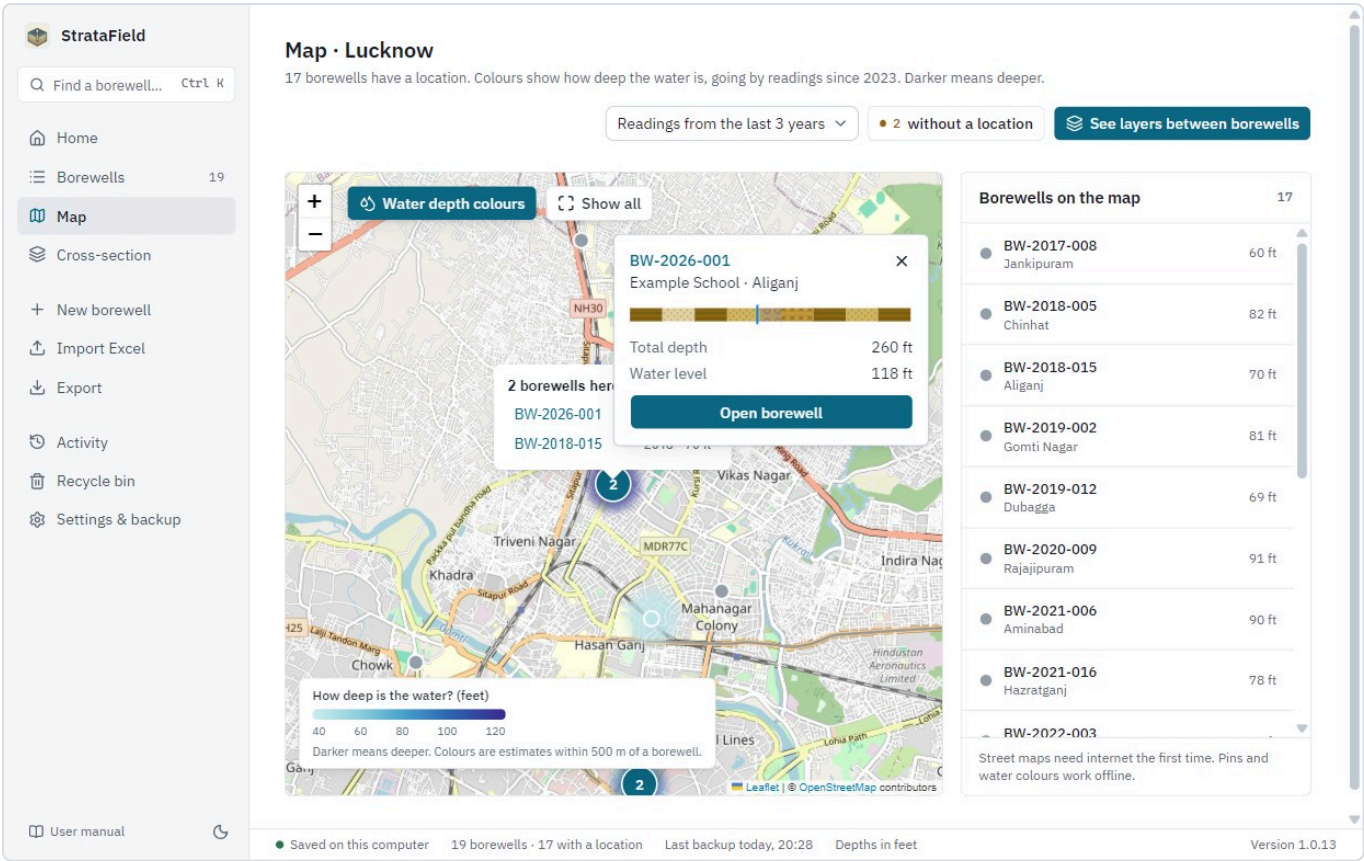

When borewells are at the same place, clicking the circle lists them, newest first. Click one to open it.

Without internet. The dots and water colours always work. To see streets as well, download the Lucknow map once: **Settings & backup** → **Map without internet**.

8. Cross-sections

A cross-section shows the soil layers underground along a line, as if the ground were cut open.

1. Choose **Cross-section**. Click the map where the line should start, then where it should end. Or try **North to south** or **West to east**.
2. Drag **A** or **A'** to move the ends. Drag the small dot in the middle of the line to bend it, for example to follow a road. Double-click a bend to remove it.
3. The slider sets how far from the line a borewell may be and still be used.

StrataField

Find a borewell... Ctrl K

Home

Borewells 19

Map

Cross-section

New borewell

Import Excel

Export

Activity

Recycle bin

Settings & backup

User manual

Cross-section

See the soil layers underground along a line you draw across Lucknow.

Draw a new line

✓ Tap where the line starts

Point A is set

✓ Tap where the line ends


Drag A or A' to move them, or drag a dot on the line to bend it

✓ Read the layers

8 borewells near the line are used

+

-

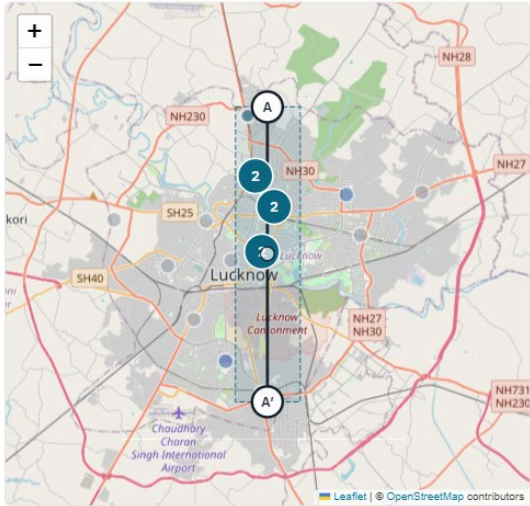

Borewells used

In order from A to A'

Include borewells within 2 km of the line

Jankipuram BW-2017-008	0.6 km from A	1.2 km off
Aliganj BW-2026-001	4.3 km from A	0.7 km off
Aliganj BW-2018-015	4.3 km from A	0.7 km off

Or try an example line

North to south

West to east

Layers along the line

Save

Save as PDF

Save as picture

Saved on this computer


19 borewells · 17 with a location

Last backup today, 20:28

Depths in feet

Version 1.0.13

The line from A to A', and the borewells near it that are used.

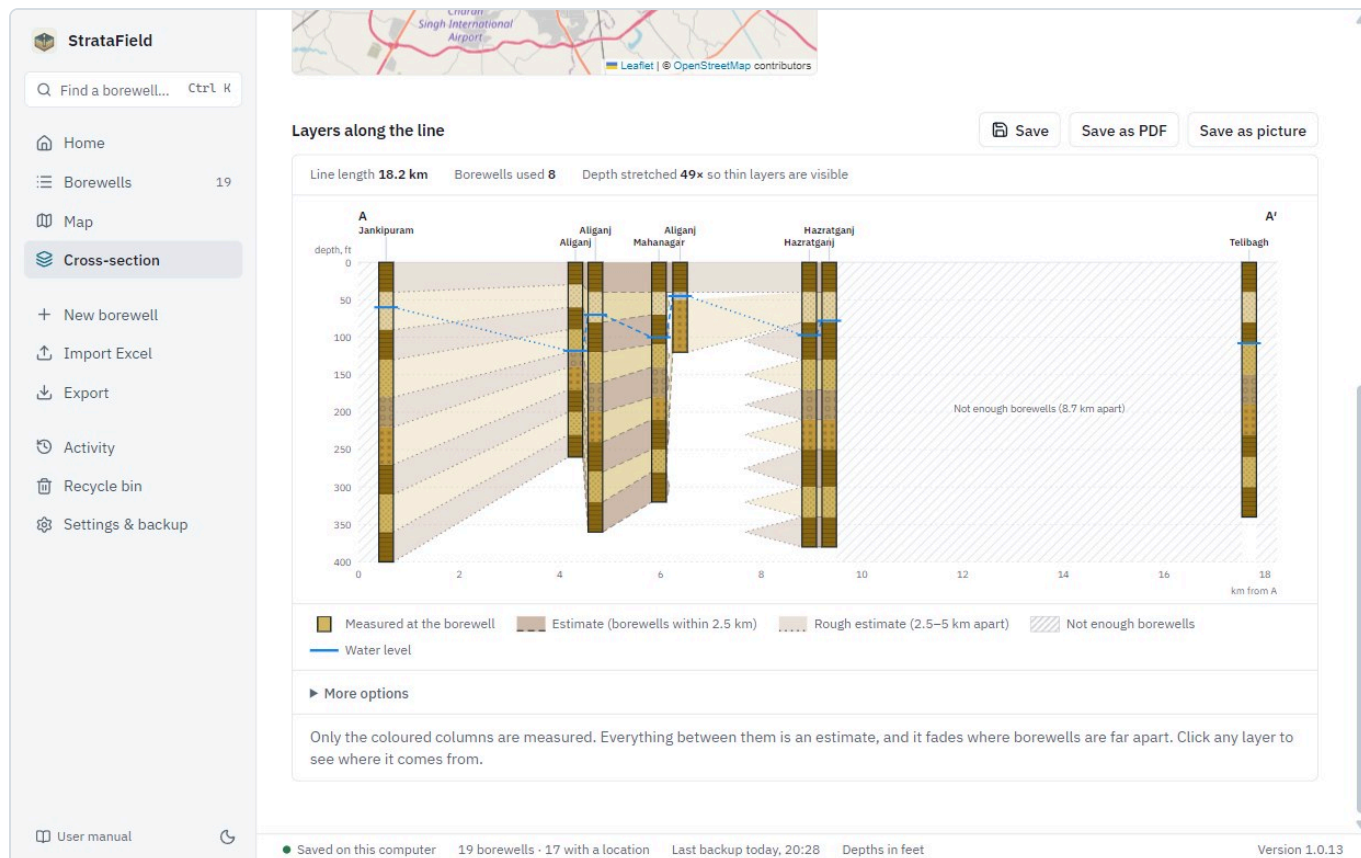

The coloured columns are measured. What is drawn between them is an estimate.

Only the columns are measured. Between two borewells StrataField joins matching layers with straight lines. The real layer may be deeper, shallower or broken. The further apart the borewells, the rougher the estimate; beyond about 5 km nothing is drawn.

Save keeps the line for next time. **Save as PDF** and **Save as picture** make a file to print or send. Under **More options** you can show heights above sea level, so the borewells stand at their real ground height.

9. Make PDF reports and Excel files

StrataField

Find a borewell... Ctrl K

Home

Borewells 19

Map

Cross-section

+ New borewell

Import Excel

Export

Activity

Recycle bin

Settings & backup

User manual

Export

Make a PDF report to print or share, or an Excel workbook with every detail.

1. Which borewells?

☒ **All borewells**
19 borewells

☐ **One zone**
Everything in a zone

☐ **Choose borewells**
Tick the ones you want

2. What kind of file?

☒ **PDF report**
One page per borewell with the drawing, layers, pipes and water readings.
Good for printing and sharing.

☐ **Excel workbook**
All details in sheets: borewells, soil layers, pipes and water readings.

[Save PDF report \(19 borewells\)](#)

● Saved on this computer 19 borewells - 17 with a location Last backup today, 20:28 Depths in feet Version 1.0.13


Choose which borewells, then what kind of file.

- **PDF report:** one page per borewell, with its details, a strata drawing with each layer named on it, the layers, pipes and water readings. A report of up to 20 borewells also has a small street map of each one (needs internet) and a list of the nearest borewells. It ends with lines for the client and the driller to sign. The Drinking Water Organisation logo and address are printed across the top; to change the wording or leave the logo off, use **Settings & backup** → **Report letterhead**. Good for printing and for giving to the owner.
- **Excel workbook:** one file with sheets for borewells, soil layers, pipes and water readings.

Choose **All borewells**, **One zone**, or **Choose borewells** and tick the ones you want. Click the Save button and choose where to put the file. For a single borewell, **Make PDF report** on its own page is quicker.

10. Backups

StrataField makes a backup by itself every day and keeps the last 10. You do not have to do anything.

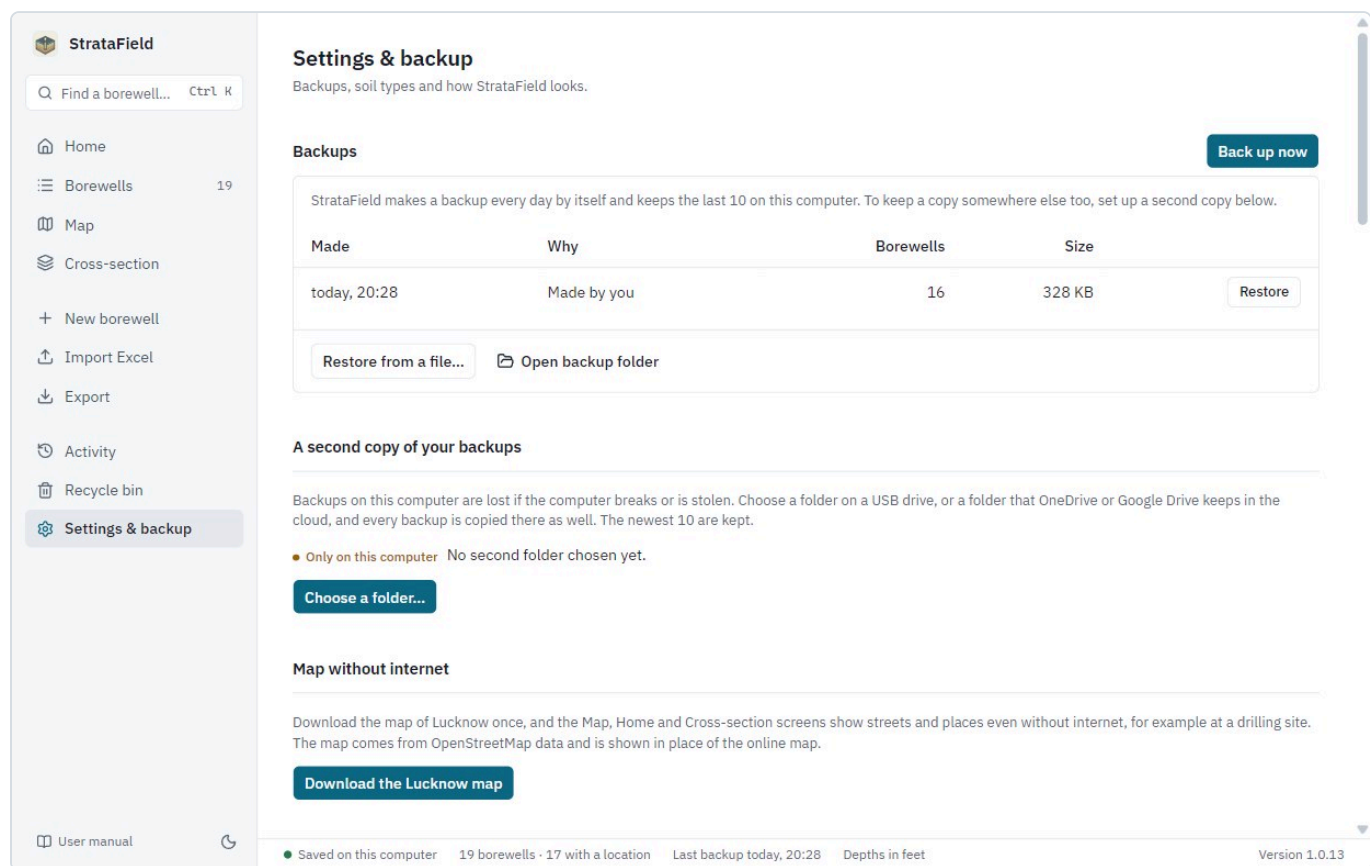

Settings & backup. The top of the screen is all about backups.

- **Back up now** makes one straight away, for example before a big import.
- **Restore** puts everything back to how it was when that backup was made. A copy of how things are now is saved first, so a restore can itself be undone.

Set up a second copy. Backups on this computer are lost if the computer breaks or is stolen. Under **A second copy of your backups**, choose a folder on a USB drive, or one that OneDrive or Google Drive keeps in the cloud. Every backup is then copied there too. Home tells you if the copies stop, for example when the USB drive is not plugged in.

To move to a new computer: install StrataField there, copy a backup file across, and use **Restore from a file...**.

11. Zones and soil types

StrataField

Find a borewell... Ctrl K

Home

Borewells 19

Map

Cross-section

+ New borewell

Import Excel

Export

Activity

Recycle bin

Settings & backup

User manual

Bring in an older data file...

Zones

Rename a zone to fix its spelling. To merge two zones that are the same place, rename one to the other's name.

Zone 1 · Old City	4 borewells	Rename
Zone 3 · Trans-Gomti	5 borewells	Rename
Zone 4 · Gomti Nagar	2 borewells	Rename
Zone 5 · South	3 borewells	Rename
Zone 6 · West	2 borewells	Rename
Zone 7 · North	1 borewell	Rename

Report letterhead

Printed on each borewell's PDF report: the logo and address across the top, and the line at the foot of the page. Empty every box and untick the logo for a plain report.

 ☒ Print this logo at the top of reports

Company name: Drinking Water Organisation

Address: 509, Laxmanpuri Extension, Indira Nagar, Lucknow

Phone and email:

Registration number:

Line at the foot of the page:

● Saved on this computer 19 borewells · 17 with a location Last backup today, 20:28 Depths in feet Version 1.0.13

Settings & backup → Zones.

- **Rename a zone** to fix its spelling: click **Rename**, type, **Save**.
- **Merge two zones** that are the same place: rename one to the other's name. StrataField asks first, then moves all its borewells across.
- **Soil names not recognised** lists names from Excel files that match no soil type. Choose what each one means and every layer with that name is fixed together.
- **Soil types** is the list you choose from for a layer. Add your own with **Add soil type**; change the colour or pattern of any with the pencil.

12. See what changed, and undo a delete

StrataField

Find a borewell... Ctrl K

Home

Borewells19

Map

Cross-section

New borewell

Import Excel

Export

Activity

Recycle bin

Settings & backup

User manual

Activity

Everything that was added, imported, changed or deleted, newest first.

Search by borewell, file name or words

today, 20:28	Imported 1 borewell from Kalyanpur site.xlsx	
today, 20:28	Notes from reading Kalyanpur site.xlsx: The file was not in the usual layout, so its columns were chosen on the Import screen. No site or owner name was found. No tubewell lowering date was found. No water level was found.	Open borewell
today, 20:28	Saved 3 pipe pieces for Kalyanpur site	Open borewell
today, 20:28	Saved 5 soil layers for Kalyanpur site	Open borewell
today, 20:28	Added Kalyanpur site	Open borewell
today, 20:28	Imported 1 borewell from Riverside Apartments.xlsx	
today, 20:28	Saved 3 pipe pieces for Riverside Apartments	Open borewell
today, 20:28	Saved 9 soil layers for Riverside Apartments	Open borewell
today, 20:28	Added Riverside Apartments (Riverside Apartments)	Open borewell
today, 20:28	Saved 3 soil layers for BW-2026-012	Open borewell
today, 20:28	Added BW-2026-012 (Lake View Homes)	Open borewell
today, 20:28	Saved 4 pipe pieces for BW-2021-016	Open borewell
today, 20:28	Saved 9 soil layers for BW-2021-016	Open borewell
today, 20:28	Added BW-2021-016 (Lake View Homes)	Open borewell

● Saved on this computer

19 borewells · 17 with a location

Last backup today, 20:28

Depths in feet

Version 1.0.13

Activity lists every change, newest first. Type in the box to find a borewell or a file name.

Activity is the place to look after a batch of imports: each file's notes are there, and **Open borewell** takes you to it. Each borewell's own **History** tab shows the same for just that borewell.

The Recycle bin

StrataField

Find a borewell... Ctrl K

Home

Borewells18

Map

Cross-section

+ New borewell

Import Excel

Export

Activity

Recycle bin

Settings & backup

User manual

Recycle bin

Deleted borewells. Restore them or delete them for good.

Borewell ID	Owner	Area	Lowering date	Layers	Deleted
BW-2026-012	Lake View Homes	Kapoorthala, Aliganj	8 Oct 2026	3	today, 20:29

Borewells stay here until you delete them for good. They are not shown on the map, in cross-sections or in exports.

Restore

Delete for good

Saved on this computer

18 borewells · 16 with a location

Last backup today, 20:28

Depths in feet

Version 1.0.13

Deleted borewells wait here.

Deleting a borewell moves it to the **Recycle bin**. It no longer shows in lists or on the map, but nothing is lost. **Restore** puts it back. **Delete for good** removes it and its photos and files; that cannot be undone except by restoring a backup.

13. Updates

When a newer version is ready, StrataField says so at the top of the screen. Click **Install and restart** . It takes about a minute: StrataField closes, updates and opens again. Your data is not touched. You can also check at any time under **Settings & backup** → **About** → **Check for updates**.

StrataField

Find a borewell... Ctrl K

Home

Borewells19

Map

Cross-section

New borewell

Import Excel

Export

Activity

Recycle bin

Settings & backup

User manual

	Yellow Sand	Sand	Dots	Built-in	
	Gravel	Sand	Circles	Built-in	
	Sandy Gravel	Sand	Circles	Built-in	
	Rock	Rock	Crosses	Built-in	
	Boulder	Rock	Circles	Built-in	
	Not recorded	Not recorded	Hatched	Built-in	

Appearance

Light

Dark

Same as Windows

About

StrataField

Version 1.0.13

Borewell records, soil layers and groundwater levels, kept on this computer. Built for drilling work in Lucknow: nothing is sent anywhere, and everything except address look-up works without internet.

Your data is kept in

C:\Users\your name\AppData\Roaming\Strata

Shared with

StrataVision, when it is installed, uses the same data. Anything added in one shows up in the other.

Check for updates

Open the user manual

Open the getting-started guide

Copy details for support

Open the error log

Open data folder

● Saved on this computer

19 borewells · 17 with a location

Last backup today, 20:28

Depths in feet

Version 1.0.13

Settings & backup → About: the version, where your data is kept, and the help buttons.

14. If something goes wrong

What you see	What to do
A red message at the bottom right	Read it: it says what went wrong and usually how to fix it. Nothing was saved from that one action; everything before it is safe.
An Excel file shows "Cannot be read"	Open it in Excel and save it again as .xlsx, then try once more. Or add the borewell by hand and attach the file.
The layers from an Excel file look wrong	On the Import screen, check the choices under Where the layers are in this file . After importing, use Edit layers & pipes .
A borewell is not on the map	It has no location. Open it, click Edit details , and add one under Location.
The map is grey, with no streets	There is no internet. Dots and water colours still work. Download the Lucknow map under Settings to have streets without internet.
Something was deleted by mistake	Look in the Recycle bin . For anything else, restore a backup from before it happened.
"StrataField could not open your data"	Do not delete anything. Send the details below to whoever helps you with StrataField.

Asking for help

Go to **Settings & backup** → **About**.

- **Copy details for support** shows the versions, how much data there is, the state of backups and recent errors. Click **Copy** and paste it into an email or message. It contains no borewell details, and nothing is sent unless you send it.
- **Open the error log** opens the full list of problems recorded on this computer.
- **Open data folder** shows where your data is kept, in case you are asked for it.

Your data is in the folder **Strata** inside your Windows user's AppData folder. Uninstalling StrataField removes the program but leaves that folder, so installing again brings everything back.