



StrataField User Manual

How to keep borewell records, bring in your Excel drilling logs, see the water level across Lucknow, and keep your data safe.

The pictures in this manual use made-up borewells. Your screens will show your own.

What is in this manual


1. The screen, and where things are
2. Add a borewell by hand
3. Bring in Excel drilling logs
4. Find a borewell
5. A borewell's page
6. Change layers and pipes
7. The map
8. Cross-sections
9. Make PDF reports and Excel files
10. Backups
11. Zones and soil types
12. See what changed, and undo a delete
13. Updates
14. If something goes wrong

Three things worth knowing first

- Everything is saved on this computer as you go. There is no Save button to forget, except where a screen has its own (for example **Save borewell**).
- All depths are in feet. Logs written in metres are converted when you import them.
- Nothing is sent anywhere. Only the street map and address look-up use the internet.

1. The screen, and where things are

The menu on the left is always there. Click a name to go to that screen.

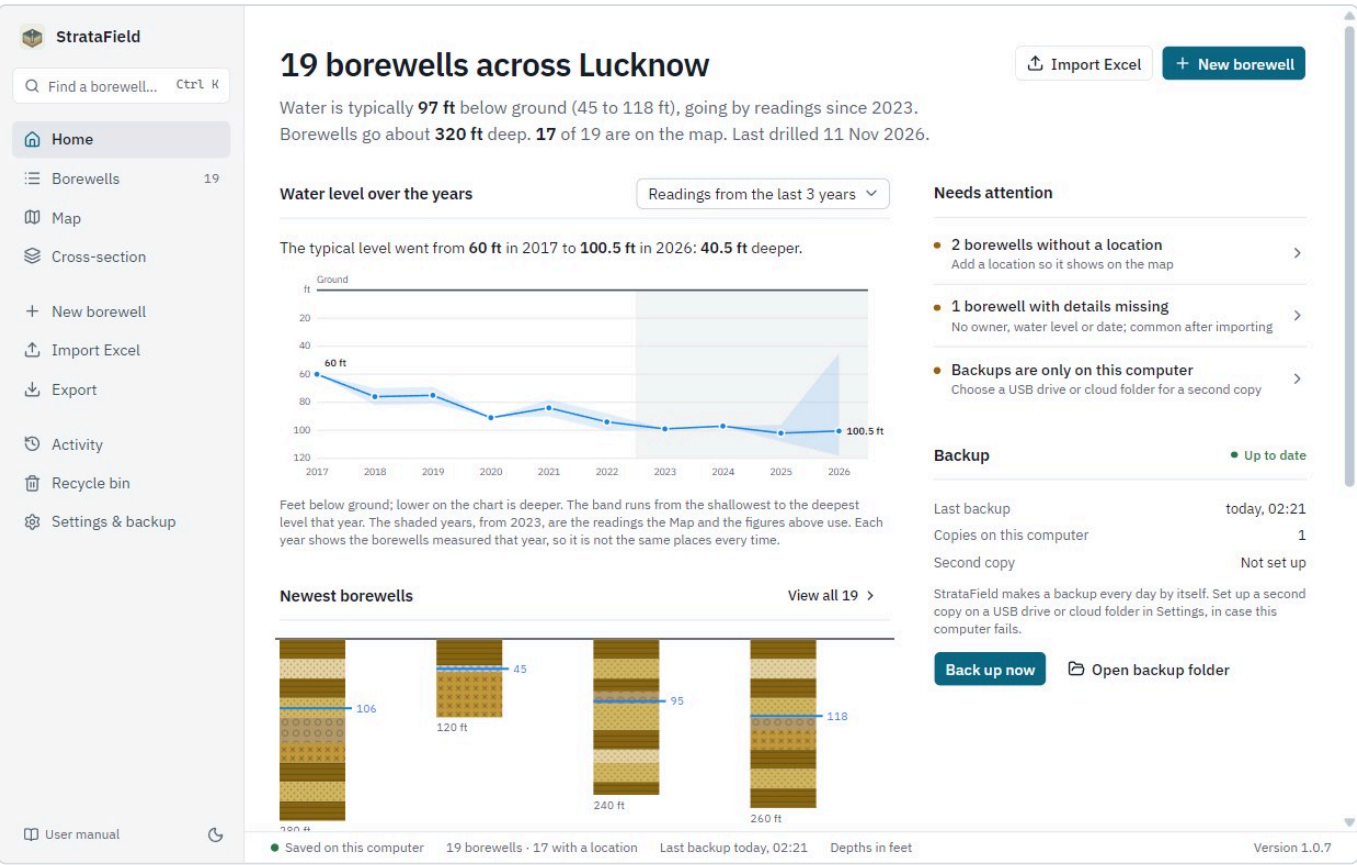

Home. The heading says how many borewells you have and how deep the water typically is.

In the menu	What it is for
Find a borewell	Jump to the search box from anywhere. <code>Ctrl</code> + <code>K</code> does the same.
Home	The picture at a glance: water level over the years, the newest borewells, each zone, and anything that needs your attention.
Borewells	The full list, with search and filters.
Map	Where the borewells are, coloured by how deep the water is.
Cross-section	The soil layers underground along a line you draw on the map.
New borewell	Type in one borewell, step by step.
Import Excel	Bring in drilling logs from Excel files.
Export	Make PDF reports to print or share, or one Excel file with everything.
Activity	Everything that was added or changed, newest first.
Recycle bin	Deleted borewells, which can be put back.
Settings & backup	Backups, zones, soil types, light or dark colours, updates.

The strip along the bottom shows that your data is saved, how many borewells there are, and when the last backup was made. The small sun or moon at the bottom of the menu switches between light and dark colours.

Needs attention

On Home, **Needs attention** lists things worth fixing: borewells with no location, with no soil layers, with an owner, water level or date missing, soil names that were not recognised, and backups that are getting old. Click a line to go straight to the borewells it means.

2. Add a borewell by hand

Choose **New borewell**. There are six short steps; only the ID is required.

StrataField

Find a borewell... Ctrl K

Home
Borewells 0
Map
Cross-section
+ New borewell
Import Excel
Export
Activity
Recycle bin
Settings & backup

User manual

New borewell

Enter a borewell's details step by step.

1. Basics 2. Location 3. Drilling & water 4. Layers & pipes 5. Photos & files 6. Check & save

Basics

Borewell ID
BW-2026-012
Suggested automatically. You can change it.

Owner's name
Lake View Homes

Zone
Zone 3 - Trans-Gomti
Pick one you used before, or type a new one.

Date drilled
02-10-2026

Next: Location

Saved on this computer 0 borewells - 0 with a location No backup yet Depths in feet Version 1.0.7

Step 1, Basics. The ID is suggested for you; change it if you use your own numbering.

1. **Basics.** The borewell's ID, the owner's name, the zone and the date it was drilled. For the zone, pick one you have used before or type a new name.
2. **Location.** Type the area, then give the position in whichever way is easiest:
 - paste or type coordinates copied from a phone or Google Maps, for example **26.8742, 80.9480**;
 - click **Pick on the map** and click the spot;
 - click **Use a photo's GPS** and choose a photo taken at the site;
 - click **Look up the address** for an approximate position (needs internet).
3. **Drilling & water.** Total depth, water level, hole size and pipe size.
4. **Layers & pipes.** Click **Add layer** for each soil layer and type where it starts and ends. The drawing on the right fills in as you go.
5. **Photos & files.** Optional. Site photos, the drilling log, permits.
6. **Check & save.** Read it through, then click **Save borewell**.

StrataField

Find a borewell... Ctrl K

Home

Borewells 0

Map

Cross-section

+ New borewell

Import Excel

Export

Activity

Recycle bin

Settings & backup

User manual

New borewell

Enter a borewell's details step by step.

1. Basics
2. Location
3. Drilling & water
4. Layers & pipes
5. Photos & files
6. Check & save

Address

House or plot no.
Street or colony

Area
City

Kapoorthala, Aliganj
Lucknow

Where is the borewell?

Choose the most accurate way you have. A photo taken at the borewell with GPS on is best.

Use a photo's GPS
Most accurate

Type coordinates
From a phone or GPS unit

Look up the address
Approximate · needs internet

Pick on the map
Click where the borewell is

Paste coordinates

Latitude

Longitude

26.8742, 80.9480
26.8742
80.948

For example "26.8930, 80.9420"

X Clear location

Back
Next: Drilling & water

Saved on this computer
0 borewells · 0 with a location
No backup yet
Depths in feet

Version 1.0.7

Step 2, Location. Pasted coordinates are filled in and shown on the small map.

StrataField

Find a borewell... Ctrl K

Home

Borewells 0

Map

Cross-section

+ New borewell

Import Excel

Export

Activity

Recycle bin

Settings & backup

User manual

New borewell

Enter a borewell's details step by step.

1. Basics
2. Location
3. Drilling & water
4. Layers & pipes
5. Photos & files
6. Check & save

Soil layers

+ Add layer

From (ft)	To (ft)	Soil type	Notes	Holds water
0	40	Clay	Optional	☐
50	120	Coarse Sand	Optional	☐

Nothing is filled in from 40 to 50 ft.
Mark 40–50 ft as not recorded

Pipes

+ Add pipe piece

No pipes yet.

Back
Next: Photos & files

Preview

Saved on this computer
0 borewells · 0 with a location
No backup yet
Depths in feet

Version 1.0.7

Step 4. Here nothing was typed for 40 to 50 ft, so StrataField points it out.


Gaps between layers. If a depth was not logged, do not guess. Click

Mark 40–50 ft as not recorded . It is drawn as "Not recorded" and is never filled in by estimates.

You can stop part-way. If you close StrataField before saving, the next time you open **New borewell** it picks up where you left off.

3. Bring in Excel drilling logs

Choose **Import Excel**, then **Choose Excel files**. You can choose many files at once. Nothing is saved until you press Import.

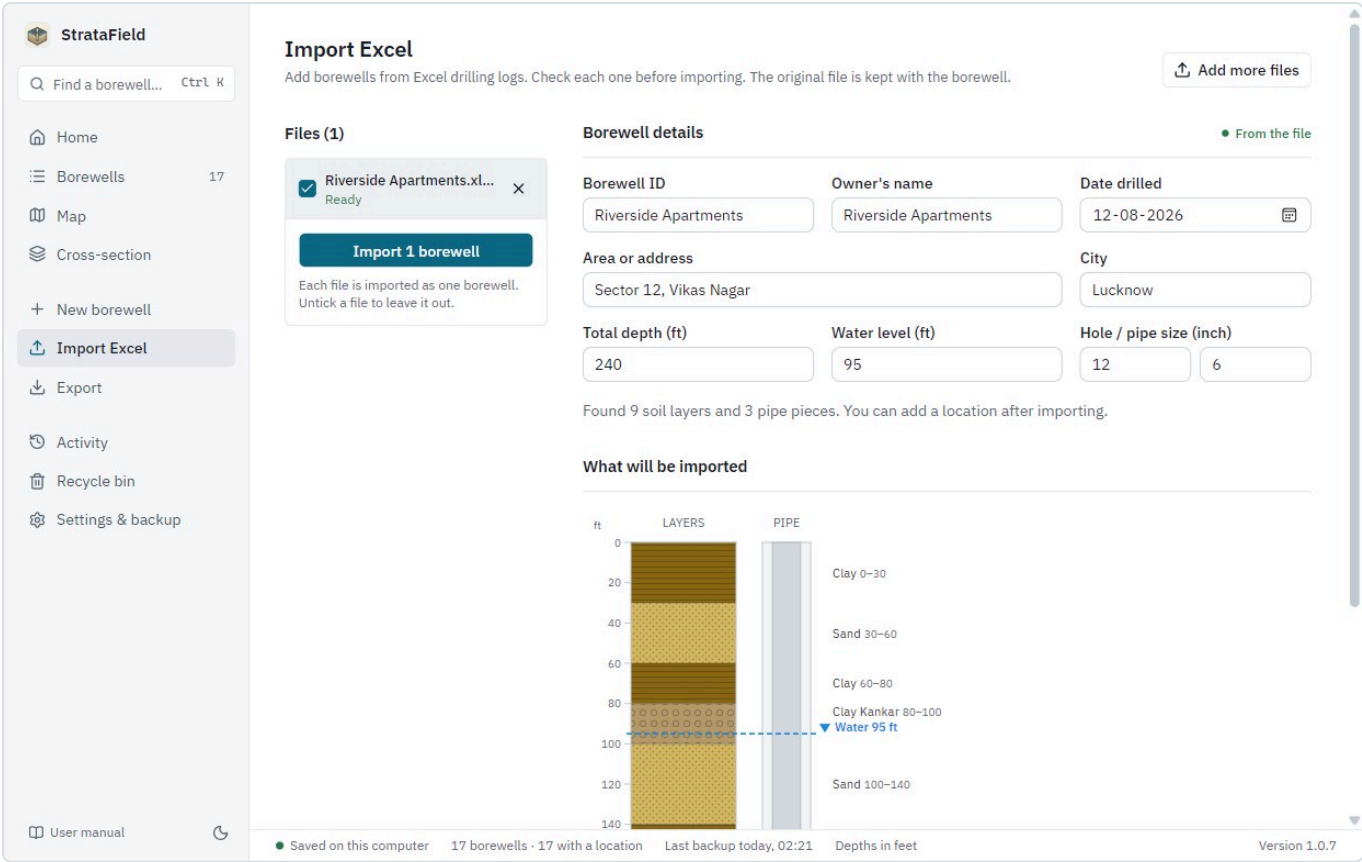

Each file is read and shown for checking: the details found in it, and a drawing of what will be imported.

StrataField reads the soil layers, the plain pipe and screens, the site name, address, date, hole and pipe sizes and the water level. Rows of the same soil are joined into one layer. Logs in metres are converted to feet.

The list on the left shows each file as:

It says	What it means
Ready	Everything was found. Have a quick look and import.
Needs a look	It can be imported, but something is noted: no water level in the file, depths converted from metres, a second log on the same sheet. Read the notes; type in anything missing if you know it.
Check the columns	The file is laid out differently, so StrataField guessed where things are. See below.
Cannot be read	The file could not be opened. Add the borewell by hand and attach the file to it.

Untick a file to leave it out. Then click **Import ... borewells**. The original Excel file is kept with each borewell, under its **Files** tab.

A file laid out differently

StrataField

Find a borewell... Ctrl K

Home

Borewells 17

Map

Cross-section

+ New borewell

Import Excel

Export

Activity

Recycle bin

Settings & backup

User manual

Import Excel

Add borewells from Excel drilling logs. Check each one before importing. The original file is kept with the borewell.

Add more files

Files (2)

☒ Riverside Apartments.xl...

Ready

×

☒ Kalyanpur site.xlsx

Check the columns

×

Import 2 borewells

Each file is imported as one borewell. Untick a file to leave it out.

Where the layers are in this file

This file is not laid out like the drilling logs StrataField knows, so it made a guess. Check each choice against the start of the file, shown below.

Layer ends at

Column B

Soil name

Column C

First layer row

Row 3

Layer starts at

Column A

Pipe type

Column D

Depths are in

Feet

Row	A	B	C	D
1	Borewell at Kalyanpur			
2	From (ft)		To (ft)	Soil type
3	0	40	Clay	Plain pipe
4	40	90	Fine Sand	Plain pipe
5	90	130	Clay	Plain pipe
6	130	180	Coarse Sand	Screen
7	180	200	Clay	Plain pipe

Notes from reading the file

No site or owner name was found. Enter it below.

No drilling date was found. Enter it below if you know it.

No water level was found. Enter it below if you know it.

Saved on this computer

17 borewells · 17 with a location

Last backup today, 02:21

Depths in feet

Version 1.0.7

The start of the file is shown, with the columns in use shaded. Change a choice and the drawing updates.

Under **Where the layers are in this file**, check that each box points at the right column: where a layer ends, the soil name, the first row with a layer, and, if the file has them, where a layer starts and the pipe type. Say whether the depths are in feet or metres.

After importing

An imported borewell has no position on the map, and may have no owner, water level or date if the file did not say. To find them, open **Borewells** and click **No location** or **Missing details**. The notes from the Import screen are kept in each borewell's **History** tab.

4. Find a borewell

Open **Borewells**, or press **Ctrl** + **K** from anywhere and start typing.

StrataField

Find a borewell... Ctrl K

Home

Borewells19

Map

Cross-section

New borewell

Import Excel

Export

Activity

Recycle bin

Settings & backup

User manual

Borewells

All your borewells. Click a row to open it.

Import ExcelNew borewell

Search ID, owner, area or zone

All zones

Any soil type

No location

Missing details

More filters

Borewell ID	Owner	Area	Date drilled	Total depth (ft)	Water level (ft)	Layers (blue = water)
BW-2026-011	City Clinic	Ashiyana Zone 5 · South	11 Nov 2026	280	106	
Kalyanpur site	Not entered	No zone	—	200	—	
BW-2026-012	Lake View Homes	Kapoorthala, Aliganj Zone 3 · Trans-Gomti	2 Oct 2026	120	45	
Riverside Apartments	Riverside Apartments	Sector 12, Vikas Nagar No zone	12 Aug 2026	240	95	
BW-2026-001	Example School	Aliganj Zone 3 · Trans-Gomti	1 Jan 2026	260	118	
BW-2025-004	Verma Apartments	Indira Nagar Zone 3 · Trans-Gomti	4 Apr 2025	320	96	
BW-2025-014	Model Hospital	Telibagh Zone 5 · South	14 Mar 2025	340	108	
BW-2024-007	Sunrise Hotel	Hazratganj Zone 1 · Old City	7 Jul 2024	380	97	

Saved on this computer

19 borewells · 17 with a location

Last backup today, 02:21

Depths in feet

Version 1.0.7

Click a row to open that borewell. Click a column heading to sort by it.

- **Search** looks in the ID, owner, area, address and zone.
- **All zones** and **Any soil type** narrow the list to one zone, or to borewells that have a given soil.
- **More filters** adds depth, water level and date ranges.
- The coloured strip in each row is the borewell's layers from top to bottom; the blue line is the water level. Click a colour to see that layer.
- **Status** says what a record still lacks, for example "No location" or "No owner, water level".

 **StrataField**

Ctrl K

Home

Borewells 19

Map

Cross-section

+ New borewell

Import Excel

Export

Activity

Recycle bin

Settings & backup

User manual

Borewells

All your borewells. Click a row to open it.

Import Excel

+ New borewell

All zones

Any soil type

No location

Missing details

More filters

Clear filters

Borewell ID	Owner	Area	Date drilled ↓	Total depth (ft)	Water level (ft)	Layers (blue = water)	Status
Kalyanpur site	Not entered	No zone	—	200	—		No location, owner, water level, date drilled

Showing 1 of 1 found (19 in all)

All depths in feet

Saved on this computer

19 borewells · 17 with a location

Last backup today, 02:21

Depths in feet

Version 1.0.7

Missing details lists only the borewells with an owner, water level or date missing.

5. A borewell's page

StrataField

Find a borewell... Ctrl K

Home
Borewells 19
Map
Cross-section
+ New borewell
Import Excel
Export
Activity
Recycle bin
Settings & backup

BW-2019-002 · Sharma Residence
Zone 4 · Gomti Nagar · Gomti Nagar, Lucknow · drilled 2 Feb 2019

Edit details Edit layers & pipes Make PDF report

Overview Layers & pipes (9) Water (0) Photos (0) Files (0) History

Borewell details Complete

Total depth: 280 ft
Water level: 81 ft
Hole size: 12 inch
Pipe size: 6 inch
Drilling method: Rotary
Date drilled: 2 Feb 2019
Zone: Zone 4 · Gomti Nagar
Added by: Typed in

Owner & location Show on map

Owner: Sharma Residence
Address: Gomti Nagar, Lucknow
GPS location: 26.86000° N, 81.00800° E
From GPS

Soil layers Edit

From (ft)	To (ft)	Soil type	Notes
0	30	Clay	
30	60	Fine Sand	

Borewell drawing Save as picture

ft LAYERS PIPE

0-30 Clay
30-60 Fine Sand
60-90 Water 81 ft Clay
90-120 Sand
120-160 Clay Kankar
160-190 Coarse Sand
190-220 Clay
220-250 Sand
250-280 Clay


Saved on this computer 19 borewells · 17 with a location Last backup today, 02:21 Depths in feet Version 1.0.7

Details on the left, the borewell drawing on the right: layers, pipe and water level.

The tabs across the top are:

- **Overview:** the details, owner and location, the layers, and the drawing.
- **Layers & pipes:** the layers and pipe pieces as tables.
- **Water:** every water reading. Add a new one whenever the level is measured again; the borewell always shows the newest.
- **Photos** and **Files:** add site photos, the drilling log or permits. They are copied into StrataField's own folder, so the originals can be moved or deleted.
- **History:** every change to this borewell, and the notes from when it was imported.

The buttons at the top right are **Edit details**, **Edit layers & pipes**, **Make PDF report**, and the bin, which moves the borewell to the Recycle bin.

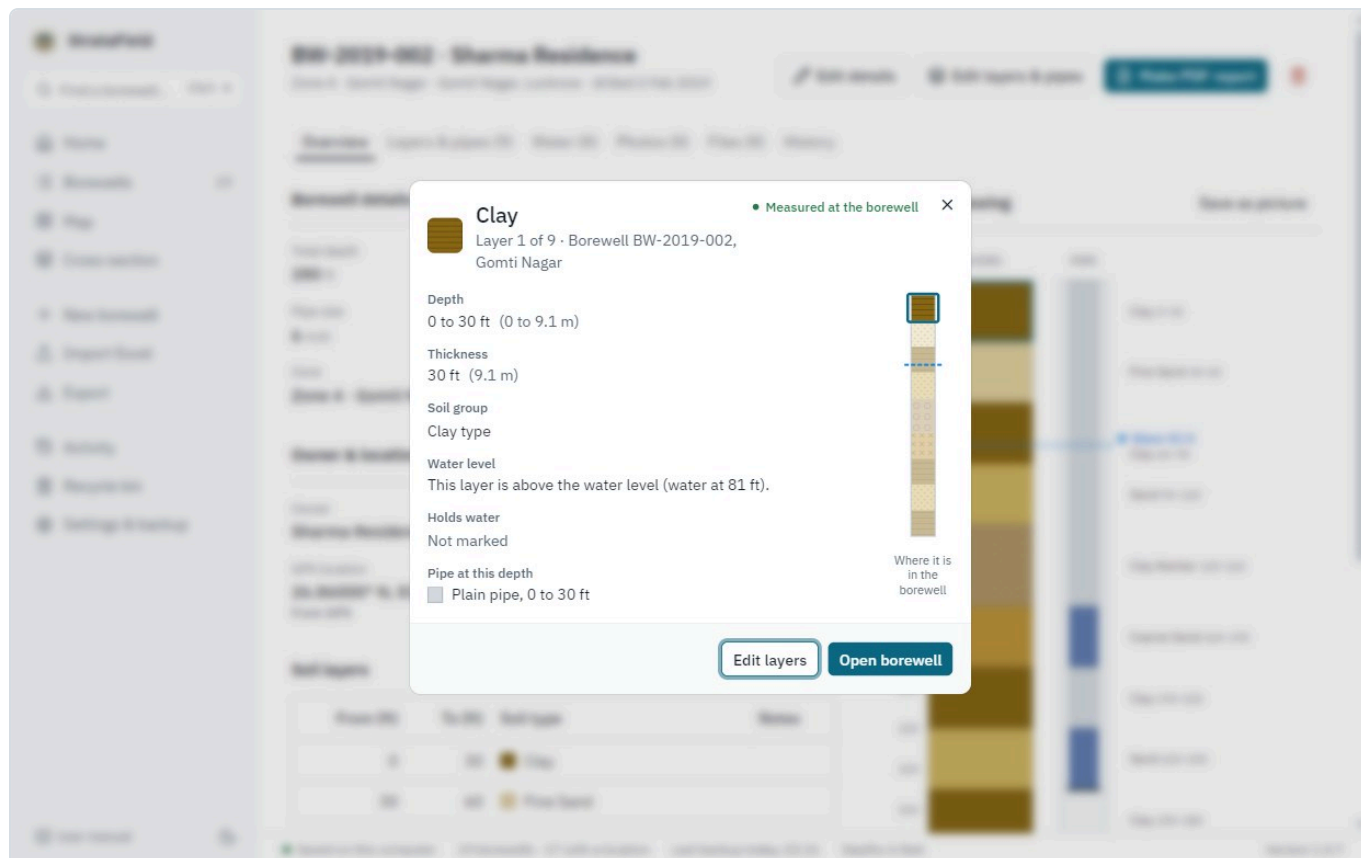

Click any layer in a drawing to see it: depth in feet and metres, thickness, whether it is above or below the water, and the pipe at that depth.

6. Change layers and pipes

On a borewell's page, click [Edit layers & pipes](#).

StrataField

Find a borewell... Ctrl K

Home
Borewells 19
Map
Cross-section
+ New borewell
Import Excel
Export
Activity
Recycle bin
Settings & backup

User manual

Edit layers & pipes · BW-2019-002

Type where each layer starts and ends, in feet. To change a soil type, click a row, then click a soil on the left. Total depth 280 ft.

✓ All changes saved Undo Redo Done

Soil types

Clay types

- Clay
- Silty Clay
- Sandy Clay
- Silt
- Kankar
- Clay Kankar
- Sandy Kankar

Sand types

- Fine Sand
- Sand
- Coarse Sand
- Yellow Sand
- Gravel
- Sandy Gravel

Rock

- Rock
- Boulder

Soil layers + Add layer

From (ft)	To (ft)	Soil type	Notes	Holds water
0	30	Clay	Optional	☐
30	60	Fine Sand	Optional	☐
60	90	Clay	Optional	☐
90	120	Sand	Optional	☐
120	160	Clay Kankar	Optional	☐
160	190	Coarse Sand	Optional	☐
190	220	Clay	Optional	☐
220	250	Sand	Optional	☐
250	280	Clay	Optional	☐

Pipes + Add pipe piece


Saved on this computer 19 borewells · 17 with a location Last backup today, 02:21 Depths in feet Version 1.0.7

Soil types on the left, the rows in the middle, the drawing on the right.

- Type where each layer starts and ends, in feet.
- To change a soil: click the row, then click a soil on the left. Or use the box in the row.
- Tick **Holds water** for a layer that gave water.
- Under **Pipes**, add each piece and choose **Plain pipe** or **Screen pipe** (where water enters).
- Changes are saved as you type; the top right says **All changes saved**. [Undo](#) and [Redo](#) step back and forward.

If two layers cover the same depth, or a layer ends above where it starts, the row is marked and the change is not saved until it is fixed.

7. The map

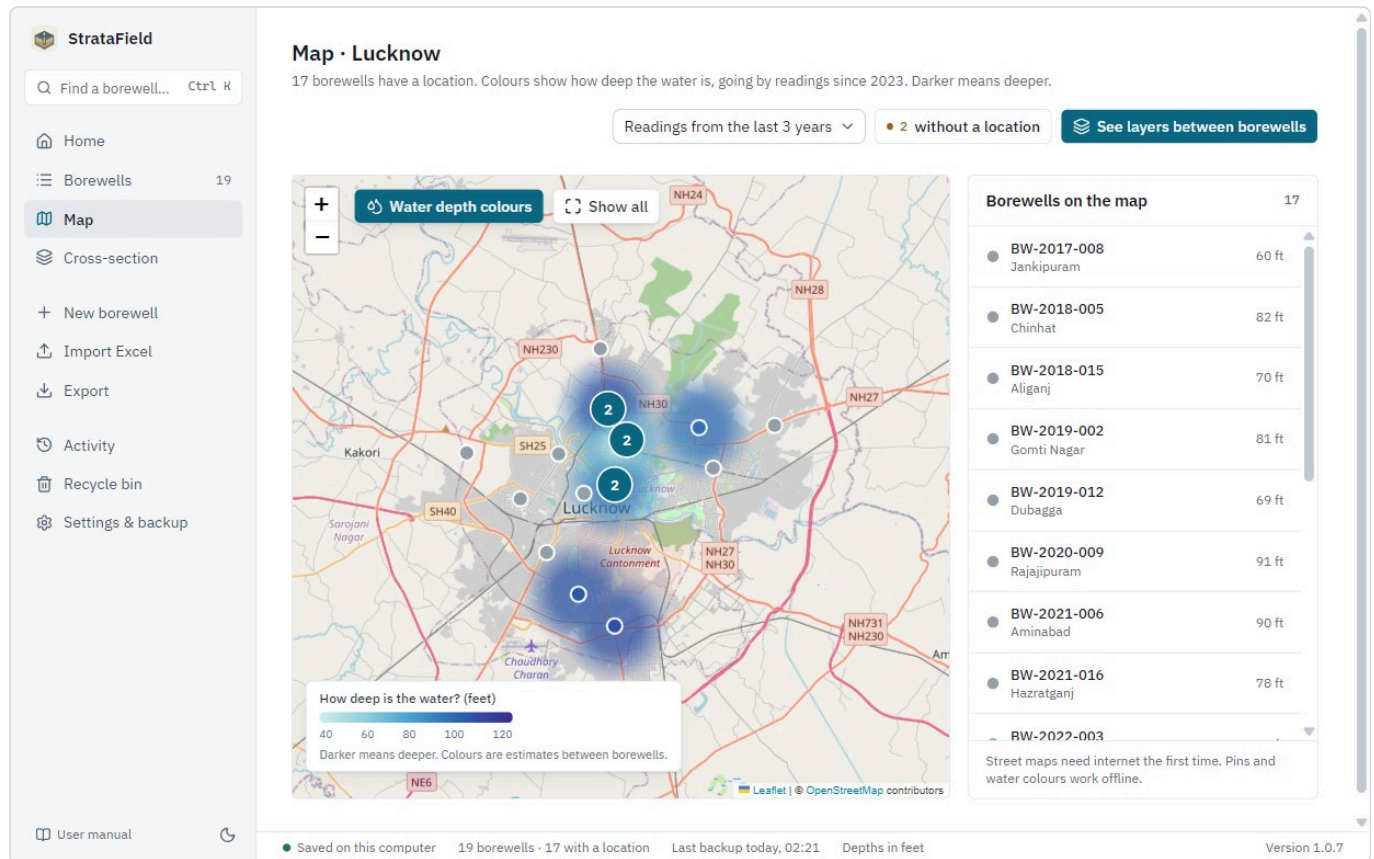


Each dot is a borewell. The colour shows how deep the water is: pale is shallow, dark is deep.

- Click a dot to see that borewell; click its name in the list on the right to find it on the map.
- A circle with a number is several borewells close together. Click it to zoom in.
- The colours between borewells are estimates, and fade out far from any borewell.
- **Water depth colours** turns the colours off and on. **Show all** zooms back out to every borewell.

Which water readings count

Water levels measured years apart cannot be compared, because the water moves. The box at the top (**Readings from the last 3 years**) chooses which readings the colours use: the last year, 3 years, 5 years, or all of them. Borewells with older readings stay on the map as grey dots. The same choice is used on Home.

Several borewells at the same spot

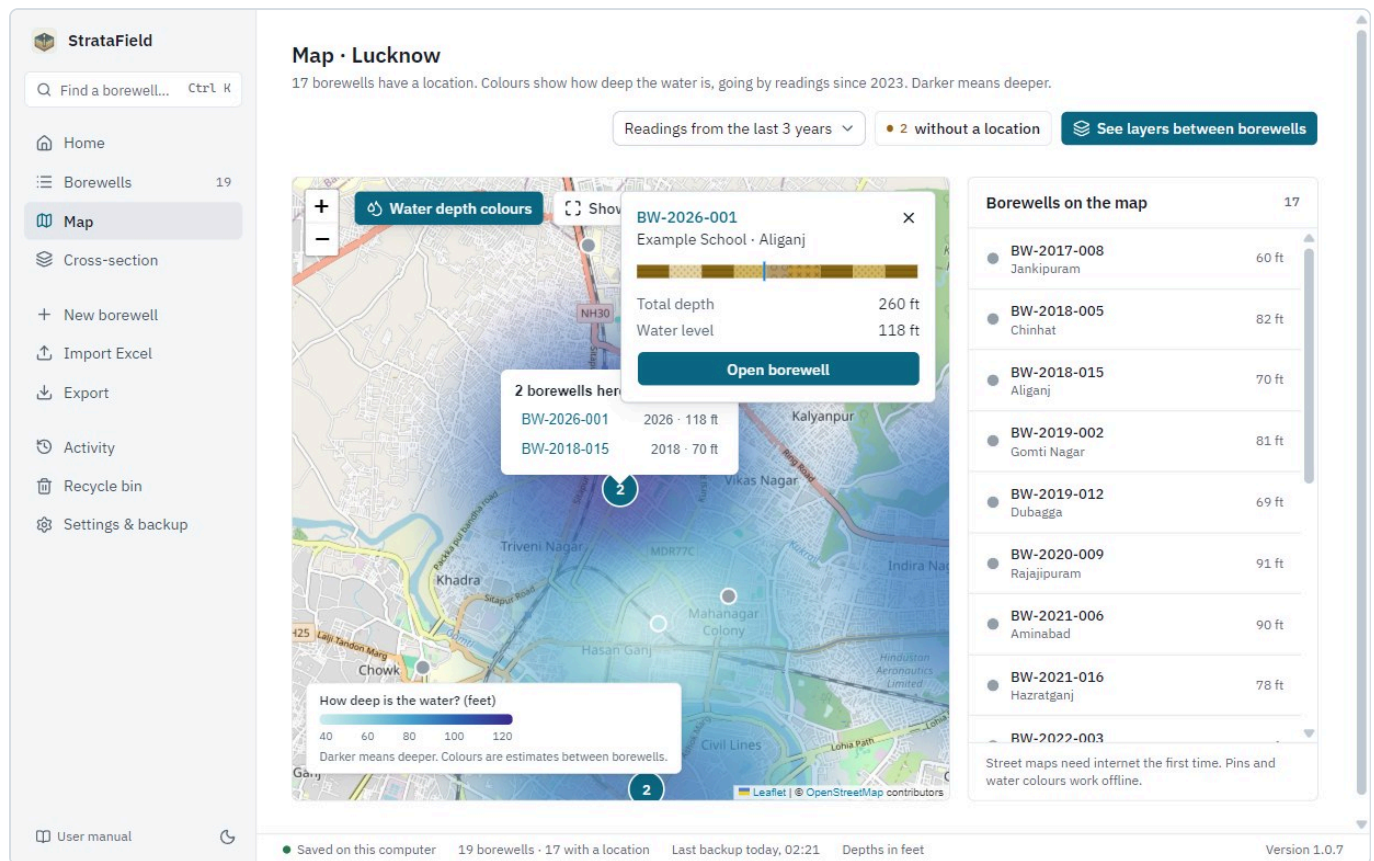

When borewells are at the same place, clicking the circle lists them, newest first. Click one to open it.

Without internet. The dots and water colours always work. To see streets as well, download the Lucknow map once: **Settings & backup** → **Map without internet**.

8. Cross-sections

A cross-section shows the soil layers underground along a line, as if the ground were cut open.

1. Choose **Cross-section**. Click the map where the line should start, then where it should end. Or try **North to south** or **West to east**.
2. Drag **A** or **A'** to move the ends. Drag the small dot in the middle of the line to bend it, for example to follow a road. Double-click a bend to remove it.
3. The slider sets how far from the line a borewell may be and still be used.

StrataField

Find a borewell... Ctrl K

Home

Borewells 19

Map

Cross-section

New borewell

Import Excel

Export

Activity

Recycle bin

Settings & backup

User manual

Cross-section

See the soil layers underground along a line you draw across Lucknow.

Draw a new line

✓ Tap where the line starts

Point A is set

✓ Tap where the line ends


Drag A or A' to move them, or drag a dot on the line to bend it

✓ Read the layers

8 borewells near the line are used

+

-

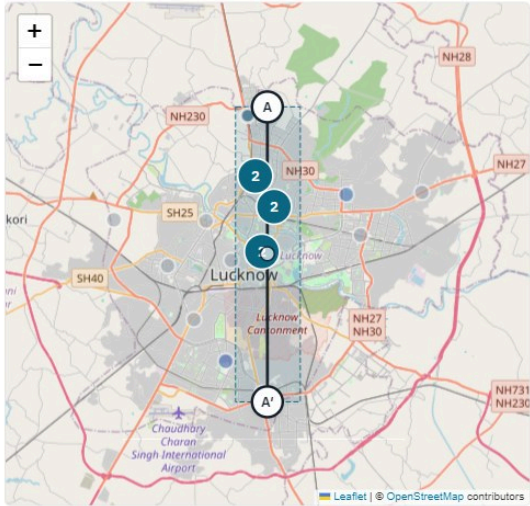

Borewells used

In order from A to A'

Include borewells within 2 km of the line

Jankipuram
BW-2017-008

0.6 km from A

1.2 km off

Aliganj
BW-2026-001

4.3 km from A

0.7 km off

Aliganj
BW-2018-015

4.3 km from A

0.7 km off

Or try an example line

North to south

West to east

Layers along the line

Save

Save as PDF

Save as picture

Saved on this computer

19 borewells · 17 with a location

Last backup today, 02:21

Depths in feet

Version 1.0.7

The line from A to A', and the borewells near it that are used.

9. Make PDF reports and Excel files

StrataField

Find a borewell... Ctrl K

Home

Borewells 19

Map

Cross-section

+ New borewell

Import Excel

Export

Activity

Recycle bin

Settings & backup

User manual

Export

Make a PDF report to print or share, or an Excel workbook with every detail.

1. Which borewells?

☒ **All borewells**
19 borewells

☐ **One zone**
Everything in a zone

☐ **Choose borewells**
Tick the ones you want

2. What kind of file?

☒ **PDF report**
One page per borewell with the drawing, layers, pipes and water readings.
Good for printing and sharing.

☐ **Excel workbook**
All details in sheets: borewells, soil layers, pipes and water readings.

[Save PDF report \(19 borewells\)](#)

● Saved on this computer 19 borewells - 17 with a location Last backup today, 02:21 Depths in feet Version 1.0.7


Choose which borewells, then what kind of file.

- **PDF report:** one page per borewell, with its drawing, layers, pipes and water readings. Good for printing and for giving to the owner.
- **Excel workbook:** one file with sheets for borewells, soil layers, pipes and water readings.

Choose **All borewells**, **One zone**, or **Choose borewells** and tick the ones you want. Click the Save button and choose where to put the file. For a single borewell, **Make PDF report** on its own page is quicker.

10. Backups

StrataField makes a backup by itself every day and keeps the last 10. You do not have to do anything.

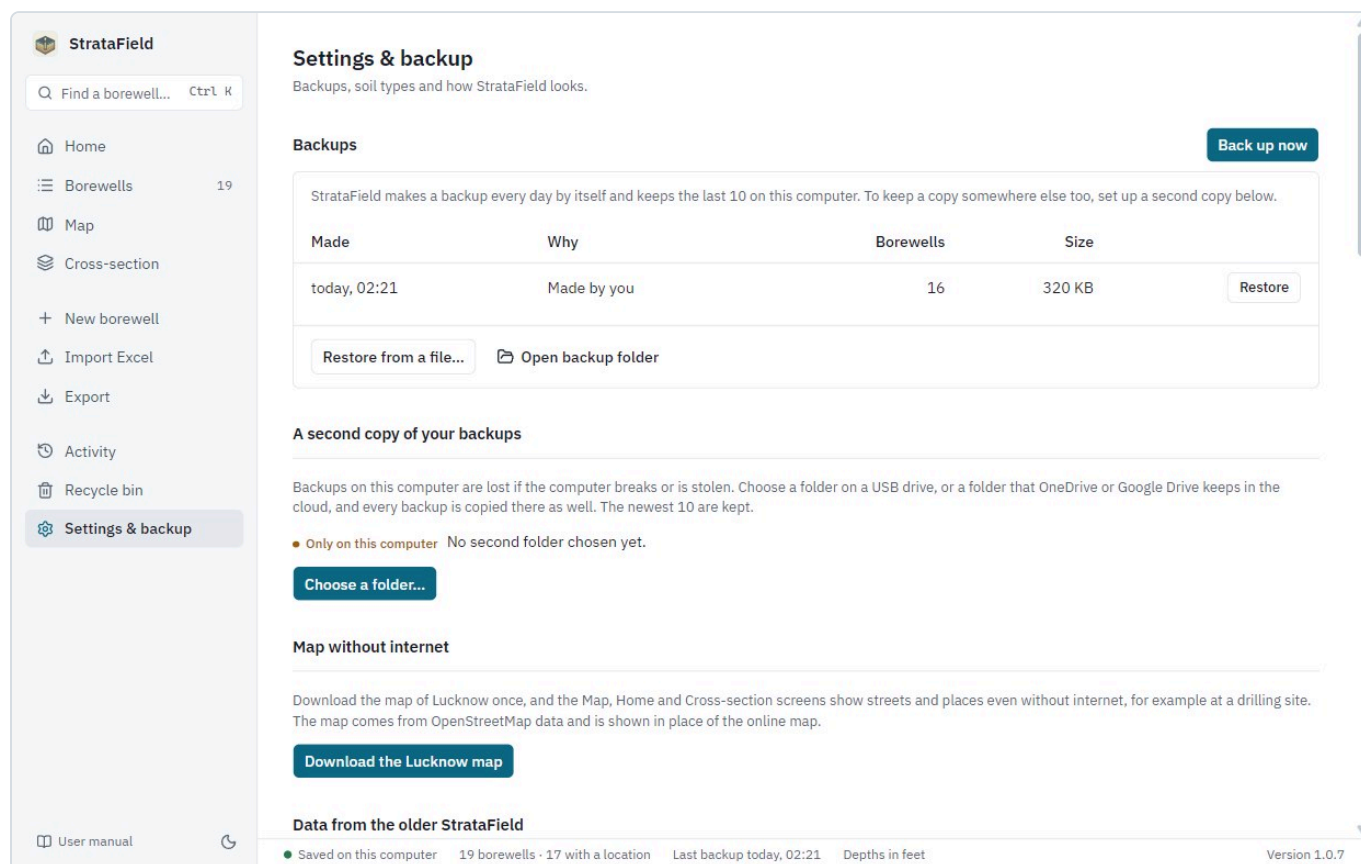

Settings & backup. The top of the screen is all about backups.

- **Back up now** makes one straight away, for example before a big import.
- **Restore** puts everything back to how it was when that backup was made. A copy of how things are now is saved first, so a restore can itself be undone.

Set up a second copy. Backups on this computer are lost if the computer breaks or is stolen. Under **A second copy of your backups**, choose a folder on a USB drive, or one that OneDrive or Google Drive keeps in the cloud. Every backup is then copied there too. Home tells you if the copies stop, for example when the USB drive is not plugged in.

To move to a new computer: install StrataField there, copy a backup file across, and use **Restore from a file...**.

11. Zones and soil types

The screenshot shows the StrataField application interface. On the left is a sidebar with a search bar and navigation links: Home, Borewells (19), Map, Cross-section, New borewell, Import Excel, Export, Activity, Recycle bin, and Settings & backup (highlighted). The main area has a 'Bring in an older data file...' button at the top. Below it are two sections: 'Zones' and 'Soil types'. The 'Zones' section contains a list of zones with their names, the number of borewells, and a 'Rename' button. The 'Soil types' section contains a table of soil types with columns for Soil type, Group, Pattern, and a 'Built-in' status, along with a 'Rename' button. At the bottom, there is a status bar with information about the current state of the application.

Zones

Rename a zone to fix its spelling. To merge two zones that are the same place, rename one to the other's name.

Zone	Borewells	Action
Zone 1 · Old City	4 borewells	Rename
Zone 3 · Trans-Gomti	5 borewells	Rename
Zone 4 · Gomti Nagar	2 borewells	Rename
Zone 5 · South	3 borewells	Rename
Zone 6 · West	2 borewells	Rename
Zone 7 · North	1 borewell	Rename

Soil types

The soil types you can choose for a layer. Built-in types can have their colour and pattern changed but not be deleted.

Soil type	Group	Pattern	Built-in	Action
Clay	Clay	Lines	Built-in	Rename
Silty Clay	Clay	Lines	Built-in	Rename
Sandy Clay	Clay	Dots	Built-in	Rename

Settings & backup → Zones.

- **Rename a zone** to fix its spelling: click **Rename**, type, **Save**.
- **Merge two zones** that are the same place: rename one to the other's name. StrataField asks first, then moves all its borewells across.
- **Soil names not recognised** lists names from Excel files that match no soil type. Choose what each one means and every layer with that name is fixed together.
- **Soil types** is the list you choose from for a layer. Add your own with **Add soil type**; change the colour or pattern of any with the pencil.

12. See what changed, and undo a delete

StrataField

Find a borewell... Ctrl K

Home

Borewells19

Map

Cross-section

+ New borewell

Import Excel

Export

Activity

Recycle bin

Settings & backup

User manual

Activity

Everything that was added, imported, changed or deleted, newest first.

Search the activity, e.g. a borewell ID or "Notes from

today, 02:21	Imported 1 borewell from Kalyanpur site.xlsx	
today, 02:21	Notes from reading Kalyanpur site.xlsx: The file was not in the usual layout, so its columns were chosen on the Import screen. No site or owner name was found. No drilling date was found. No water level was found.	Open borewell
today, 02:21	Saved 3 pipe pieces for Kalyanpur site	Open borewell
today, 02:21	Saved 5 soil layers for Kalyanpur site	Open borewell
today, 02:21	Added Kalyanpur site	Open borewell
today, 02:21	Imported 1 borewell from Riverside Apartments.xlsx	
today, 02:21	Saved 3 pipe pieces for Riverside Apartments	Open borewell
today, 02:21	Saved 9 soil layers for Riverside Apartments	Open borewell
today, 02:21	Added Riverside Apartments (Riverside Apartments)	Open borewell
today, 02:21	Saved 3 soil layers for BW-2026-012	Open borewell
today, 02:21	Added BW-2026-012 (Lake View Homes)	Open borewell
today, 02:21	Saved 4 pipe pieces for BW-2021-016	Open borewell
today, 02:21	Saved 9 soil layers for BW-2021-016	Open borewell
today, 02:21	Added BW-2021-016 (Lake View Homes)	Open borewell

● Saved on this computer

19 borewells · 17 with a location

Last backup today, 02:21

Depths in feet

Version 1.0.7

Activity lists every change, newest first. Type in the box to find a borewell or a file name.

Activity is the place to look after a batch of imports: each file's notes are there, and **Open borewell** takes you to it. Each borewell's own **History** tab shows the same for just that borewell.

The Recycle bin

 **StrataField**

Ctrl K

Home

Borewells 19

Map

Cross-section

+ New borewell

Import Excel

Export

Activity

Recycle bin

Settings & backup

User manual

Recycle bin

Deleted borewells. Restore them or delete them for good.

Borewell ID	Owner	Area	Date drilled	Layers	Deleted	
BW-2026-012	Lake View Homes	Kapoorthala, Aliganj	2 Oct 2026	3	today, 02:22	Restore Delete for good

Borewells stay here until you delete them for good. They are not shown on the map, in cross-sections or in exports.

Saved on this computer

19 borewells · 17 with a location

Last backup today, 02:21

Depths in feet

Version 1.0.7

Deleted borewells wait here.

Deleting a borewell moves it to the **Recycle bin**. It no longer shows in lists or on the map, but nothing is lost. **Restore** puts it back. **Delete for good** removes it and its photos and files; that cannot be undone except by restoring a backup.

13. Updates

When a newer version is ready, StrataField says so at the top of the screen. Click **Install and restart** . It takes about a minute: StrataField closes, updates and opens again. Your data is not touched. You can also check at any time under **Settings & backup** → **About** → **Check for updates**.

StrataField

Find a borewell... Ctrl K

Home

Borewells19

Map

Cross-section

New borewell

Import Excel

Export

Activity

Recycle bin

Settings & backup

User manual

	Yellow Sand	Sand	Dots	Built-in	
	Gravel	Sand	Circles	Built-in	
	Sandy Gravel	Sand	Circles	Built-in	
	Rock	Rock	Crosses	Built-in	
	Boulder	Rock	Circles	Built-in	
	Not recorded	Not recorded	Hatched	Built-in	

Appearance

Light

Dark

Same as Windows

About

StrataField

Version 1.0.7

Borewell records, soil layers and groundwater levels, kept on this computer. Built for drilling work in Lucknow: nothing is sent anywhere, and everything except address look-up works without internet.

Your data is kept in

C:\Users\your name\AppData\Roaming\Strata

Shared with

StrataVision, when it is installed, uses the same data. Anything added in one shows up in the other.

Check for updates

Open the user manual

Open the getting-started guide

Copy details for support

Open the error log

Open data folder

● Saved on this computer

19 borewells · 17 with a location

Last backup today, 02:21

Depths in feet

Version 1.0.7

Settings & backup → About: the version, where your data is kept, and the help buttons.

14. If something goes wrong

What you see	What to do
A red message at the bottom right	Read it: it says what went wrong and usually how to fix it. Nothing was saved from that one action; everything before it is safe.
An Excel file shows "Cannot be read"	Open it in Excel and save it again as .xlsx, then try once more. Or add the borewell by hand and attach the file.
The layers from an Excel file look wrong	On the Import screen, check the choices under Where the layers are in this file . After importing, use Edit layers & pipes .
A borewell is not on the map	It has no location. Open it, click Edit details , and add one under Location.
The map is grey, with no streets	There is no internet. Dots and water colours still work. Download the Lucknow map under Settings to have streets without internet.
Something was deleted by mistake	Look in the Recycle bin . For anything else, restore a backup from before it happened.
"StrataField could not open your data"	Do not delete anything. Send the details below to whoever helps you with StrataField.

Asking for help

Go to **Settings & backup** → **About**.

- **Copy details for support** shows the versions, how much data there is, the state of backups and recent errors. Click **Copy** and paste it into an email or message. It contains no borewell details, and nothing is sent unless you send it.
- **Open the error log** opens the full list of problems recorded on this computer.
- **Open data folder** shows where your data is kept, in case you are asked for it.

Your data is in the folder **Strata** inside your Windows user's AppData folder. Uninstalling StrataField removes the program but leaves that folder, so installing again brings everything back.