



StrataField User Manual

How to keep borewell records, bring in your Excel drilling logs, see the water level across Lucknow, and keep your data safe.

The pictures in this manual use made-up borewells. Your screens will show your own.

What is in this manual


1. The screen, and where things are
2. Add a borewell by hand
3. Bring in Excel drilling logs
4. Find a borewell
5. A borewell's page
6. Change layers and pipes
7. The map
8. Cross-sections
9. Make PDF reports and Excel files
10. Backups
11. Zones and soil types
12. See what changed, and undo a delete
13. Updates
14. If something goes wrong

Three things worth knowing first

- Everything is saved on this computer as you go. There is no Save button to forget, except where a screen has its own (for example **Save borewell**).
- All depths are in feet. Logs written in metres are converted when you import them.
- Nothing is sent anywhere. Only the street map and address look-up use the internet.

1. The screen, and where things are

The menu on the left is always there. Click a name to go to that screen.

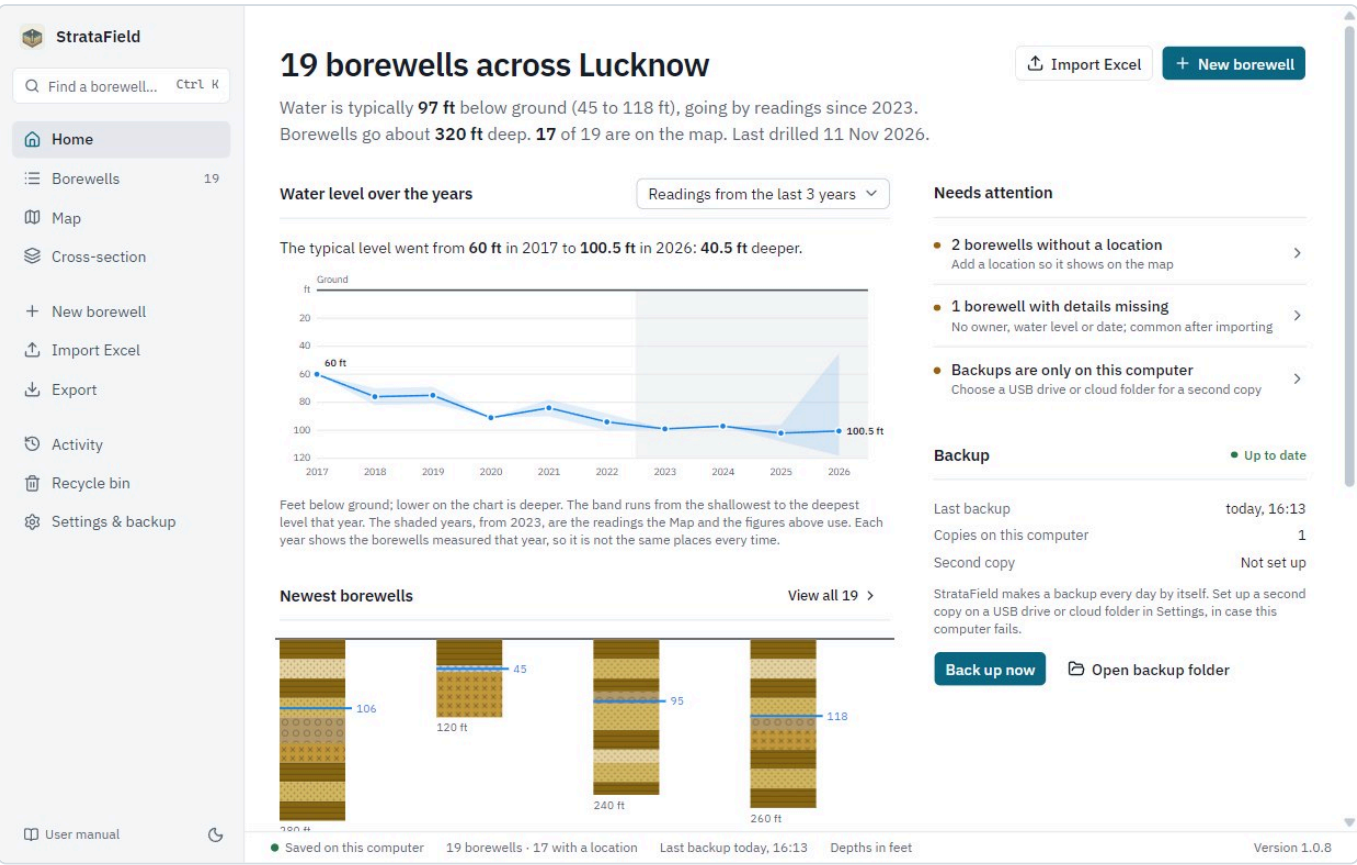

Home. The heading says how many borewells you have and how deep the water typically is.

In the menu	What it is for
Find a borewell	Jump to the search box from anywhere. <code>Ctrl</code> + <code>K</code> does the same.
Home	The picture at a glance: water level over the years, the newest borewells, each zone, and anything that needs your attention.
Borewells	The full list, with search and filters.
Map	Where the borewells are, coloured by how deep the water is.
Cross-section	The soil layers underground along a line you draw on the map.
New borewell	Type in one borewell, step by step.
Import Excel	Bring in drilling logs from Excel files.
Export	Make PDF reports to print or share, or one Excel file with everything.
Activity	Everything that was added or changed, newest first.
Recycle bin	Deleted borewells, which can be put back.
Settings & backup	Backups, zones, soil types, light or dark colours, updates.

The strip along the bottom shows that your data is saved, how many borewells there are, and when the last backup was made. The small sun or moon at the bottom of the menu switches between light and dark colours.

Needs attention

On Home, **Needs attention** lists things worth fixing: borewells with no location, with no soil layers, with an owner, water level or date missing, soil names that were not recognised, and backups that are getting old. Click a line to go straight to the borewells it means.

2. Add a borewell by hand

Choose **New borewell**. There are six short steps; only the ID is required.

The screenshot shows the 'StrataField' application interface. On the left is a sidebar with navigation options: Home, Borewells (0), Map, Cross-section, and a highlighted '+ New borewell' option. Below these are 'Import Excel', 'Export', 'Activity', 'Recycle bin', and 'Settings & backup'. At the bottom of the sidebar is a 'User manual' link. The main area is titled 'New borewell' with a subtitle 'Enter a borewell's details step by step.' Below this is a progress bar with six steps: 1. Basics (active), 2. Location, 3. Drilling & water, 4. Layers & pipes, 5. Photos & files, and 6. Check & save. The 'Basics' section contains four input fields: 'Borewell ID' (with the value 'BW-2026-012' and a note 'Suggested automatically. You can change it.'), 'Owner's name' (with the value 'Lake View Homes'), 'Zone' (with the value 'Zone 3 - Trans-Gomti' and a note 'Same as the last borewell you added. Change it if this one is elsewhere.'), and 'Date drilled' (with the value '04-10-2026' and a calendar icon). A 'Next: Location' button is at the bottom right. The footer shows status information: 'Saved on this computer', '0 borewells · 0 with a location', 'No backup yet', 'Depths in feet', and 'Version 1.0.8'.

Step 1, Basics. The ID is suggested for you; change it if you use your own numbering.

- Basics.** The borewell's ID, the owner's name, the zone and the date it was drilled. A **zone** is your own name for a group of borewells, such as a part of the city; it is what the Home screen's "By zone" table and the zone filter use. Pick one you have used before or type a new name. The address, on the next step, only describes this one borewell.
- Location.** Type the area, then give the position in whichever way is easiest:
 - paste or type coordinates copied from a phone or Google Maps, for example **26.8742, 80.9480**;
 - click **Pick on the map**, type a place, colony or road in the search box to go there (needs internet), and click the spot;
 - click **Use a photo's GPS** and choose a photo taken at the site;
 - click **Search for the address** to open the map with the typed address already searched. A found place is approximate, so click the exact spot if you can see it.
- Drilling & water.** Total depth, water level, hole size and pipe size. Under **Pump**, the pump's type, its make and model, its power in HP and how deep it was lowered. Leave the pump empty if none was fitted.
- Layers & pipes.** Click **Add layer** for each soil layer and type where it starts and ends. The drawing on the right fills in as you go.
- Photos & files.** Optional. Site photos, the drilling log, permits.

6. **Check & save.** Read it through, then click **Save borewell**.

The screenshot shows the 'New borewell' form in the StrataField application, specifically Step 2: Location. The left sidebar contains navigation options: Home, Borewells (0), Map, Cross-section, New borewell (selected), Import Excel, Export, Activity, Recycle bin, and Settings & backup. The main form area has a progress bar at the top with steps: 1. Basics, 2. Location (active), 3. Drilling & water, 4. Layers & pipes, 5. Photos & files, and 6. Check & save. The 'Address' section includes fields for 'House or plot no.', 'Street or colony', 'Area' (filled with 'Kapoorthala, Aliganj'), and 'City' (filled with 'Lucknow'). Below this is a 'Where is the borewell?' section with a note: 'Choose the most accurate way you have. A photo taken at the borewell with GPS on is best.' There are three options: 'Use a photo's GPS' (Most accurate), 'Search for the address' (Approximate - needs internet), and 'Pick on the map' (Search for a place, then click the spot). Below these are fields for 'Or paste coordinates', 'Latitude' (filled with '26.8742'), and 'Longitude' (filled with '80.9480'). A note below the coordinates field says: 'From a phone or GPS unit, for example "26.8930, 80.9420"'. There is a 'Clear location' button and a 'Back' button. At the bottom right is a 'Next: Drilling & water' button. The footer shows 'Saved on this computer', '0 borewells - 0 with a location', 'No backup yet', 'Depths in feet', and 'Version 1.0.8'.

StrataField

Find a borewell... Ctrl K

Home
Borewells 0
Map
Cross-section
+ New borewell
Import Excel
Export
Activity
Recycle bin
Settings & backup

User manual

New borewell

Enter a borewell's details step by step.

1. Basics 2. Location 3. Drilling & water 4. Layers & pipes 5. Photos & files 6. Check & save

Address

House or plot no. Street or colony

Area City

Kapoorthala, Aliganj Lucknow

Where is the borewell?

• Typed in

Choose the most accurate way you have. A photo taken at the borewell with GPS on is best.

Use a photo's GPS
Most accurate

Search for the address
Approximate - needs internet

Pick on the map
Search for a place, then click the spot

Or paste coordinates Latitude Longitude

26.8742, 80.9480 26.8742 80.9480

From a phone or GPS unit, for example "26.8930, 80.9420"

Clear location

Back

Next: Drilling & water

• Saved on this computer 0 borewells - 0 with a location No backup yet Depths in feet Version 1.0.8

Step 2, Location. Pasted coordinates fill in the latitude and longitude.

The screenshot shows the 'New borewell' form in the StrataField application, specifically Step 3: Drilling & water. The left sidebar is the same as in Step 2. The main form area has a progress bar at the top with steps: 1. Basics, 2. Location, 3. Drilling & water (active), 4. Layers & pipes, 5. Photos & files, and 6. Check & save. The 'Drilling & water' section includes fields for 'Total depth (ft)' (filled with '120'), 'Water level (ft)' (filled with '45'), and 'Water level while pumping (ft)' (Optional). Below these are fields for 'Hole size (inch)', 'Pipe size (inch)', and 'Drilling method' (Choose...). There is a 'Notes' section with a text area containing 'Anything the driller noticed'. Below this is a 'Pump' section with fields for 'Pump type' (Borewell submersible, 4 inch (100 mm)), 'Pump model' (KSB 3C/20), and 'Power (HP)' (2). A note below the pump fields says: 'Pick one, or type your own. Make and model, e.g. KSB 12C/17.' There is a 'Pump lowered to (ft)' field (filled with '100') with a note: 'How deep the pump hangs, from the ground.' At the bottom right is a 'Next: Layers & pipes' button. The footer shows 'Saved on this computer', '0 borewells - 0 with a location', 'No backup yet', 'Depths in feet', and 'Version 1.0.8'.

StrataField

Find a borewell... Ctrl K

Home
Borewells 0
Map
Cross-section
+ New borewell
Import Excel
Export
Activity
Recycle bin
Settings & backup

User manual

New borewell

Enter a borewell's details step by step.

1. Basics 2. Location 3. Drilling & water 4. Layers & pipes 5. Photos & files 6. Check & save

Drilling & water

Total depth (ft) Water level (ft) Water level while pumping (ft)

120 45

Depth to water, measured from the ground. Optional

Hole size (inch) Pipe size (inch) Drilling method

Choose...

Notes

Anything the driller noticed

Pump

Pump type Pump model Power (HP)

Borewell submersible, 4 inch (100 mm) KSB 3C/20 2

Pick one, or type your own. Make and model, e.g. KSB 12C/17.

Pump lowered to (ft)

100

How deep the pump hangs, from the ground.

Back

Next: Layers & pipes

• Saved on this computer 0 borewells - 0 with a location No backup yet Depths in feet Version 1.0.8

Step 3. The pump fields suggest the usual types, makes and powers as you type; you can also type your own.

StrataField

Find a borewell... Ctrl K

Home
Borewells 0
Map
Cross-section
+ New borewell
Import Excel
Export
Activity
Recycle bin
Settings & backup

User manual

New borewell

Enter a borewell's details step by step.

1. Basics
2. Location
3. Drilling & water
4. Layers & pipes
5. Photos & files
6. Check & save

Soil layers

+ Add layer

From (ft)	To (ft)	Soil type	Notes	Hold water
0	40	Clay	Optional	☐
50	120	Coarse Sand	Optional	☐

Nothing is filled in from 40 to 50 ft.
Mark 40–50 ft as not recorded

Pipes

+ Add pipe piece

No pipes yet.

Back

Preview

LAYERS
PIPE

0 20 40 60 80 100 120

Clay 0–40
Water 45 ft
Coarse Sand 50–120

Total depth 120 ft

Next: Photos & files

Saved on this computer
0 borewells · 0 with a location
No backup yet
Depths in feet

Version 1.0.8

Step 4. Here nothing was typed for 40 to 50 ft, so StrataField points it out.

Gaps between layers. If a depth was not logged, do not guess. Click **Mark 40–50 ft as not recorded**. It is drawn as "Not recorded" and is never filled in by estimates.

You can stop part-way. If you close StrataField before saving, the next time you open **New borewell** it picks up where you left off.

3. Bring in Excel drilling logs

Choose **Import Excel**, then **Choose Excel files**. You can choose many files at once. Nothing is saved until you press Import.

StrataField

Ctrl K

Home

Borewells 17

Map

Cross-section

New borewell

Import Excel

Export

Activity

Recycle bin

Settings & backup

User manual

Import Excel

Add borewells from Excel drilling logs. Check each one before importing. The original file is kept with the borewell.

Add more files

Files (1)

Riverside Apartments.xl...
×

Ready

Import 1 borewell

Each file is imported as one borewell.
 Only ticked files are imported.

Borewell details

From the file

Borewell ID Riverside Apartments	Owner's name Riverside Apartments	Date drilled 12-08-2026
Zone 	Area or address Sector 12, Vikas Nagar	City Lucknow
Pick one you used before, or type a new one.		
Total depth (ft) 240	Water level (ft) 95	Hole / pipe size (inch) 12 6
Pump model 	Pump power (HP) 	Pump lowered to (ft)
Location Pick on the map		
Optional. Paste coordinates, for example "26.8930, 80.9420", or pick the spot on the map.		
Found 9 soil layers and 3 pipe pieces. You can also add the location after importing.		

What will be imported

ft

0

20

LAYERS

PIPE

Clay 0-30

Saved on this computer

17 borewells · 17 with a location

Last backup today, 16:13

Depths in feet

Version 1.0.8

Each file is read and shown for checking: the details found in it, and a drawing of what will be imported.

StrataField reads the soil layers, the plain pipe and screens, the site name, address, date, hole and pipe sizes and the water level. Rows of the same soil are joined into one layer. Logs in metres are converted to feet.

The list on the left shows each file as:

It says	What it means
Ready	Everything was found. Have a quick look and import.
Needs a look	It can be imported, but something is noted: no water level in the file, depths converted from metres, a second log on the same sheet. Read the notes; type in anything missing if you know it.
Check the columns	The file is laid out differently, so StrataField guessed where things are. It is left out until you have checked the guess and clicked These columns are right, import this file . See below.
Cannot be read	The file could not be opened. Add the borewell by hand and attach the file to it.

Untick a file to leave it out. Then click **Import ... borewells**. The original Excel file is kept with each borewell, under its **Files** tab.

A file laid out differently

StrataField

Find a borewell... Ctrl K

Home

Borewells 17

Map

Cross-section

New borewell

Import Excel

Export

Activity

Recycle bin

Settings & backup

User manual

Import Excel

Add borewells from Excel drilling logs. Check each one before importing. The original file is kept with the borewell.

Add more files

Files (2)

☒ Riverside Apartments.xl...
Ready

☐ Kalyanpur site.xlsx
Check the columns

Import 1 borewell

Each file is imported as one borewell.
Only ticked files are imported.

Where the layers are in this file

This file is not laid out like the drilling logs StrataField knows, so it made a guess. Check each choice against the start of the file, shown below. The columns in use are shaded.

Depth where each layer ends

Soil name

Row of the first layer

Depth where each layer starts

Pipe type

Depths are in

Column B · To (ft)

Column C · Soil type

Row 3

Column A · From (ft)

Column D · Pipe

Feet

Row	A	B	C	D
1	Borewell at Kalyanpur			
2	From (ft)	To (ft)	Soil type	Pipe
3	0	40	Clay	Plain pipe
4	40	90	Fine Sand	Plain pipe
5	90	130	Clay	Plain pipe
6	130	180	Coarse Sand	Screen
7	180	200	Clay	Plain pipe

☒ These columns are right, import this file

Notes from reading the file

No site or owner name was found. Enter it below.

No drilling date was found. Enter it below if you know it.

Saved on this computer

17 borewells · 17 with a location

Last backup today, 16:13

Depths in feet

Version 1.0.8

The start of the file is shown, with the columns in use shaded. Change a choice and the drawing updates.

Under **Where the layers are in this file**, check that each box points at the right column: where a layer ends, the soil name, the first row with a layer, and, if the file has them, where a layer starts and the pipe type. Say whether the depths are in feet or metres.

After importing

Give each file its **Zone** on the Import screen, the same way as for a new borewell. The file does not say where the borewell is. Under **Location** on the Import screen you can paste its coordinates or click **Pick on the map** before importing; left empty, the borewell has no position on the map until you add one. It may also have no owner, water level or date if the file did not say. To find them, open **Borewells** and click **No location** or **Missing details**. The notes from the Import screen are kept in each borewell's **History** tab.

4. Find a borewell

Open **Borewells**, or press **Ctrl** + **K** from anywhere and start typing.

The screenshot shows the StrataField application interface. On the left is a sidebar with navigation options: Home, Borewells (19), Map, Cross-section, New borewell, Import Excel, Export, Activity, Recycle bin, and Settings & backup. The main area is titled 'Borewells' and contains a search bar, filters (All zones, Any soil type, No location, Missing details), and a table of borewells. The table has columns: Borewell ID, Owner, Area, Date drilled, Total depth (ft), Water level (ft), and Layers (blue = water). The bottom status bar indicates 'Saved on this computer', '19 borewells · 17 with a location', 'Last backup today, 16:13', 'Depths in feet', and 'Version 1.0.8'.

Borewell ID	Owner	Area	Date drilled	Total depth (ft)	Water level (ft)	Layers (blue = water)
BW-2026-011	City Clinic	Ashiyana Zone 5 · South	11 Nov 2026	280	106	
Kalyanpur site	Not entered	No zone	—	200	—	
BW-2026-012	Lake View Homes	Kapoorthala, Aliganj Zone 3 · Trans-Gomti	4 Oct 2026	120	45	
Riverside Apartments	Riverside Apartments	Sector 12, Vikas Nagar No zone	12 Aug 2026	240	95	
BW-2026-001	Example School	Aliganj Zone 3 · Trans-Gomti	1 Jan 2026	260	118	
BW-2025-004	Verma Apartments	Indira Nagar Zone 3 · Trans-Gomti	4 Apr 2025	320	96	
BW-2025-014	Model Hospital	Telibagh Zone 5 · South	14 Mar 2025	340	108	
BW-2024-007	Sunrise Hotel	Hazratganj Zone 1 · Old City	7 Jul 2024	380	97	

Click a row to open that borewell. Click a column heading to sort by it.

- **Search** looks in the ID, owner, area, address and zone.
- **All zones** and **Any soil type** narrow the list to one zone, or to borewells that have a given soil.
- **More filters** adds depth, water level and date ranges.
- The coloured strip in each row is the borewell's layers from top to bottom; the blue line is the water level. Click a colour to see that layer.
- **Status** says what a record still lacks, for example "No location" or "No owner, water level".

 **StrataField**

Ctrl K

Home

Borewells 19

Map

Cross-section

+ New borewell

Import Excel

Export

Activity

Recycle bin

Settings & backup

User manual

Borewells

All your borewells. Click a row to open it.

Import Excel

+ New borewell

All zones

Any soil type

No location

Missing details

More filters

Clear filters

Borewell ID	Owner	Area	Date drilled ↓	Total depth (ft)	Water level (ft)	Layers (blue = water)	Status
Kalyanpur site	Not entered	No zone	—	200	—		No location, owner, water level, date drilled

Showing 1 of 1 found (19 in all)

All depths in feet

Saved on this computer

19 borewells · 17 with a location

Last backup today, 16:13

Depths in feet

Version 1.0.8

Missing details lists only the borewells with an owner, water level or date missing.

5. A borewell's page

The screenshot displays the StrataField software interface for a specific borewell. On the left is a sidebar with navigation options: Home, Borewells (19), Map, Cross-section, New borewell, Import Excel, Export, Activity, Recycle bin, and Settings & backup. The main area is titled 'BW-2019-002 · Sharma Residence' and includes a search bar and buttons for 'Edit details', 'Edit layers & pipes', 'Make PDF report', and a trash icon. Below the title are tabs for 'Overview', 'Layers & pipes (9)', 'Water (0)', 'Photos (0)', 'Files (0)', and 'History'. The 'Overview' tab is active, showing 'Borewell details' and 'Owner & location'. The 'Borewell details' section includes fields for Total depth (280 ft), Water level (81 ft), Hole size (12 inch), Pipe size (6 inch), Drilling method (Rotary), Date drilled (2 Feb 2019), Zone (Zone 4 · Gomti Nagar), and Added by (Typed in). The 'Owner & location' section shows the owner as 'Sharma Residence' and the address as 'Gomti Nagar, Lucknow', along with GPS coordinates (26.86000° N, 81.00800° E). Below this is a 'Soil layers' table with columns for From (ft), To (ft), Soil type, and Notes. The table lists two layers: Clay (0-30 ft) and Fine Sand (30-60 ft). To the right of the details is a 'Borewell drawing' showing a vertical cross-section of the borewell with layers and a pipe. The layers are labeled: Clay 0-30, Fine Sand 30-60, Sand 60-90, Sand 90-120, Clay Kankar 120-160, Coarse Sand 160-190, Clay 190-220, Sand 220-250, and Clay 250-280. The pipe is shown as a blue vertical line. A blue arrow points to the water level at 81 ft. The drawing is labeled 'LAYERS' and 'PIPE'. At the bottom of the interface, there is a status bar with information: 'Saved on this computer', '19 borewells · 17 with a location', 'Last backup today, 16:13', 'Depths in feet', and 'Version 1.0.8'.

Borewell details

Total depth	Water level	Hole size
280 ft	81 ft	12 inch
Pipe size	Drilling method	Date drilled
6 inch	Rotary	2 Feb 2019
Zone	Added by	
Zone 4 · Gomti Nagar	Typed in	

Owner & location

Owner: Sharma Residence
Address: Gomti Nagar, Lucknow
GPS location: 26.86000° N, 81.00800° E
From GPS

Soil layers

From (ft)	To (ft)	Soil type	Notes
0	30	Clay	
30	60	Fine Sand	

Borewell drawing

Layers: Clay 0-30, Fine Sand 30-60, Sand 60-90, Sand 90-120, Clay Kankar 120-160, Coarse Sand 160-190, Clay 190-220, Sand 220-250, Clay 250-280


Pipe: Water 81 ft

Details on the left, the borewell drawing on the right: layers, pipe and water level.

The tabs across the top are:

- **Overview:** the details, owner and location, the layers, and the drawing.
- **Layers & pipes:** the layers and pipe pieces as tables.
- **Water:** every water reading. Add a new one whenever the level is measured again; the borewell always shows the newest.
- **Photos** and **Files:** add site photos, the drilling log or permits. They are copied into StrataField's own folder, so the originals can be moved or deleted.
- **History:** every change to this borewell, and the notes from when it was imported.

The buttons at the top right are **Edit details**, **Edit layers & pipes**, **Make PDF report**, and the bin, which moves the borewell to the Recycle bin.

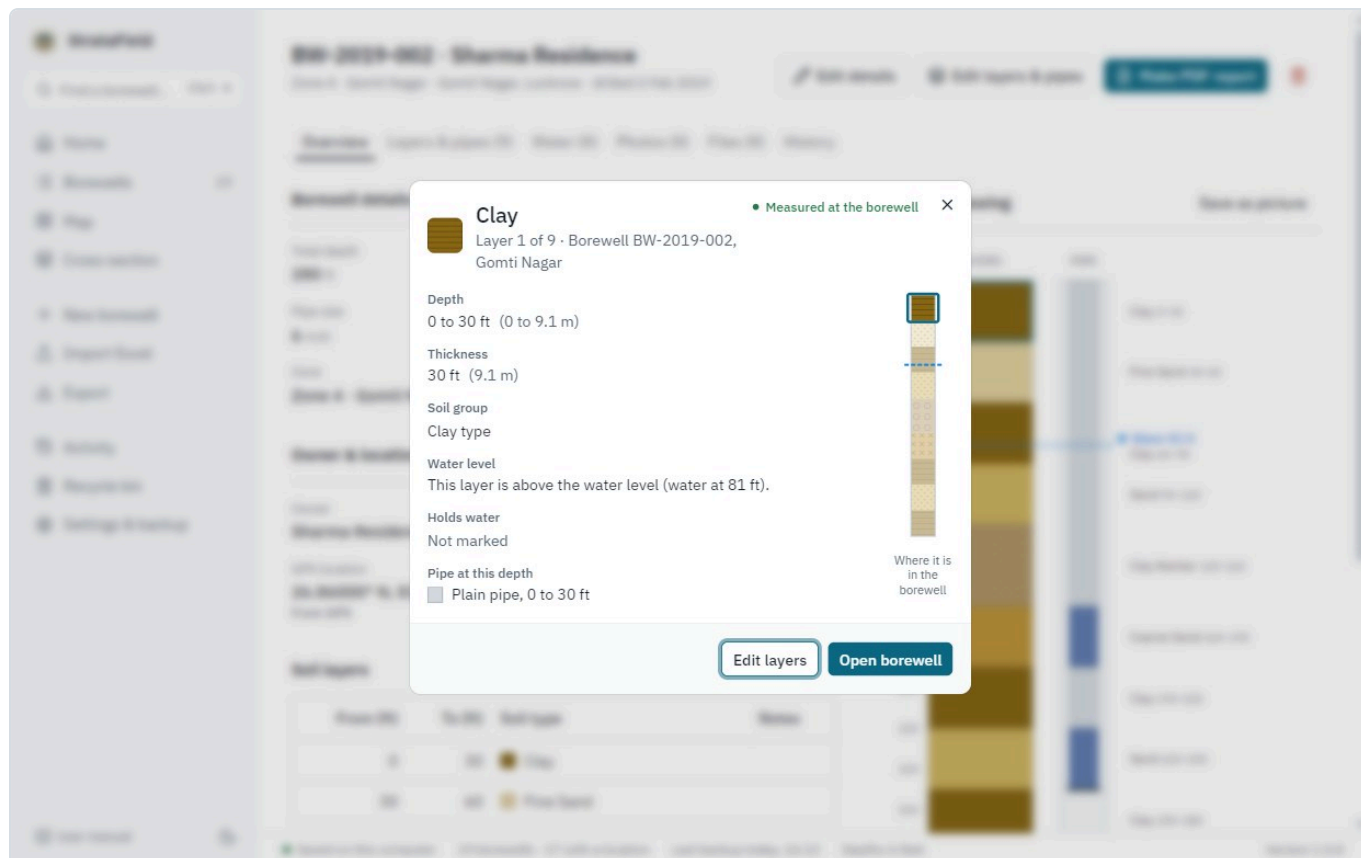

Click any layer in a drawing to see it: depth in feet and metres, thickness, whether it is above or below the water, and the pipe at that depth.

6. Change layers and pipes

On a borewell's page, click **Edit layers & pipes**.

StrataField

Find a borewell... Ctrl K

Home
Borewells 19
Map
Cross-section
+ New borewell
Import Excel
Export
Activity
Recycle bin
Settings & backup

User manual

Edit layers & pipes · BW-2019-002

Type where each layer starts and ends, in feet. To change a soil type, click a row, then click a soil on the left. Total depth 280 ft.

✓ All changes saved Undo Redo Done

Soil types

Clay types

- Clay
- Silty Clay
- Sandy Clay
- Silt
- Kankar
- Clay Kankar
- Sandy Kankar

Sand types

- Fine Sand
- Sand
- Coarse Sand
- Yellow Sand
- Gravel
- Sandy Gravel

Rock

- Rock
- Boulder

Soil layers + Add layer

From (ft)	To (ft)	Soil type	Notes	Holds water
0	30	Clay	Optional	☐
30	60	Fine Sand	Optional	☐
60	90	Clay	Optional	☐
90	120	Sand	Optional	☐
120	160	Clay Kankar	Optional	☐
160	190	Coarse Sand	Optional	☐
190	220	Clay	Optional	☐
220	250	Sand	Optional	☐
250	280	Clay	Optional	☐

Pipes + Add pipe piece


Saved on this computer 19 borewells · 17 with a location Last backup today, 16:13 Depths in feet Version 1.0.8

Soil types on the left, the rows in the middle, the drawing on the right.

- Type where each layer starts and ends, in feet.
- To change a soil: click the row, then click a soil on the left. Or use the box in the row.
- Tick **Holds water** for a layer that gave water.
- Under **Pipes**, add each piece and choose **Plain pipe** or **Screen pipe** (where water enters).
- Changes are saved as you type; the top right says **All changes saved**. **Undo** and **Redo** step back and forward.

If two layers cover the same depth, or a layer ends above where it starts, the row is marked and the change is not saved until it is fixed.

7. The map

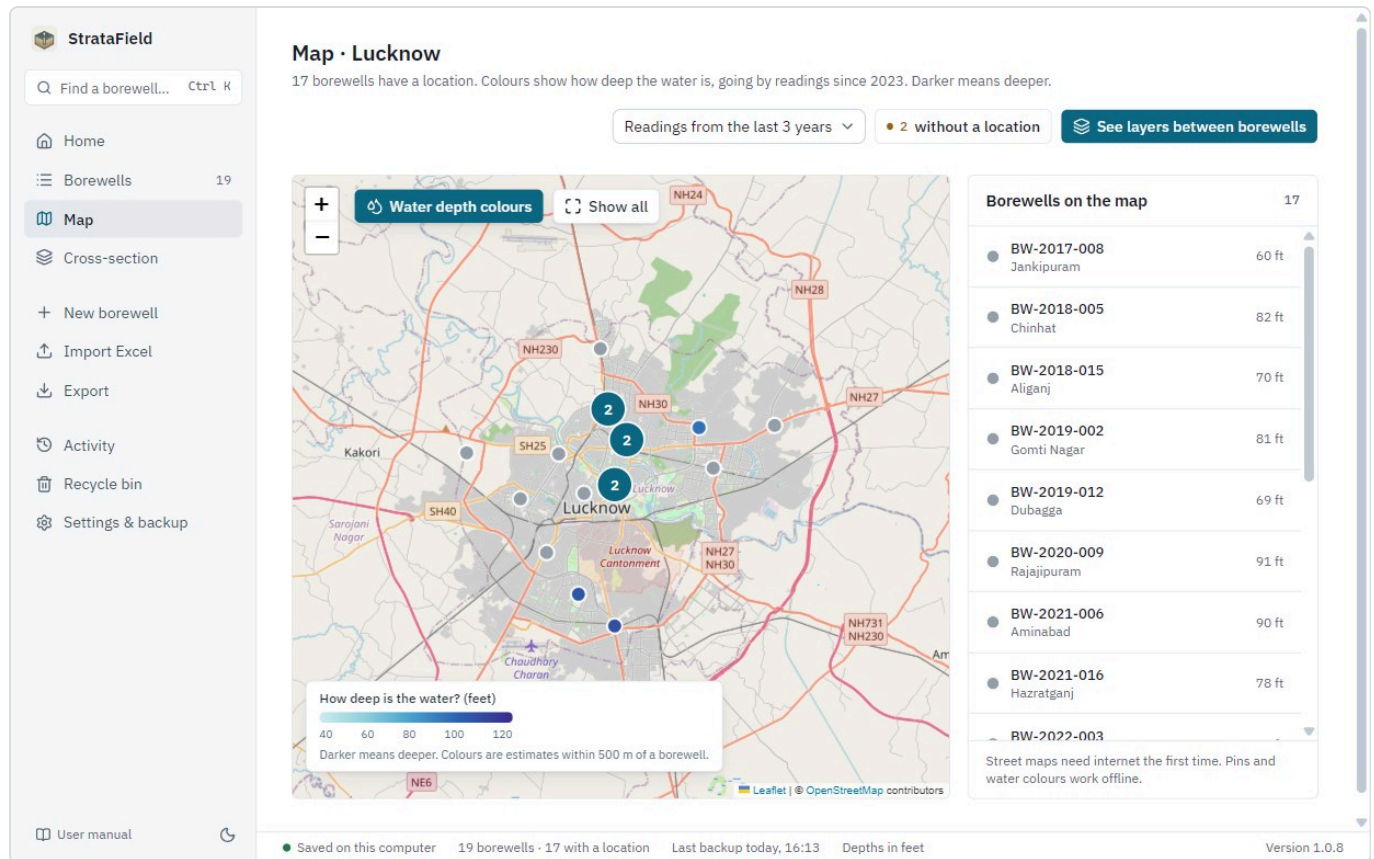


Each dot is a borewell. The colour shows how deep the water is: pale is shallow, dark is deep.

- Click a dot to see that borewell; click its name in the list on the right to find it on the map.
- A circle with a number is several borewells close together. Click it to zoom in.
- The colours are estimates and are only drawn within 500 m of a borewell, so zoom in to see them. Further away nothing is coloured.
- **Water depth colours** turns the colours off and on. **Show all** zooms back out to every borewell.

Which water readings count

Water levels measured years apart cannot be compared, because the water moves. The box at the top (**Readings from the last 3 years**) chooses which readings the colours use: the last year, 3 years, 5 years, or all of them. Borewells with older readings stay on the map as grey dots. The same choice is used on Home.

Several borewells at the same spot

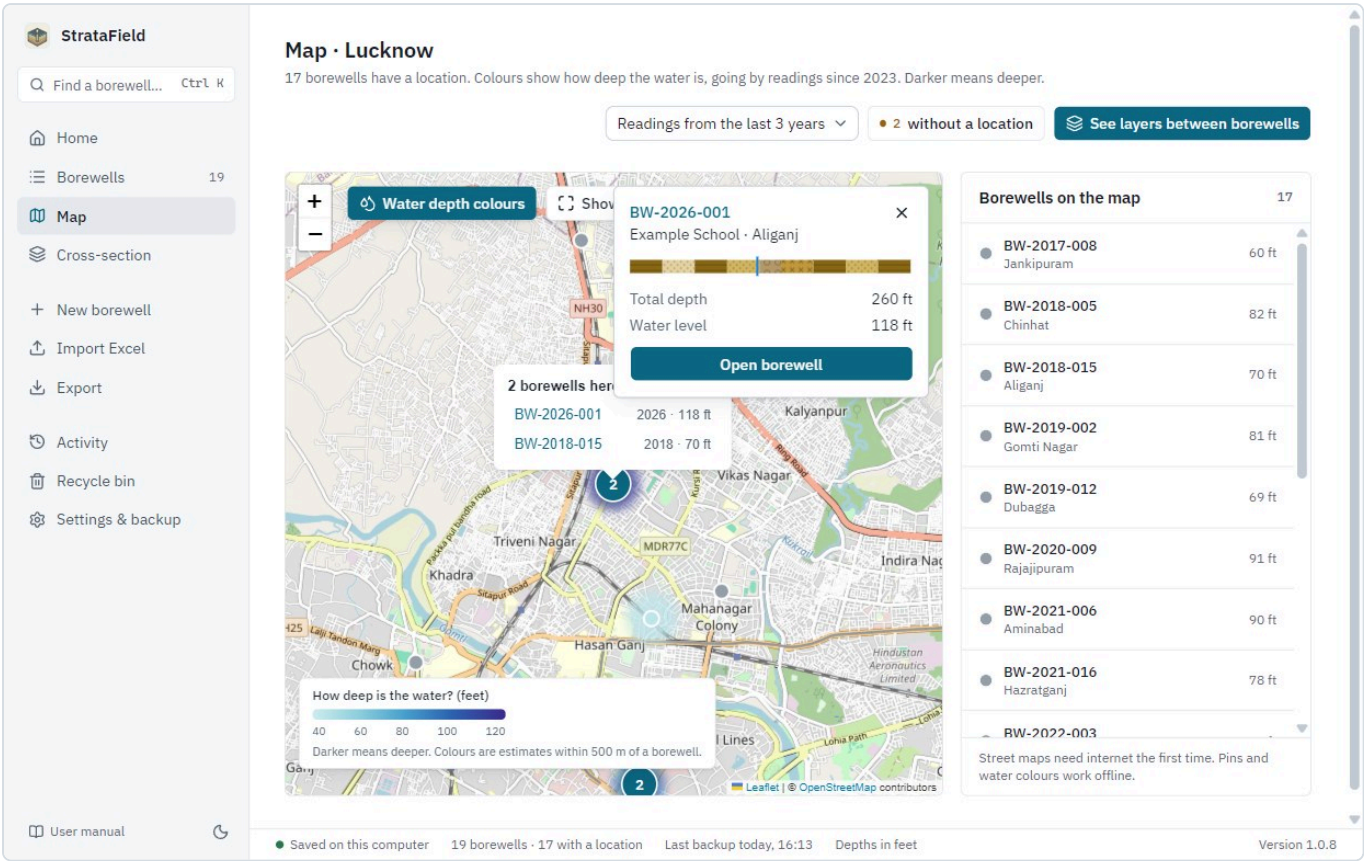

When borewells are at the same place, clicking the circle lists them, newest first. Click one to open it.

Without internet. The dots and water colours always work. To see streets as well, download the Lucknow map once: **Settings & backup** → **Map without internet**.

8. Cross-sections

A cross-section shows the soil layers underground along a line, as if the ground were cut open.

1. Choose **Cross-section**. Click the map where the line should start, then where it should end. Or try **North to south** or **West to east**.
2. Drag **A** or **A'** to move the ends. Drag the small dot in the middle of the line to bend it, for example to follow a road. Double-click a bend to remove it.
3. The slider sets how far from the line a borewell may be and still be used.

StrataField

Find a borewell... Ctrl K

Home

Borewells 19

Map

Cross-section

New borewell

Import Excel

Export

Activity

Recycle bin

Settings & backup

User manual

Cross-section

See the soil layers underground along a line you draw across Lucknow.

Draw a new line

✓ Tap where the line starts

Point A is set

✓ Tap where the line ends


Drag A or A' to move them, or drag a dot on the line to bend it

✓ Read the layers

8 borewells near the line are used

+

-

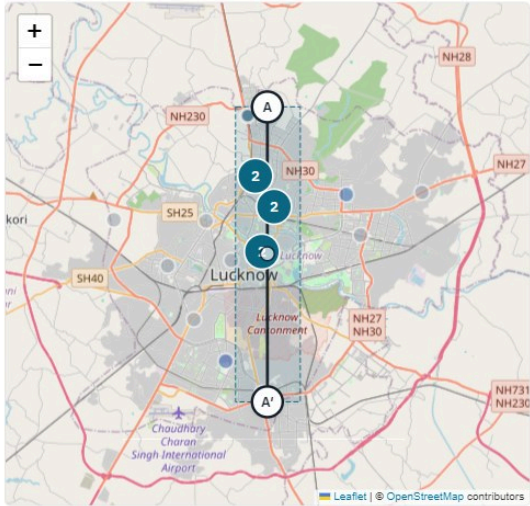

Borewells used

In order from A to A'

Include borewells within 2 km of the line

Jankipuram BW-2017-008	0.6 km from A	1.2 km off
Aliganj BW-2026-001	4.3 km from A	0.7 km off
Aliganj BW-2018-015	4.3 km from A	0.7 km off

Or try an example line

North to south

West to east

Layers along the line

Save

Save as PDF

Save as picture

Saved on this computer


19 borewells · 17 with a location

Last backup today, 16:13

Depths in feet

Version 1.0.8

The line from A to A', and the borewells near it that are used.

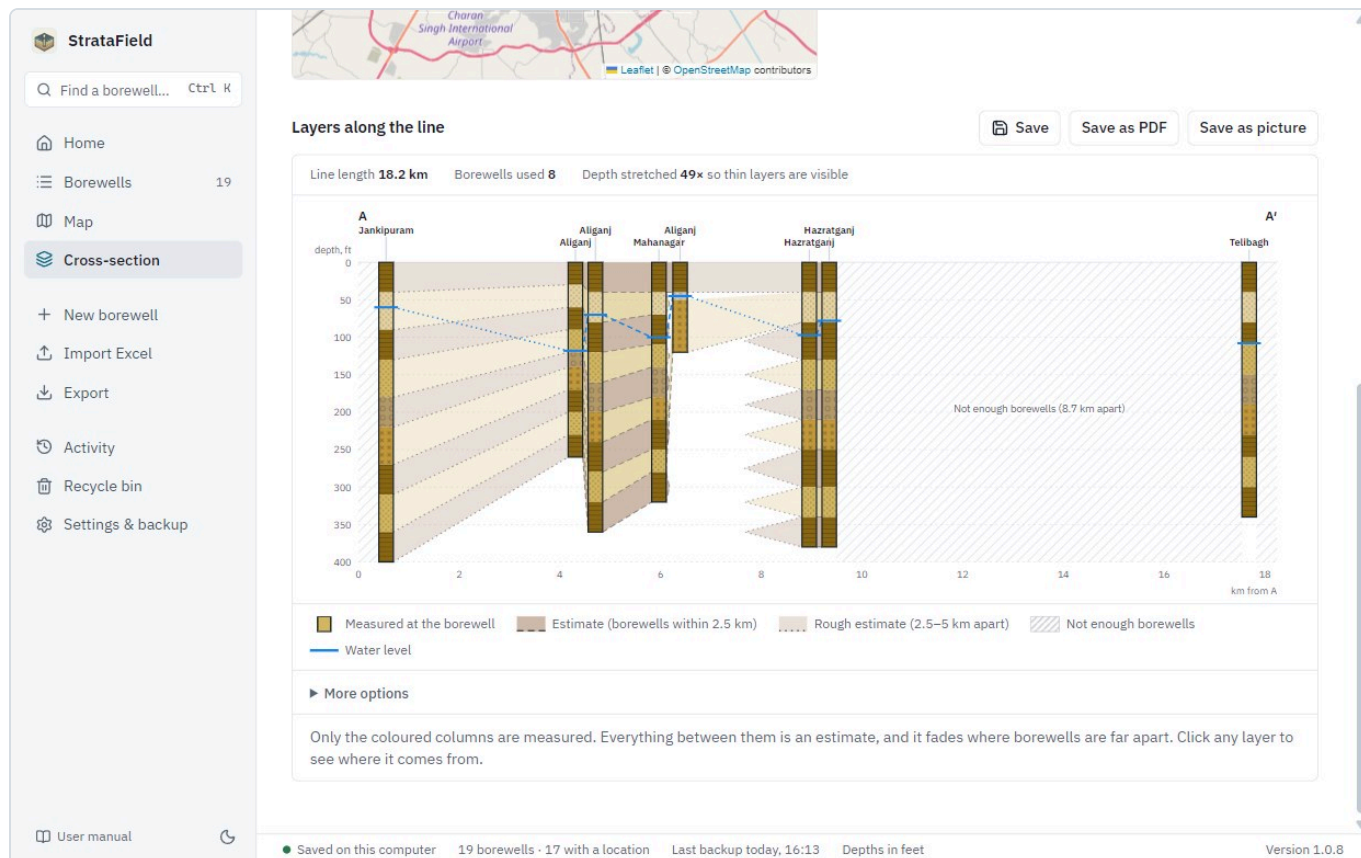


The coloured columns are measured. What is drawn between them is an estimate.

Only the columns are measured. Between two borewells StrataField joins matching layers with straight lines. The real layer may be deeper, shallower or broken. The further apart the borewells, the rougher the estimate; beyond about 5 km nothing is drawn.

Save keeps the line for next time. **Save as PDF** and **Save as picture** make a file to print or send. Under **More options** you can show heights above sea level, so the borewells stand at their real ground height.

9. Make PDF reports and Excel files

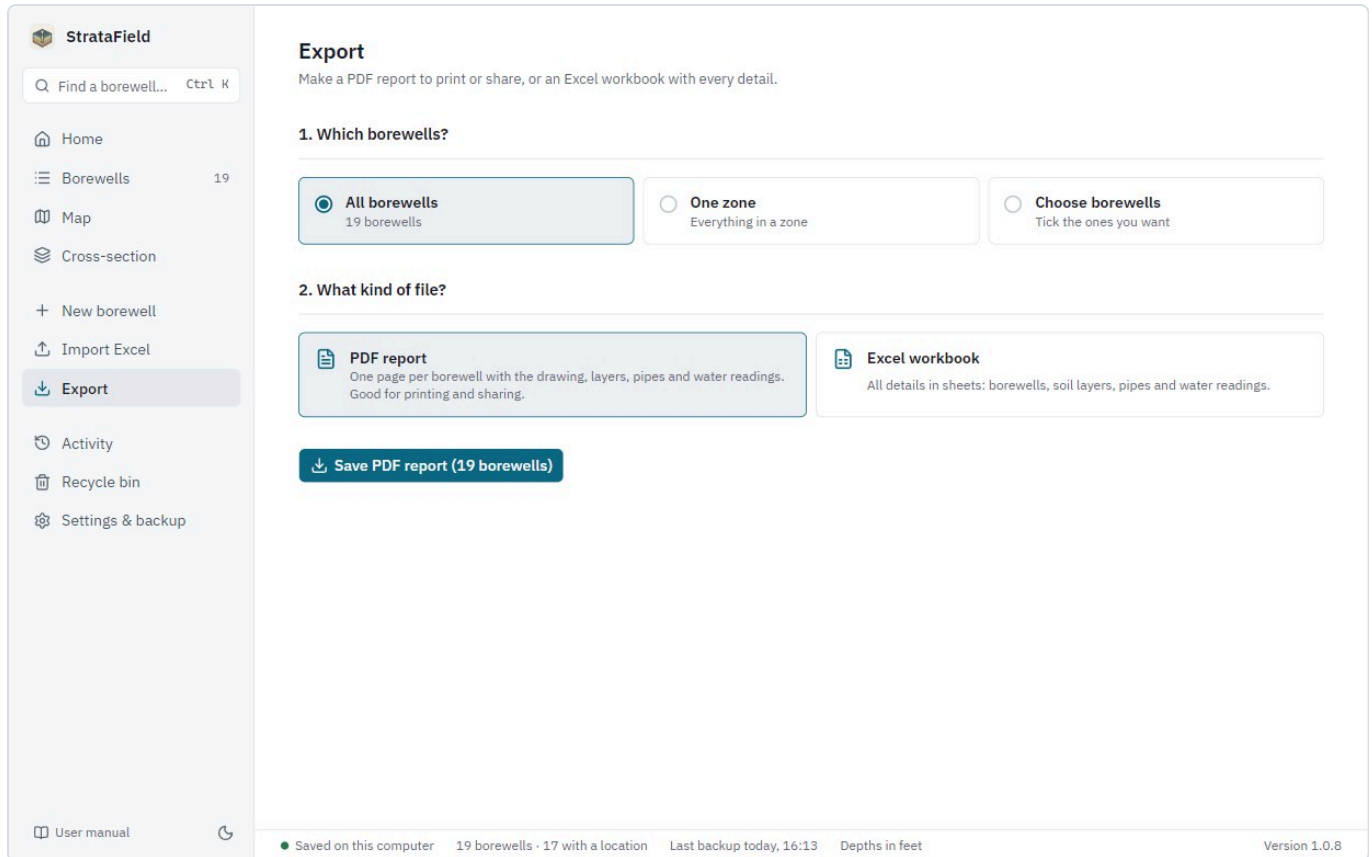

The screenshot shows the 'Export' section of the StrataField software. On the left is a sidebar with navigation options: Home, Borewells (19), Map, Cross-section, New borewell, Import Excel, Export (highlighted), Activity, Recycle bin, and Settings & backup. The main area is titled 'Export' with the subtitle 'Make a PDF report to print or share, or an Excel workbook with every detail.' It contains two sections: '1. Which borewells?' and '2. What kind of file?'. In the first section, 'All borewells' (19 borewells) is selected with a radio button, while 'One zone' and 'Choose borewells' are unselected. In the second section, 'PDF report' is selected, with 'Excel workbook' as an alternative. A 'Save PDF report (19 borewells)' button is visible. The bottom status bar shows 'Saved on this computer', '19 borewells - 17 with a location', 'Last backup today, 16:13', 'Depths in feet', and 'Version 1.0.8'.

StrataField

Find a borewell... Ctrl K

Home

Borewells 19

Map

Cross-section

+ New borewell

Import Excel

Export

Activity

Recycle bin

Settings & backup

User manual

Export

Make a PDF report to print or share, or an Excel workbook with every detail.

1. Which borewells?

☒ **All borewells**
19 borewells

☐ **One zone**
Everything in a zone

☐ **Choose borewells**
Tick the ones you want

2. What kind of file?

☒ **PDF report**
One page per borewell with the drawing, layers, pipes and water readings.
Good for printing and sharing.

☐ **Excel workbook**
All details in sheets: borewells, soil layers, pipes and water readings.

[Save PDF report \(19 borewells\)](#)

● Saved on this computer 19 borewells - 17 with a location Last backup today, 16:13 Depths in feet Version 1.0.8


Choose which borewells, then what kind of file.

- **PDF report:** one page per borewell, with its drawing, layers, pipes and water readings. Good for printing and for giving to the owner.
- **Excel workbook:** one file with sheets for borewells, soil layers, pipes and water readings.

Choose **All borewells**, **One zone**, or **Choose borewells** and tick the ones you want. Click the Save button and choose where to put the file. For a single borewell, **Make PDF report** on its own page is quicker.

10. Backups

StrataField makes a backup by itself every day and keeps the last 10. You do not have to do anything.

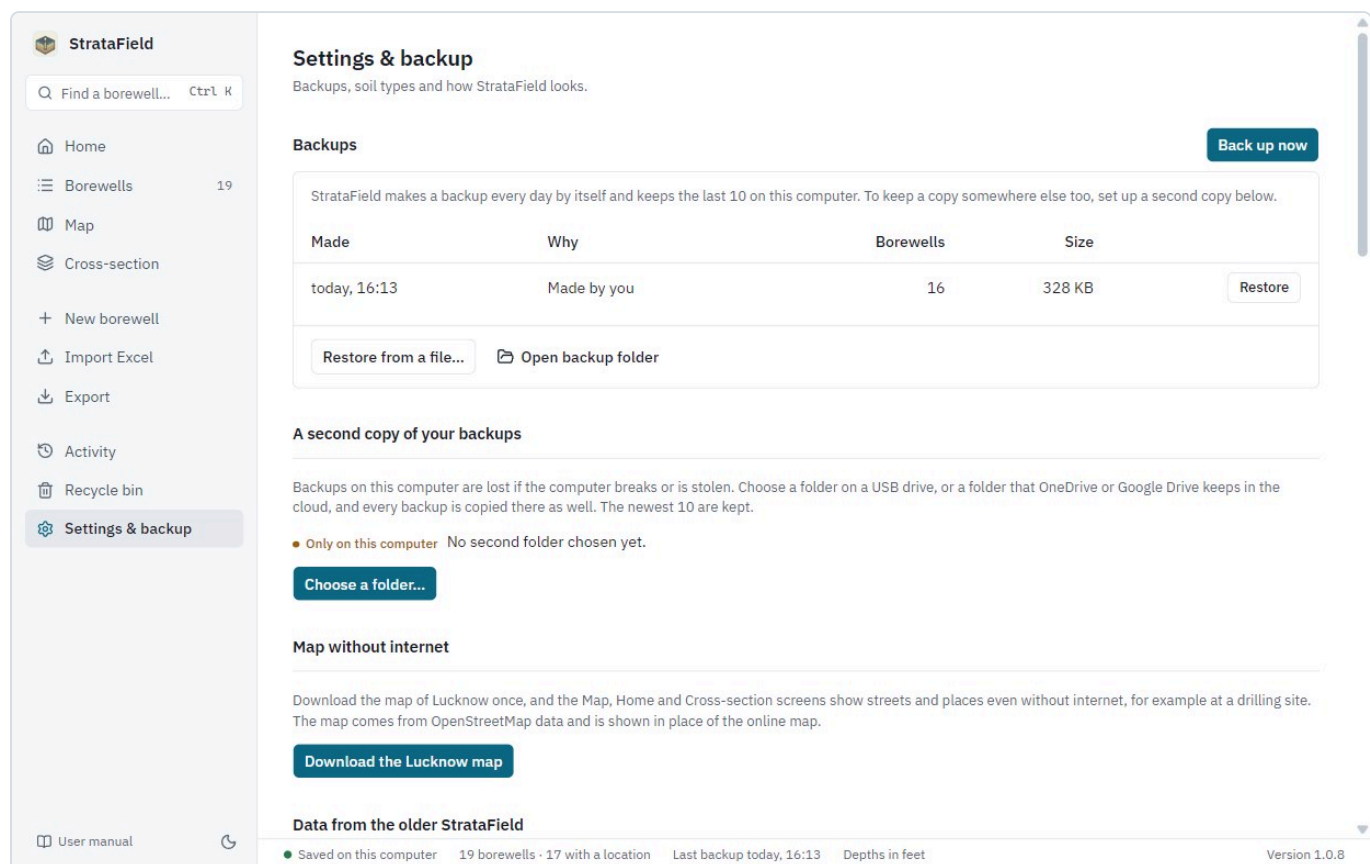

Settings & backup. The top of the screen is all about backups.

- **Back up now** makes one straight away, for example before a big import.
- **Restore** puts everything back to how it was when that backup was made. A copy of how things are now is saved first, so a restore can itself be undone.

Set up a second copy. Backups on this computer are lost if the computer breaks or is stolen. Under **A second copy of your backups**, choose a folder on a USB drive, or one that OneDrive or Google Drive keeps in the cloud. Every backup is then copied there too. Home tells you if the copies stop, for example when the USB drive is not plugged in.

To move to a new computer: install StrataField there, copy a backup file across, and use **Restore from a file...**.

11. Zones and soil types

The screenshot shows the StrataField application interface. On the left is a sidebar with the 'Settings & backup' menu item highlighted. The main area is divided into two sections: 'Zones' and 'Soil types'.

Zones

Rename a zone to fix its spelling. To merge two zones that are the same place, rename one to the other's name.

Zone	Borewells	Action
Zone 1 · Old City	4 borewells	Rename
Zone 3 · Trans-Gomti	5 borewells	Rename
Zone 4 · Gomti Nagar	2 borewells	Rename
Zone 5 · South	3 borewells	Rename
Zone 6 · West	2 borewells	Rename
Zone 7 · North	1 borewell	Rename

Soil types

The soil types you can choose for a layer. Built-in types can have their colour and pattern changed but not be deleted.

Soil type	Group	Pattern	Source	Action
Clay	Clay	Lines	Built-in	✎
Silty Clay	Clay	Lines	Built-in	✎
Sandy Clay	Clay	Dots	Built-in	✎

At the bottom of the interface, a status bar shows: 'Saved on this computer', '19 borewells · 17 with a location', 'Last backup today, 16:13', 'Depths in feet', and 'Version 1.0.8'.

Settings & backup → Zones.

- **Rename a zone** to fix its spelling: click **Rename**, type, **Save**.
- **Merge two zones** that are the same place: rename one to the other's name. StrataField asks first, then moves all its borewells across.
- **Soil names not recognised** lists names from Excel files that match no soil type. Choose what each one means and every layer with that name is fixed together.
- **Soil types** is the list you choose from for a layer. Add your own with **Add soil type**; change the colour or pattern of any with the pencil.

12. See what changed, and undo a delete

StrataField

Find a borewell... Ctrl K

Home

Borewells19

Map

Cross-section

+ New borewell

Import Excel

Export

Activity

Recycle bin

Settings & backup

User manual

Activity

Everything that was added, imported, changed or deleted, newest first.

Search the activity, e.g. a borewell ID or "Notes from

today, 16:14	Imported 1 borewell from Kalyanpur site.xlsx	
today, 16:14	Notes from reading Kalyanpur site.xlsx: The file was not in the usual layout, so its columns were chosen on the Import screen. No site or owner name was found. No drilling date was found. No water level was found.	Open borewell
today, 16:14	Saved 3 pipe pieces for Kalyanpur site	Open borewell
today, 16:14	Saved 5 soil layers for Kalyanpur site	Open borewell
today, 16:14	Added Kalyanpur site	Open borewell
today, 16:14	Imported 1 borewell from Riverside Apartments.xlsx	
today, 16:14	Saved 3 pipe pieces for Riverside Apartments	Open borewell
today, 16:14	Saved 9 soil layers for Riverside Apartments	Open borewell
today, 16:14	Added Riverside Apartments (Riverside Apartments)	Open borewell
today, 16:14	Saved 3 soil layers for BW-2026-012	Open borewell
today, 16:14	Added BW-2026-012 (Lake View Homes)	Open borewell
today, 16:13	Saved 4 pipe pieces for BW-2021-016	Open borewell
today, 16:13	Saved 9 soil layers for BW-2021-016	Open borewell
today, 16:13	Added BW-2021-016 (Lake View Homes)	Open borewell

● Saved on this computer

19 borewells · 17 with a location

Last backup today, 16:13

Depths in feet

Version 1.0.8

Activity lists every change, newest first. Type in the box to find a borewell or a file name.

Activity is the place to look after a batch of imports: each file's notes are there, and **Open borewell** takes you to it. Each borewell's own **History** tab shows the same for just that borewell.

The Recycle bin

 **StrataField**

Ctrl K

Home

Borewells 19

Map

Cross-section

+ New borewell

Import Excel

Export

Activity

Recycle bin

Settings & backup

User manual

Recycle bin

Deleted borewells. Restore them or delete them for good.

Borewell ID	Owner	Area	Date drilled	Layers	Deleted	
BW-2026-012	Lake View Homes	Kapoorthala, Aliganj	4 Oct 2026	3	today, 16:14	Restore Delete for good

Borewells stay here until you delete them for good. They are not shown on the map, in cross-sections or in exports.

Saved on this computer

19 borewells · 17 with a location

Last backup today, 16:13

Depths in feet

Version 1.0.8

Deleted borewells wait here.

Deleting a borewell moves it to the **Recycle bin**. It no longer shows in lists or on the map, but nothing is lost. **Restore** puts it back. **Delete for good** removes it and its photos and files; that cannot be undone except by restoring a backup.

13. Updates

When a newer version is ready, StrataField says so at the top of the screen. Click **Install and restart** . It takes about a minute: StrataField closes, updates and opens again. Your data is not touched. You can also check at any time under **Settings & backup** → **About** → **Check for updates**.

StrataField

Find a borewell... Ctrl K

Home

Borewells19

Map

Cross-section

New borewell

Import Excel

Export

Activity

Recycle bin

Settings & backup

User manual

	Yellow Sand	Sand	Dots	Built-in	
	Gravel	Sand	Circles	Built-in	
	Sandy Gravel	Sand	Circles	Built-in	
	Rock	Rock	Crosses	Built-in	
	Boulder	Rock	Circles	Built-in	
	Not recorded	Not recorded	Hatched	Built-in	

Appearance

Light

Dark

Same as Windows

About

StrataField

Version 1.0.8

Borewell records, soil layers and groundwater levels, kept on this computer. Built for drilling work in Lucknow: nothing is sent anywhere, and everything except address look-up works without internet.

Your data is kept in

C:\Users\your name\AppData\Roaming\Strata

Shared with

StrataVision, when it is installed, uses the same data. Anything added in one shows up in the other.

Check for updates

Open the user manual

Open the getting-started guide

Copy details for support

Open the error log

Open data folder

● Saved on this computer

19 borewells · 17 with a location

Last backup today, 16:13

Depths in feet

Version 1.0.8

Settings & backup → About: the version, where your data is kept, and the help buttons.

14. If something goes wrong

What you see	What to do
A red message at the bottom right	Read it: it says what went wrong and usually how to fix it. Nothing was saved from that one action; everything before it is safe.
An Excel file shows "Cannot be read"	Open it in Excel and save it again as .xlsx, then try once more. Or add the borewell by hand and attach the file.
The layers from an Excel file look wrong	On the Import screen, check the choices under Where the layers are in this file . After importing, use Edit layers & pipes .
A borewell is not on the map	It has no location. Open it, click Edit details , and add one under Location.
The map is grey, with no streets	There is no internet. Dots and water colours still work. Download the Lucknow map under Settings to have streets without internet.
Something was deleted by mistake	Look in the Recycle bin . For anything else, restore a backup from before it happened.
"StrataField could not open your data"	Do not delete anything. Send the details below to whoever helps you with StrataField.

Asking for help

Go to **Settings & backup** → **About**.

- **Copy details for support** shows the versions, how much data there is, the state of backups and recent errors. Click **Copy** and paste it into an email or message. It contains no borewell details, and nothing is sent unless you send it.
- **Open the error log** opens the full list of problems recorded on this computer.
- **Open data folder** shows where your data is kept, in case you are asked for it.

Your data is in the folder **Strata** inside your Windows user's AppData folder. Uninstalling StrataField removes the program but leaves that folder, so installing again brings everything back.