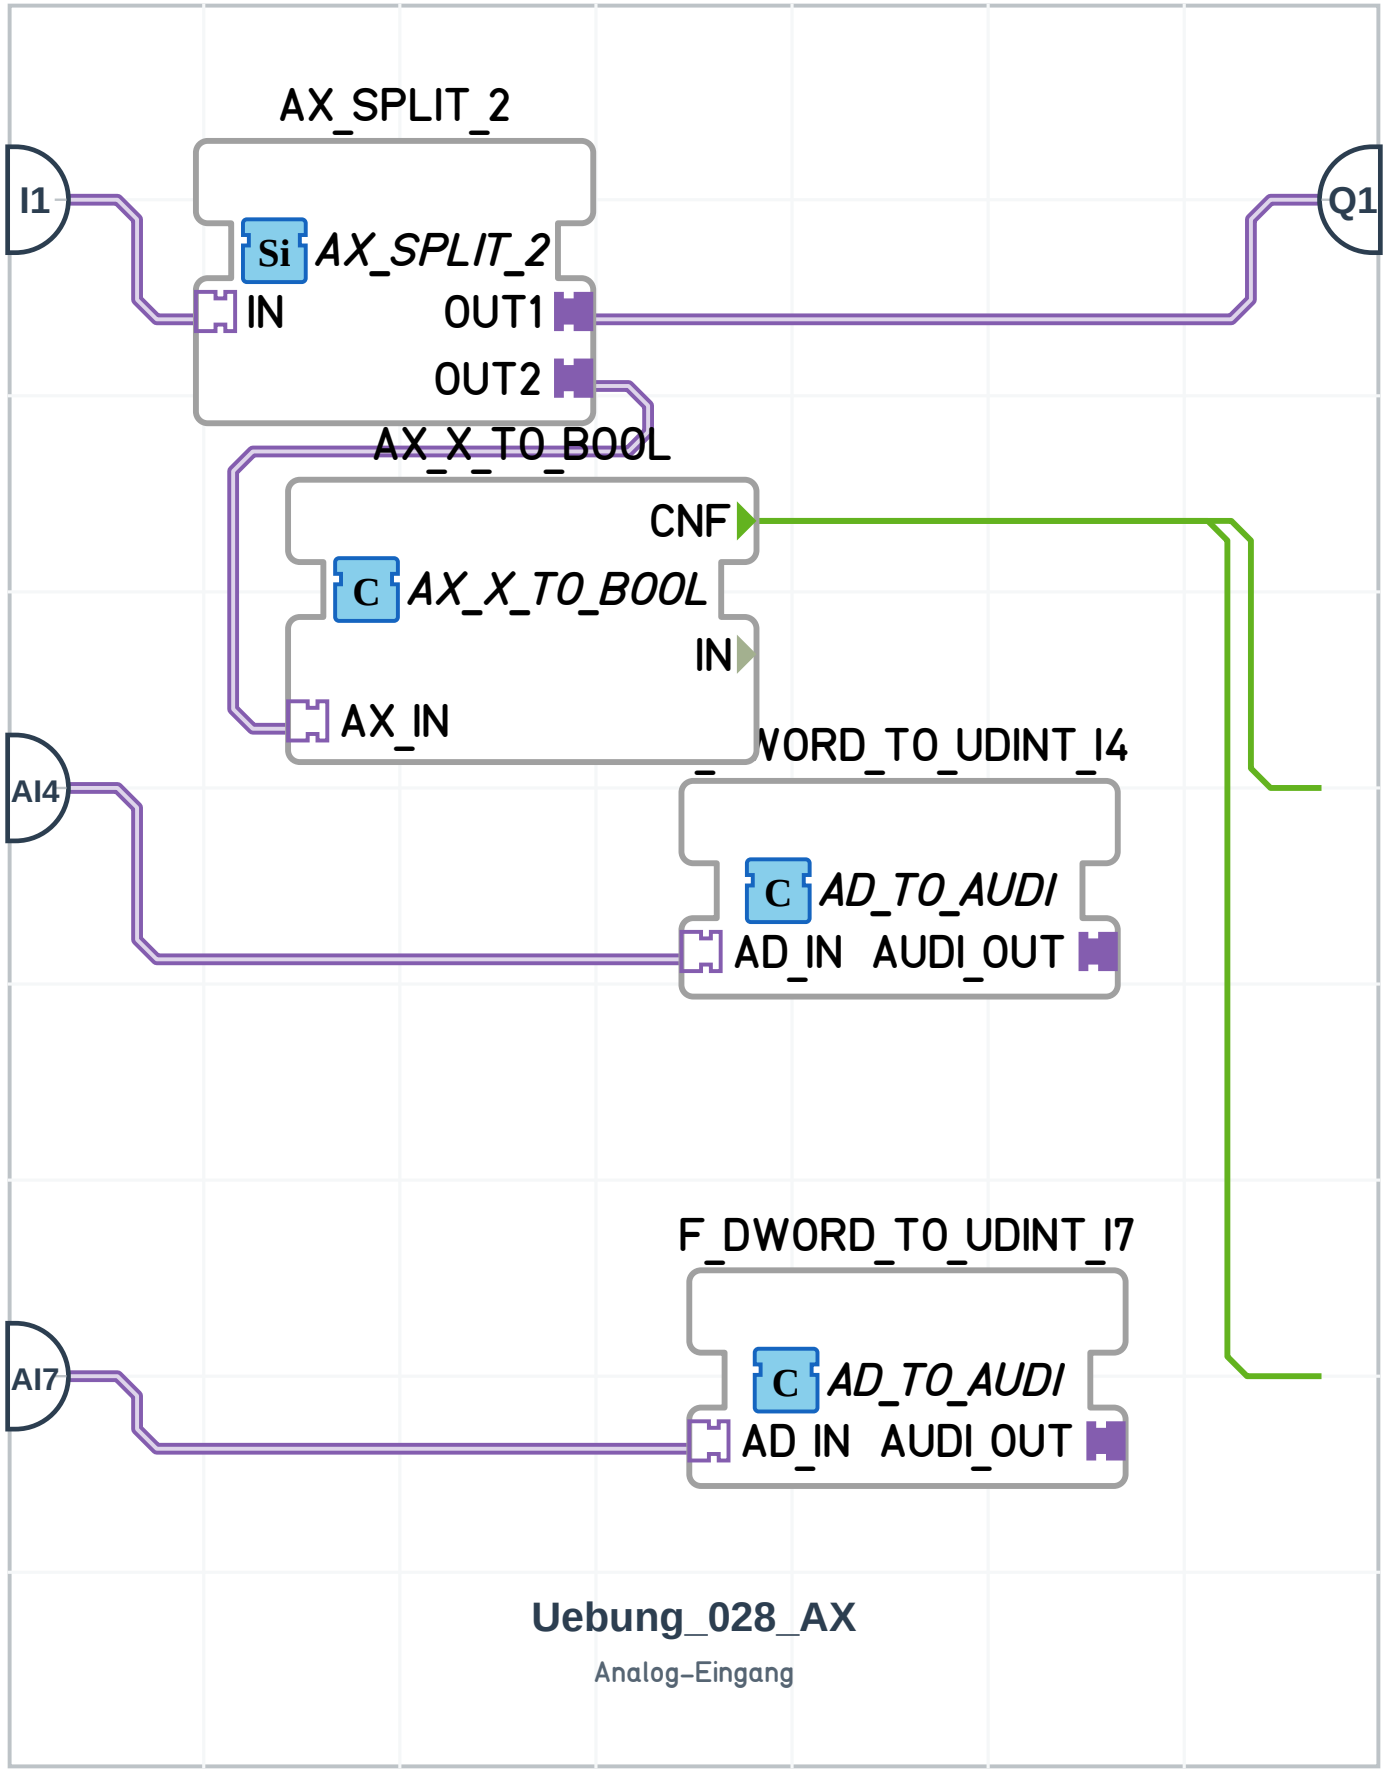
AX_SPLIT_2
I1
Si
AX_SPLIT_2
IN
OUT1
OUT2
Q1
AX_X_TO_BOOL
CNF
C
AX_X_TO_BOOL
IN
AX_IN
AI4
VORD_TO_UDINT_I4
C
AD_TO_AUDI
AD_IN
AUDI_OUT
F_DWORD_TO_UDINT_I7
AI7
C
AD_TO_AUDI
AD_IN
AUDI_OUT
Uebung_028_AX
Analog-Eingang