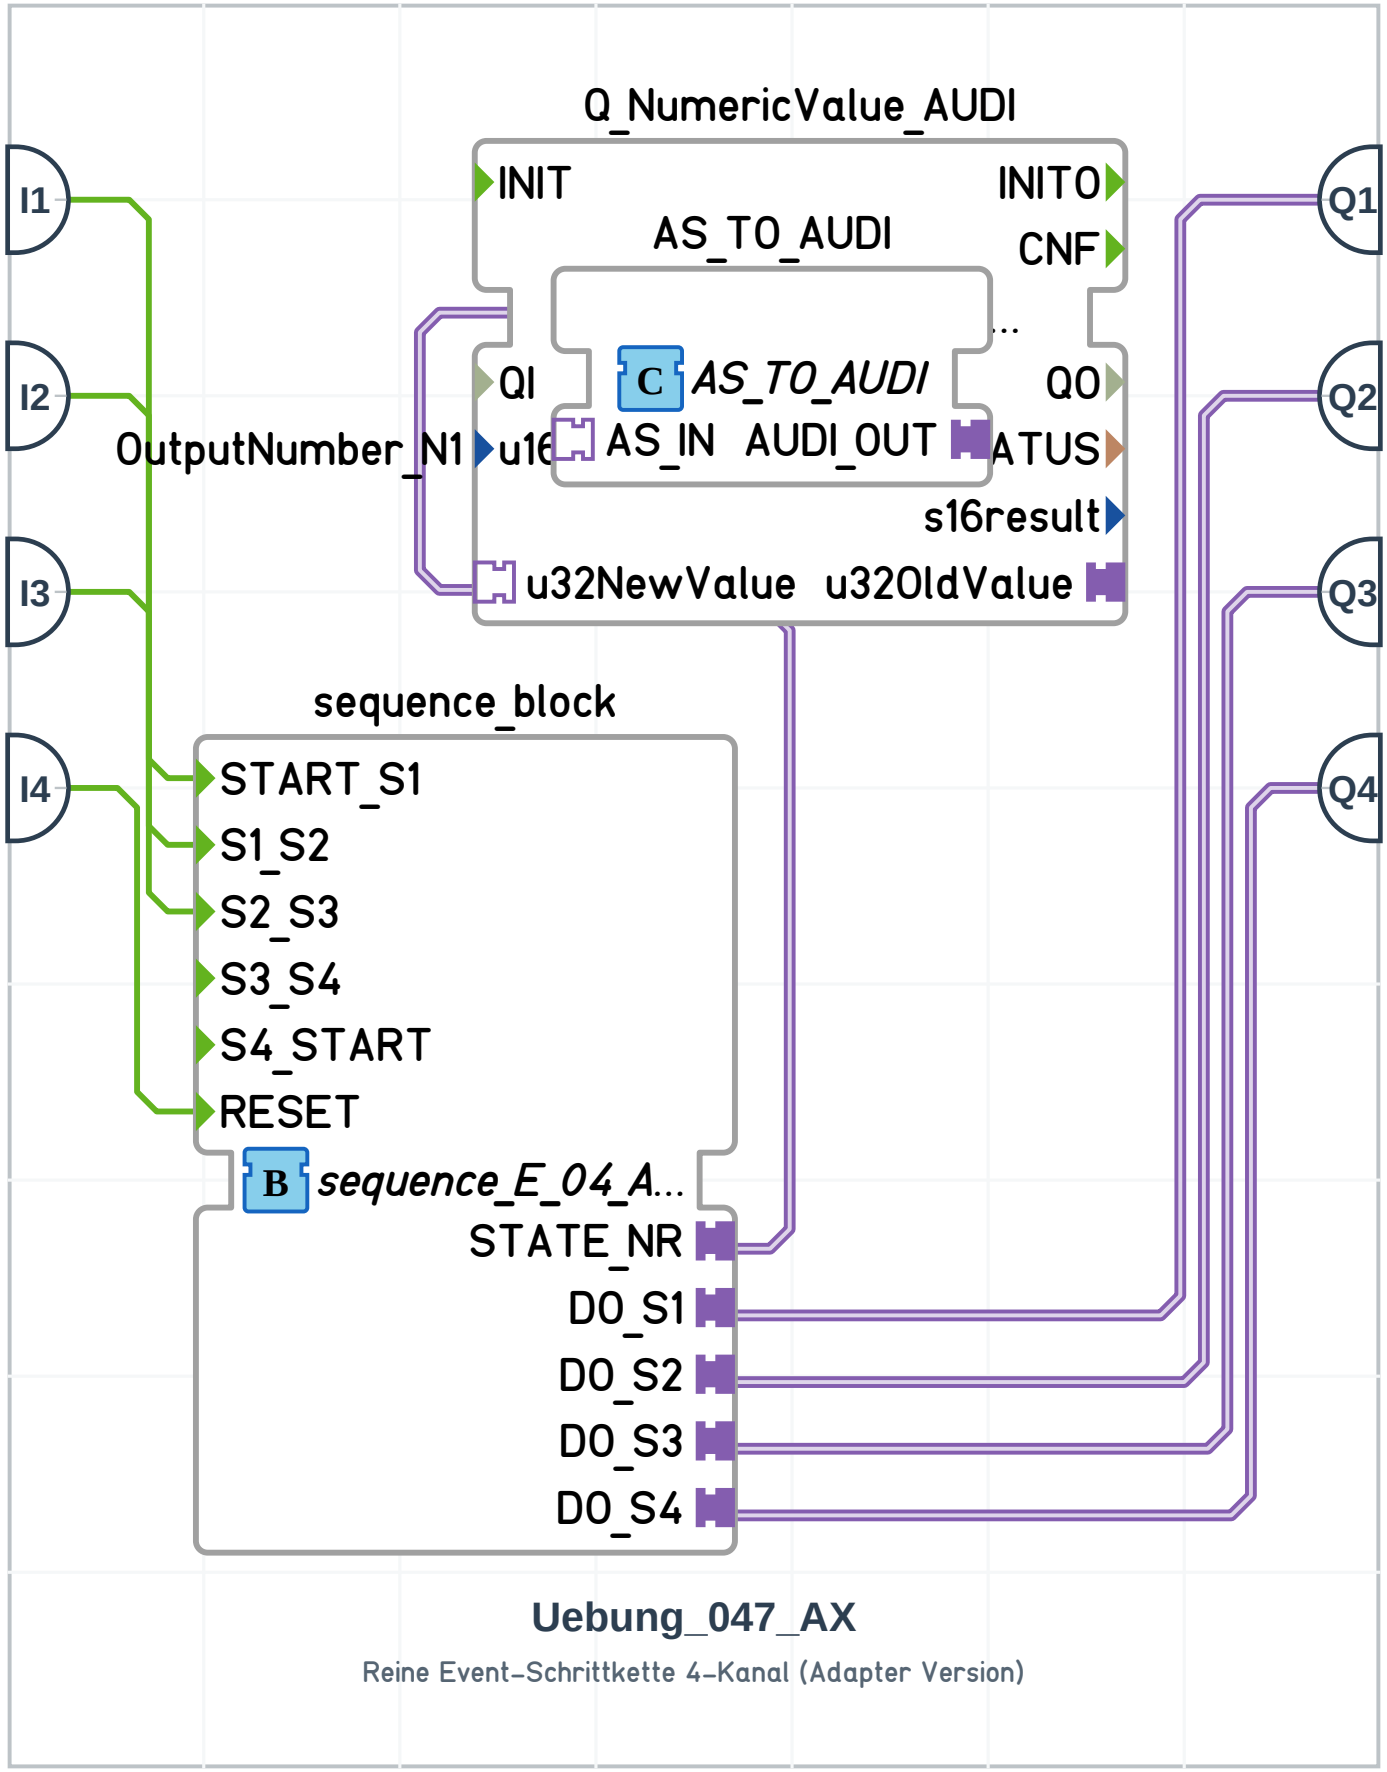
Q_NumericValue_AUDI
I1
I2
I3
I4
INIT
INITO
AS_TO_AUDI
CNF
QI
C
AS_TO_AUDI
QO
OutputNumber_N1
u16
AS_IN
AUDI_OUT
ATUS
s16result
u32NewValue
u32OldValue
Q1
Q2
Q3
Q4
sequence_block
START_S1
S1_S2
S2_S3
S3_S4
S4_START
RESET
B
sequence_E_04_A...
STATE_NR
DO_S1
DO_S2
DO_S3
DO_S4
Uebung_047_AX
Reine Event-Schrittkette 4-Kanal (Adapter Version)