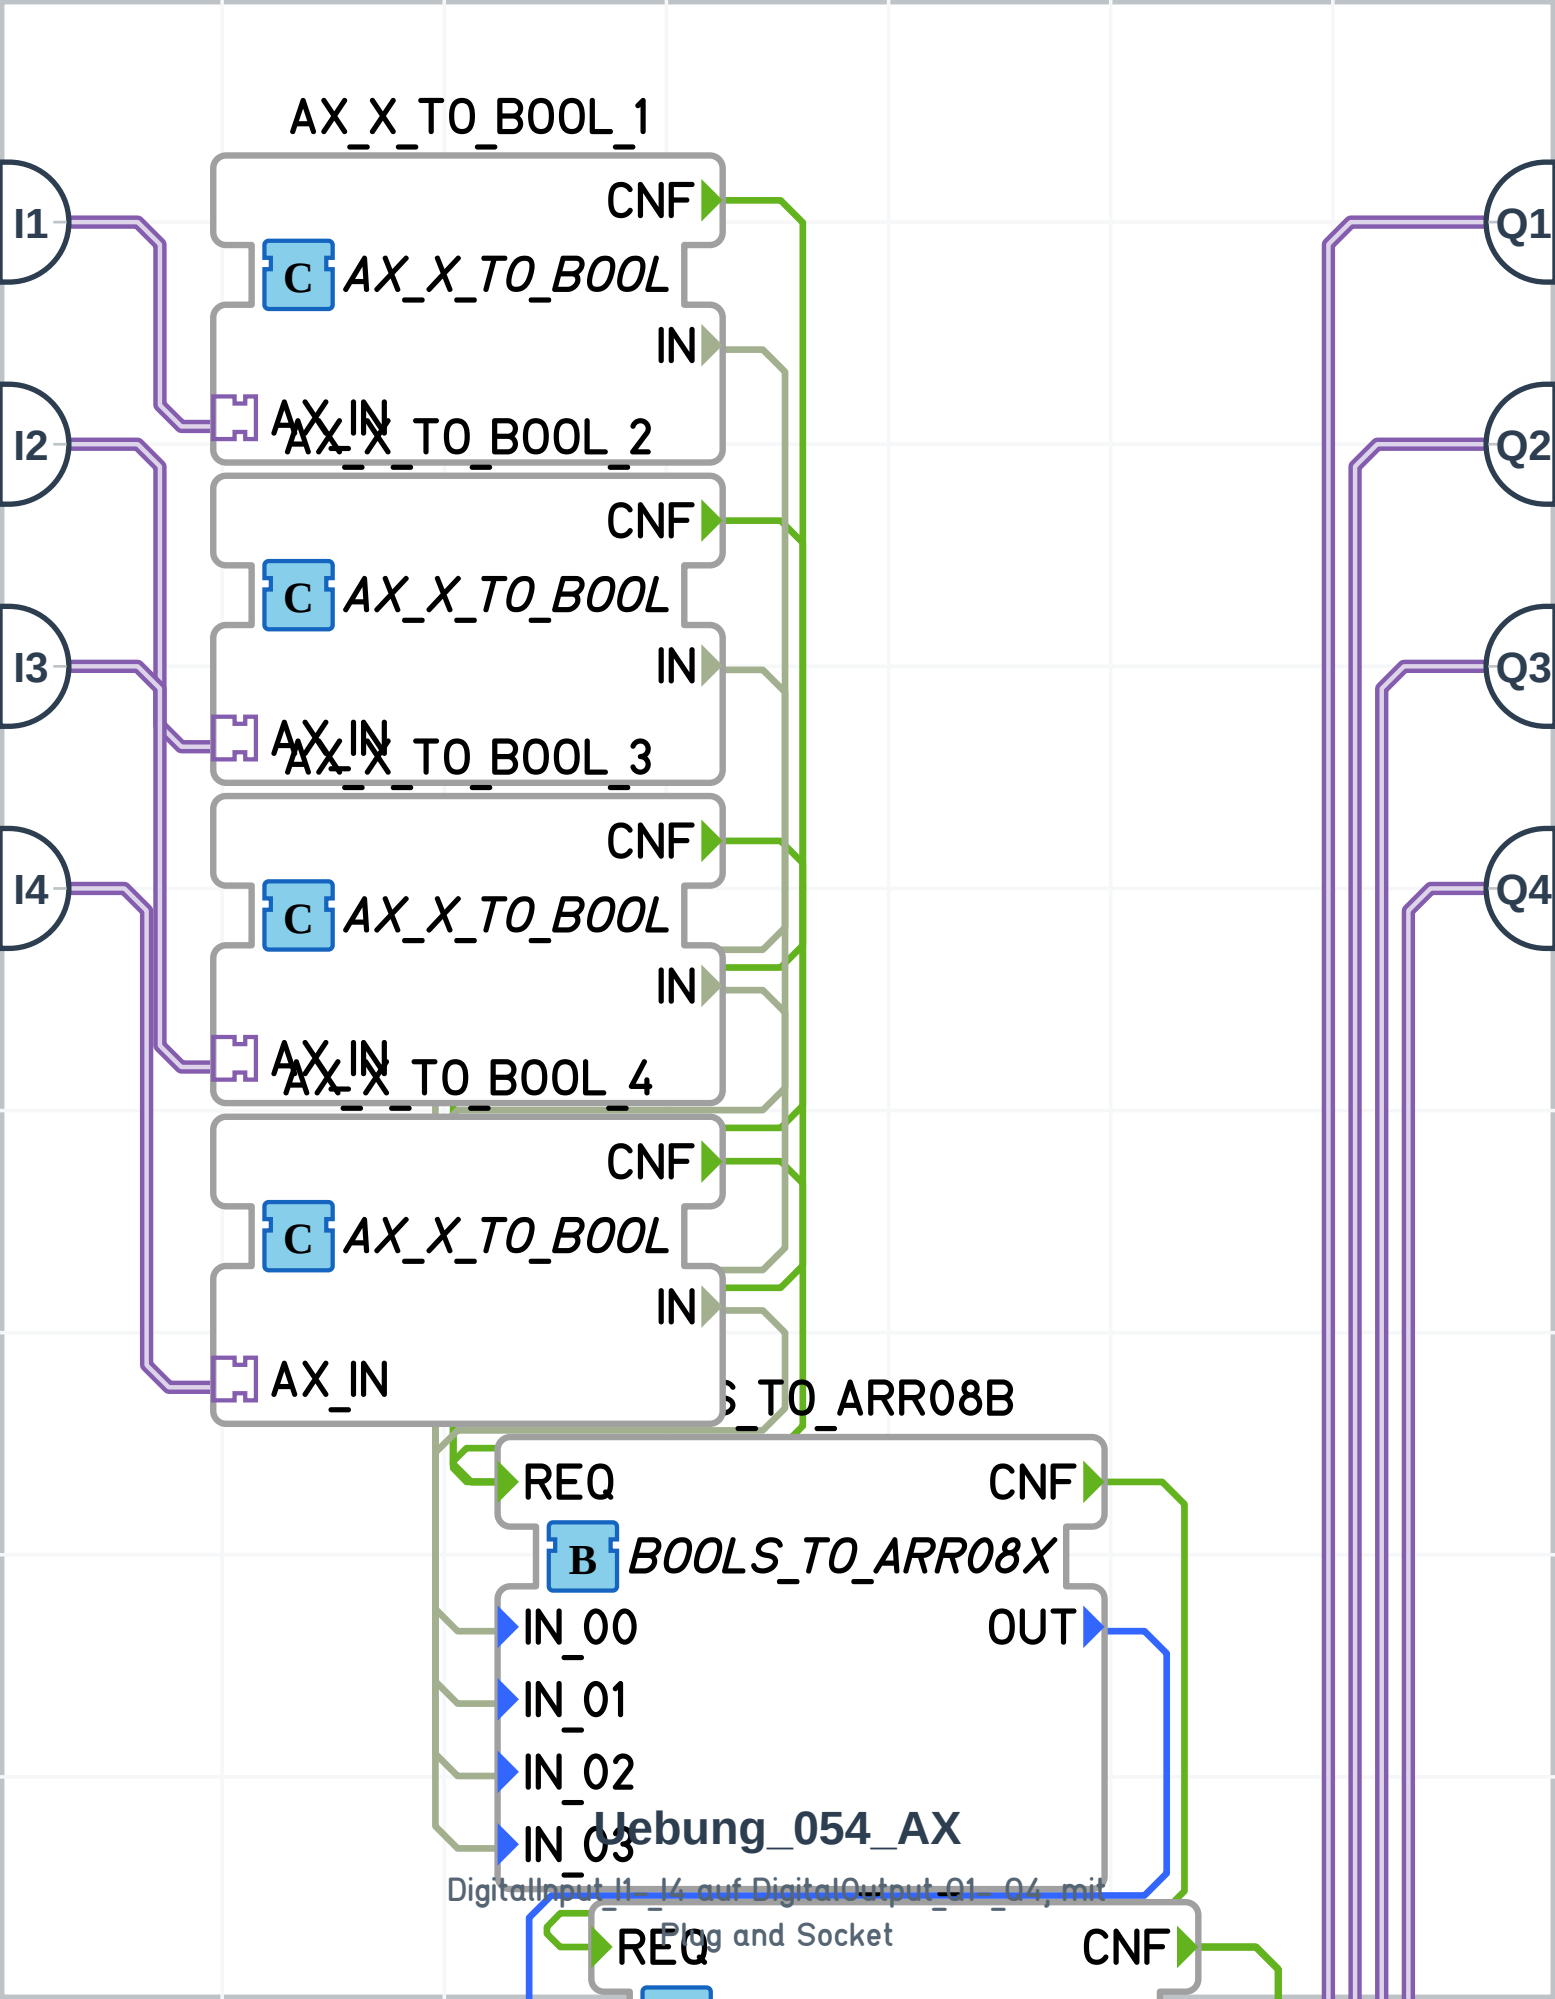
AX_X_TO_BOOL_1
CNF
C
AX_X_TO_BOOL
IN
AX_IN
I1
I2
I3
I4
Q1
Q2
Q3
Q4
REQ
CNF
B
BOOLS_TO_ARR08X
IN_00
IN_01
IN_02
IN_03
OUT
Uebung_054_AX
Plug and Socket