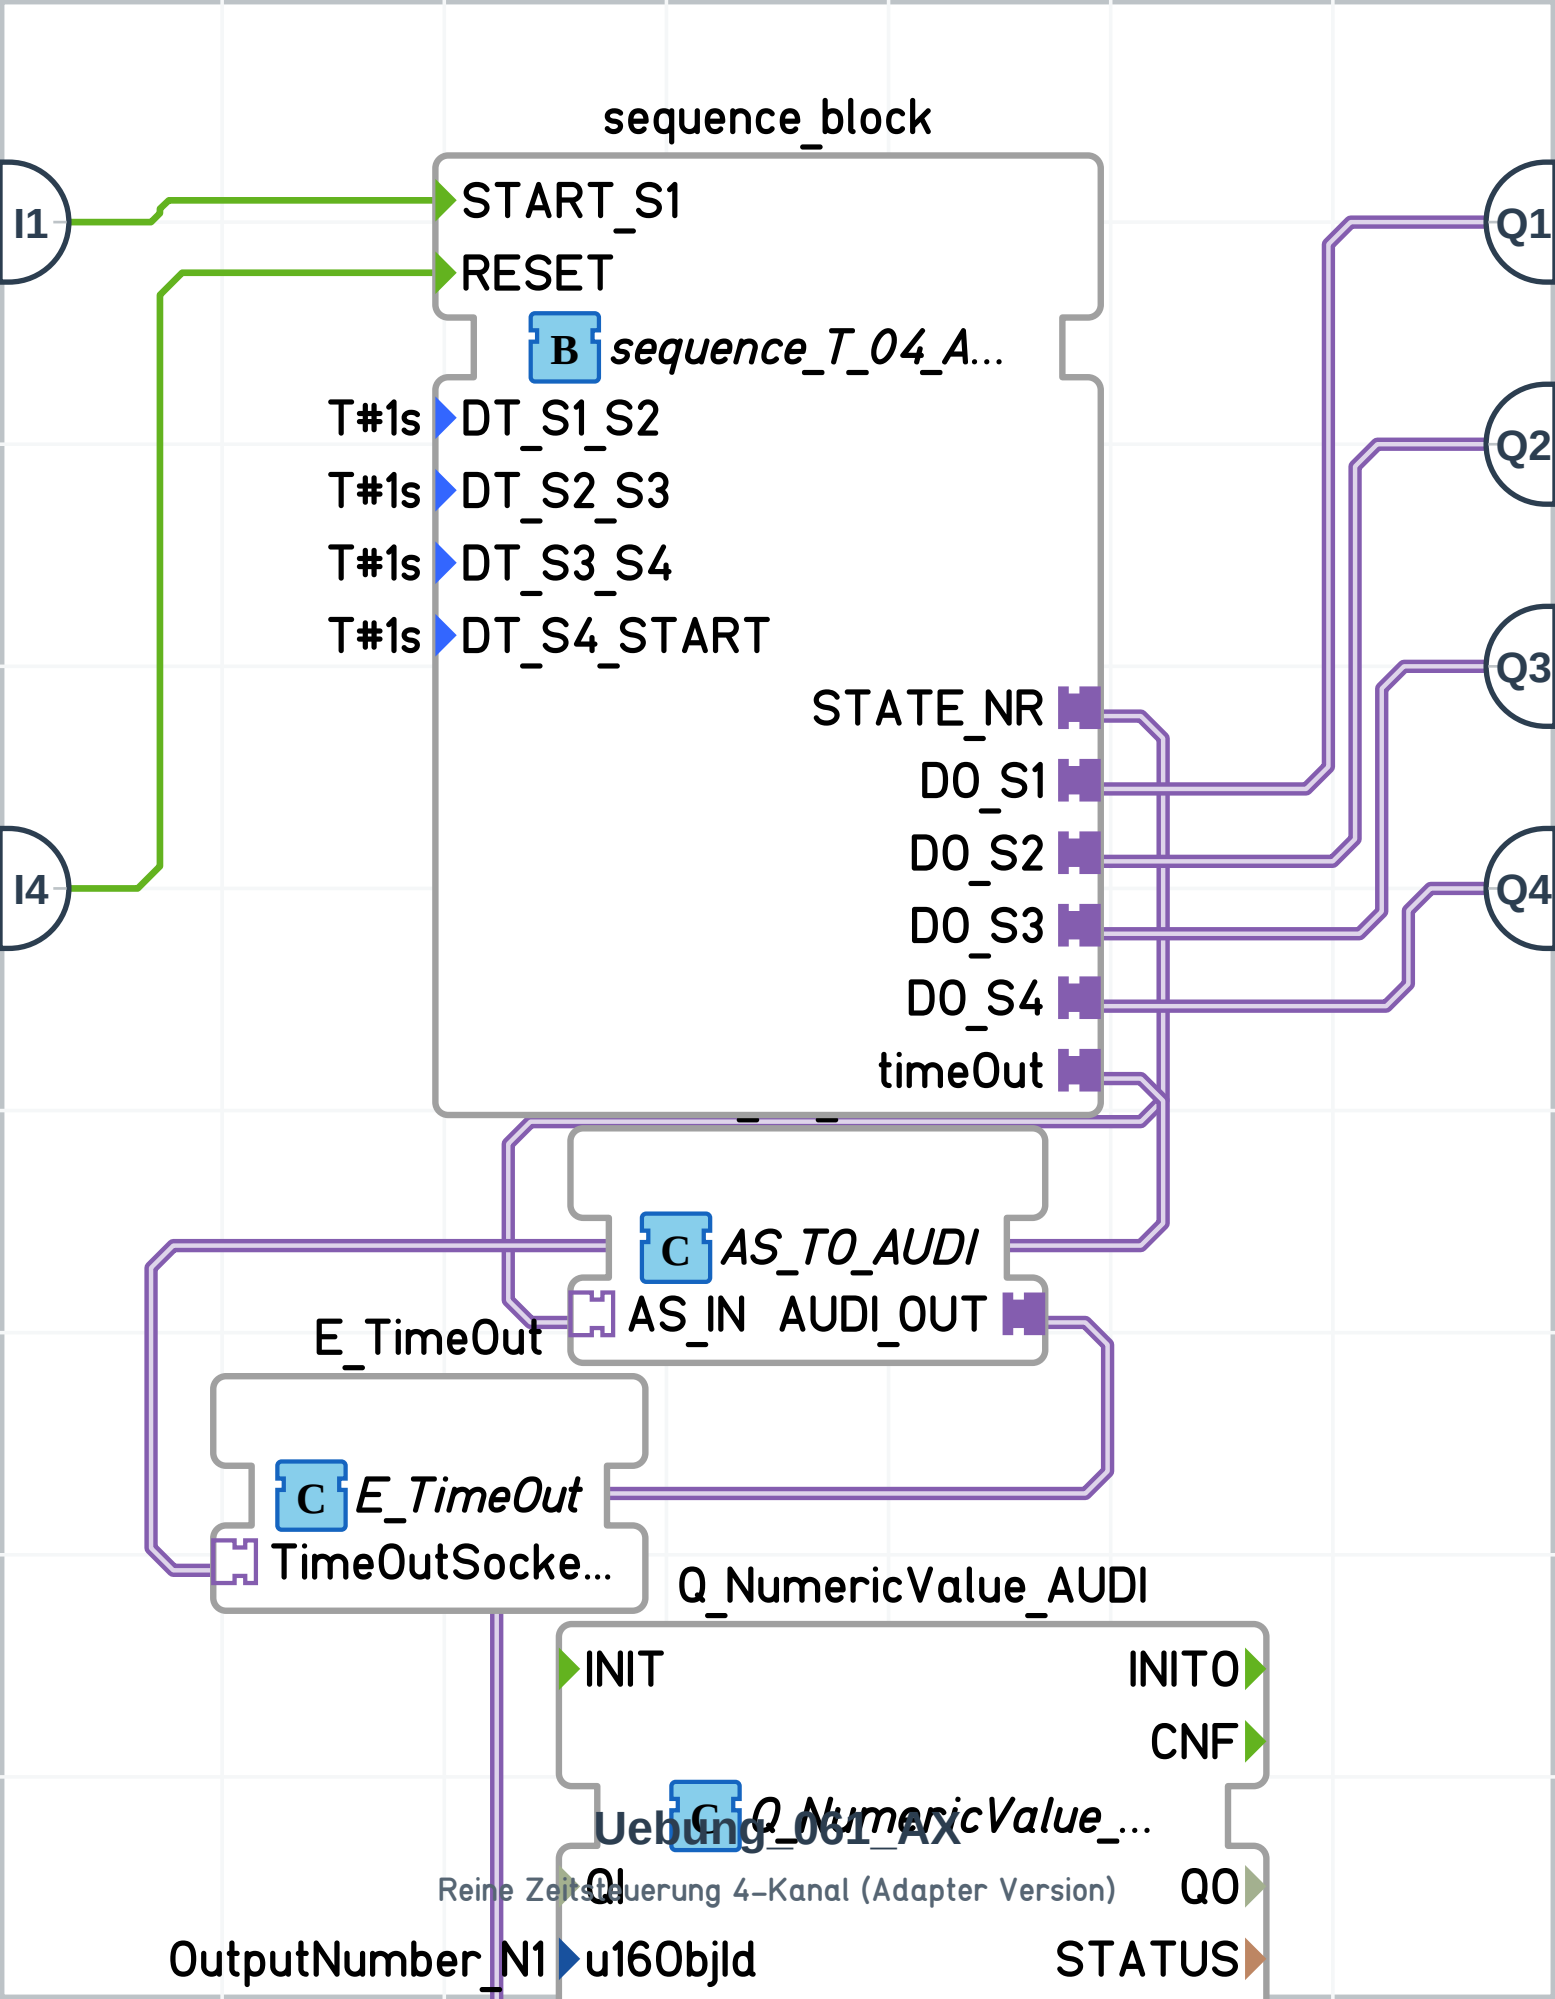
sequence_block
I1
I4
START_S1
RESET
B sequence_T_04_A...
T#1s DT_S1_S2
T#1s DT_S2_S3
T#1s DT_S3_S4
T#1s DT_S4_START
STATE_NR
DO_S1
DO_S2
DO_S3
DO_S4
timeOut
Q1
Q2
Q3
Q4
C AS_TO_AUDI
AS_IN AUDI_OUT
E_TimeOut
C E_TimeOut
TimeOutSocke...
Q_NumericValue_AUDI
INIT
INITO
CNF
C Q_NumericValue_...
QI
QO
STATUS
OutputNumber_N1
u16ObjId
Uebung_061_AX
Reine Zeitsteuerung 4-Kanal (Adapter Version)