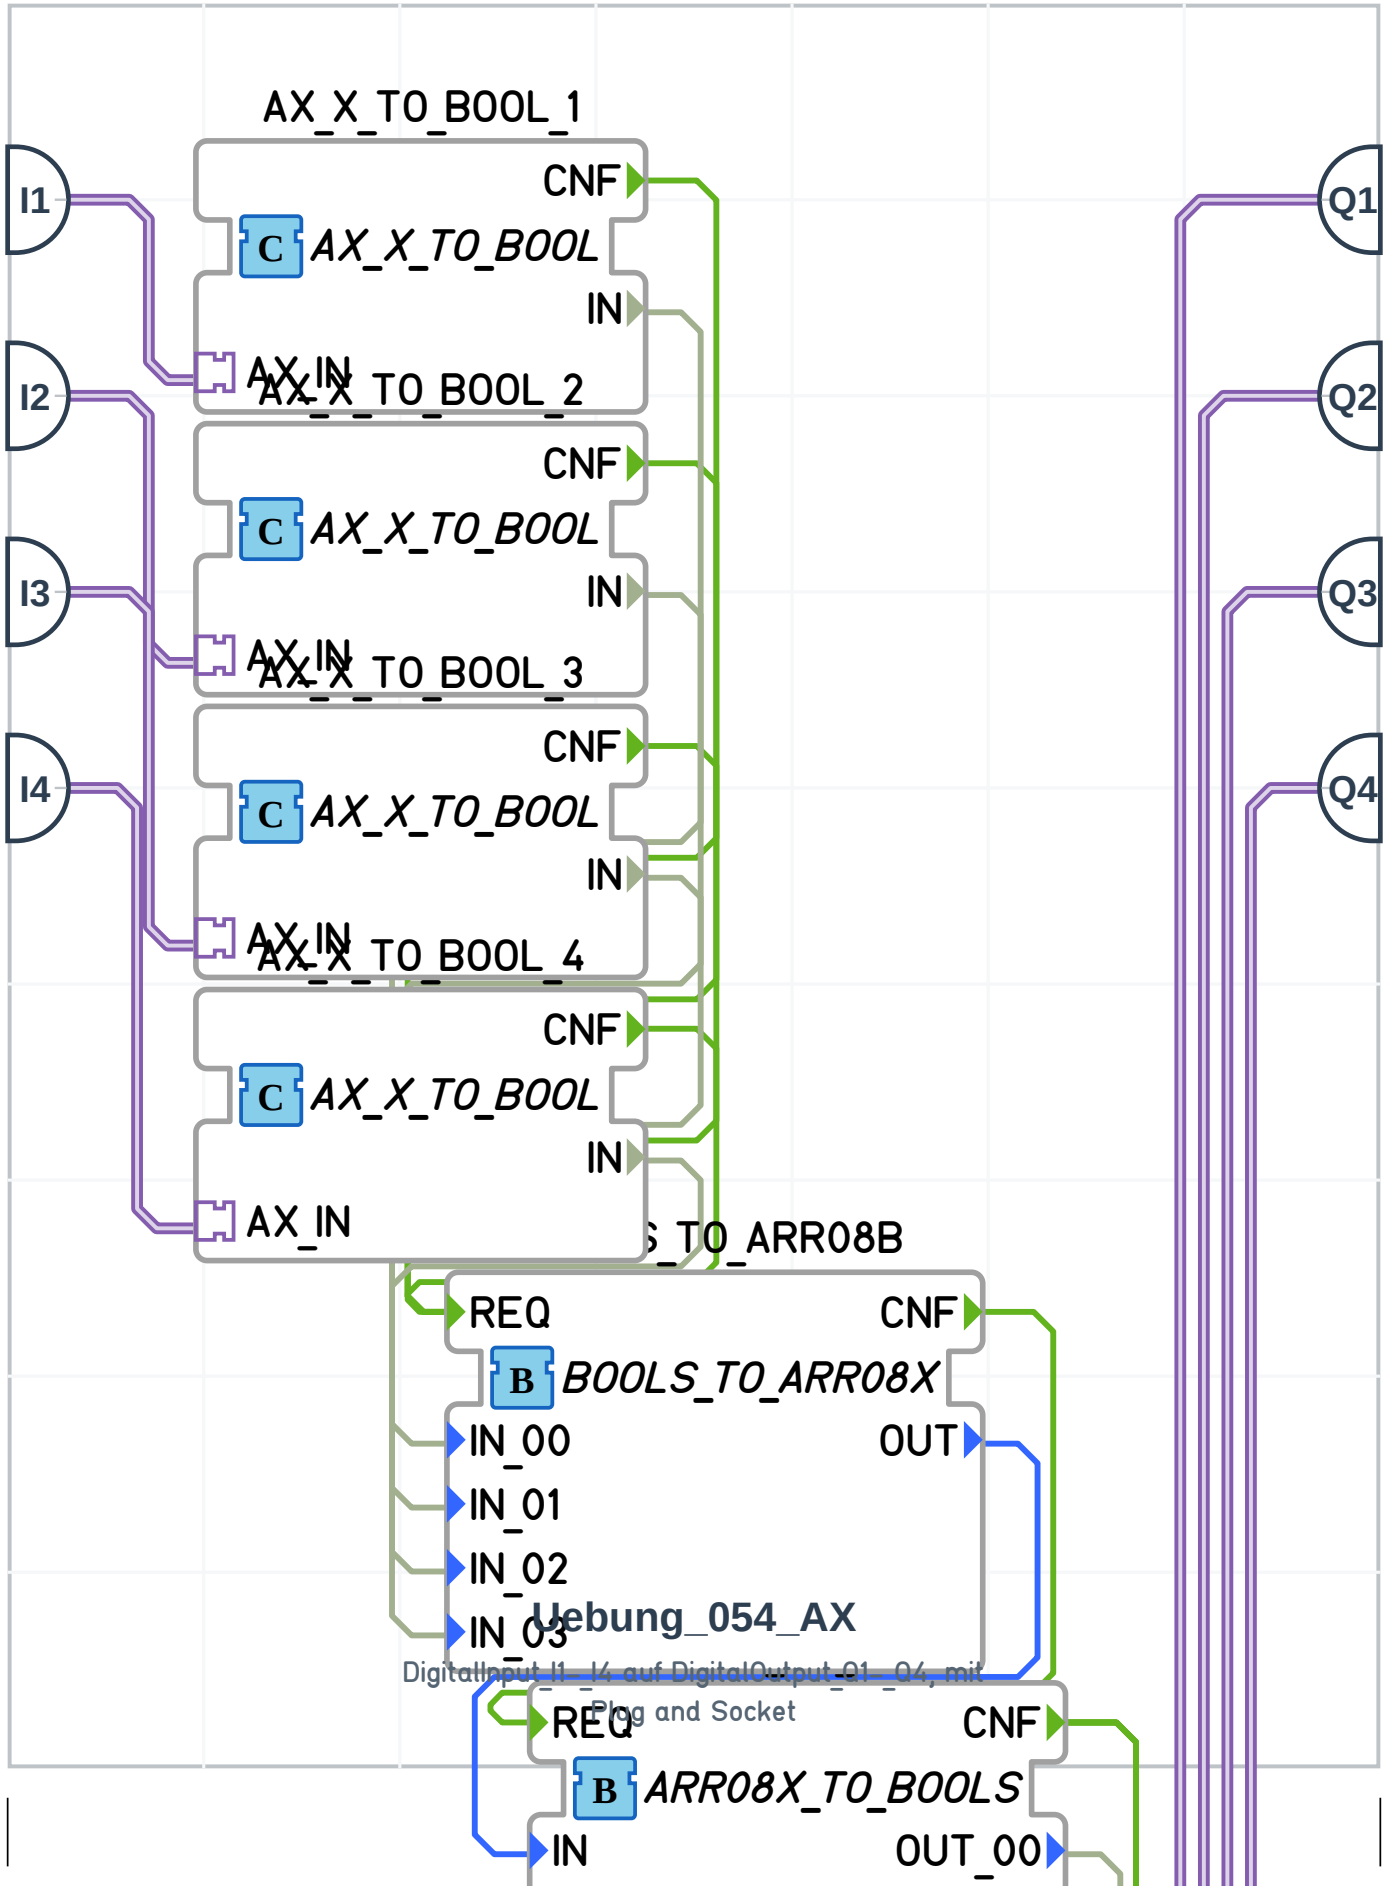
AX_X_TO_BOOL_1
I1
CNF
C
AX_X_TO_BOOL
IN
AX_IN
AX_X_TO_BOOL_2
I2
CNF
C
AX_X_TO_BOOL
IN
I3
AX_IN
AX_X_TO_BOOL_3
CNF
C
AX_X_TO_BOOL
IN
I4
AX_IN
AX_X_TO_BOOL_4
CNF
C
AX_X_TO_BOOL
IN
AX_IN
S_TO_ARR08B
REQ
CNF
B
BOOLS_TO_ARR08X
IN_00
OUT
IN_01
IN_02
IN_03
Uebung_054_AX
DigitalInput_I1_I4 auf DigitalOutput_Q1_Q4, mit
Plug and Socket
REQ
CNF
B
ARR08X_TO_BOOLS
IN
OUT_00
Q1
Q2
Q3
Q4