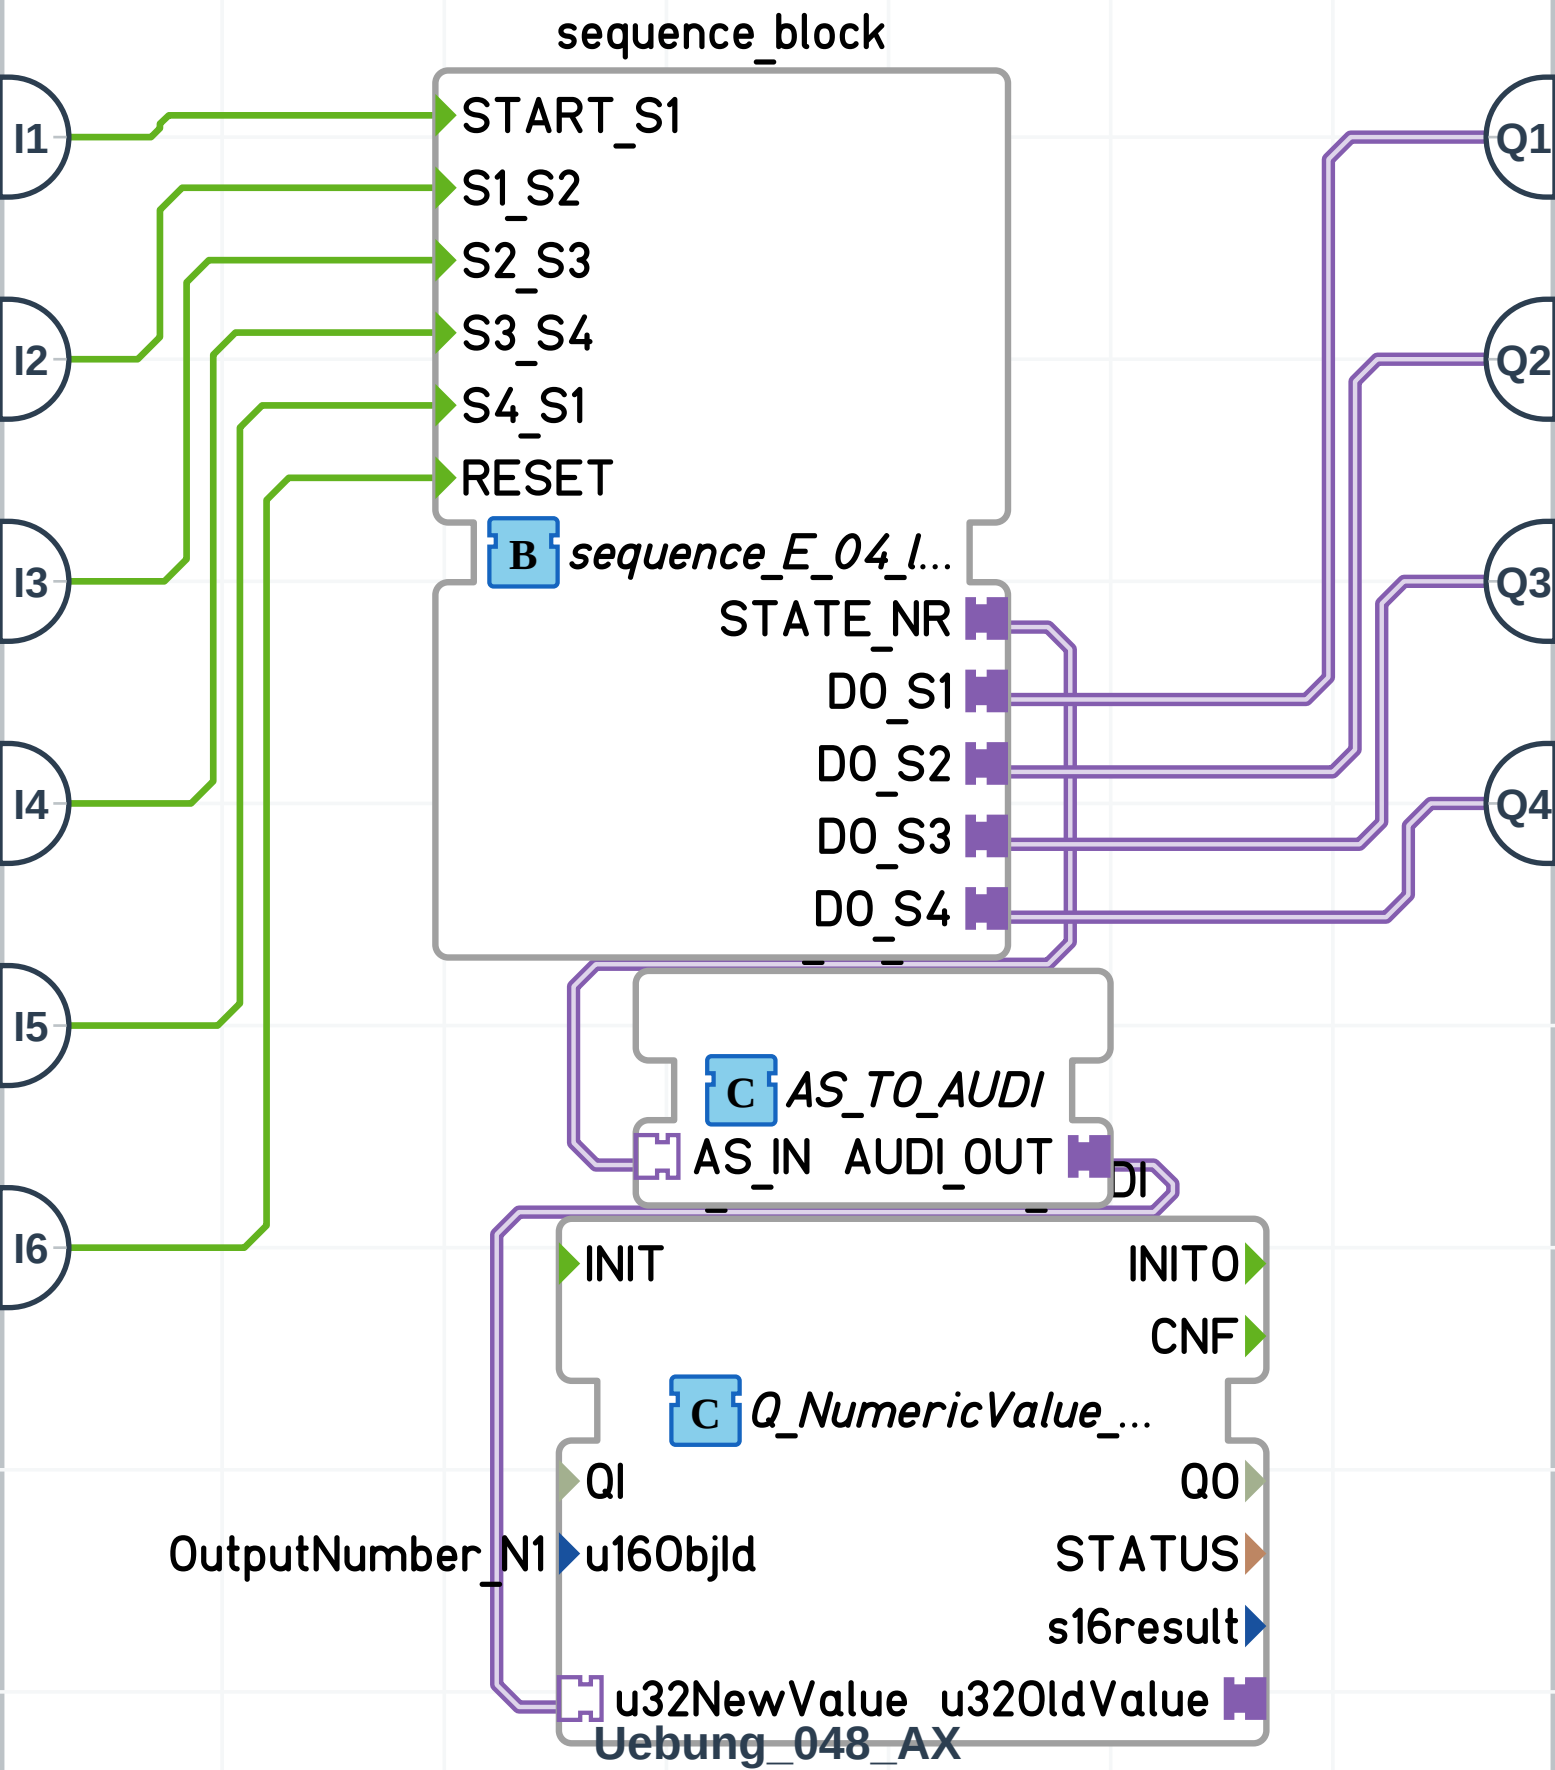
sequence_block
START_S1
S1_S2
S2_S3
S3_S4
S4_S1
RESET
B
sequence_E_04_I...
STATE_NR
DO_S1
DO_S2
DO_S3
DO_S4
I1
I2
I3
I4
I5
I6
Q1
Q2
Q3
Q4
C
AS_TO_AUDI
AS_IN
AUDI_OUT
DI
INIT
INITO
CNF
C
Q_NumericValue_...
QI
QO
OutputNumber_N1
u16ObjId
STATUS
s16result
u32NewValue
u32OldValue
Uebung_048_AX
Reine Event-Schrittkette 4-Kanal ENDLOS (Adapter Version)