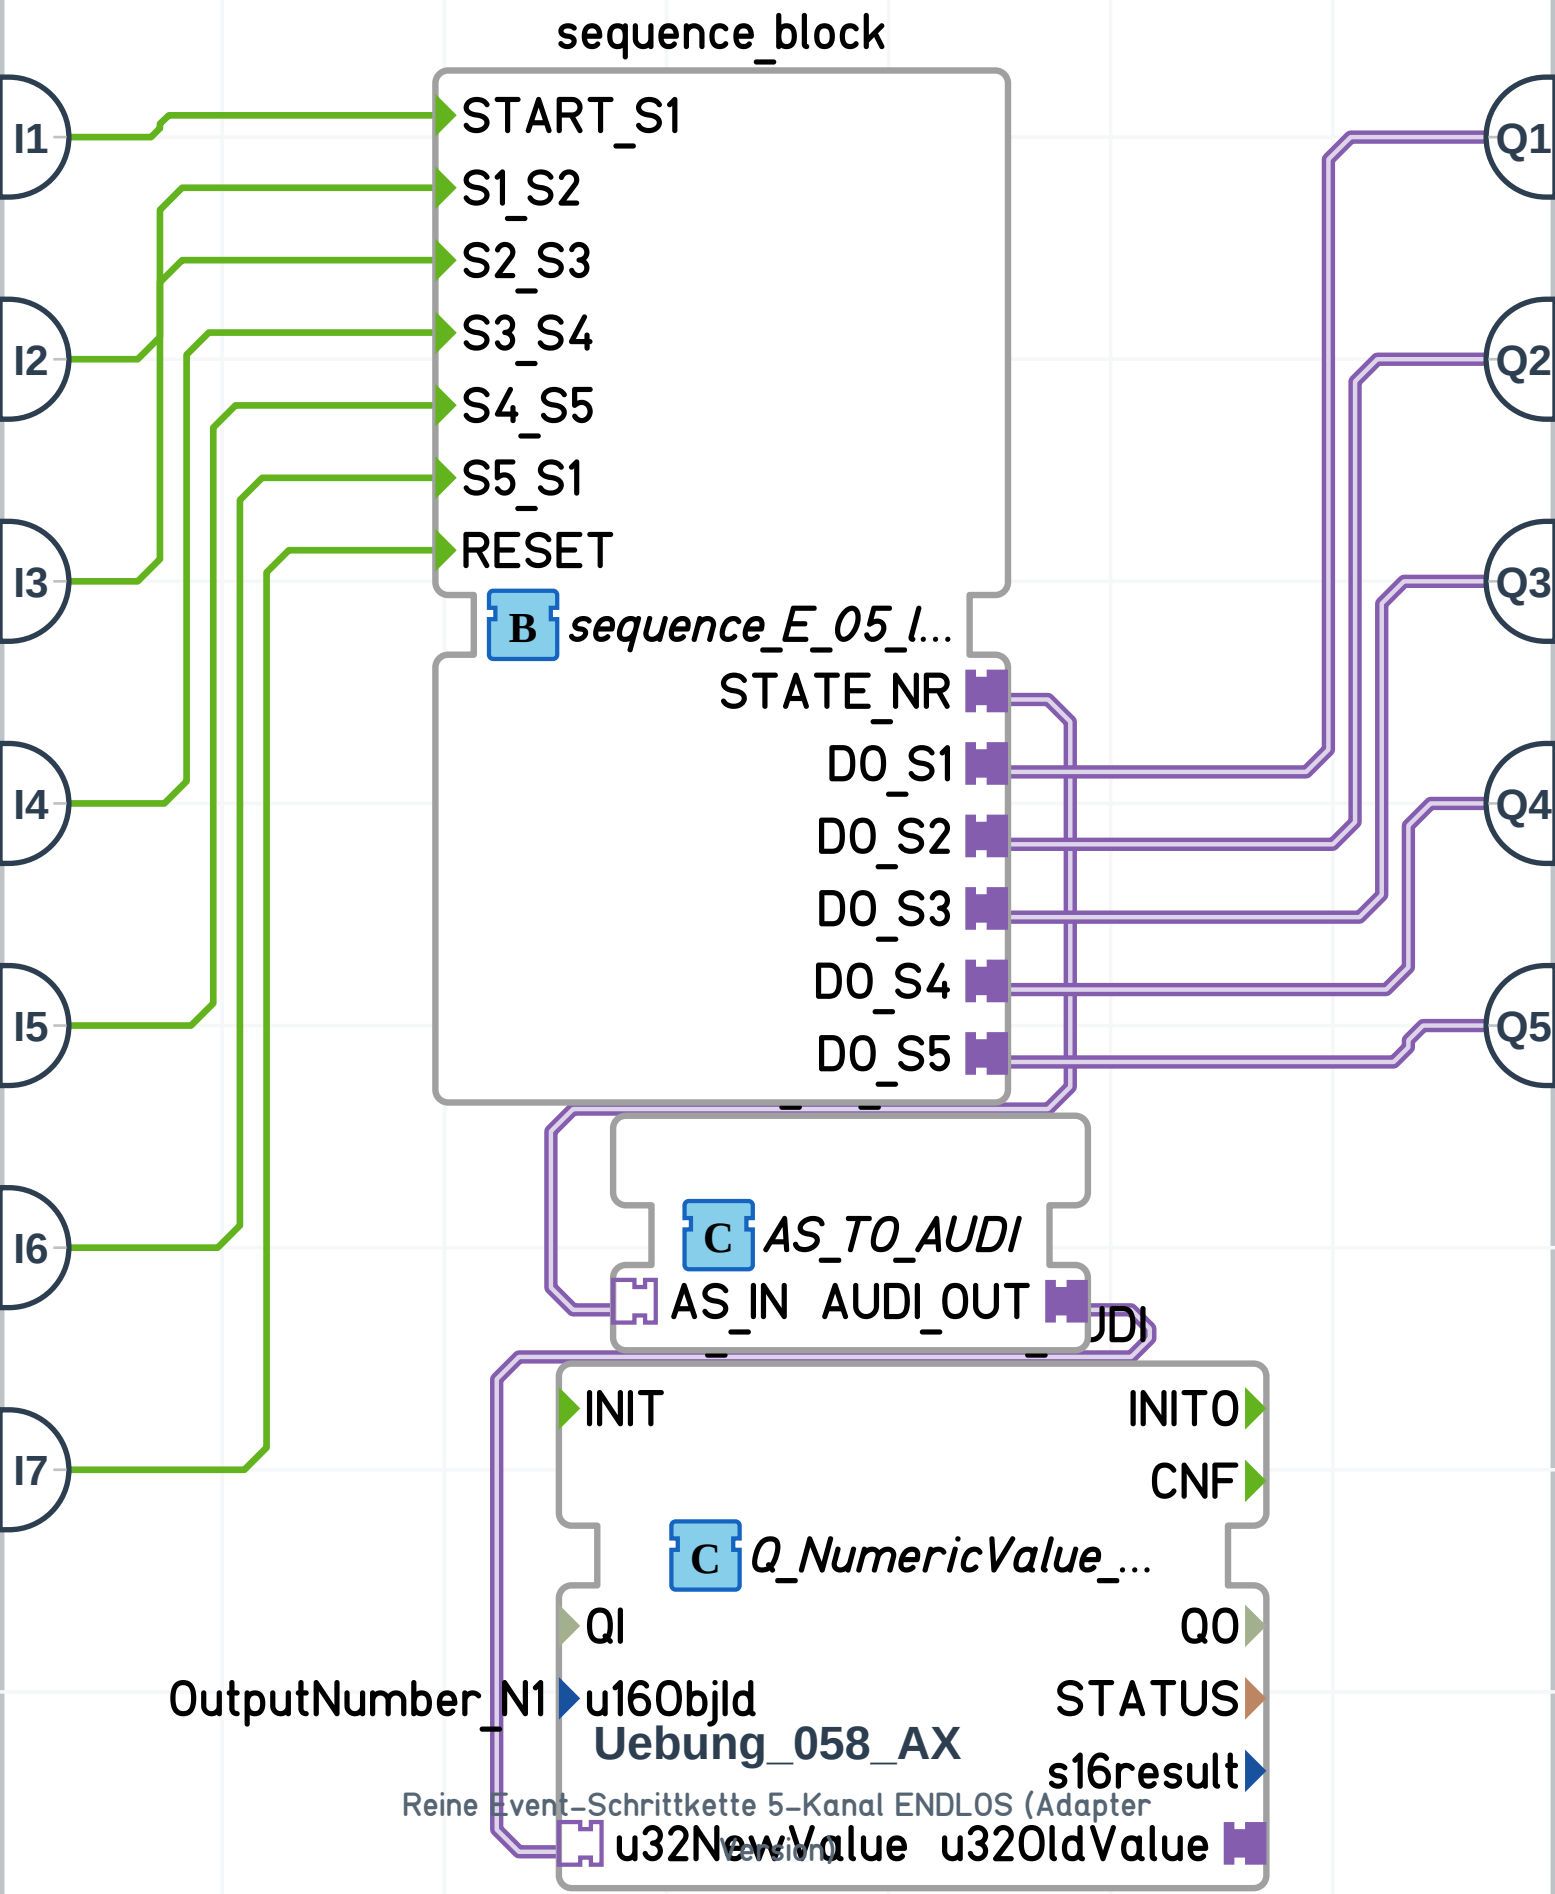
sequence_block
START_S1
S1_S2
S2_S3
S3_S4
S4_S5
S5_S1
RESET
B sequence_E_05_I...
STATE_NR
DO_S1
DO_S2
DO_S3
DO_S4
DO_S5
I1
I2
I3
I4
I5
I6
I7
Q1
Q2
Q3
Q4
Q5
C AS_TO_AUDI
AS_IN
AUDI_OUT
INIT
INITO
CNF
C Q_NumericValue_...
QI
QO
OutputNumber_N1
u16ObjId
STATUS
Uebung_058_AX
s16result
Reine Event-Schrittkette 5-Kanal ENDLOS (Adapter
u32NewValue
u32OldValue