

## Commands and system variables needed often


Placement of command icons visible in all workspaces:

- 1: layer properties
- 2: drawing object properties
- 3: workspace (available in the bottom menu as well)
- 4: zoom
- 5: match properties
- 6: measurements

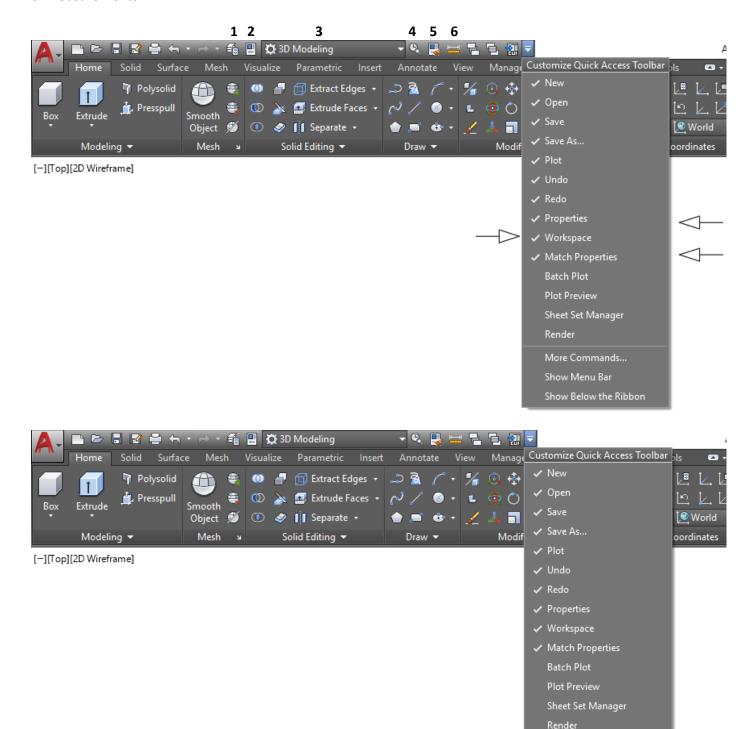

More Commands... Show Menu Bar Show Below the Ribbon

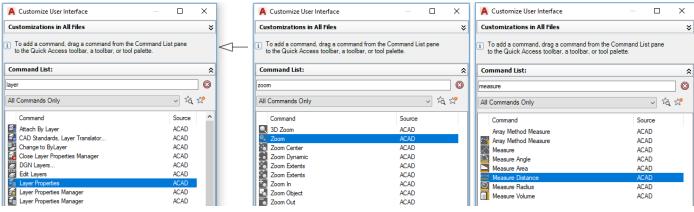

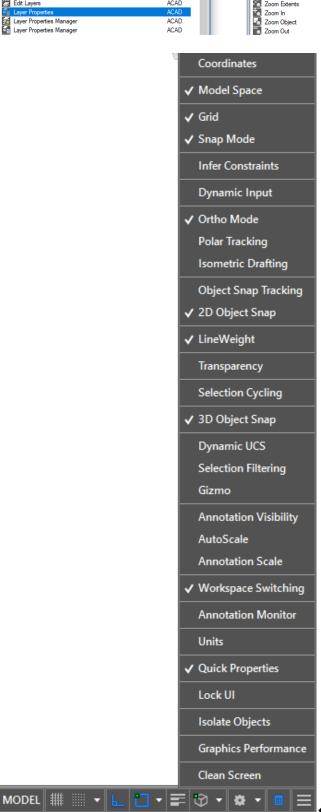



## System variables

How to find:

Command: SETVAR, option: ? then

How to list: \* all (further listed with arrow buttons), \*: all characters in all numbers, ?: one character


\*ucs\*: consisting of ucs

ucs????: beginning with ucs, 7 character long

Line type scale factor = LTSCALE: for all line types and all lines in the actual drawing



It can be multiplied for selected lines.

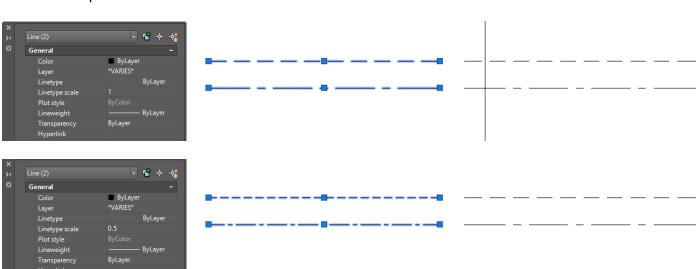

Face tres: smoothness of images of the objects in the actual drawing (value: 0.5-10)

