


INTERACTIVE SOCCER WALL MAT INSTRUCTION MANUAL

1. Product Overview

The Interactive Soccer Wall Mat is an engaging, skill-building toy designed for active play! It features 7 sensor-equipped target zones, 3 exciting game modes, and voice prompts to keep players motivated. Perfect for kids and families, it turns any wall into a fun soccer practice zone—no large space required.

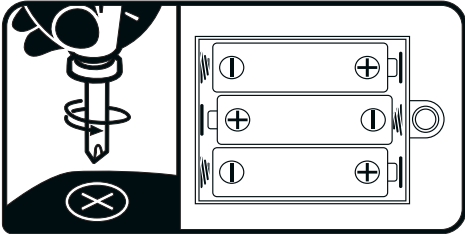

1.1 Power Requirement

Uses 3 "AA" size batteries (not included).
Low-power design with auto-sleep function to save battery life.

1.2 Package Contents

- 1 × Interactive Soccer Wall Mat
- 2 × Soft Foam Soccer Ball (safe for indoor use)
- 1 × Instruction Manual
- 8 × Hook





2. Setup Instructions

Prepare the Mat: Before use, fully stretch and flatten the play mat. Hang it securely on a smooth, flat wall (use hooks or adhesive strips suitable for your wall type—not included).

Battery Installation: Open the battery compartment (located on the back of the mat), insert 3 "AA" batteries following the polarity markings, and close the compartment tightly.

Optimize Sensor Performance: Ensure the mat is completely flat with no wrinkles—this helps the sensors detect kicks accurately.

Power On: Press the "ON/OFF" button to activate the mat. The power indicator will light up, and you'll hear a startup chime.

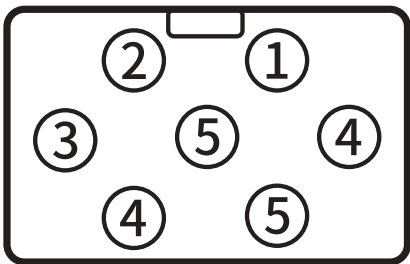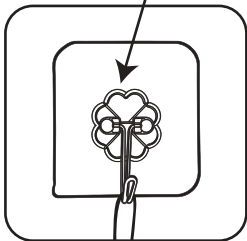

Please accurately hit all 7 positions.

3. How to Play:

The mat has 7 numbered target zones (1–7) with corresponding point values (1–5 points).

Use the soft foam ball to kick or toss at the targets—successful hits will register scores and trigger voice prompts.

Choose from 3 game modes using the "Mode" button.

3.1 Mode 1: Training Mode

Objective: Practice your aim and score as many points as possible to reach 99 points (win condition).

Gameplay: Each target zone (1–7) awards 1–5 points per successful hit, including the 4-point zone.

Game time is unlimited—keep playing until you hit 99 points!

Score Display: The score accumulates continuously, but the display caps at 99 points (the maximum shown).

Auto-Sleep: The system will enter sleep mode after 3 minutes of inactivity (no kicks detected). Press "ON/OFF" to wake it up.

3.2 Mode 2: Challenge Mode (9 Levels)

Objective: Accumulate at least the required points within 5 minutes to advance to the next level—scoring above the target (e.g., 8 points in Level 1) still counts as a pass!

Score Rules: Points accumulate throughout the level. Any score equal to or higher than the level's requirement is a success.

All target zones (1–7) are valid for scoring.

Level Requirements:

Level 1: Earn at least 5 points in 5 minutes

Level 3: Earn at least 7 points in 5 minutes

Level 5: Earn at least 10 points in 5 minutes

Level 7: Earn at least 15 points in 5 minutes

Level 9: Earn at least 19 points in 5 minutes

Level Clear Voice Prompts:

Levels 1–2: "Good job! You're just getting started!"

Levels 5–6: "Awesome! You're halfway to mastery!"

Level 9: "LEGENDARY! You conquered it all!"

Retry Rule: If you don't meet the point requirement in time, the current level restarts automatically.


Level 2: Earn at least 6 points in 5 minutes

Level 4: Earn at least 8 points in 5 minutes

Level 6: Earn at least 12 points in 5 minutes

Level 8: Earn at least 17 points in 5 minutes

Corresponding Score Display

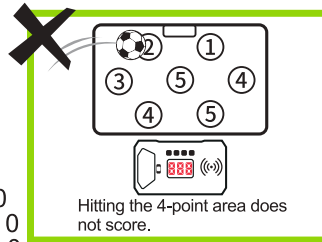

3.3 Mode 3: Match-3 Challenge (9 Levels)

Objective: Reduce the target points displayed on the mat to 0 within 5 minutes to pass each level.

Level Targets:

Level 1: Reduce 5 points to 0

Level 3: Reduce 9 points to 0

Level 5: Reduce 13 points to 0

Level 7: Reduce 17 points to 0

Level 9: Reduce 21 points to 0

Level 2: Reduce 7 points to 0

Level 4: Reduce 11 points to 0

Level 6: Reduce 15 points to 0

Level 8: Reduce 19 points to 0

Key Rules:

Core Principle: You must hit a target with a point value that matches the remaining points (or use split matching) to deduct from the total.

Invalid Hits: Any hit on a zone with a point value that does not match the remaining points will not deduct points.

Example: If 2 points remain, hits on 3, 4, or 5-point zones are invalid.

Example: If 4 points remain, only a hit on the 4-point zone will deduct points (split matching not applicable for 4-point remaining).

Voice Reminders (when points are low):

4 points left: "Only four points left—select a scoring point that matches the remaining points!"

3 points left: "Only three points left—select a scoring point that matches the remaining points!"

2 points left: "Only two points left—select a scoring point that matches the remaining points!"

1 point left: "Only one point left—select a scoring point that matches the remaining points!"

Retry Rule: If you don't clear the target points in time, the level restarts automatically.

Important Note: Misfires may occur if the mat is wrinkled (displayed score doesn't match the target hit). If this happens, re-flatten the mat to improve sensor accuracy!

4. Troubleshooting

Misfires/Score Mismatch: If the displayed score doesn't match the target you hit, remove the mat and re-flatten it to improve sensor accuracy.

No Sensor Response: Ensure the mat is taut, batteries are inserted correctly, and the power is on. Replace batteries if weak.

Voice Prompt Issues: Check the volume (music button also controls prompt volume) and ensure the mat is not muted.

Score Not Capping At 99: The display is designed to show a maximum of 99 points—scores above this will still count for level progression (in Challenge Mode) but won't display beyond 99.

4-point Zone Not Scoring in Match-3 Mode: Confirm the 4-point value matches the remaining points. If not, the hit is invalid (this is a normal rule, not a product malfunction).

5. Safety Warnings

⚠ IMPORTANT SAFETY INFORMATION Read all instructions before use. Keep these instructions for future reference.

This product is intended for children ages 3 and above. Children under 3 must be supervised by an adult at all times.

Use only the included soft foam ball—do not use hard balls, rocks, or other objects, as they may damage the mat or cause injury.

Hang the mat at a safe height (away from eyes/face level for young children) to prevent accidental hits to the head.

Ensure the play area is clear of obstacles and fragile items. Do not kick/toss the ball at people, pets, or breakable objects.

Do not use the mat if it is torn, damaged, or the sensors are malfunctioning. Discontinue use immediately if damage is found.

Keep batteries away from children under 3—batteries pose a choking hazard if swallowed.

Use only fresh "AA" batteries. Do not mix old and new batteries, or different battery types.

Remove batteries when the product is not in use for extended periods to prevent leakage.