


BOXING MAT SET

ASSEMBLY INSTRUCTIONS

ACCESSORIES



ADDING WATER INFLATION STORAGE

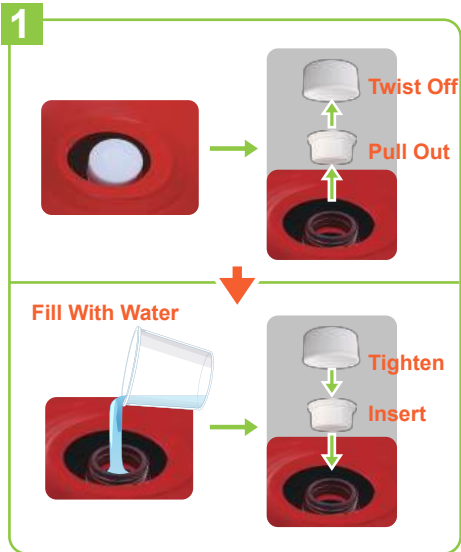

ASSEMBLY



FUNCTION MANUAL




Challenge Mode (9 Levels): There are 9 levels in total, with difficulty increasing progressively from Level 1. The score is the number of times the target is hit.

Level	Random Lights per Round	Score to Pass
1	1 Light	10
2	1–2 Lights	14
3	1–3 Lights	17
4	2–3 Lights	20
5	1–4 Lights	23

Level	Random Lights per Round	Score to Pass
6	2–4 Lights	26
7	2–5 Lights	29
8	3–5 Lights	32
9	4–6 Lights	35

Sound Plays on Hit

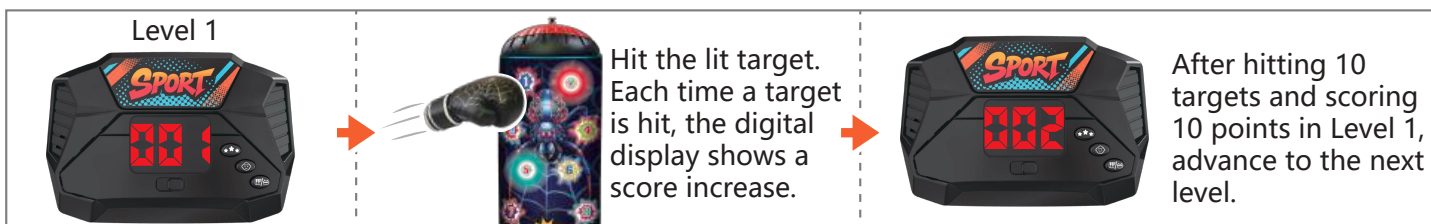

Note: Timeout or wrong hit = error. Game ends if background music stops (no hit for 3 min).

Note: Score higher than the required score to advance; otherwise, game over.

Memory Mode (60 Levels):

Memory Mode: Follow the light sequence in order (start with 2 memory points). Correct sequence = lights +1, score +1. When lights exceed 60, next round begins. Bonuses stack per level. Level 1: 2 points, Level 2: 3 points, Level 3: 4 points, ..., Level 60: 61 points.

Clearing a level triggers victory music.



Note: If a wrong hit causes a game failure, the game automatically restarts from the current score. After three wrong-hit failures, the game restarts from the beginning.

Piano / Drum:

- Press until display shows **008** → 8 points = 8 piano notes.
- Press again until display shows **008** → 8 points = 8 drum sounds.