Upload the bootloader image file with the port0 as LAN port
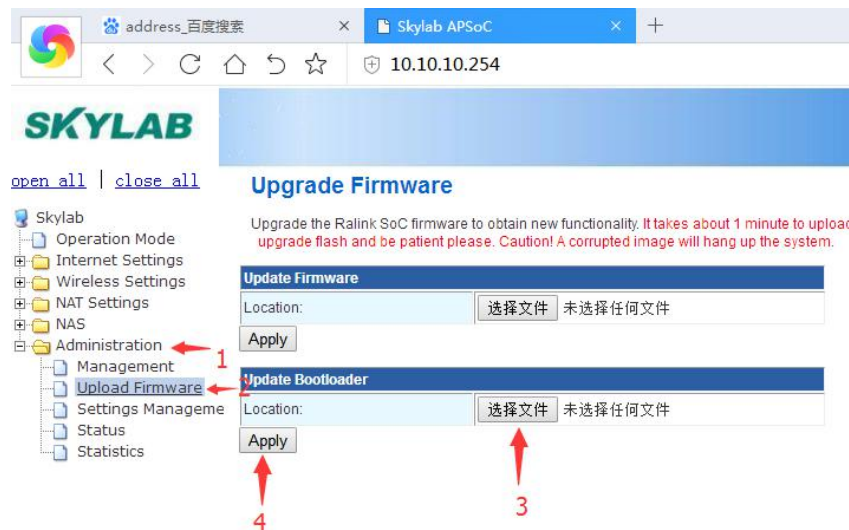
1、Connect to SKW92 with wireless or lan port.

2、Open browser.Address is "10.10.10.254" The UserName and passowrd is "admin"

3、Select according to the annotation in the figure

4、Wait and the system will reboot. Now the SKW92 port0 as lan port