
## **USB - CAN converter self-test**

- 1. Open the software, choose the corresponding port and baud rate, click the **Open** button
- 2. The working mode is set to **Look back + silent mode**

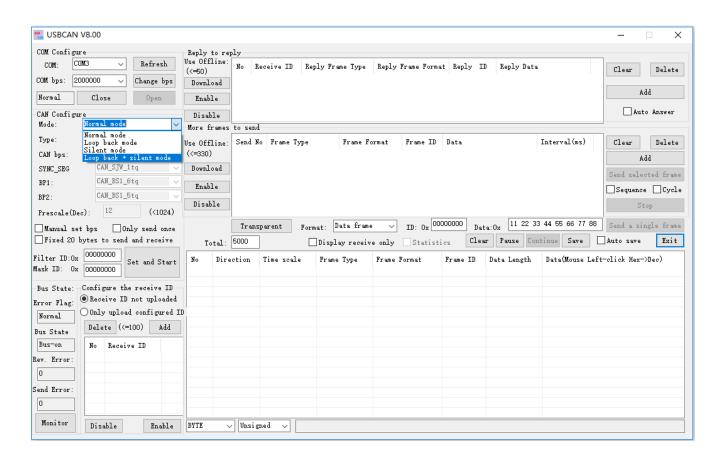

3. Click Set and Start button



4. Click Send a single frame button, test Self-Sending

## and Self-Receiving

