




STM32F423 Module

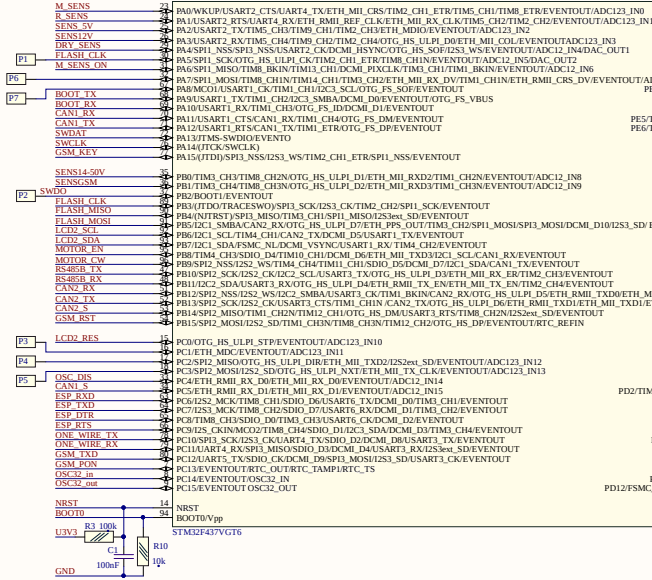

UART boot connector




RS-485A connector slave




RS-485B connector master




CAN1



CAN2



PowerCAN



PowerCAN



PowerCAN



PowerCAN



PowerCAN



PowerCAN



PowerCAN



PowerCAN



