

HS1000 Remote Control Lawn Mower

REMOTE CONTROL LAWN MOWER


FAST MOWING

LOW NOISE


SMOOTH TRIMMING



Manganese steel blade

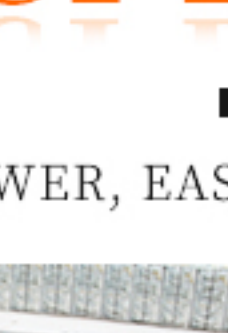

Brand engine

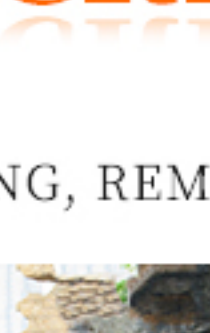

Climbing stability





Flexible steering

HS1000 LAWN MOWER

PRODUCT DESCRIPTION

FREE UP MANPOWER, EASY MOWING, REMOTE CONTROL

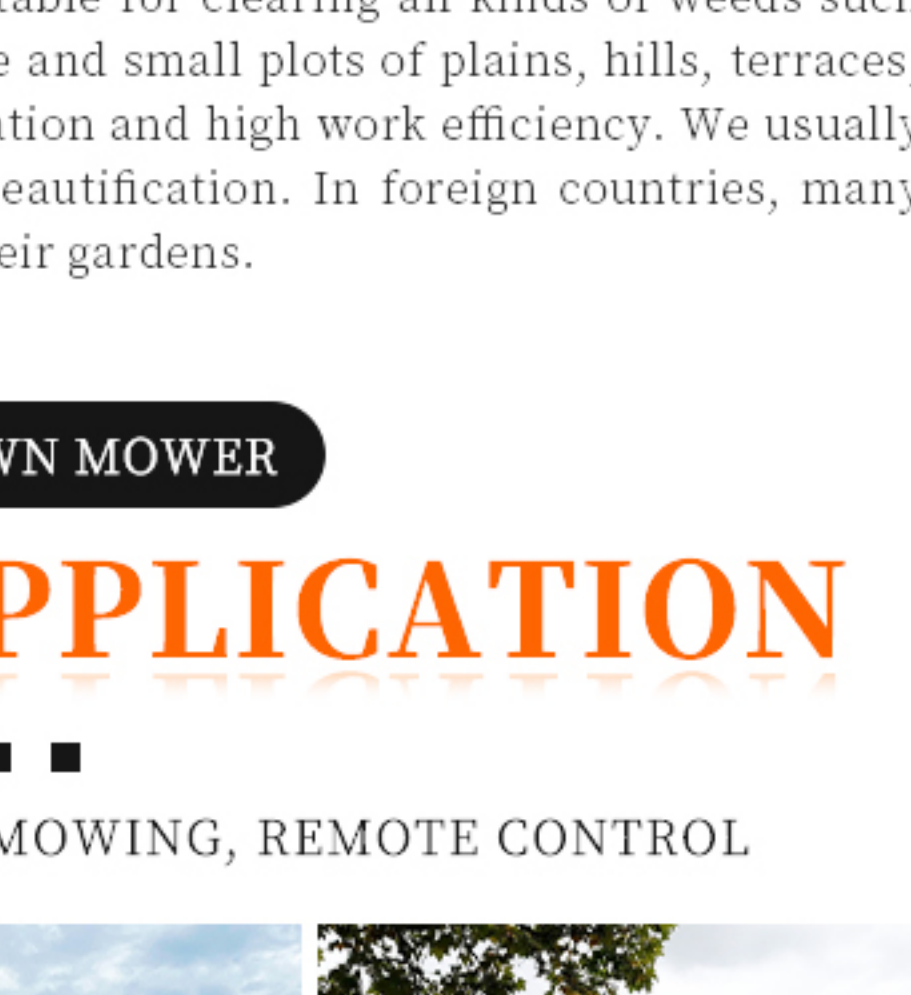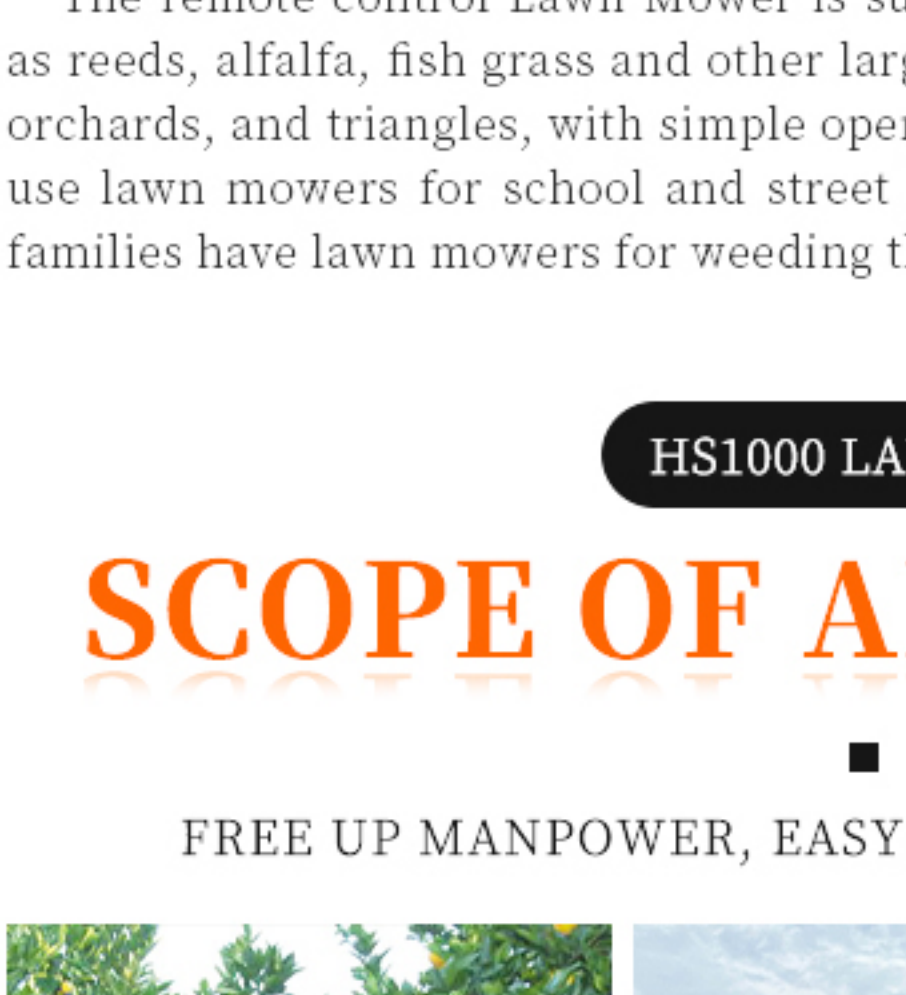

The remote control Lawn Mower can complete the work of mowing the lawn independently, without direct human control and operation, and has low power, low noise, exquisite and beautiful appearance, and greatly reduces manual operation.

The remote control Lawn Mower is suitable for clearing all kinds of weeds such as reeds, alfalfa, fish grass and other large and small plots of plains, hills, terraces, orchards, and triangles, with simple operation and high work efficiency. We usually use lawn mowers for school and street beautification. In foreign countries, many families have lawn mowers for weeding their gardens.

HS1000 LAWN MOWER

SCOPE OF APPLICATION


FREE UP MANPOWER, EASY MOWING, REMOTE CONTROL




ORCHARDS




FARMS

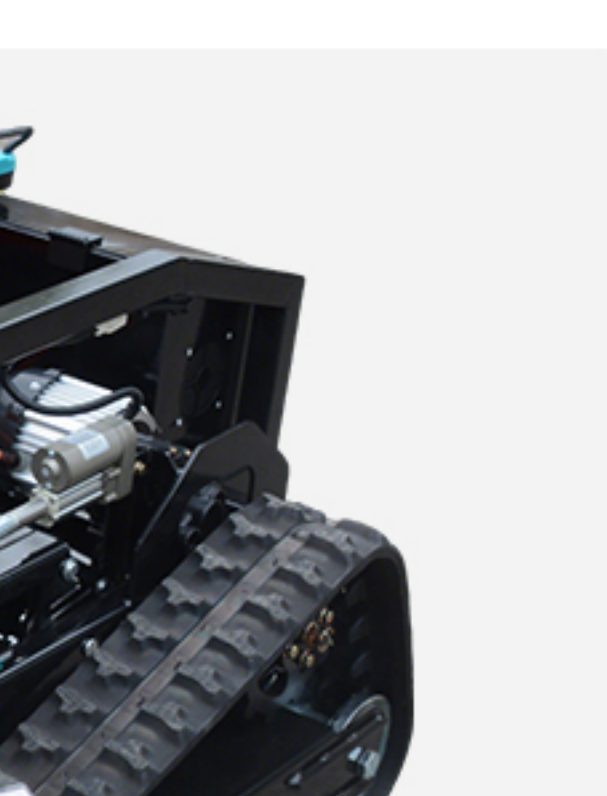


PARKS

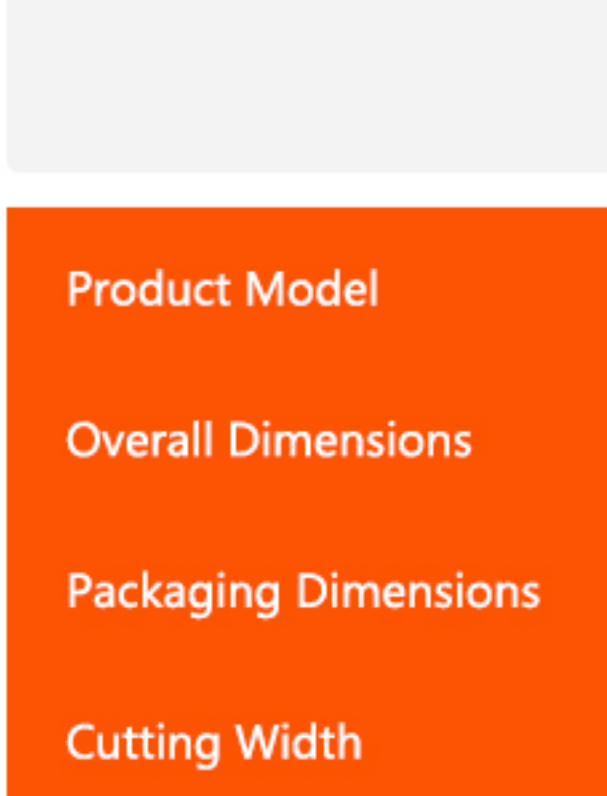

LAWNS

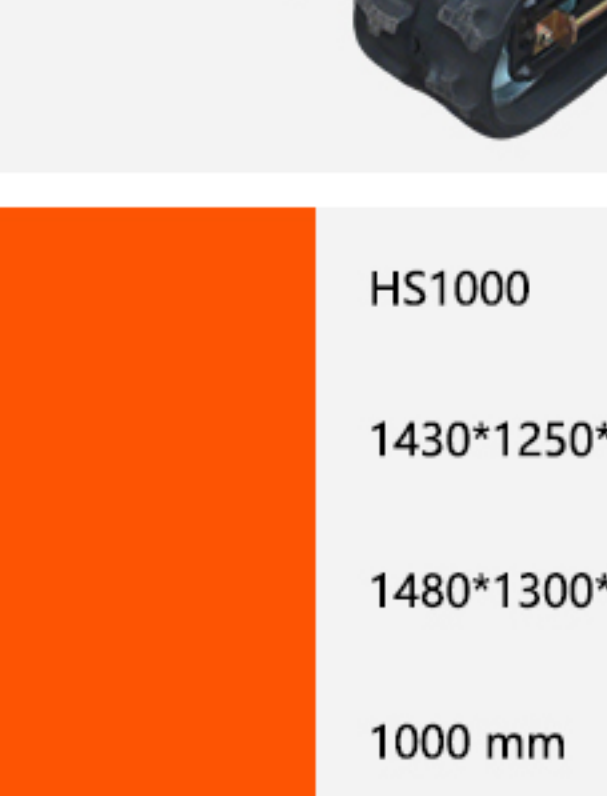

COMMUNITY

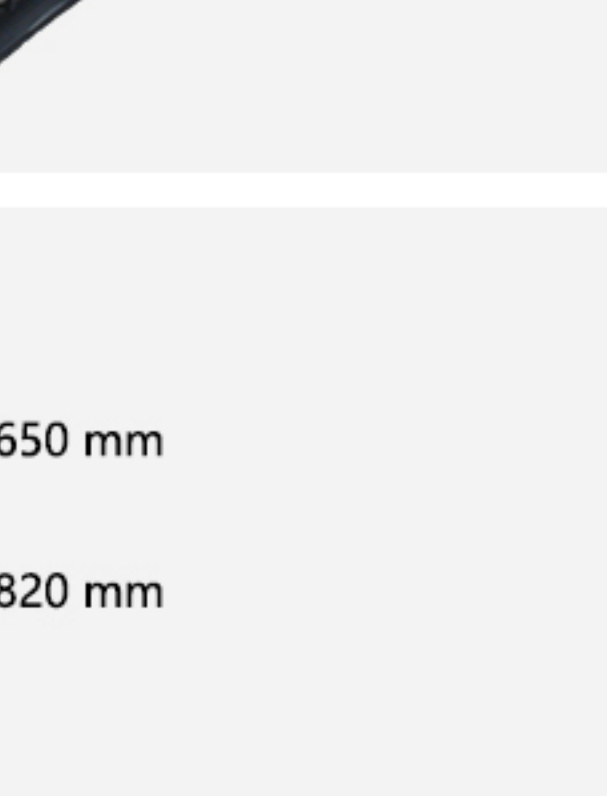

LAND CLEARING

HS1000 LAWN MOWER

PRODUCT PARAMETER

FREE UP MANPOWER, EASY MOWING, REMOTE CONTROL



Product Model

HS1000

Overall Dimensions

1430*1250*650 mm

Packaging Dimensions

1480*1300*820 mm

Cutting Width

1000 mm

Cutting Height

20-150 mm

Travel Speed

5 km/h

Gradeability

45°

Cutter Bar Adjustment

Remote-controlled height adjustment

Engine

Loncin 608

Power

23 HP

Fuel Tank Capacity

7.1L

Oil Capacity

1.2L

Mowing Efficiency

4000m²/h



Voltage & Capacity

24V 40AH

HS1000 LAWN MOWER

INSTRUCTIONS FOR USE

FREE UP MANPOWER, EASY MOWING, REMOTE CONTROL

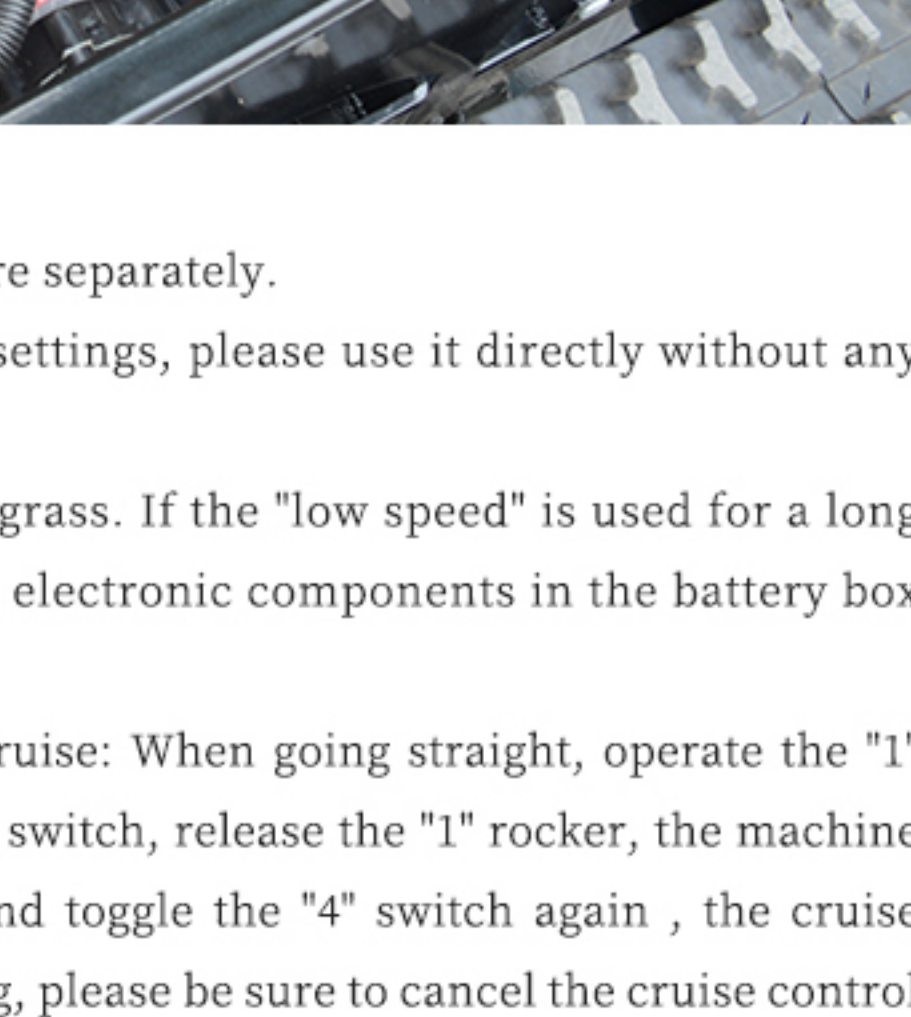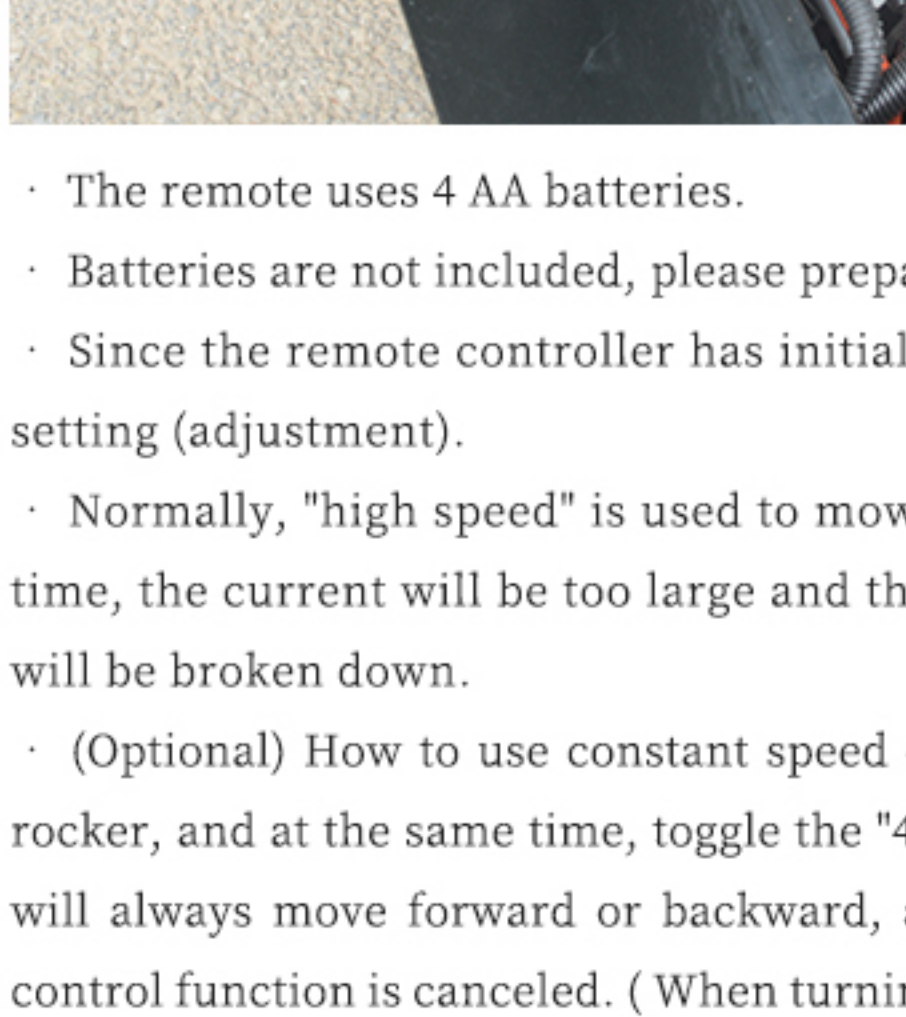

* Tighten the screws and bolts of each part for each operation. Also, make sure there are no loose or missing wires and wiring. please confirm.

* Due to the loosening of screws and bolts due to vibration during use, and poor contact, please check in time, otherwise it may cause equipment failure or damage.

* If you drive for a long time with only the motor running, the remaining battery power will decrease significantly, and you may not be able to run it because it does not generate electricity.

· To avoid overheating and damage to parts, we recommend that you allow the unit to rest for 10 minutes when refueling. After the equipment is filled with oil, it can work continuously for about 1 hour before refueling.

· Before first use, please charge for 3-6 hours until fully charged.

· Please start up the equipment in the correct sequence to avoid damage to the equipment.

· Before turning on the remote control, please make sure all the buttons on the remote control are in the original state (middle position), otherwise the signal cannot be received normally.

· When adjusting the height of mowing blades and dozer blades, please adjust the relevant operating levers to the appropriate height and then return to the middle position.

· Be sure to use the supplied charger when charging the battery.


· Please replenish the specified amount of gasoline and engine oil before use.

· Check the condition of gasoline, oil and battery before use after long-term storage.

· Do not let the remote control get wet from rain, etc., as it may cause a malfunction.

· When storing, turn off the power switch of the equipment and battery, and remove the mud and dirt attached to the main body, engine, electric control box, etc.

· Be aware that lack of oil may result in engine damage.

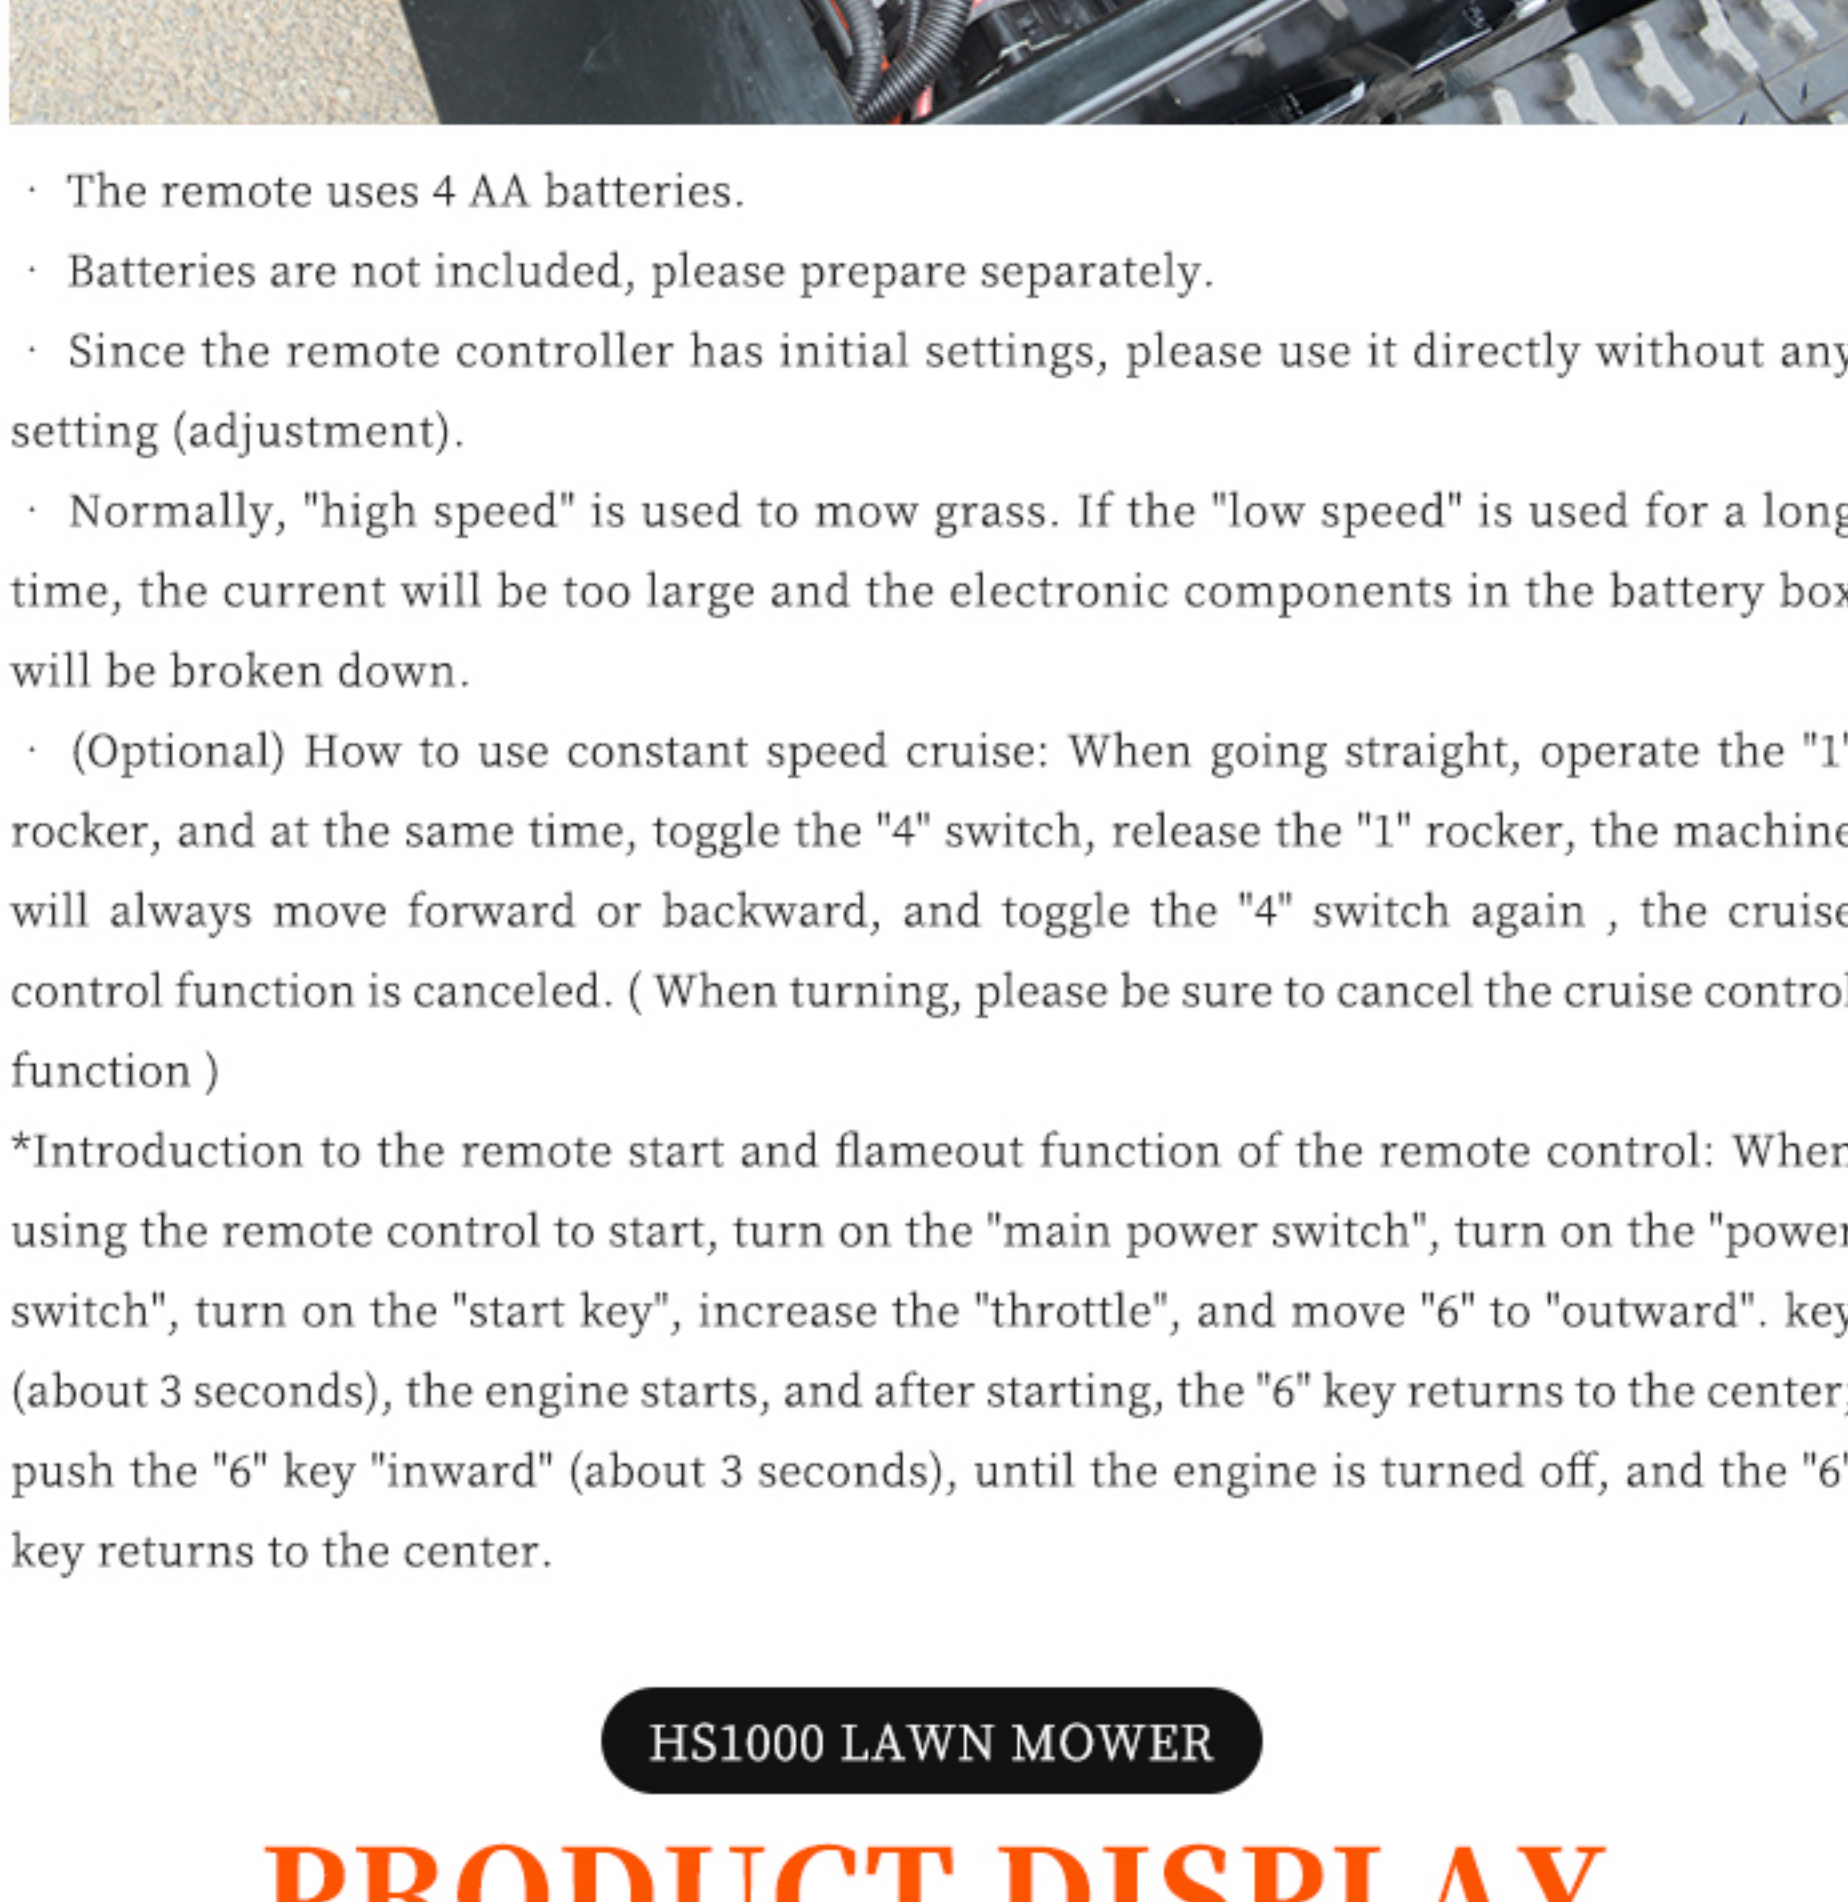

· The remote uses 4 AA batteries.

· Batteries are not included, please prepare separately.

· Since the remote controller has initial settings, please use it directly without any setting (adjustment).

· Normally, "high speed" is used to mow grass. If the "low speed" is used for a long time, the current will be too large and the electronic components in the battery box will be broken down.

· (Optional) How to use constant speed cruise: When going straight, operate the "1" rocker, and at the same time, toggle the "4" switch, release the "1" rocker, the machine will always move forward or backward, and toggle the "4" switch again, the cruise control function is canceled. (When turning, please be sure to cancel the cruise control function)


*Introduction to the remote start and flameout function of the remote control: When using the remote control to start, turn on the "main power switch", turn on the "power switch", turn on the "start key", increase the "throttle", and move "6" to "outward". key (about 3 seconds), the engine starts, and after starting, the "6" key returns to the center;

push the "6" key "inward" (about 3 seconds), until the engine is turned off, and the "6" key returns to the center.

HS1000 LAWN MOWER

PRODUCT DISPLAY

FREE UP MANPOWER, EASY MOWING, REMOTE CONTROL

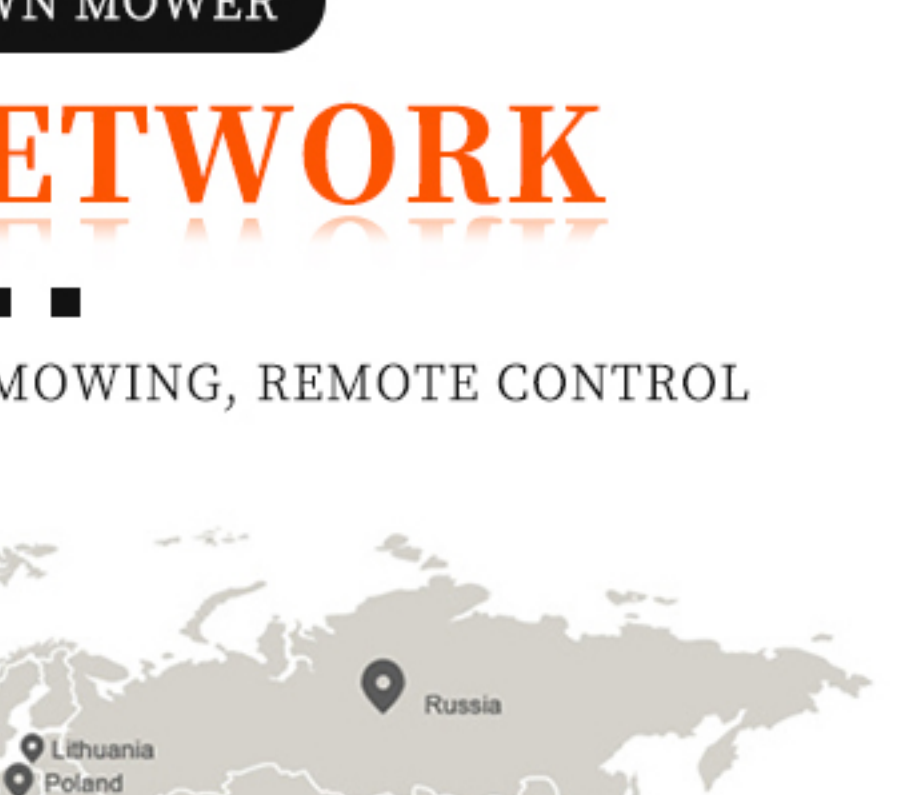

HS1000 LAWN MOWER

SALES NETWORK

FREE UP MANPOWER, EASY MOWING, REMOTE CONTROL

