
U\$1 JOYSTICK-2AXIS-BUTTON

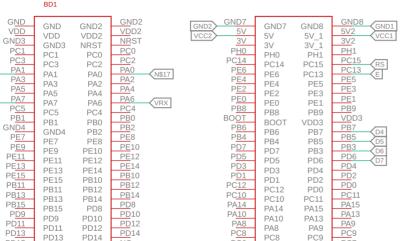

PC6

GND9

GND9

PC7

RIGHT

GND10

GND

PC5 PB1

PE7

PE11

PD15

GND5

PD15

GND5

NC

GND6

NC

LEFT

GND6

SW

VRY

