

Gateway Configuration Assistant User Guide

V003

13/03/2024

Advanced version

Note: The local configuration assistant (Advanced version) has universality and does not require the network protocol used by the gateway.


1 A prerequisite for batch configuration.

1.1 The computer running the configuration assistant must be in the same LAN segment as the gateway to be configured.

1.2 When the deployment environment of the gateway is on a large LAN with multi-level routers or multi-network segments composed of multiple VLANs, you can still use the batch configuration assistant if you set the network segments to be accessible to each other.

2 Batch configuration procedure.

Step 1: Select the current gateway model and firmware version, as shown in the following figure:

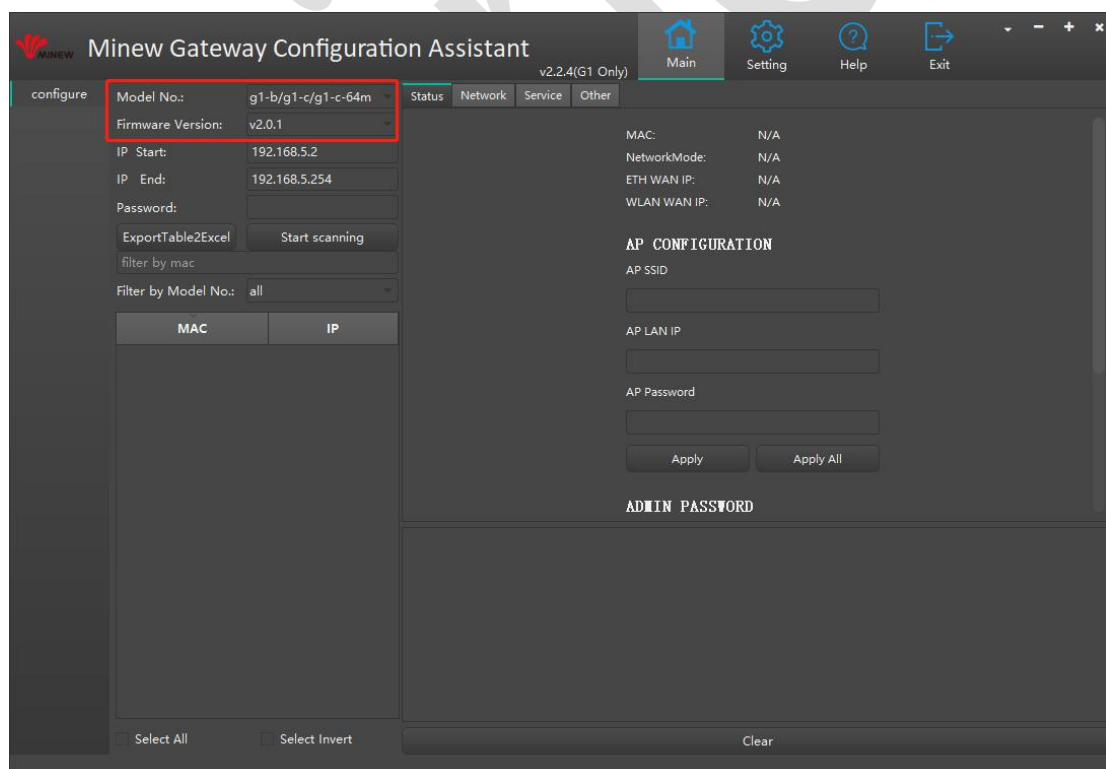

Step 2: Enter the IP address segment (start IP address and end IP address) of the current LAN, so that the gateway can scan only the gateways within the IP address segment. For example, my current LAN is in the network segment 192.168.5.x. You can fill in the IP address as shown in the following figure. The start IP address is 192.168.5.2 and the end IP address is 192.168.5.254.

Minew Gateway Configuration Assistant v2.2.4(G1 Only)

configure

Model No.: g1-b/g1-c/g1-c-64m

Firmware Version: v2.0.1

IP Start: 192.168.5.2

IP End: 192.168.5.254

Password:

ExportTable2Excel

Start scanning

filter by mac

Filter by Model No.: all

MAC	IP
-----	----

Select All

Select Invert

Clear

MAC: N/A

NetworkMode: N/A

ETH WAN IP: N/A

WLAN WAN IP: N/A

AP CONFIGURATION

AP SSID

AP LAN IP


AP Password

Apply


Apply All

ADMIN PASSWORD

Step 3: If you need a login password to log in to the gateway configuration page, you need to fill in the login password of the gateway page on the configuration assistant (you do not need a login password on the configuration page, but you do not need to fill in the configuration Assistant). Enter the password and click **Start scanning**. Then the assistant will scan all the gateway devices on the current LAN. For example, my gateway login password is 123456. You need to fill in the password as shown in the following figure.

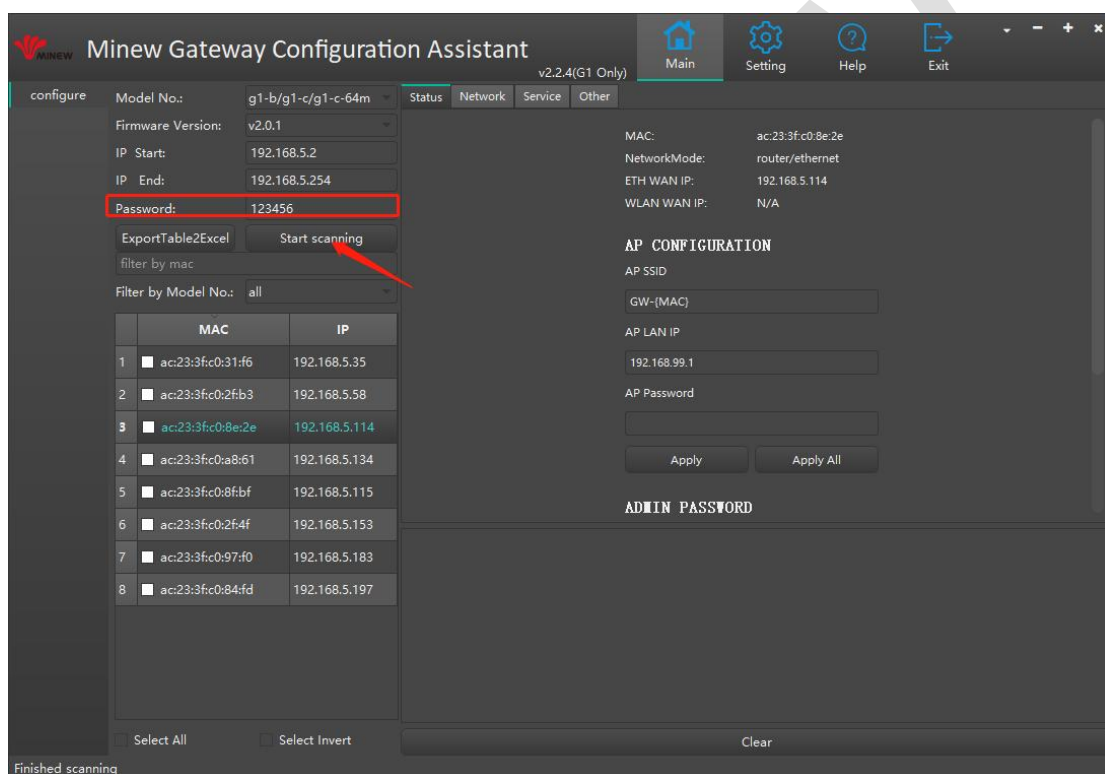


Step 4: After the end IP address appears in the record list or in the status bar at the bottom of the assistant, Finished scanning is complete. After the scan, you can obtain the default parameters of the corresponding gateway by double-clicking the mac address in the left column. For example, for the gateway AC233FC08E2E, the corresponding parameter is displayed on the right.

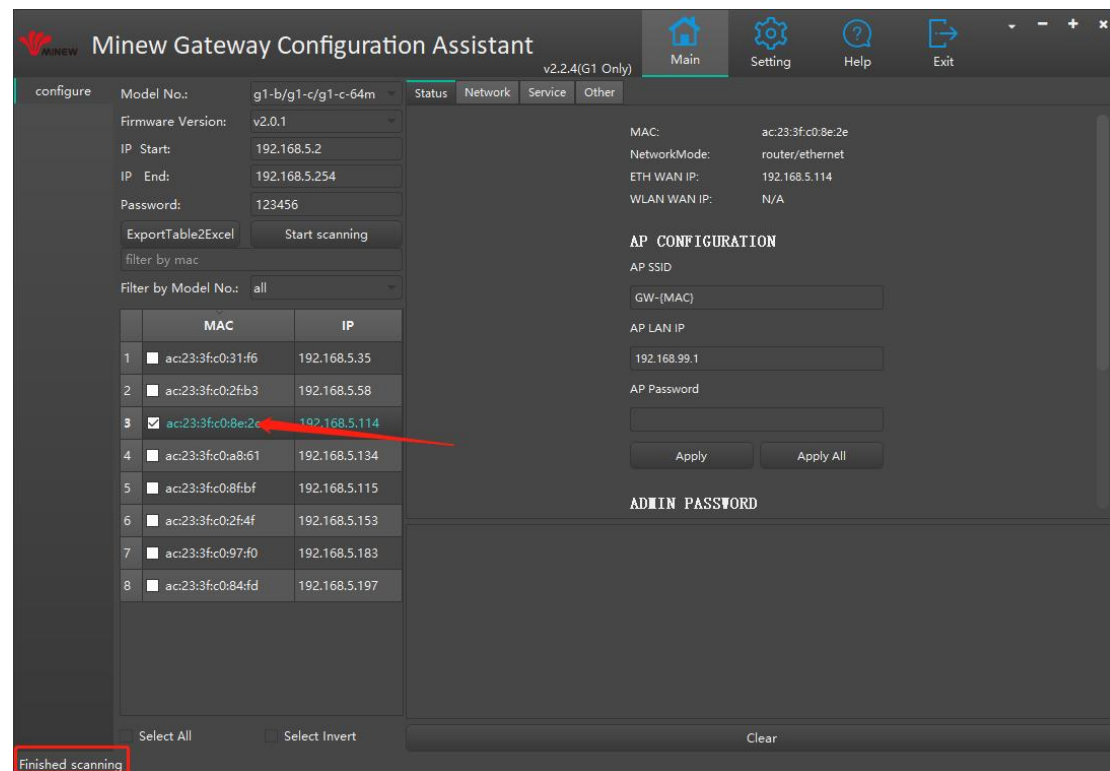


Step 5: Before clicking **Apply** or **Apply All**, select the gateway model and firmware version. Otherwise, the configured gateway may be faulty due to compatibility issues between versions, even if it is successful in the record. You need to keep this in mind when configuring the parameters on the Service page. The versions of services vary greatly. Currently, only G1-B/C gateways of v1.4.2 or later are supported in batch configuration. The changes between versions of parameters in Other parts are not particularly large. You can try batch upgrading to the latest version and then using the assistant for batch configuration.


Step 6: Click **Apply** or **Apply All** buttons to complete the configuration. For example, you can set the time zone of a gateway.

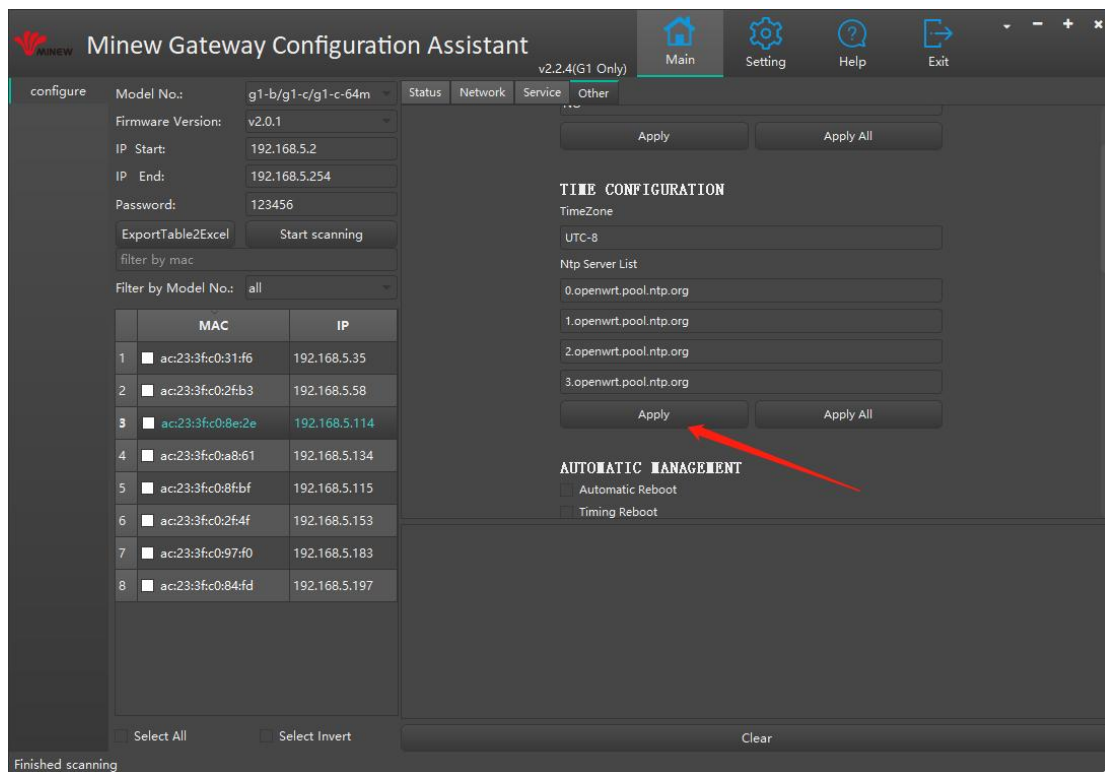

You can also select multiple gateway for batch configuration.

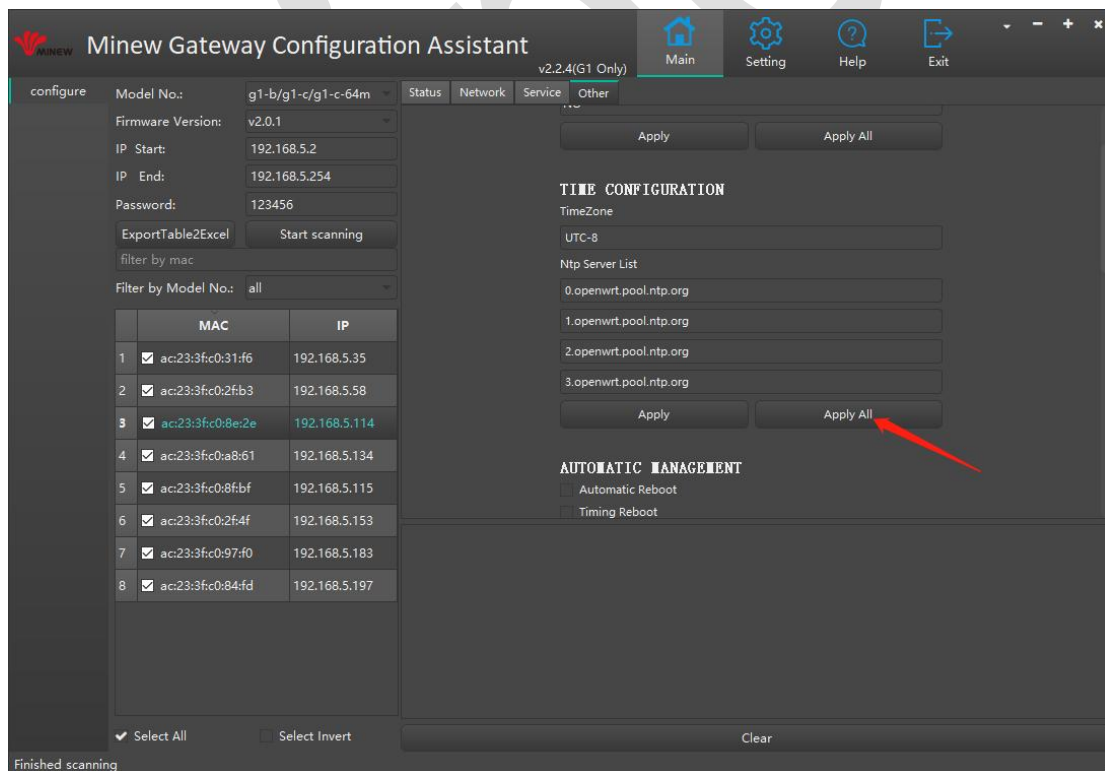

After the gateway is successfully set , blue information will appear in the configuration assistant , as shown in the following figure:

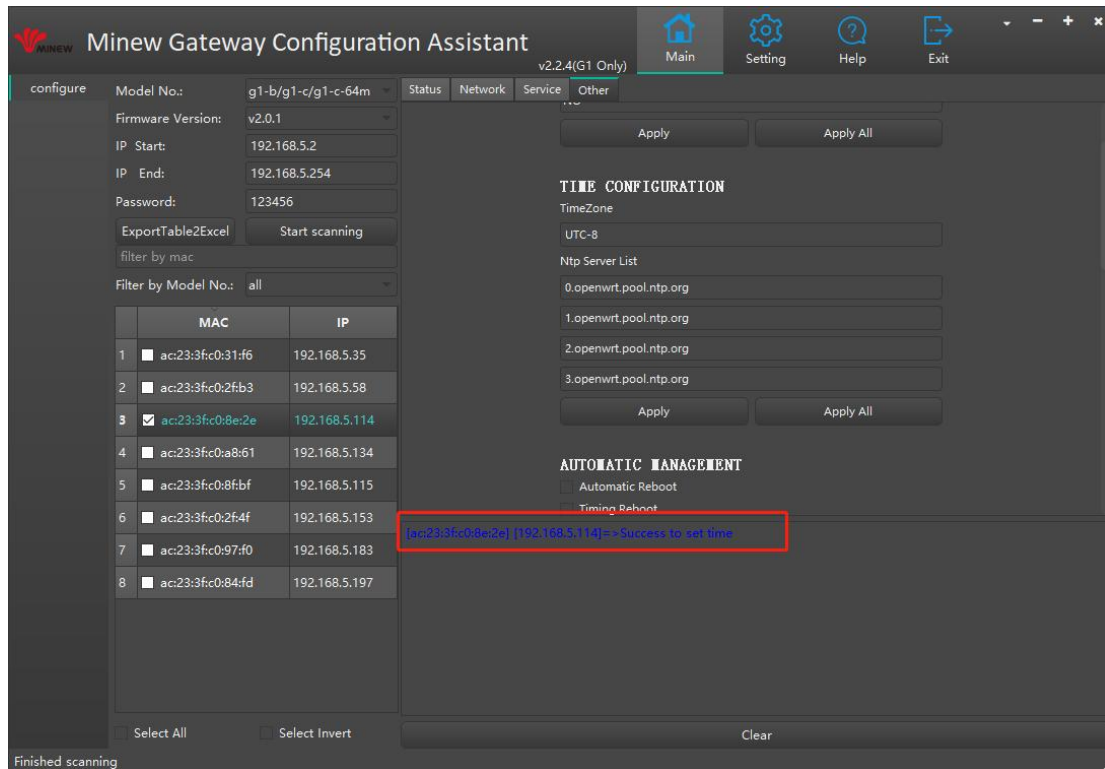

3 Matters needing attention

Precautions for batch gateway upgrade:

It is recommended not to upgrade too many gateways at one time, you can operate several times in batches, for example, upgrade only 10 gateways at one time (that is, select 10 gateways every time), the reason is to prevent abnormal power failure in the process of batch upgrade, resulting in a large number of brick accidents. Don't panic if you encounter a brick, you can still restore the firmware by other means.

Do not power off, do not power off, do not power off, no matter what state the gateways are in during batch upgrade.


Q: The difference between apply and apply all:

Apply means that the parameter is configured only to the destination gateway of the mac address where the current cursor is located.

Apply all is to configure parameters to all the selected gateways, that is, batch configuration.

Q: Why do {mac} and {MAC} appear in parameters?

If {mac} or {MAC} appears in the parameter, then the parameter is different in each gateway. For example, the default value of the AP SSID parameter in Status is GW-XXXXXXXXXX, and XXXXXXXXXXXX indicates the uppercase format of the gateway MAC address. So in order to implement batch configuration, the assistant will mac address resolution displayed as {mac} (the lowercase form of the mac address) or {MAC} (the MAC address in uppercase), if you click Apply All, the assistant will parse {mac} or {MAC} into the corresponding gateway mac address, so that the configured parameters will be different for each gateway based on the mac address. For example, in the position shown below:

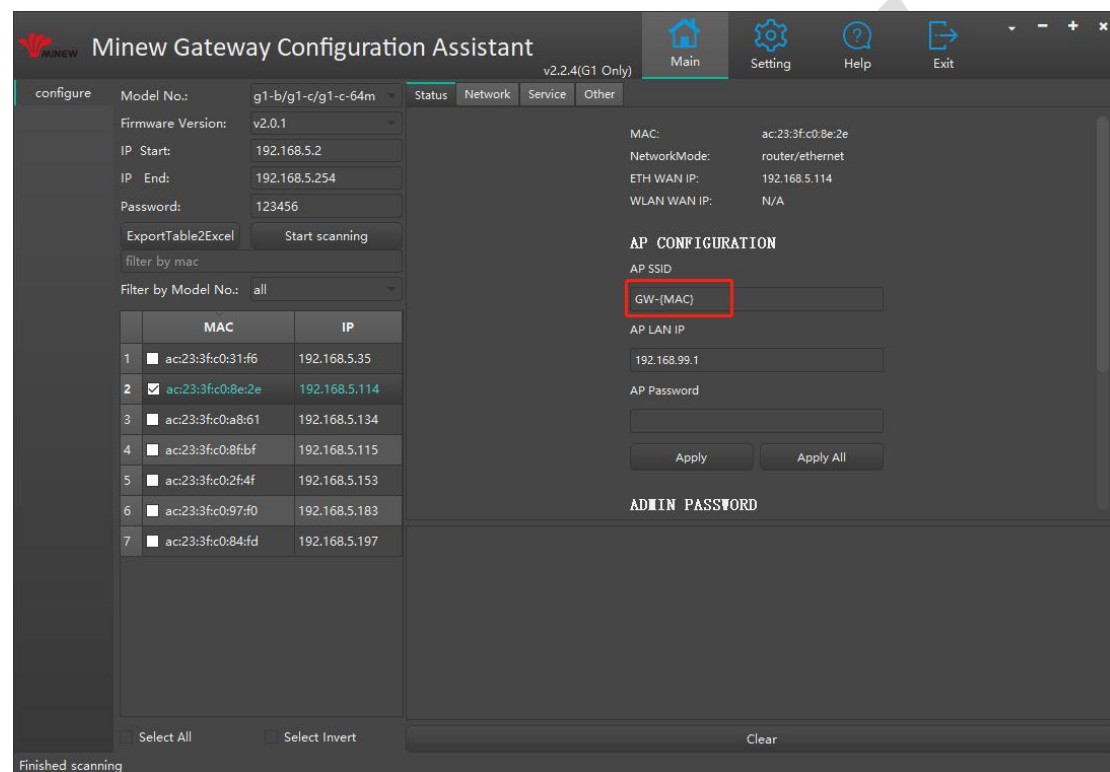

Mineew Gateway Configuration Assistant

v2.2.4(G1 Only)

Main

Setting

Help

Exit

configure

Model No.:

g1-b/g1-c/g1-c-64m

Status

Network

Service

Other

Firmware Version:

v2.0.1

IP Start:

192.168.5.2

IP End:

192.168.5.254

Password:

123456

ExportTable2Excel

Start scanning

filter by mac

Filter by Model No.:

all

	MAC	IP
1	☐ ac:23:3fc0:31:f6	192.168.5.35
2	☒ ac:23:3fc0:8e:2e	192.168.5.114
3	☐ ac:23:3fc0:a8:61	192.168.5.134
4	☐ ac:23:3fc0:8f:bf	192.168.5.115
5	☐ ac:23:3fc0:2f:4f	192.168.5.153
6	☐ ac:23:3fc0:97:f0	192.168.5.183
7	☐ ac:23:3fc0:84:fd	192.168.5.197

Select All

Select Invert

Service Access

MQTT

Upload Interval

1

Second

Url

tcp://iot.beaconyun.com:1883

Client ID

(mac)

Qos

0

Keep alive interval

10

Username

Clear

Finished scanning

Mineew Gateway Configuration Assistant

v2.2.4(G1 Only)

Main

Setting

Help

Exit

configure

Model No.:

g1-b/g1-c/g1-c-64m

Status

Network

Service

Other

Firmware Version:

v2.0.1

IP Start:

192.168.5.2

IP End:

192.168.5.254

Password:

123456

ExportTable2Excel

Start scanning

filter by mac

Filter by Model No.:

all

	MAC	IP
1	☐ ac:23:3fc0:31:f6	192.168.5.35
2	☒ ac:23:3fc0:8e:2e	192.168.5.114
3	☐ ac:23:3fc0:a8:61	192.168.5.134
4	☐ ac:23:3fc0:8f:bf	192.168.5.115
5	☐ ac:23:3fc0:2f:4f	192.168.5.153
6	☐ ac:23:3fc0:97:f0	192.168.5.183
7	☐ ac:23:3fc0:84:fd	192.168.5.197

Select All

Select Invert

0

Keep alive interval

10

Username

Password

Status Publish Topic

/gw/(mac)/status

Action Control Topic

/gw/(mac)/action

Action Control Response Topic

/gw/(mac)/action/response

BLE Data Format

Json


Json

Clear

Finished scanning

Q: Why does the IP address in the parameter on the Network page have curly braces, such as {xx.xx.xx.xx}?

The principle of the previous problem is the same. When configuring static IP addresses, the IP addresses on the same LAN cannot be the same. To prevent IP address conflict, the configuration Assistant increments the IP addresses in sequence during batch configuration. For example, in the position shown below:

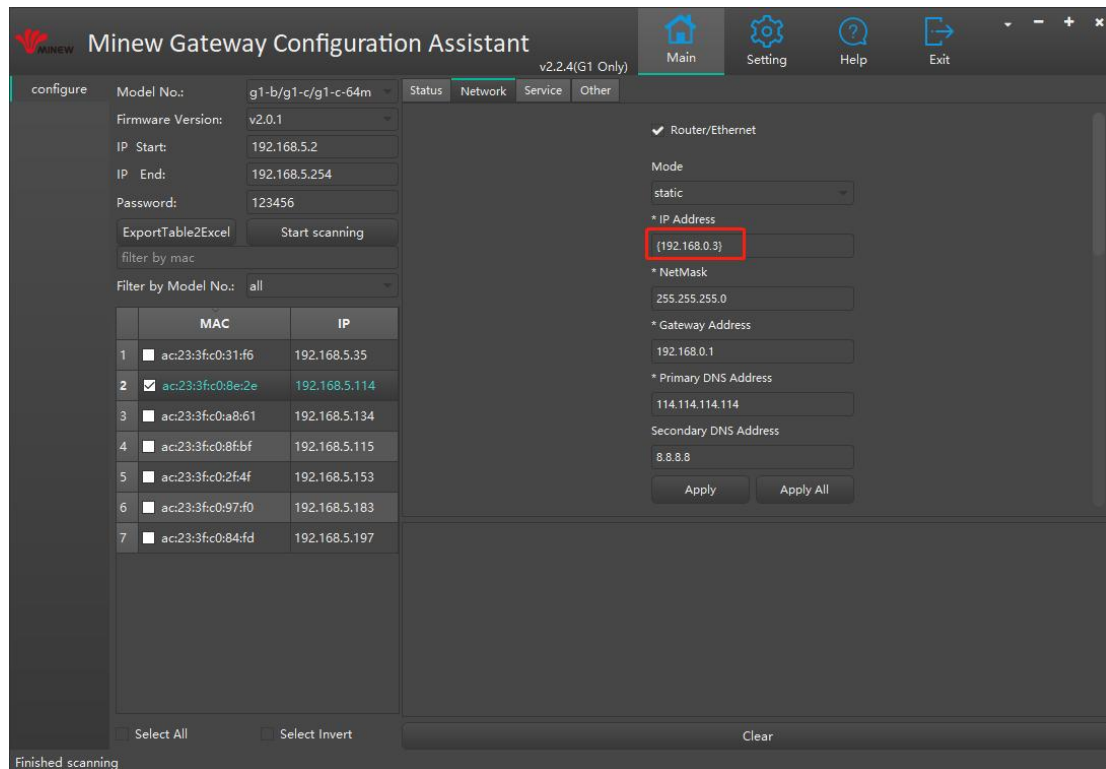

Q:The current firmware version of the gateway is v2.0.1. How do I upgrade the firmware to v4.0.6?


1. In first, scan for the gateways that need to be upgraded on the LAN according to the preceding method.

2. Then switch to the other page, select LAN Upgrade, and select NO to save the configuration

The URL of the firmware is set to:


http://iot.beaconyun.com/download/thingoo/g1/g1-c-advanced/g1-c-advanced_wifi_v4.0.6.bin

3. Finally, select the gateway to be upgraded and click **Apply**. As shown in the picture below:

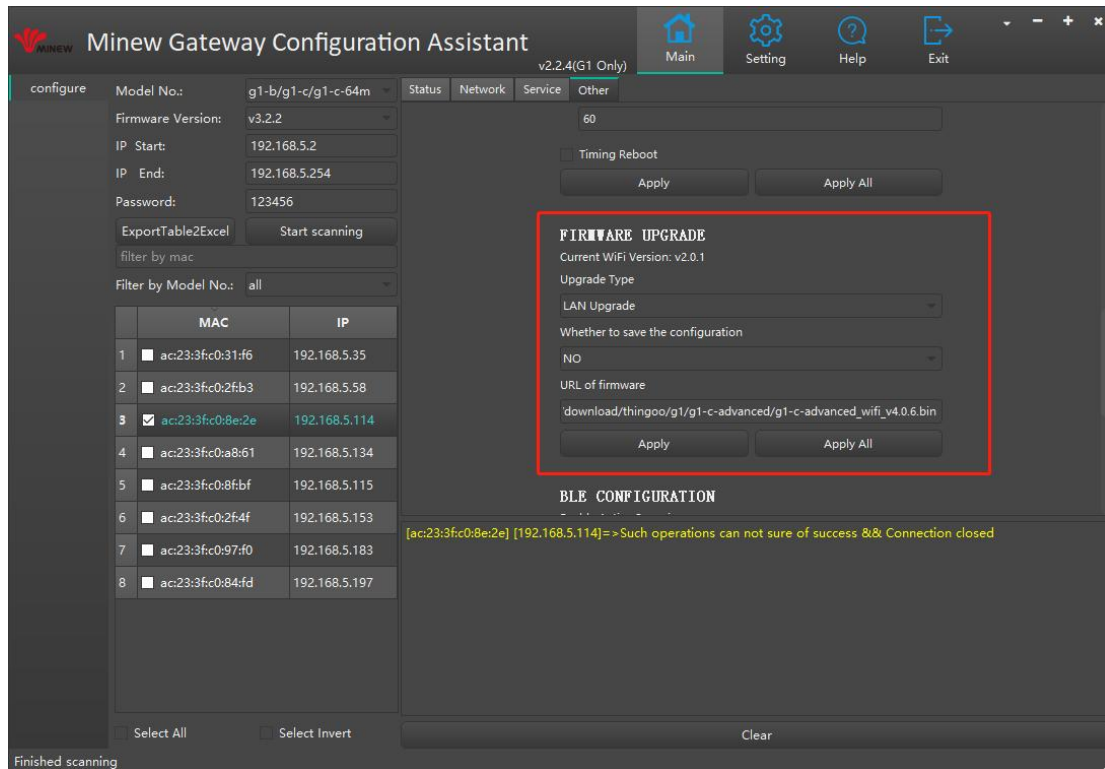

Q:The current firmware version of the gateway is v4.0.4. How can I upgrade the firmware to v4.0.6?

1. In first, scan for the gateways that need to be upgraded on the LAN according to the preceding method.
2. Then switch to the other page, select the Upgrade mode **OTA Upgrade**, and select NO to save the configuration.
3. Finally, select the gateway to be upgraded and click **Apply**. As shown in the picture below:

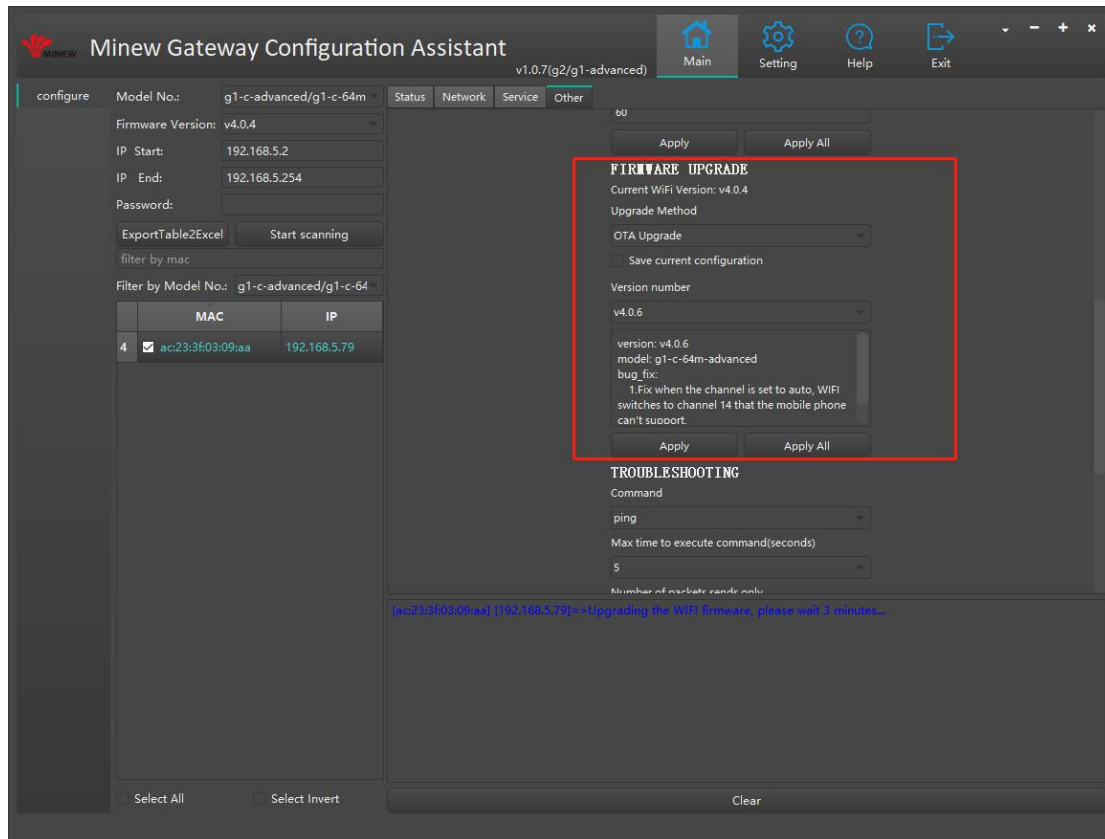

Q: There are two configuration assistants, are they all the same operation?

Currently, there are two batch configuration assistants: one is for v3.x.x and earlier firmware versions, and the name of the configuration assistant is [config-tool-v2.2.4.exe](#).

The other is for v4.x.x firmware, configure the helper name [config-tool-advanced_v1.0.7.exe](#)

Both configuration assistants are used in the same way.

MQTT version

Note: Unlike the local configuration assistant (Advanced version), the gateway must use the MQTT server to use the remote configuration assistant (MQTT version).

1 A prerequisite for batch configuration.

1.1 The gateway is currently connected to the MQTT server.


1.2 The default “Action Control Topic” and “Control Response Topic” used on the gateway configuration.

1.3 The Batch Configuration Assistant supports the following models and versions.


Model	version
g2-a-peach	V1.0.7 or later
g1-c-advanced/g1-c-64m-advanced	V4.0.7 or later
g1-e-cherry/g1-e-cherry-64m	V3.2.0 or later
g1-e-grapes	V3.2.2 or later
g1-f-melon	V3.2.2 or later

2 Batch configuration of the implementation process.

Step 1: Configure the MQTT server on the setting page, as shown below:

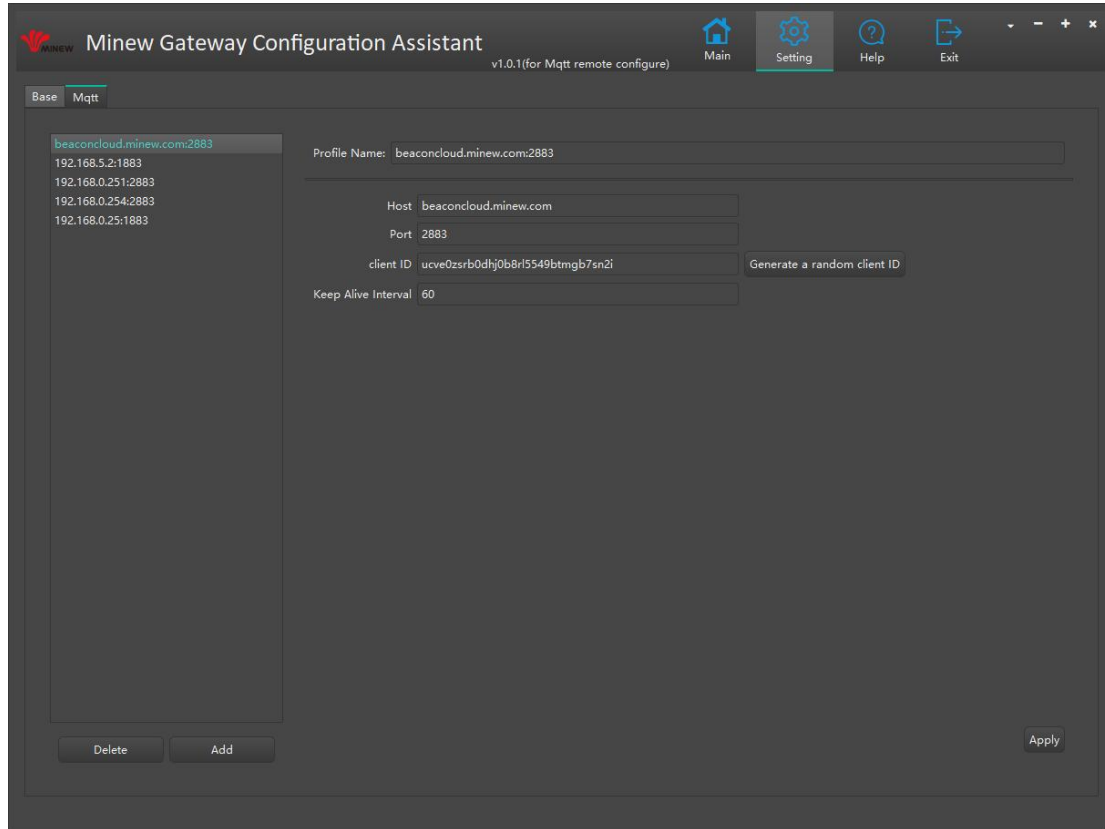


Step 2 : Select MQTT Server on the Main page, click **Connect** to connect server, then click **Subscribe** to subscribe topic as shown below:

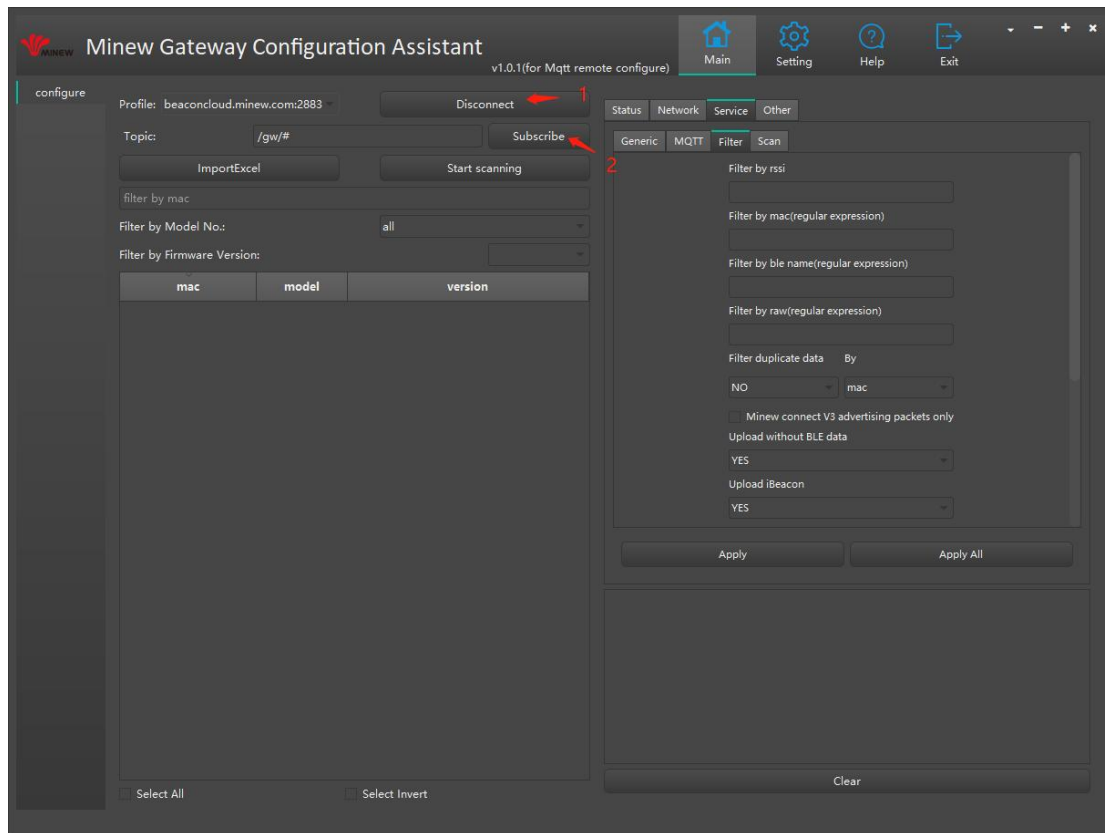


Step 3: Click **ImportExcel** to import the table. The mac address of the gateway is recorded on the table, all mac addresses are in lowercase. The table format is as follows:

[illegible]

Step 4: Click **Start scanning**, and the assistant will scan out the online gateway through MQTT. As shown in the picture below:

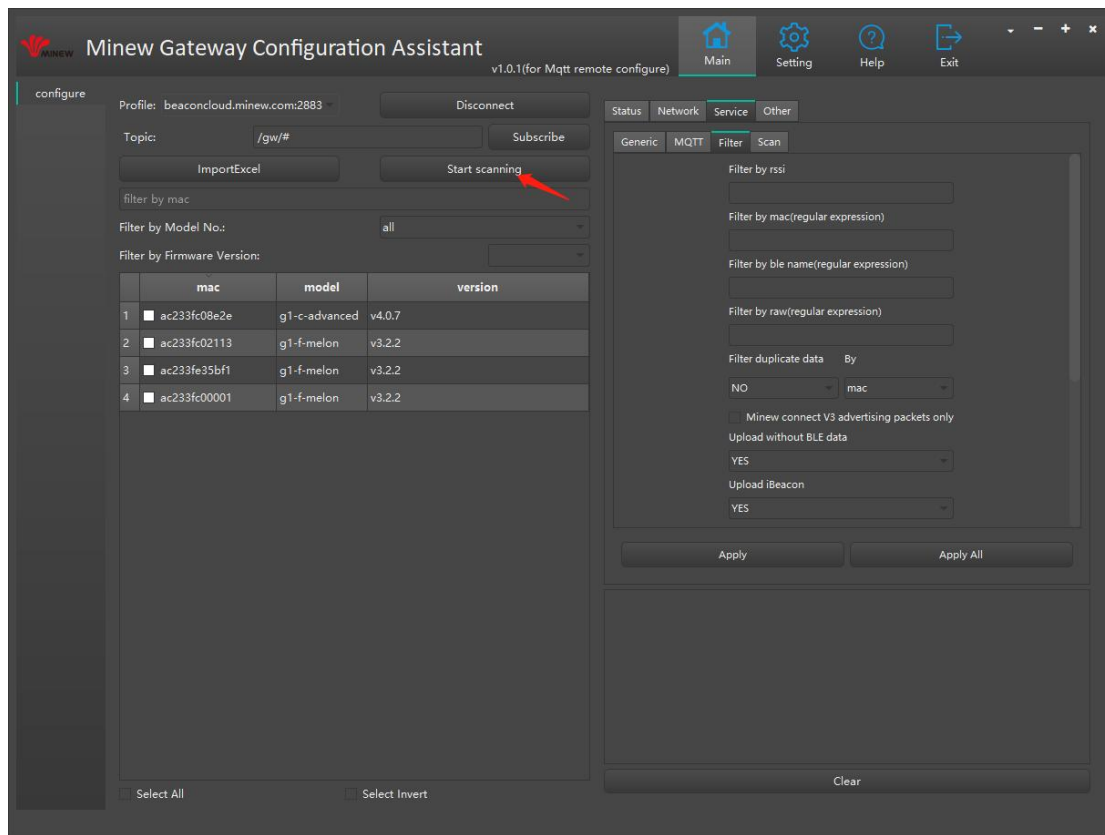


Step 5: Select the gateway entry in the left list, double-click the mouse, and the assistant will get the current configuration of the gateway. As shown in the picture below:

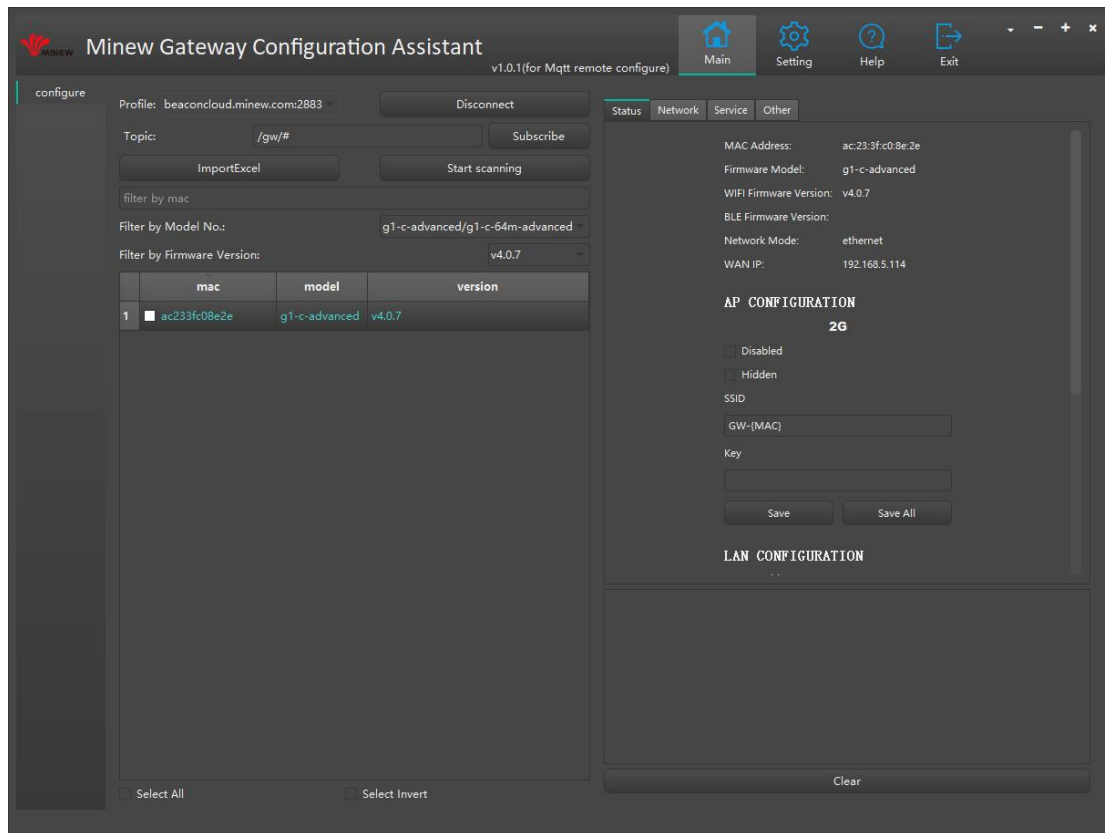


Step 6: Before clicking **Apply** and **Apply All**, be sure to select the gateway model and firmware version. Otherwise, the configured gateway may be faulty due to compatibility issues before the version, even if the record shows success. Note this when configuring parameters in service. Parameters in Other parts do not change very much between versions. You can try to batch upgrade to the latest version and then use this assistant for batch configuration.

Step 7: Click **Apply** and **Apply All** to complete the configuration. For example, to set the time zone of a gateway, you can configure a gateway, as shown in the following figure:

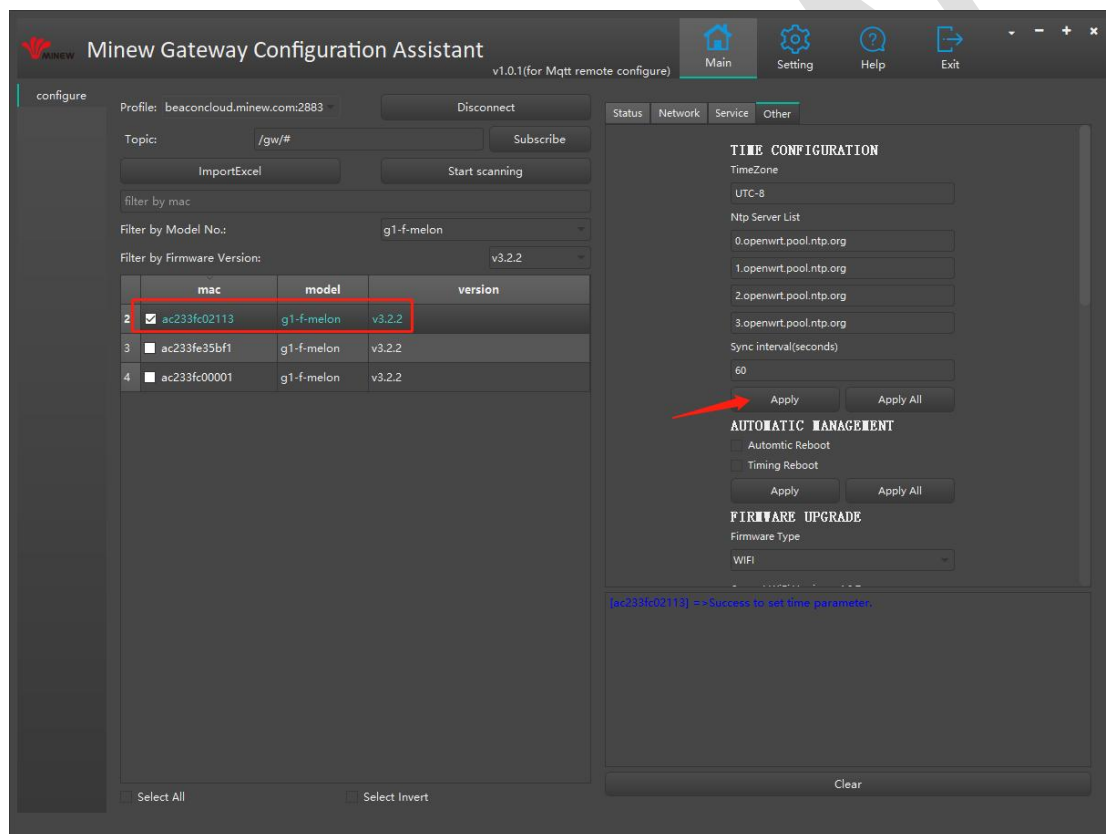

You can also configure multiple gateways, as shown in the following figure:

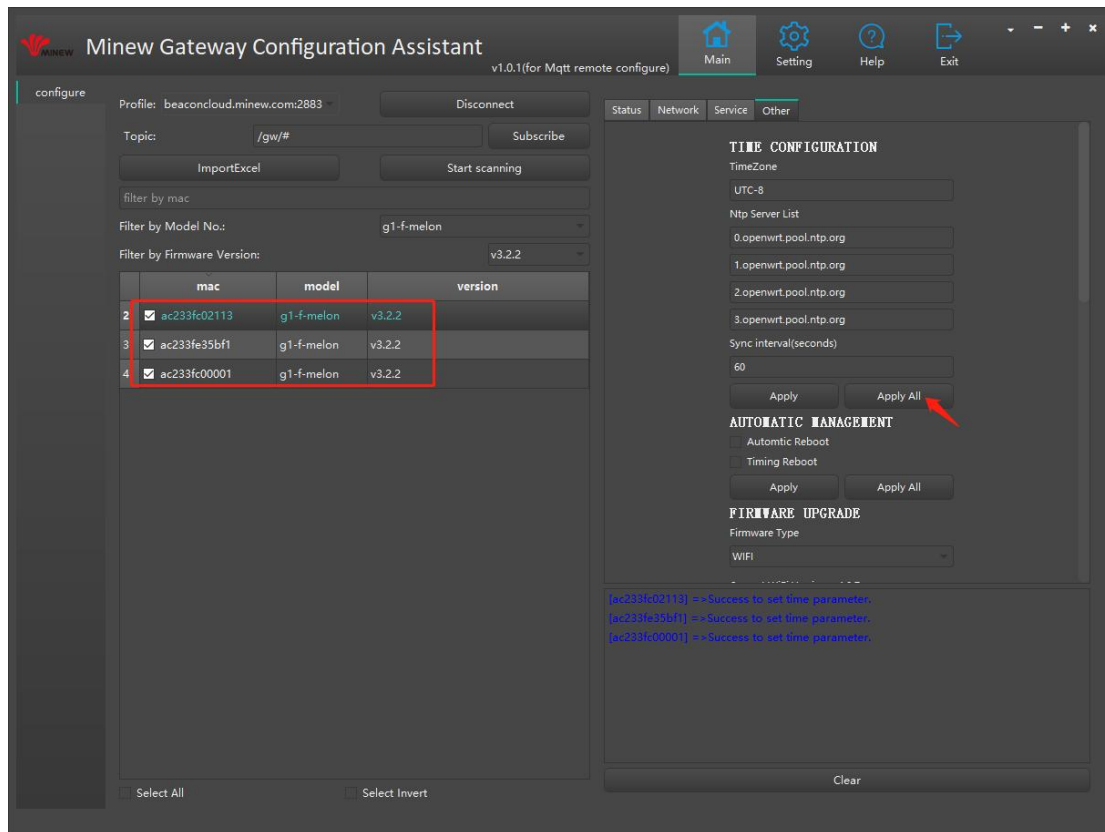

Q: The difference between apply and apply all:

Apply means that the parameter is configured only to the destination gateway of the mac address where the current cursor is located.

Apply all is to configure parameters to all the selected gateways, that is, batch configuration.

Q: Why do {mac} and {MAC} appear in parameters?

If {mac} or {MAC} appears in the parameter, then the parameter is different in each gateway. For example, the default value of the AP SSID parameter in Status is GW-XXXXXXXXXXXX, and XXXXXXXXXXXX indicates the uppercase format of the gateway MAC address. So in order to implement batch configuration, the assistant will have mac address resolution displayed as {mac} (the lowercase form of the mac address) or {MAC} (the MAC address in uppercase), if you click **Apply All**, the assistant will parse {mac} or {MAC} into the corresponding gateway mac address, so that the configured parameters will be different for each gateway based on the mac address. For example, in the position shown below:

Minew Gateway Configuration Assistant

v1.0.1(for Mqtt remote configure)

Main

Setting

Help

Exit

configure

Profile: beaconcloud.minew.com:2883

Disconnect

Topic: /gw/#

Subscribe

ImportExcel

Start scanning

filter by mac

Filter by Model No.: g1-f-melon

Filter by Firmware Version: v3.2.2

	mac	model	version
2	☒ ac233fc02113	g1-f-melon	v3.2.2
3	☒ ac233fe35bf1	g1-f-melon	v3.2.2
4	☒ ac233fc00001	g1-f-melon	v3.2.2

Select All

Select Invert

Status

Network

Service

Other

NETWORK CONFIGURE

WAN IP: 192.168.43.100

AP CONFIGURATION

2G

☐ Disabled

☐ Hidden

SSID

GW-(MAC)

Key

Save

Save All

LAN CONFIGURATION

LAN IP Address

192.168.99.1

Save

Save All

ADMIN PASSWORD

Clear

Minew Gateway Configuration Assistant

v1.0.1(for Mqtt remote configure)

Main

Setting

Help

Exit

configure

Profile: beaconcloud.minew.com:2883

Disconnect

Topic: /gw/#

Subscribe

ImportExcel

Start scanning

filter by mac

Filter by Model No.: g1-f-melon

Filter by Firmware Version: v3.2.2

	mac	model	version
2	☒ ac233fc02113	g1-f-melon	v3.2.2
3	☒ ac233fe35bf1	g1-f-melon	v3.2.2
4	☒ ac233fc00001	g1-f-melon	v3.2.2

Select All

Select Invert

Status

Network

Service

Other

Generic

MQTT

Filter

Scan

Url

tcp:// ncloud.minew.com:2883

Proxy

socks5h://

Client ID

(mac)

Qos

0

Keep alive interval

10

Username


Password

Static Public Topic

Apply

Apply All

Clear

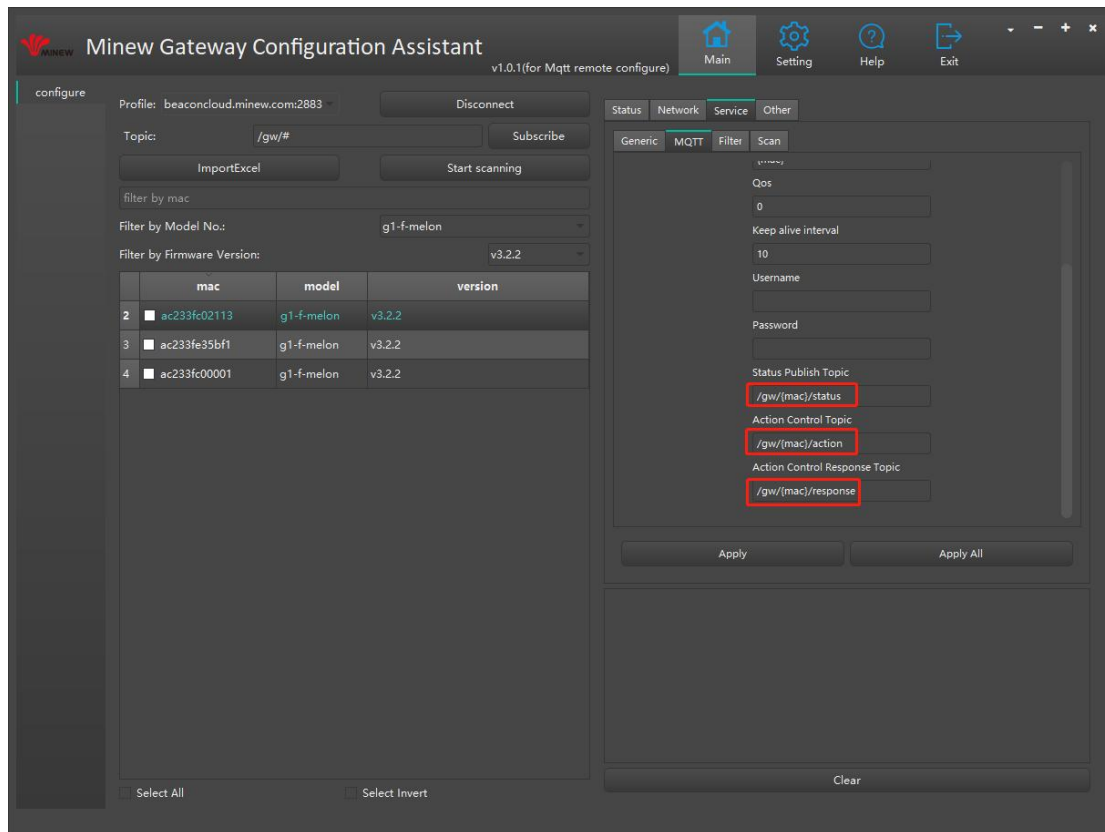

Q: Why does the IP address in the parameter on the Network page have curly braces, such as {xx.xx.xx.xx}?

The principle of the previous problem is the same. When configuring static IP addresses, the IP addresses on the same LAN cannot be the same. To prevent IP address conflict, the configuration assistant increments the IP addresses in sequence during batch configuration.

For example, in the position shown below:

