
QUICK REFERENCE GUIDE

virtuoso

Mattress Replacement System



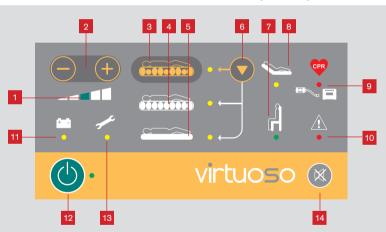

- 1. Comfort Adjust Indicator
- 2. Comfort Adjustment Control
- 3. Alternating Mode Indicator
- 4. Static Mode Indicator
- 5. Evaluation Mode Indicator
- 6. Mode Select Control
- 7. Seating Mode Indicator

- 8. Backrest Raise Mode Indicator
- 9. CPR or Air Disconnected Mode Indicator
- 10. System Fault / Warning Mode Indicator
- 11. Battery Condition Monitoring Indicator
- 12. "Go" Button Control
- 13. Service Mode Indicator
- 14. Audio Alarm Mute Control





CONNECTING TO SCU





MODE OF OPERATION

When SCU is turned on panel controls will lock out if not used for 3 minutes. To activate it again, press "Go" Button Control.

LINET spol. s r.o., Želevčice 5, 274 01 Slaný, Czech Republic tel.: +420 312 576 111, fax: +420 312 522 668, e-mail: info@linet.cz, www.linet.com

QUICK REFERENCE GUIDE

virtuoso


Mattress Replacement System






INSTALLATION

For the comfort and safety of the Patient do not put them onto the Mattress until you are sure that the Mattress is properly secured and the system indicates that it is fully inflated.









- 1. Lay the mattress on the bedframe
- 2. Fix the mattress using the security straps to the moving parts of the Patient Surface
- 3. Insert the air connector (NOT in transport mode) into the SCU
- 4. Use the cable management system to prevent a trip hazard
- 5. Turn the main switch on

CPR MODE

Press the CPR red button (1) and pull the Air Pipe Connector (2) away from the SCU connector Socket. The Mattress will immediately start to deflate.



TRANSPORT

- Release the Umbilical Air Connector from the SCU Connector Socket (pict.1)
- Allign the red arrow and the black circle symbols at the end of the umbilical connector to prevent air loss. (pict.2)



Note: All cells will remain inflated whilst moving the patient on the bed frame. The patient will not be receiving active pressure area care.

