


E-006 PLC OUTPUTS

Conv_Simple / CV-101 (garage conveyor) — O-00..O-06 · pilots, contactor coil, button lamp · GS10 control = Modbus (E-007), NO GS10 DI wiring

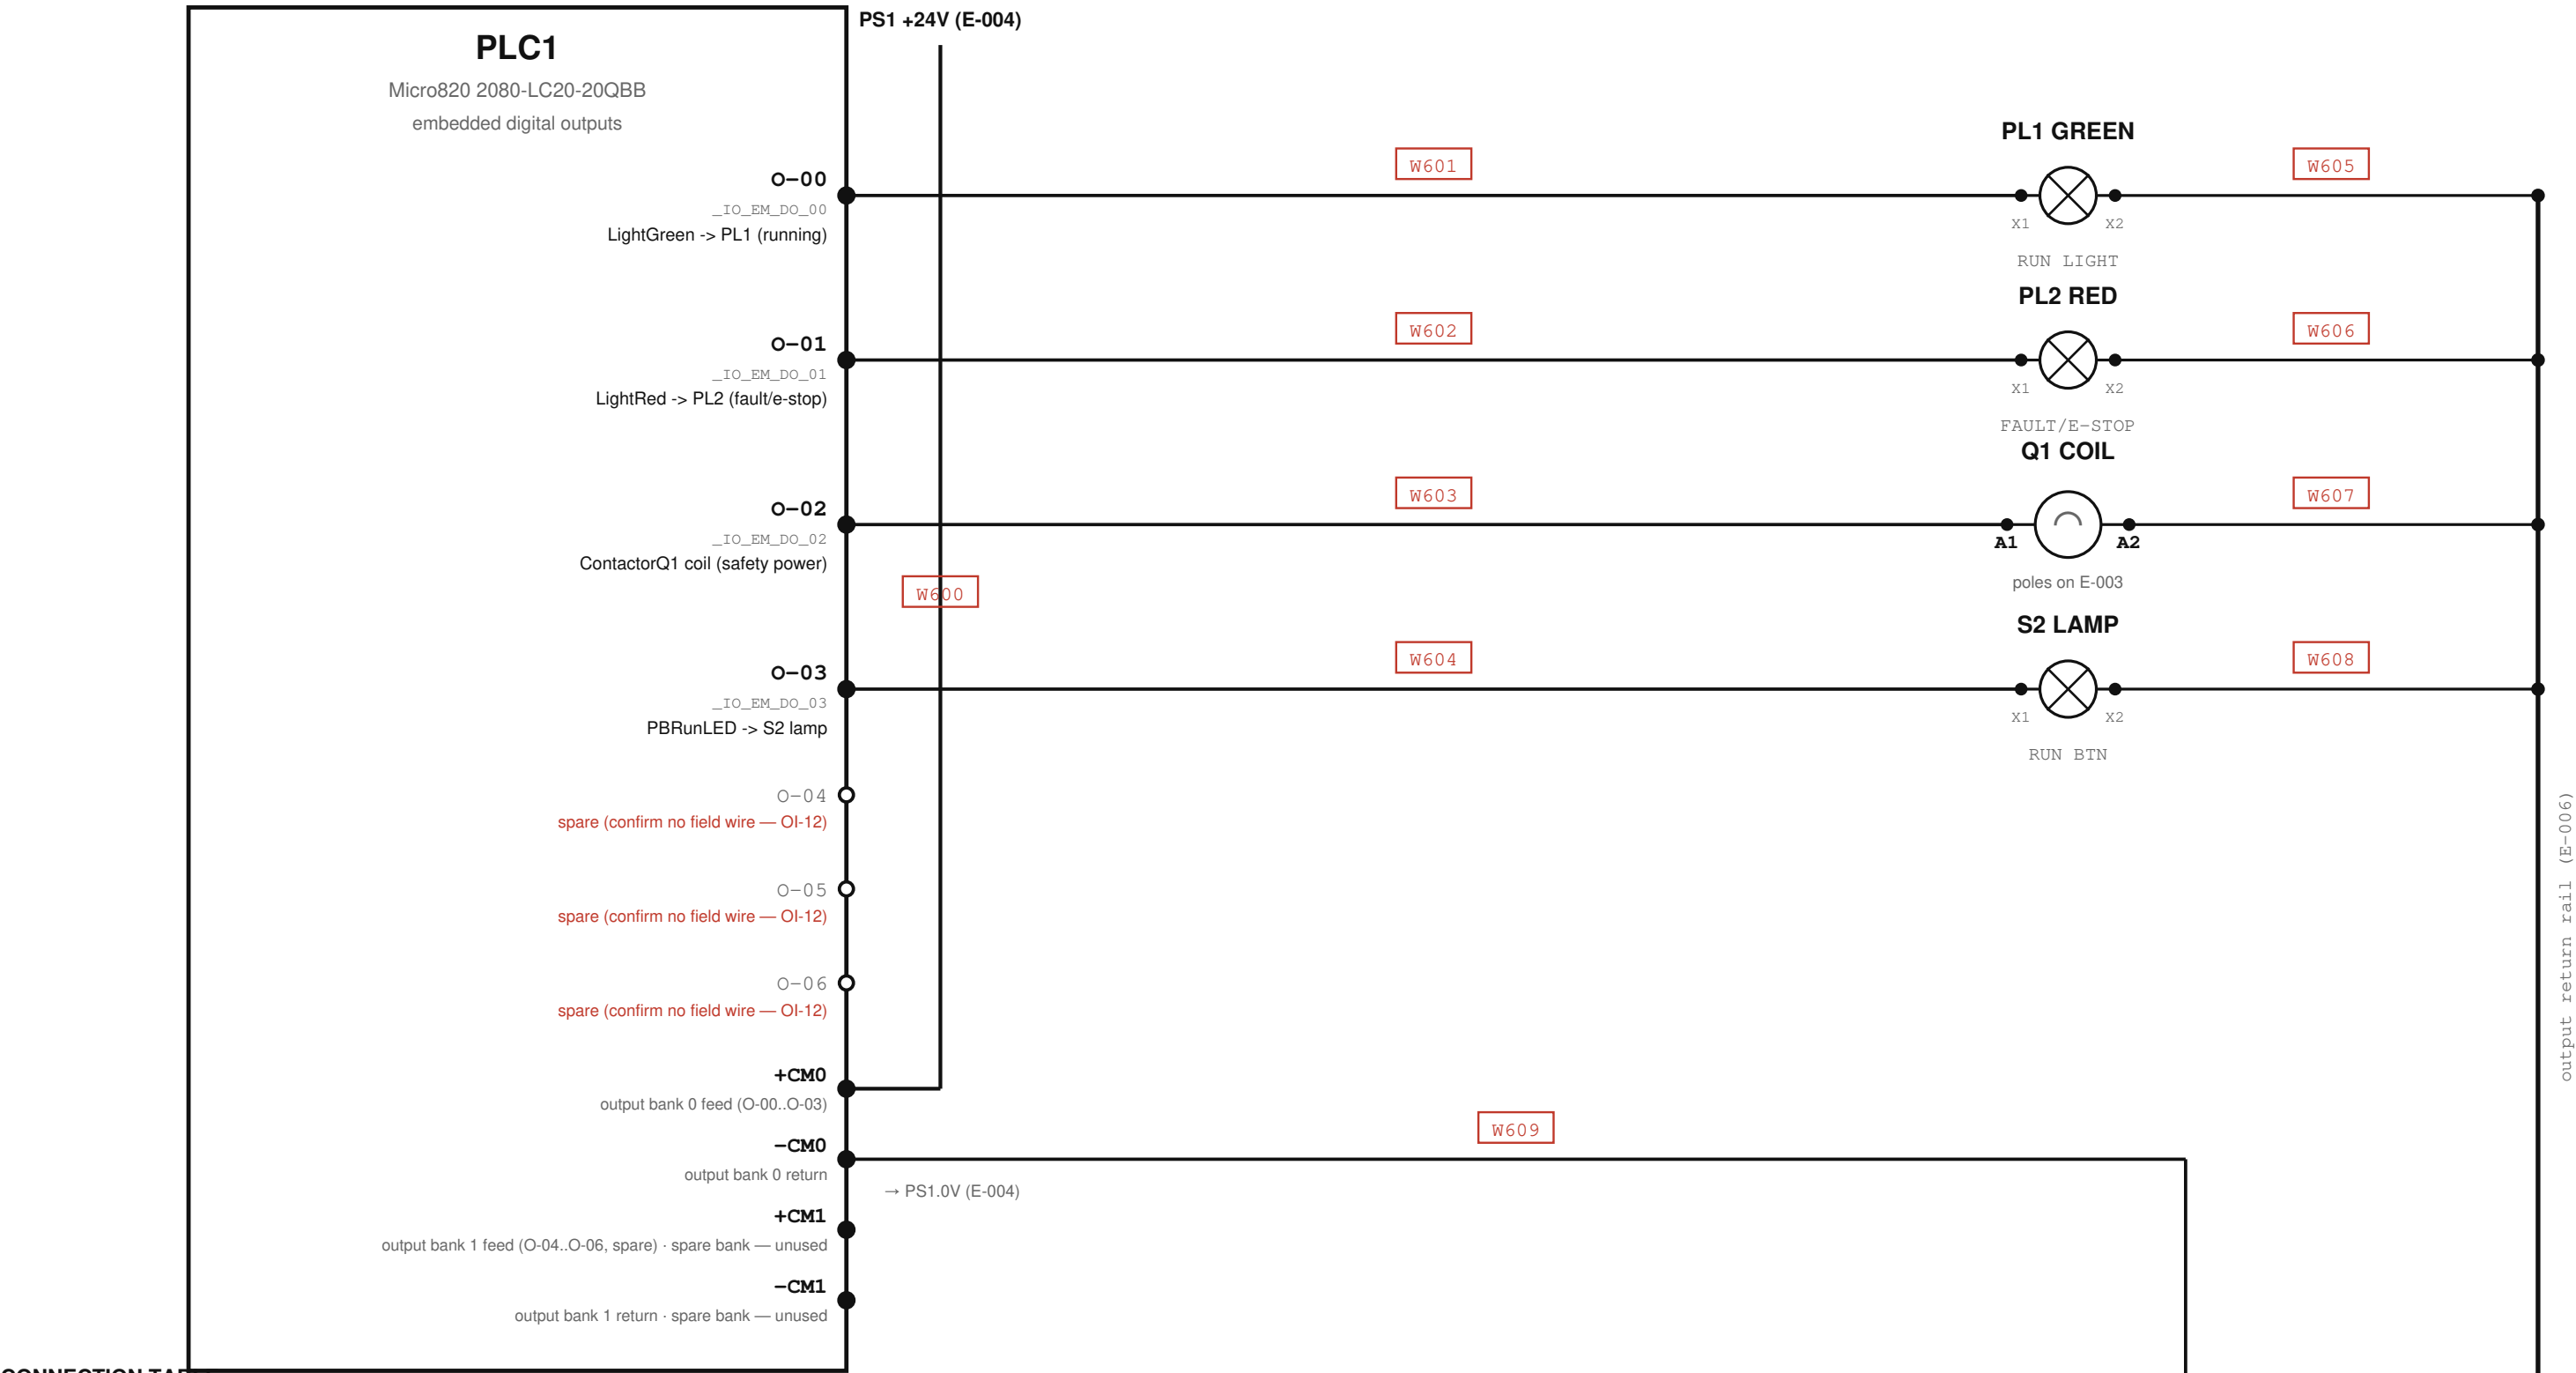

CONNECTION TABLE

Wire	From	To	Signal	Type	Status	Notes
W600	PS1.+24V	PLC1.+CM0	output bank 0 feed	power_24vdc	field_verify	
W601	PLC1.O-00	PL1.X1	LightGreen (run light)	control_output	field_verify	
W602	PLC1.O-01	PL2.X1	LightRed (fault/e-stop light)	control_output	field_verify	
W603	PLC1.O-02	Q1.A1	ContactorQ1 coil (safety power)	control_output	field_verify	
W604	PLC1.O-03	S2.X1	PBRunLED (run button lamp)	control_output	field_verify	
W605	PL1.X2	output return rail (E-006)	run light return	control_return	field_verify	
W606	PL2.X2	output return rail (E-006)	fault light return	control_return	field_verify	
W607	Q1.A2	output return rail (E-006)	contactor coil return	control_return	field_verify	
W608	S2.X2	output return rail (E-006)	PB lamp return	control_return	field_verify	
W609	PLC1.-CM0	PS1.0V	output bank 0 return	power_0v	field_verify	

Hardwired fallback documented in MIRA-WI-001 v3 §3
Fig 1 (DO_03..DO_07 → GS10 DI1..DI5 + DCM) — NOT ACTIVE and NOT drawn: P02.0x at factory default per the 2026-05-20 parameter export; DO_07 does not exist on the 2080-LC20-20QBB (O-00..O-06); DO_03 collides with PBRunLED in the live I/O map. Bench presence of any such wiring = FIELD VERIFY (OI-18).

MODBUS CROSS-REF (run/dir/freq):

Run/dir/freq commands reach VFD1 over RS-485 (E-007): 0x2000 cmd (STOP=1, FWD+RUN=18, REV+RUN=34), 0x2001 freq. P00.20=1, P00.21=2 (RS-485) verified by 2026-05-20 parameter export.

SAFETY NOTE:

Monitored outputs are NOT a safety function.
E-stop must remove power per NFPA 79.
Q1 drop path is the power-removal; verify it works.

FIELD VERIFY — dashed (no as-built; O-00/O-01/O-03 from CCW v4.0; O-02 corroborated)

SOURCES:

- CCW_VARIABLES_v4.0.txt
- Prog_init_ConvSimple_v2.1.st
- MIRA_PLC_WorkInstruction_v3.pdf
- GS10_actual_parameters_5.20.26.xlsx
- GS10_UM.txt

PLC OUTPUTS

Conv_Simple / CV-101 (garage conveyor)

MIRA / FactoryLM

output map CCW v4.0 + live Prog_init; O-02 do-not-reuse

SHEET
E-006

REV A
2026-07-10

6 of 9