

[illegible]

5mA each LEDs


3V3
POWER1 LED
R36 270R
GND

LED_OK
OK1 LED
R38 270R
GND

LED_WARNING
ERROR1 LED
R37 270R
GND

Rev:
Id: 1/5

Fuel level nad temperature control

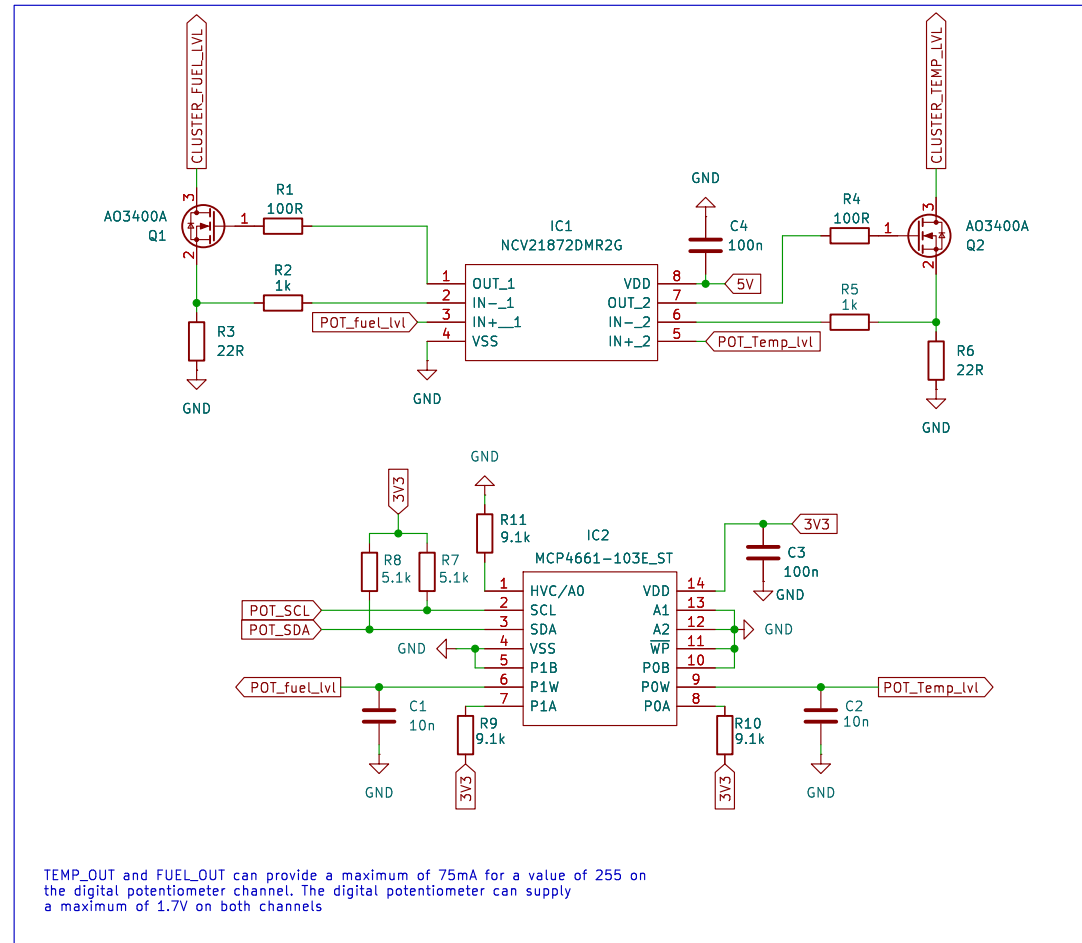

Sheet: /fuel level and engine temperature control/
File: fuel_level_and_temperature.kicad_sch

Title:

Size: A4

Date:

KiCad E.D.A. 9.0.7


Rev:

Id: 2/5


The diagram shows the MCP2562-E SN CAN transceiver (IC5) connected to a 5V supply and a 3V3 supply. The 5V supply is connected to pins 1 (TXD), 2 (VSS), 3 (VDD), and 4 (RXD). The 3V3 supply is connected to pins 5 (VIO), 6 (CANL), 7 (CANH), and 8 (STBY). A 120R resistor (R16) is connected between pins 6 and 7. The CAN bus lines are labeled CAN_TX, CAN_RX, CLUSTER_CAN_H, and CLUSTER_CAN_L. Capacitors C7 (10uF) and C8 (100nF) are connected to the 5V supply, and capacitor C9 (100nF) is connected to the 3V3 supply.

Title:		
Size: A4	Date:	Rev:
KiCad E.D.A. 9.0.7		Id: 3/5


SPEED control

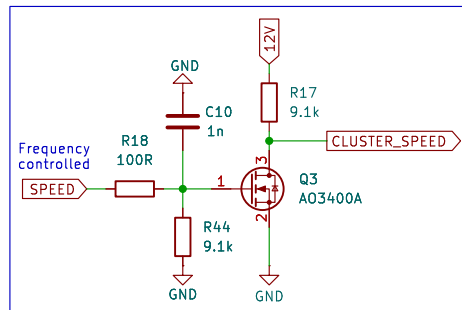


BREAK PADS ERROR control

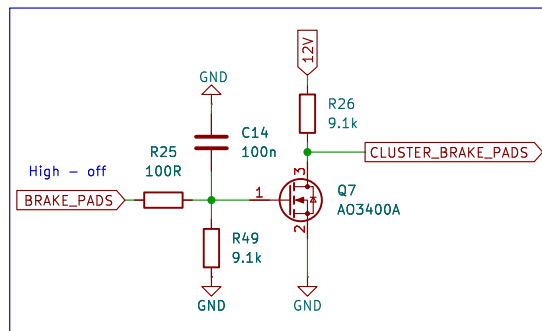


ABS ERROR control

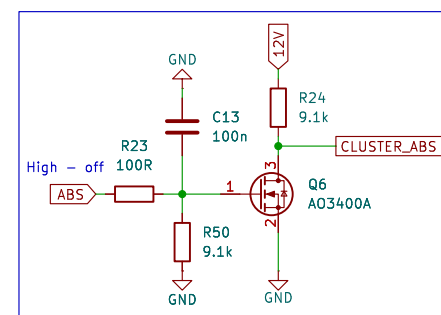


AIR BAG control

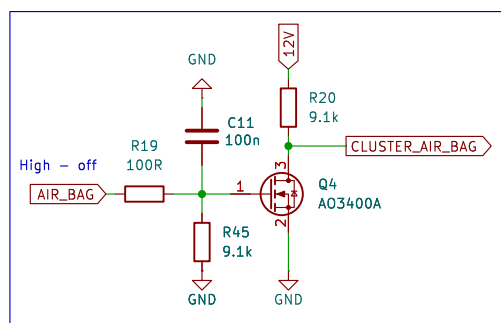


WIPER FLUID ERROR control

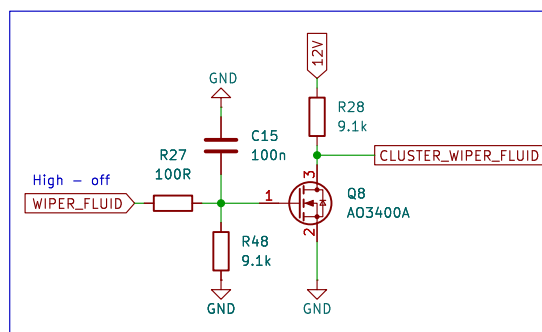


EXTRA PIN

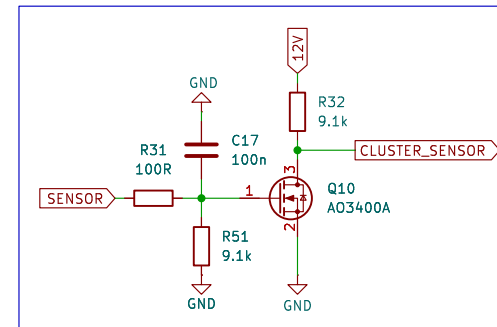


BREAKS ERROR control

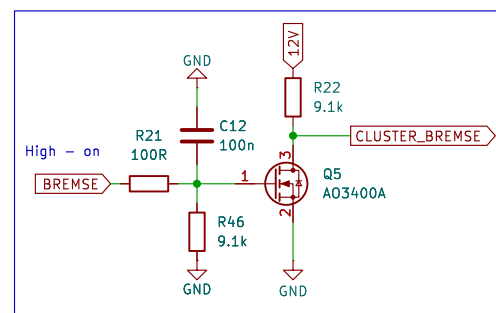

COOLANT ERROR control

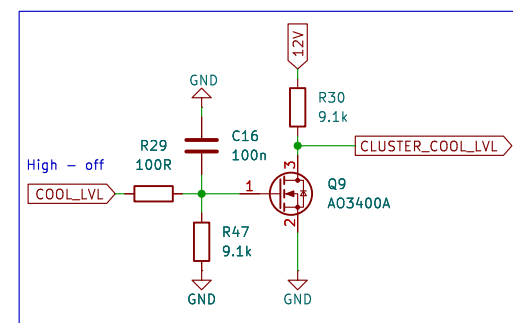

COOLANT ERROR control

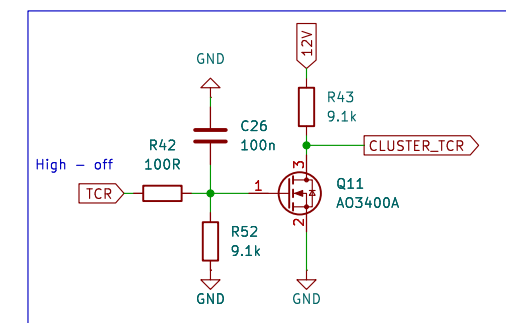

Sheet: /Speed and tell-tales/
File: Speed_and_tell-tales.kicad_sch


Title:

Size: A4
KiCad E.D.A. 9.0.7


Date:

Rev:
Id: 4/5


Cluster Power

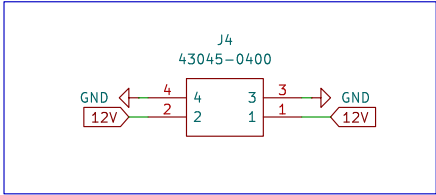


12V DC Input

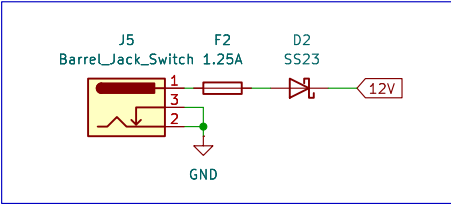

Cluster data lines

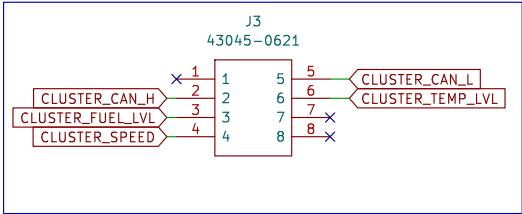

Cluster Warning-Lights

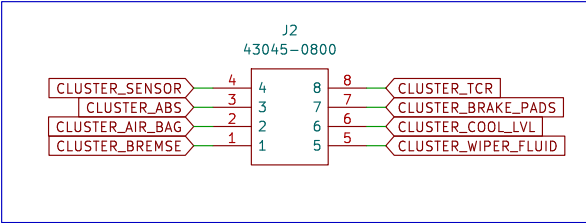

Sheet: /Cluster plugs/
File: cluster_plugs.kicad_sch

Title:

Size: A4

Date:

KiCad E.D.A. 9.0.7

Rev:

Id: 5/5