Introduction

- Minimum System Requirements
- Product Specifications
- Installation

Minimum System Requirements

The iXpand™ Drive App is compatible with the following Windows®, macOS, and iOS operating systems.

Table 1-1. Operating System Compatibility

Windows	macOS / OS X	iOS
Windows 10	OS X 10.8 Mountain Lion	iOS 10
Windows 8.1+	OS X 10.9 Mavericks	iOS 11
Windows 7	OS X 10.10 Yosemite	iOS 12
Windows Vista	OS X 10.11 El Capitan	
	macOS 10.12 - Sierra	
	macOS 10.13 - High Sierra	
	macOS 10.14 - Mojave	

For more information and additional compatibility list, visit URL: sandisk.com/support/ixpandcompatibility

Product Specifications

The iXpand Drive App supports the following formats for photos and videos. Additionally, the music feature combines stored music files on the iXpand Flash Drive along with your iTunes® Library for easy access.

Table 1-2. Supported Photo, Video, and Music Formats

Photo	BMP, TIF, TIFF, JPG, PNG, GIF, XBM, ICO, TGA
Video	WMV, AVI, MKV, MP4, MOV, FLV, MPG, RMVB, M4V, TS
Music	MP3, AIF, WAV, AIFF, M4A, WMA, AAC, OGG, FLAC

Installation

To install the iXpand Drive App, continue with the followings steps:

1. Connect the iPhone or iPad device to the Internet.
2. On the iPhone or iPad home screen, find and tap on the **App Store**.
3. Located at the bottom of the screen, tap on **Search**.
4. In the search field, type **iXpand Drive** and tap **Search**.
5. Locate the SanDisk iXpand Drive app icon and tap on **Install**.

Figure 1-1. iXpand Drive App Icon

Initial Setup Requirements

Initial setup requires a mobile device with a compatible operating system and Internet access.

Note, an iOS device and with iCloud Photo Library Sync enabled may take longer than usual during the initial backup process. To avoid additional data charges, upload data over a Wi-Fi® connection.

To disable cellular data use from the SanDisk iXpand Drive app, proceed with the following steps:

1. On the mobile device, tap the **Settings** icon.
2. Tap on **Cellular**.
3. Locate **iXpand Flash Drive** app.
4. Toggle switch to **Disable**.

Additionally, backup times can be shortened when disabling iCloud Sync from the iPhone and re-enabling iCloud Sync after a successful backup.

To disable iCloud Sync, proceed with the following steps:

1. On the mobile device, tap the **Settings** icon.
2. Tap on **Apple ID, iCloud, iTunes & App Store** menu.
3. Tap on **iCloud**.
4. Tap on the **Photos** menu and toggle iCloud Photo Library to **Off**.

Using the iXpand™ Drive Application

The perfect companion to any iPhone or iPad, the SanDisk iXpand™ Drive App makes it easy to manage photos, videos, and music directly from various SanDisk iXpand flash drives.

The application also works together with password-protection software to help keep your sensitive files secure across all devices. Take all the photos and videos you want - with the iXpand Drive App you're always ready to take more.

App Overview

Figure 2-1. Application Overview

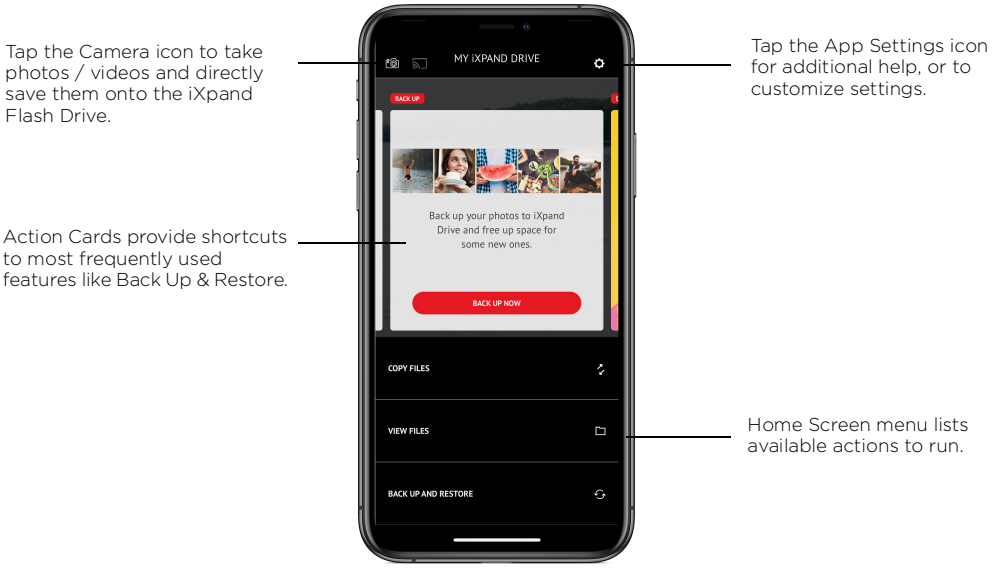

The iXpand Drive App offers simple navigation through the home screen, allowing quick access to main tasks and features, such as:

- Copy Files
- View Files
- Back Up and Restore Files

Opening the iXpand Drive App

To open the iXpand Drive App, use the following steps:

1. Tap on the **SanDisk iXpand Drive App** icon.
2. Accept the SanDisk License Agreement.

Note: This step is only applicable when the SanDisk iXpand Drive App is first used. Additionally, the SanDisk License Agreement must be accepted before using the SanDisk iXpand Drive Application.