

Zebra GX420t How To Fix in SMRT (MOST COMMON FIX FOR ISSUES)

NOTE: The light must be GREEN AT ALL TIMES during this or else it will not be sent correctly. Once you install the driver follow these steps. (the File should be located within the Zebra Driver Folder) if not, you can do the Send Command end press enter after each command:

N Q10,0

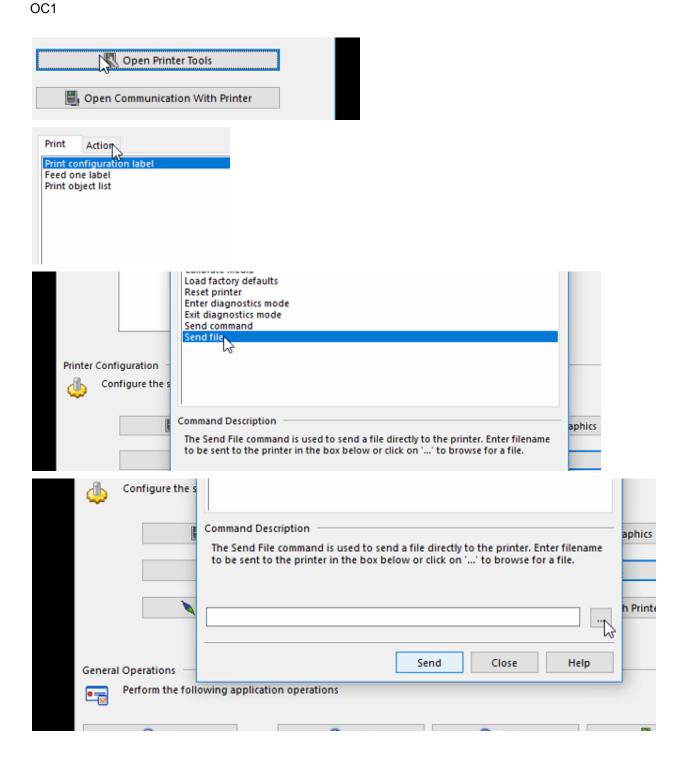

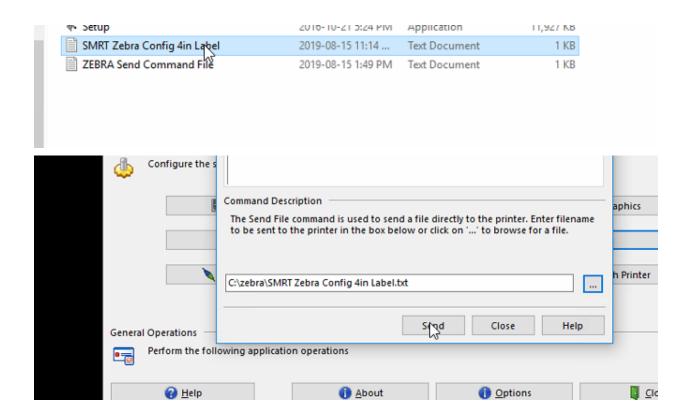

IN SMRT

Printer Settings> Select the Zebra then



Click on Continuous, and Reset for Continuous a couple times and then Test Print and test print a Bag Tag Print with a Customer to ensure it is printing properly.