

Mixware Hyper S firmware update process

- 1. Open any browser, go to https://github.com/Mixwarebot/Hyper-S.
 - We recommend using Google Explorer and Microsoft Edge.
- 2. You can view Hyper-S Cura configuration file, description document, firmware and other information in the browser.


You can download the firmware as follows:

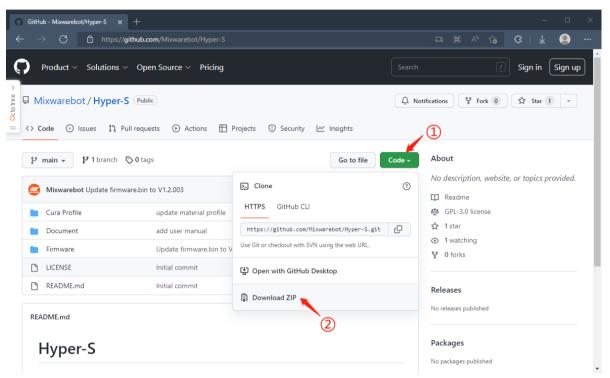


- 2.1. Click "Code" to expand the download mode;
- 2.2. Click Download ZIP to download and pay attention to the saved directory information.
- 3. Decompress the Hyper-S-main.zip file that you just downloaded.

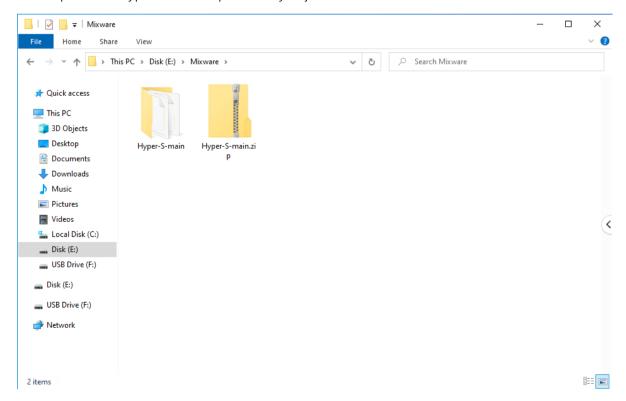

Open the Firmware directory in the Hyper-S-main directory.
"assets" is the Hyper-S UI resource file, and "firmware.bin" is the Hyper-S firmware.
Bootloader is the Bootloader firmware of Hyper-S.

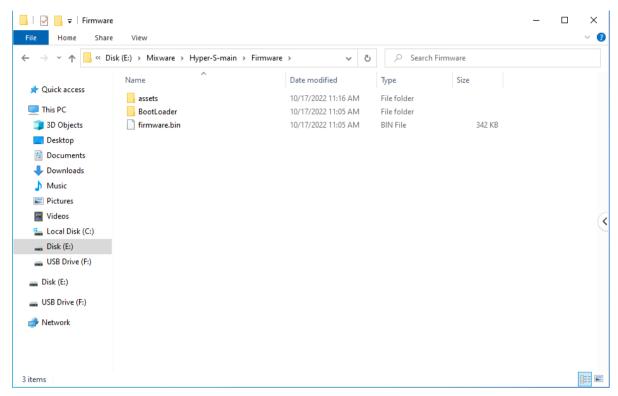

- 5. Insert the U disk to be used to update the firmware into the computer.
- 6. Copy the contents of the "Firmware" directory to the root directory of the U disk. The effect of successful replication is as follows:

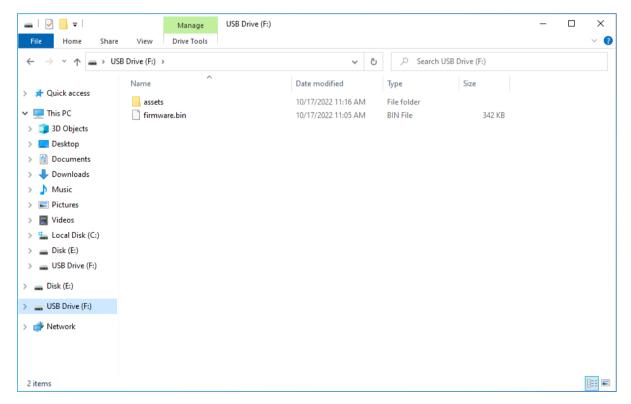

In general, you only need to copy "assets" and "firmware.bin" to update the firmware of Hyper-S. For the "bootloader" update that requires additional professional electronic equipment, it is not explained here.

7. Eject the prepared U disk, so that you can better use the U disk



- 8. Insert the USB flash drive into the right side of the printer screen, then start the printer power and wait for the printer to execute the update program:
 - 8.1. Firmware Update diagram:



8.2. UI resource file update diagram:



8.3. After the update is complete, you can go to Settings -> About to view the current version:

