


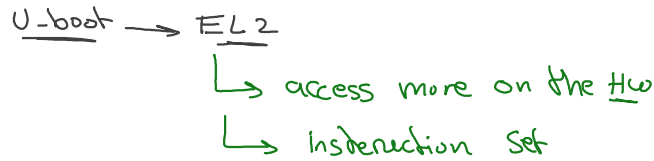
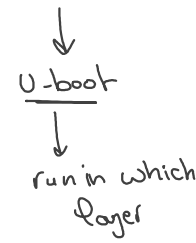


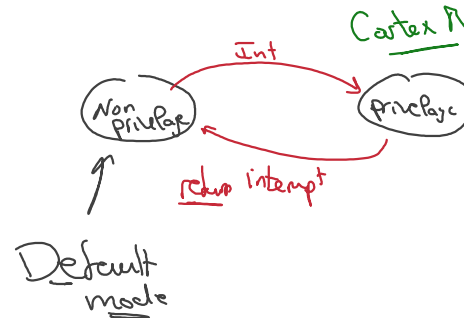

Exception Level

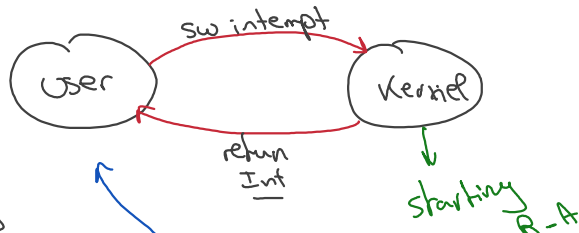

the Reason Kernel gives to the
user space access int 80
activate Dual mode

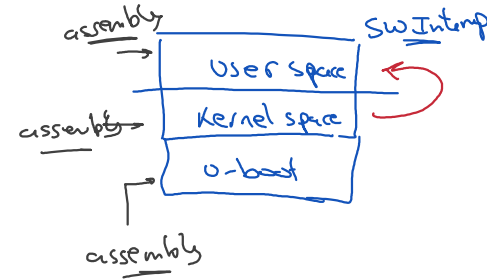

It doesn't mean that you don't have access Hw

Int vart

exception

Kernel

table	
user	→ EL1
kernel	→ EL1

BootROM

U-boot


all privilege Hw addresses

DDR4M →

Intmp get handled in which Level of exception

```
msayed >
msayed >
msayed > bdfinfo
boot_params = 0x00000000000000100
DRAM_base = 0x0000000000000000
```

write

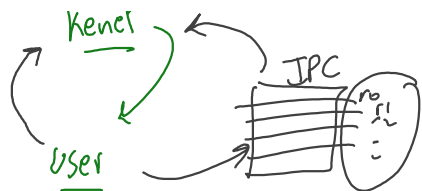


```

USBH Bank = 0x0000000000000000
-> start   = 0x0000000000000000
-> size     = 0x00000000008000000
flashstart = 0x0000000000000000
flashsize  = 0x0000000000000000
flashoffset = 0x0000000000000000
  
```

will anything

Specific register ← kernel need to give access user

bandRate (asynchronous)

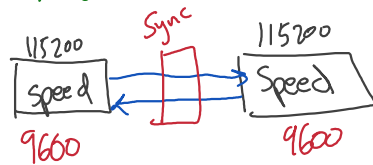

BootROM (default)

↳ bootCode.bin

