

Bootloader


↳ boot your application

Unified BL $\rightarrow$ Support several machine

How Interred v-boot

↳ Learn Commands ⚡

You can customize the Command based on your need.

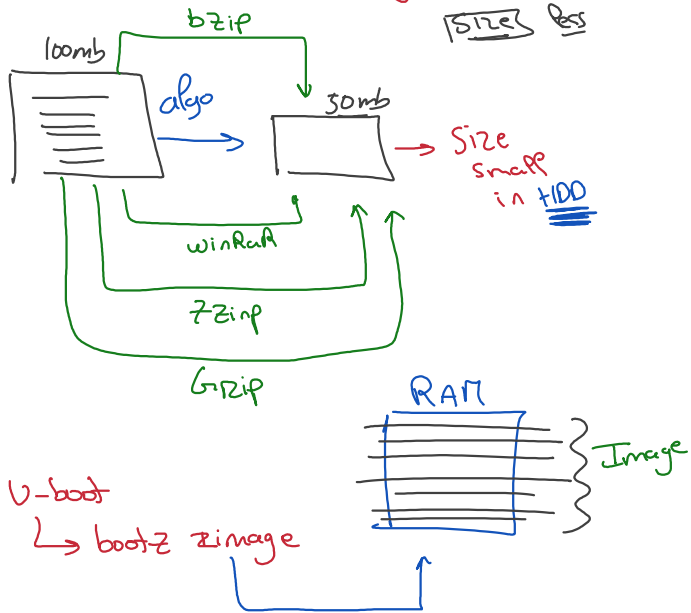

(L) Environment Command


- ① saveenv
- ② editenv

- ① help
↳ all command supported

- ② bot info
↳ board information
- ① network IP
 - ② mac address
 - ③ DDOSN SA

- ### ③ boot Commands


↳ type linux
image

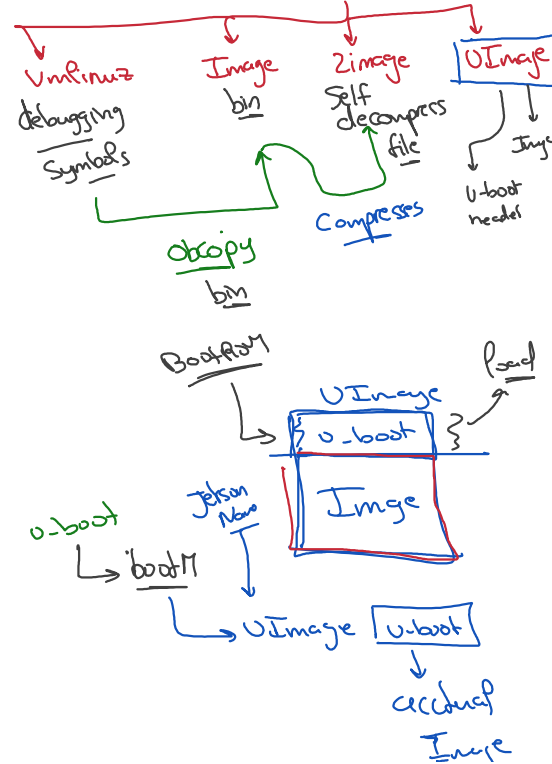

Section Environment

Variables

U-boot
 ↳ Save variable
 ↳ file (Uboot env)

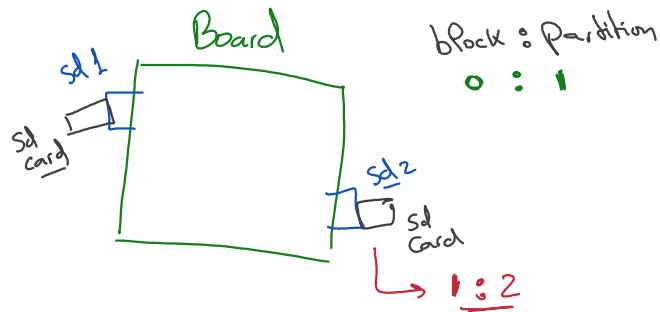

✓ bootz = zimage
 ✓ booti = image
 bootm = U-image



✓ bootflow
 ↳ support file
 extlinux.conf

✓ go → start application
 from specific

✓ run → run variable



- ① load ↔ fatload → load file in specific memory ram location
- ② md → memory display specific address
- ③ ls → list files & Directory inside memory block
- ④ set → set a new value to a variable
- ⑤ printenv → print variable value
- ⑥ saveenv → used to save the variable to exist in the next booting cycle

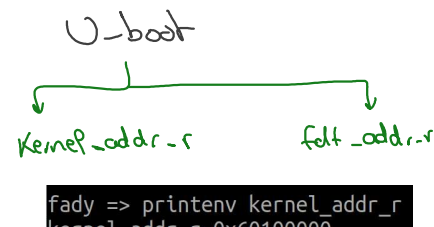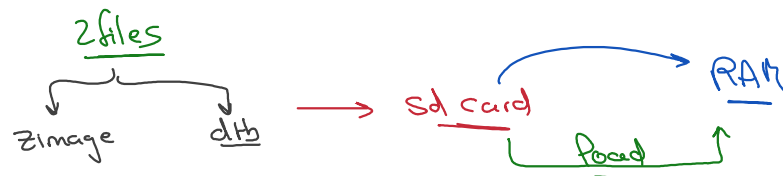

bootz

↳ addr (Image)
↳ fdt (dtb)

```
bootz [addr] [initrd[:size]] [fdt]
```

```
kernel_addr_r=0x60100000
```

```
fady => printenv fdt_addr_r  
fdt_addr_r=0x60000000
```

Part 1

①

```
fady => load mmc 0:1 $kernel_addr_r zImage  
5882232 bytes read in 1431 ms (3.9 MiB/s)  
fady => load mmc 0:1 $fdt_addr_r vexpress-v2p-ca9.dtb  
14225 bytes read in 16 ms (868.2 KiB/s)
```

②

```
fady => bootz $kernel_addr_r - $fdt_addr_r
```

