

TrackMaster Pro

User Manual · Version 1.4.1

Track planning for model railway layouts in all common gauges – with height planning, helix and timber list, scenery, wiring and signals, plan check and 3D view. For Windows and Android.

TrackMaster Pro 1.4.1 · Basic and Pro

As of October 2026

Contents

1 **Welcome** 4
- What TrackMaster Pro can do 4
- Basic and Pro 4
- About this manual 5

2 **Installation** 6
- Windows 6
- Android 7
- New versions 7

3 **Licence and activation** 8
- Installing the licence 8
- Computer-bound licence 8
- When a Pro feature is chosen 9

4 **The workspace** 10
- Moving the view 11
- Rotating the view freely 11
- Design and font 12
- Language 13
- View tab 13

5 **Your first plan** 15
- Creating a new plan 15
- Choosing a track system 17
- Attaching tracks 17
- Checking the plan 17
- Sample plan 17

6 **Laying and editing track** 18
- Track library 18
- Selecting and moving 19
- Editing 19
- Flexible track 20

7 **Heights, gradients and helixes** 21
- Height of a track 21
- Gradient over a track sequence 21
- Helix 21
- Helix timber list 23
- Tunnel 24

8 **Scenery** 25
- How the terrain is shown 26

9 **Wiring, signals and digital** 27
- Feeders and isolating joints 27
- Checking the wiring 27
- Signals 27
- Decoders and addresses 28
- Wiring plan 28
- Routes 29
- Export for control software 29

10 **Plan check** 30

11 **3D view** 32

12 **Saving, parts list, printing and export** 34
- Saving and opening 34
- Parts list 34
- Printing 34
- Export 34

13 **The Android app** 36

14 Keyboard shortcuts and mouse commands 37
15 Questions and solutions 38
16 Glossary 39

1 Welcome

TrackMaster Pro is a planning program for model railway layouts. You set up the baseboard, lay track from the catalogues of the common track systems, plan gradients and helixes, design the scenery, wire the layout and look at the result in 3D – before you buy the first piece of rail.

What TrackMaster Pro can do

- **Track plans in all common gauges:** Z, N, TT, H0, H0m, H0e, 0, gauge 1 and G, with many track systems and about 1300 track pieces – straights, curves, turnouts, crossings, double slips, buffer stops and flexible track.
- **Baseboards in many shapes:** rectangle, L, U, T and Z shape, or a ring with an open centre.
- **Free-form flexible track:** start at a track end and drag; the track bends along and snaps onto the target.
- **Height planning:** gradients over whole track sequences, round or oval helixes, single or double track.
- **Timber list for the helix:** all cut pieces with edge allowance and saw allowance, supports, fixings and sheet requirement.
- **Scenery:** hills and mountains, water, buildings, trees and tunnels.
- **Wiring and digital:** feeders, isolating joints, power sections, reverse loop detection, light signals with prototypical aspects, decoder addresses, routes and a wiring plan.
- **Plan check:** track spacing, clearance heights, baseboard edge, gradients, scenery, open track ends and checks for long vehicles.
- **3D view:** the layout from every side, a cab ride, a running train and light according to the time of day.
- **Your way of working:** view rotatable to any angle, five designs, seven fonts in four sizes, German or English interface.
- **Results** PRO saving large plans (more than 50 tracks), parts list, helix timber list, printing and exports.

Basic and Pro

TrackMaster Pro comes in two editions. Without a licence, the **Basic edition** runs. It contains **all planning features** – so you can design, check and view any layout in 3D in full. A licence file turns it into the **Pro edition**, which unlocks the results of your planning.

Basic (without licence)	Pro (with licence) – in addition
Track planning in all gauges with all track systems, flexible track	Saving plans of any size (Basic: up to 50 tracks)
Height planning: gradients, round and oval helixes, single and double track	Parts list of the tracks with accessories, also as a CSV file

Terrain, water, buildings, vegetation, tunnels	Helix timber list with all cut pieces
Wiring: feeders, isolating joints, signals, decoders, routes, wiring plan	Printing the track plan, also as a 1:1 building template
3D view with cab ride, train and time of day, plan and wiring check	Export as SVG at 1:1, wiring plan as text, export for control software
Opening track plans, saving plans with up to 50 tracks	

Pro features are marked in the program: in the tooltip as “Pro feature”, in the Android app with a padlock. If you choose a Pro feature in the Basic edition, a note explains what Pro offers and takes you straight to the licence dialog if you wish.

About this manual

This manual describes the Windows version. The Android app works the same way; what is different there – mainly touch operation – is described in chapter 13. Ribbon commands are written as **Tab › Command**, for example **Tracks › Helix**. Keys look like this: Ctrl + S. The manual shows the English interface; how to switch the language is described in chapter 4.

> **Tip**
> Notes like this show shortcuts and proven ways of working.

> **Caution**
> Notes marked like this should be observed before building.

2 Installation

Windows

Requirements

- Windows 10 or Windows 11, 64-bit
- about 400 MB of free disk space
- screen of at least 1280 × 720 pixels, 1920 × 1080 recommended
- for the 3D view, a graphics card with DirectX support (present in every current PC)

No additional runtime is needed – everything TrackMaster Pro requires is included in the installation package.

Installing

1. Double-click the file **TrackMasterPro-1.4.1.msi**.
2. If Windows SmartScreen reports “Windows protected your PC”: click **More info** and then **Run anyway**.
3. Follow the setup wizard: accept the licence terms and choose the destination folder (default *C:\Program Files\TrackMaster Pro*).
4. Start the installation. Windows asks for permission to make changes – confirm with **Yes**.
5. After a few seconds the installation is complete. Close the wizard.

You will then find TrackMaster Pro in the **Start menu** and as a shortcut on the **desktop**. The manual is also in the Start menu.

Updating and uninstalling

Simply install a new version over the existing one: the installer detects the older version and replaces it. Your plans and your licence are kept. To remove the program, open **Settings › Apps › Installed apps**, select **TrackMaster Pro** and click **Uninstall**. Your plan files and the licence file are not deleted.

Silent installation for administrators

The package can be deployed to several computers without prompts:

Command	Effect
`msiexec /i TrackMasterPro-1.4.1.msi /qn`	installation without user interface
`msiexec /i TrackMasterPro-1.4.1.msi INSTALLFOLDER="D:\Programs\TrackMaster Pro" /qn`	installation into another folder
`msiexec /x TrackMasterPro-1.4.1.msi /qn`	uninstallation without user interface

Android

Requirements

- smartphone or tablet with Android 8.0 or later; a tablet of 10 inches or more is particularly pleasant for planning
- about 100 MB of free storage

Installing

1. Copy the file **TrackMasterPro-1.4.1.apk** to the device – via USB cable, cloud storage or as an e-mail attachment.
2. Tap the file on the device, for example in the **Files** app in the **Downloads** folder.
3. The first time, Android asks whether this app may **install unknown apps**. Tap **Settings**, allow it and go back.
4. Confirm with **Install**. TrackMaster Pro then appears in the app overview.

Install an update the same way over the existing app; your current plan is kept.

New versions

At start-up the program briefly checks the download page for a new version and reports it in the status bar. Under **File › Updates…** you can check yourself at any time and open the download page with installer, app and manual if you wish. Nothing is ever installed automatically; without an internet connection the check is simply skipped.

3 Licence and activation

The Pro edition is activated with a personal licence file. The file is digitally signed and cannot be altered; the program checks it at every start, without an internet connection.

Installing the licence

1. Save the licence file you received (extension **.lic**) on the computer, for example in the *Downloads* folder.
2. Open **File › Licence…** or **Home › Licence**.
3. Click **Install licence…** and select the file.
4. The dialog now shows **Pro**, the name of the licensee and, if applicable, the expiry date. The indicator at the bottom left of the status bar changes from “Basic” to “Pro”.

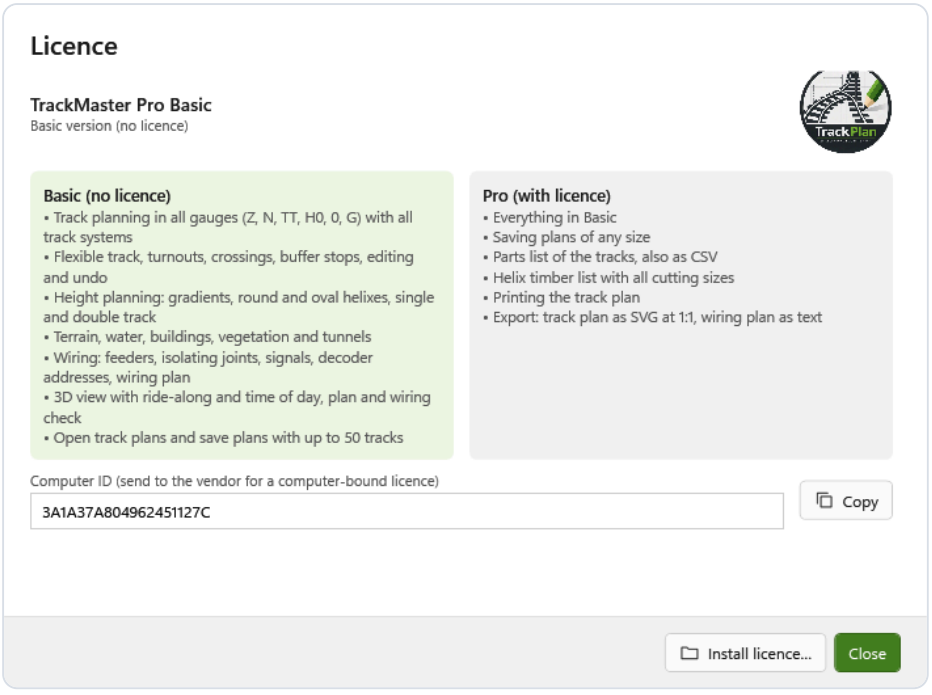


Figure 1 – The licence dialog shows the edition and what Basic and Pro contain.

The licence is stored in the user data (*%APPDATA%\TrackMaster Pro\trackmaster.lic*) and applies from now on at every start. On Android you install the licence the same way via **File › Licence**; you choose the file from the device storage.

Computer-bound licence

A licence can be bound to a particular computer or device. For this the publisher needs the **machine ID** (on Android: **device ID**). It is shown in the licence dialog; with **Copy** you put it on the clipboard and can paste it into an e-mail.

When a Pro feature is chosen

In the Basic edition, a note appears when you save plans with more than 50 tracks, and for the parts list, timber list, printing and the exports. With **Licence…** you open the licence dialog directly. Your plan stays open unchanged.

> **Caution**
> In the Basic edition, plans with more than 50 tracks cannot be saved. When you close the program, start a new plan or open another one, TrackMaster Pro asks whether the changes should be discarded.

4 The workspace

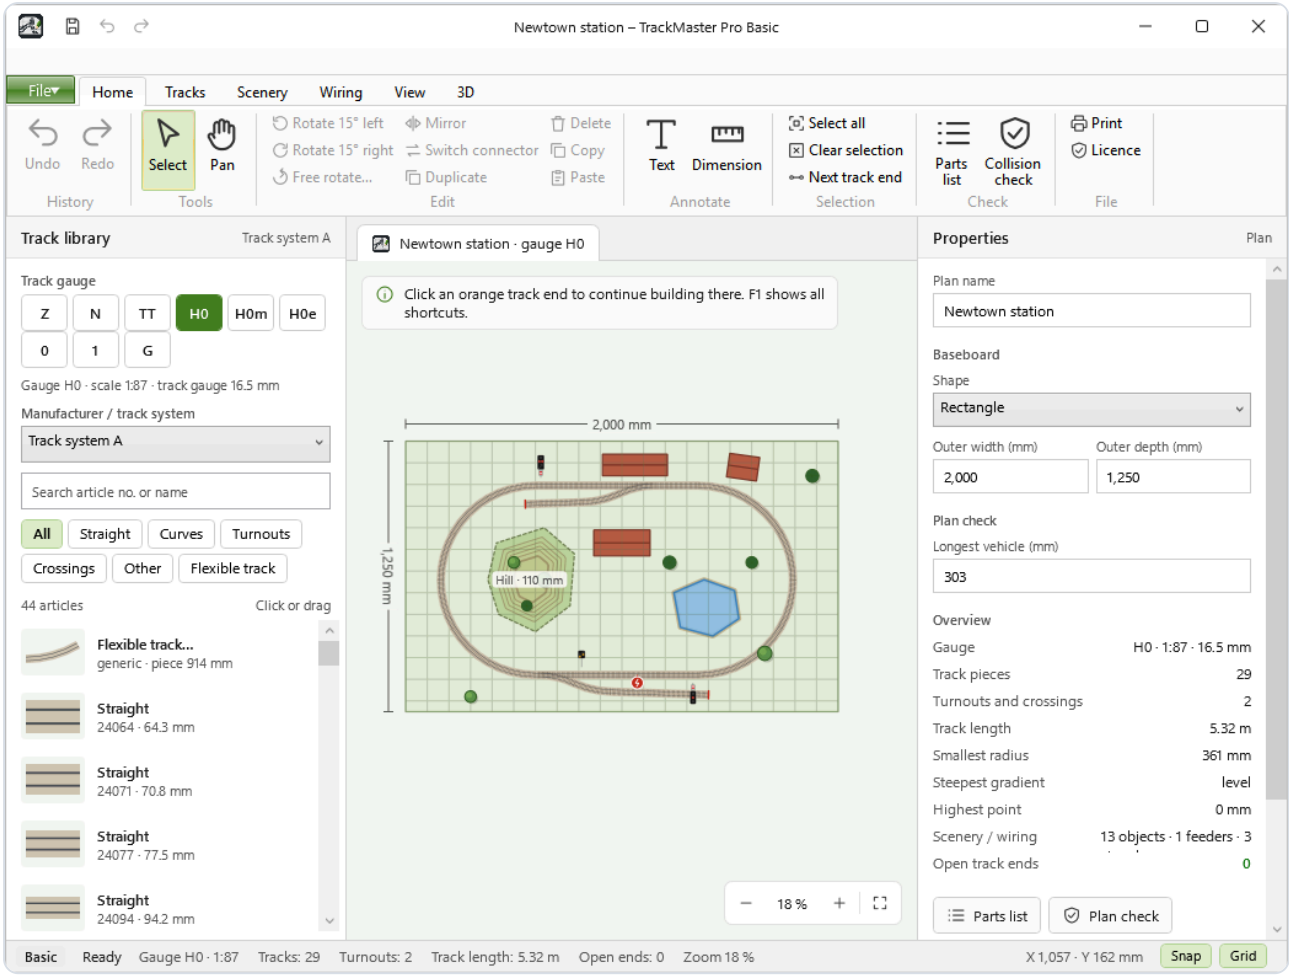


Figure 2 – The main window with the sample plan “Newtown station”.

The main window is divided into five areas:

Area	Purpose
Ribbon (top)	All commands, arranged in the tabs Home, Tracks, Scenery, Wiring, View and 3D. Via **File** you reach New, Open, Save, parts list, export, printing, sample plan, licence and language. The quick access toolbar at the very top left contains Save, Undo and Redo.
Track library (left)	Choose gauge and track system, search for tracks and filter by type (straight, curves, turnouts, crossings, other). A click attaches the track, dragging places it freely.
Drawing area (centre)	The track plan on the baseboard, with dimension chains, grid and the open track ends. The zoom can be set at the bottom right.
Properties (right)	Shows what is currently selected: the plan with baseboard dimensions and overview, a track with position, height and digital address, or an object such as a building, signal or feeder. Values can be entered directly.

Status bar (bottom)	Edition, gauge, number of tracks and turnouts, track length, open ends, zoom and mouse position in millimetres; plus the switches for snapping and grid.

Moving the view

- **Zoom:** mouse wheel, the keys + and − or the zoom bar at the bottom right.
- **Pan:** hold the right or middle mouse button and drag – or hold Space and drag with the left mouse button. Alternatively use the tool **Home › Pan**.
- **Show the whole layout:** key 0 or **View › Whole layout**.

Rotating the view freely

The track plan can be rotated on screen to any angle – for example so that the layout lies the way you will later stand in front of it. Only the view is rotated: tracks, dimensions, parts list and printout remain unchanged.

- **With the mouse:** hold Ctrl and turn the mouse wheel – in 5° steps, with Shift as well in 1° steps.
- **Via the ribbon: View › Rotate** with **15° left**, **15° right** and **Rotate view...** for an exact angle.
- **Back:** while the view is rotated, a compass at the top right shows the plan's north direction and the angle. A click on it – or **View › Straighten** – straightens the view again.

The dimension chains at the baseboard rotate along; their labels always stay readable.

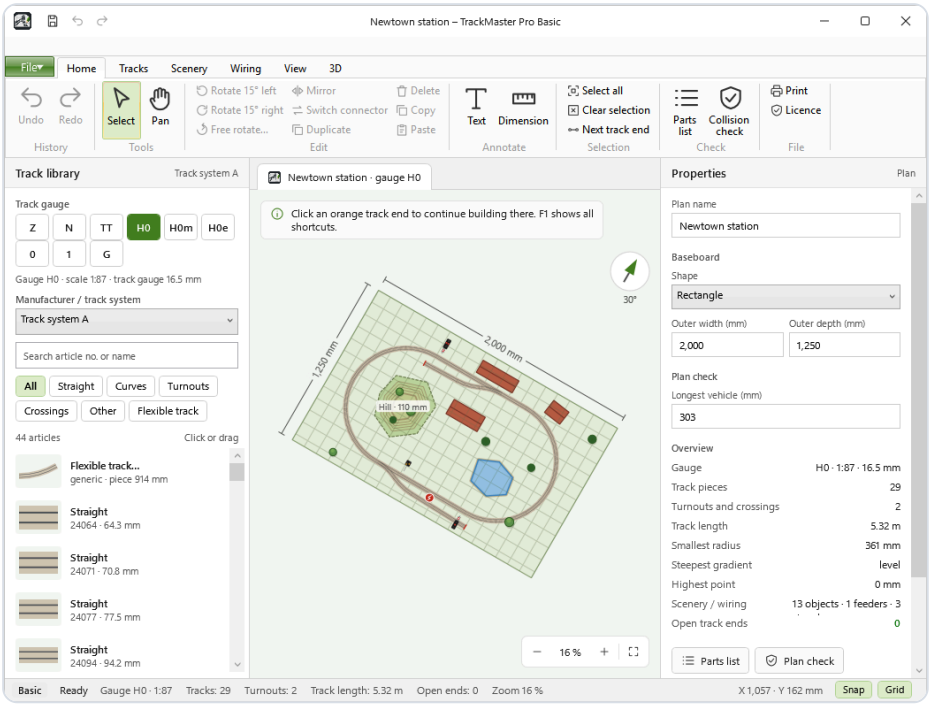


Figure 3 – View rotated by 30° with the compass at the top right.

Design and font

Under **View › Design and font** (also in the menu **File › Appearance…**) you choose the look of the program. The choice is saved and also applies at the next start. After **Apply** the window is briefly rebuilt; the open plan is kept.

Design	Appearance
Logo green	Default: green and anthracite from the logo, light workspace.
Classic blue	Blue accents, light workspace.
Blueprint	The plan as a technical drawing: white tracks on a blue background.
High contrast	Black tracks on a white baseboard – easy to read, even in bright light.
Workshop	Warm wood tones: baseboard like plywood, accents in copper.

Seven **fonts** are available – from the standard font and a narrow technical font to a serif font and a typewriter font. The **font size** can be set in four steps (Small, Normal, Large, Very large); a preview in the dialog shows the effect immediately.

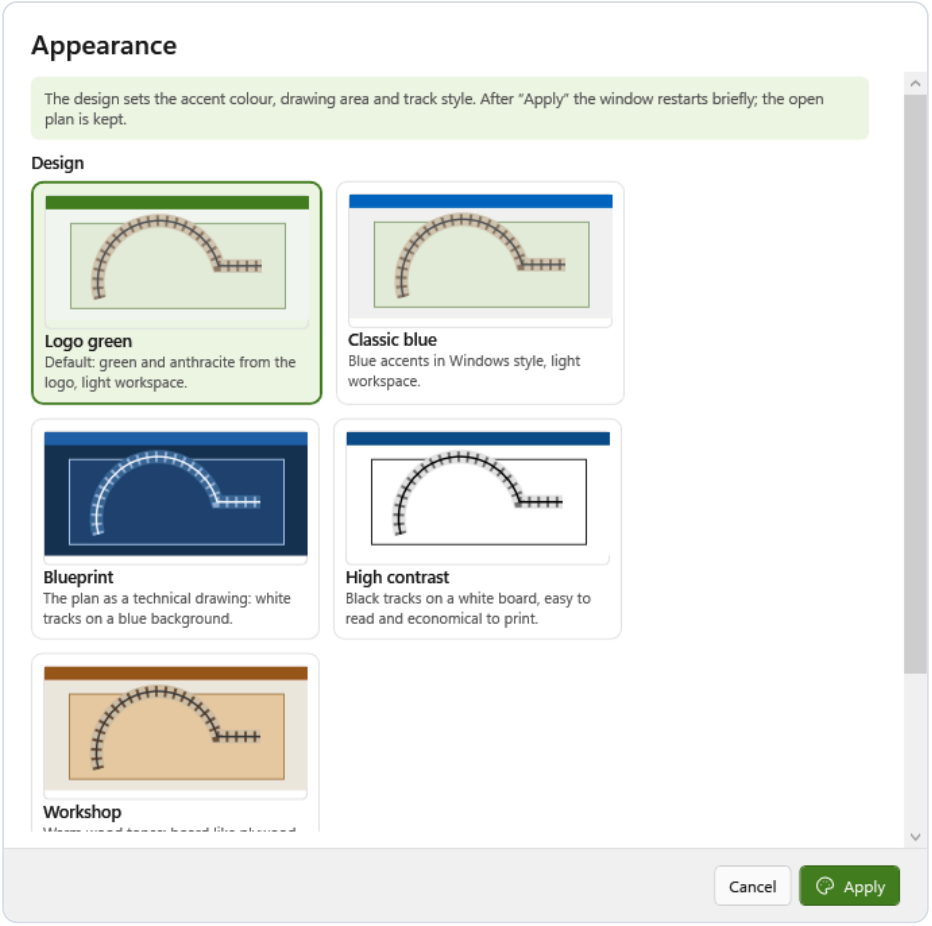


Figure 4 – Appearance dialog with designs, font and font size.

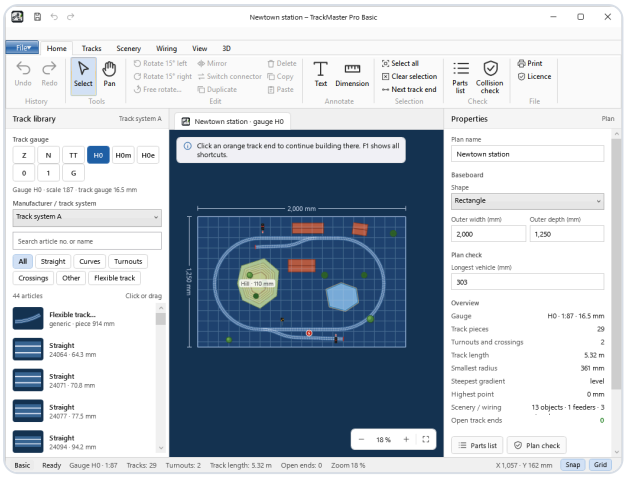


Figure 5 – Blueprint design.

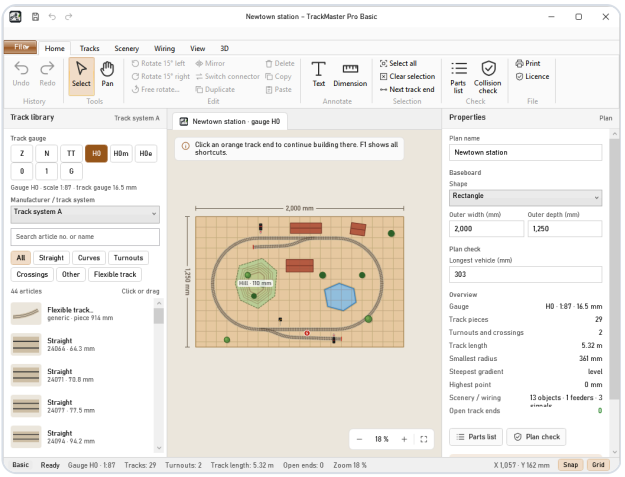


Figure 6 – Workshop design with a narrow font.

Language

The interface is available in German and English. At the first start it follows the system language. Under **File › Sprache / Language…** you switch it; on Windows the window then restarts and the open plan is kept, on Android the new language applies from the next start of the app. Plans do not depend on the language.

View tab

In the **View** tab you switch on what the drawing area shows: **Grid**, **Track ends**, **Article numbers** on every track, **Heights** (top of rail at the track ends) and **Scenery**. There are also the groups **Rotate** and **Appearance** (see above) and **About** with version and edition. **Controls and keyboard shortcuts** (F1) shows all mouse and keyboard commands at a glance.

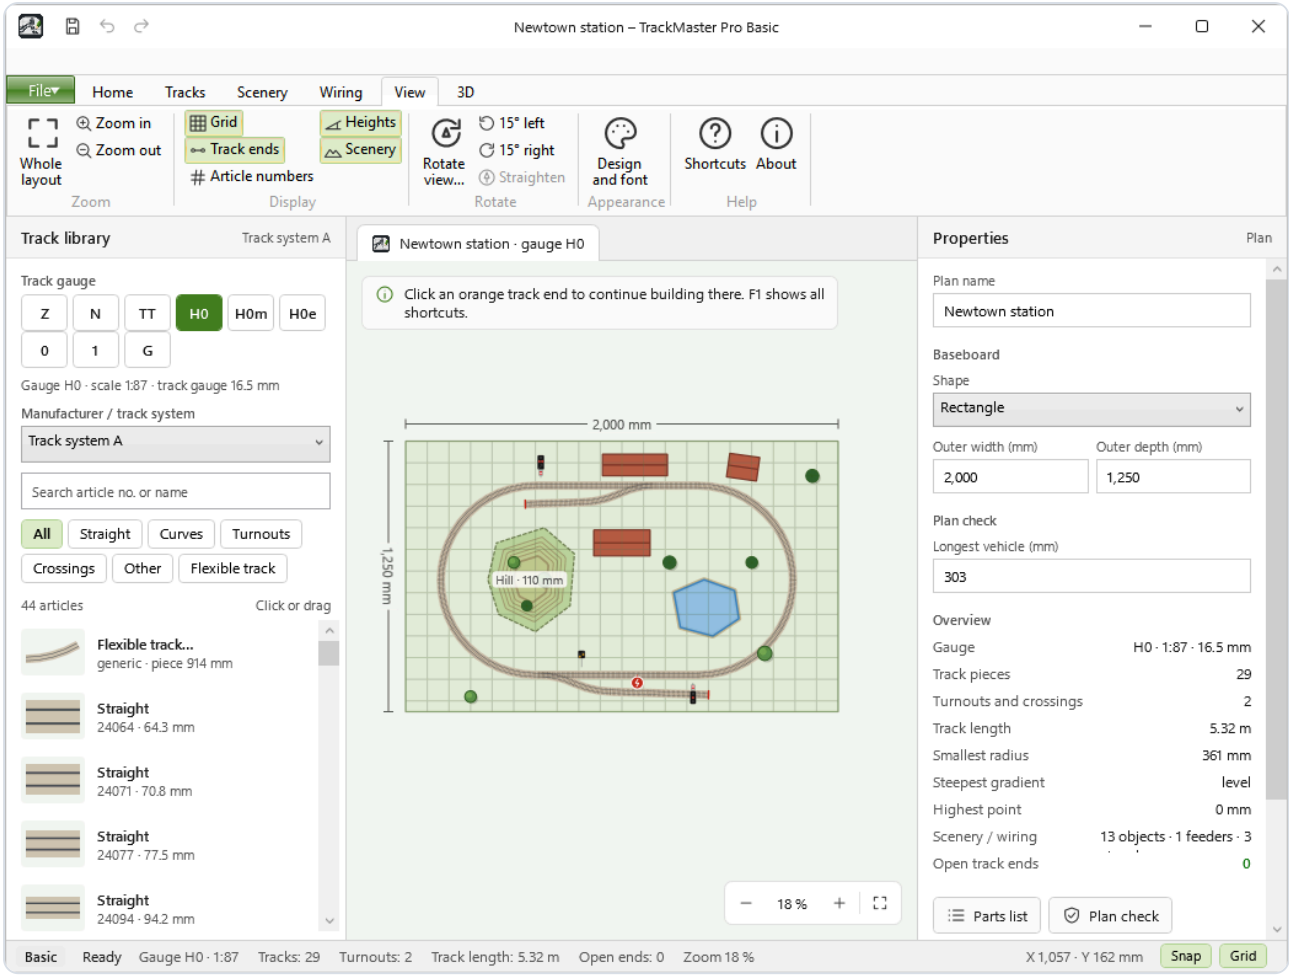


Figure 7 – View tab.

5 Your first plan

A simple oval with a passing loop in a few steps – this is how you learn the most important moves.

Creating a new plan

1. Choose **File › New** (Ctrl+N).
2. Choose the **gauge**.
3. Choose the **shape of the baseboard** and enter the dimensions. The preview shows the shape immediately.
4. Confirm with **Create plan**.
5. Then enter the name of the plan in the properties under **Plan name**.

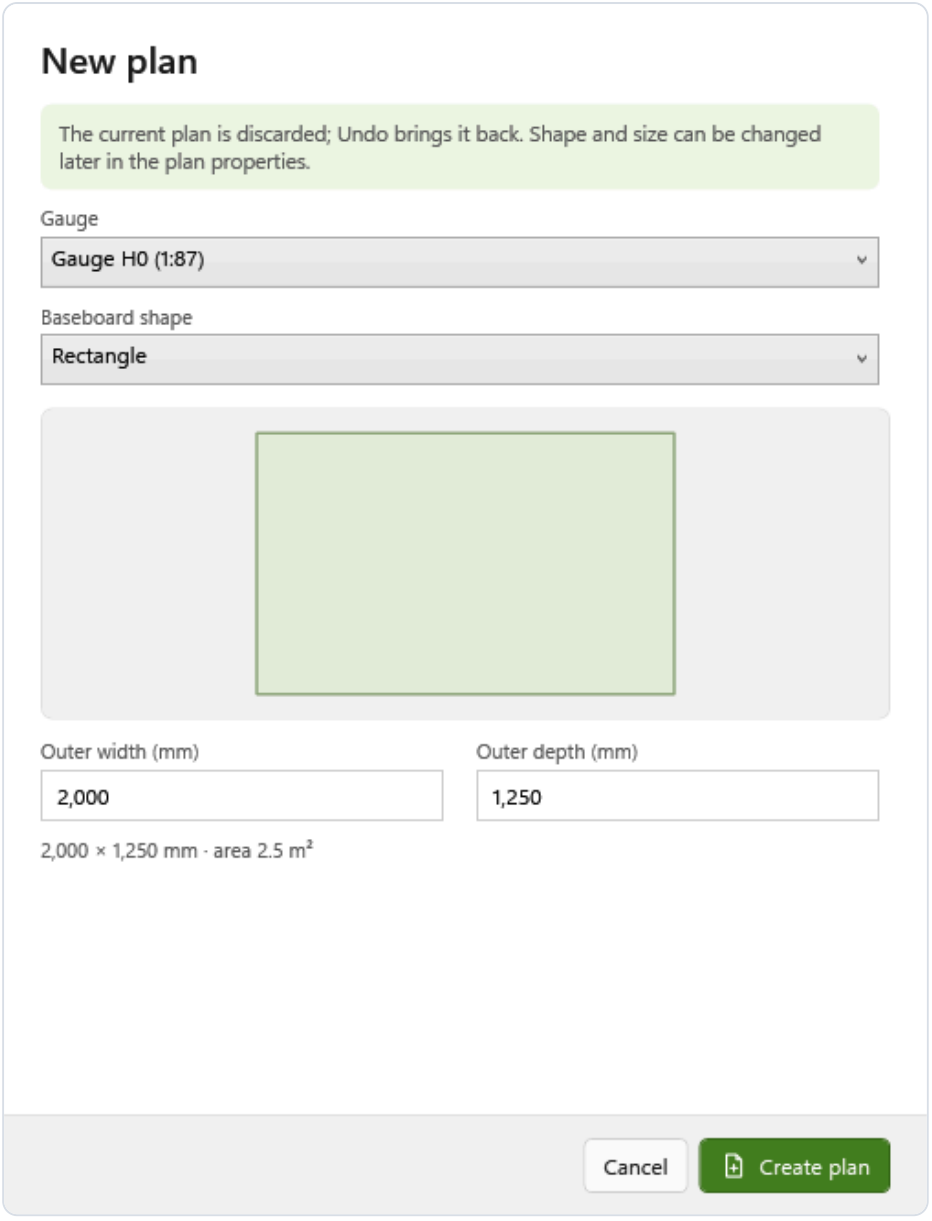


Figure 8 – New plan: gauge, baseboard shape and dimensions.

Baseboard shape	Dimensions and particulars
Rectangle	width and depth
L shape	outer dimensions and leg depth, orientation in 90° steps
U shape	outer dimensions and leg depth; the two legs may have different lengths
T and Z shape	outer dimensions, leg depth and orientation
Ring	layout all round with an open centre, for example for an access hatch in the middle

Shape and dimensions can be changed at any time later: click a free spot of the drawing area or choose **Scenery › Baseboard**; the properties then show the baseboard dimensions.

Choosing a track system

In the track library, choose the track system you want to build with under **Manufacturer / track system**. The library then shows all track pieces of this system with article number and dimensions. You can also mix several systems in one plan.

Attaching tracks

1. Click a curved track in the library. It appears in the middle of the baseboard; its free end is marked **orange** – this is the **active track end**.
2. Keep clicking curves. Each new track is attached to the active end until the semicircle is complete.
3. Add straights and the second semicircle. When the oval closes, TrackMaster Pro connects the ends automatically.
4. Click the orange end of another track to continue building there, or press `E` for the next open end.
5. Insert a turnout, run a parallel track and connect it again with a second turnout.

> **Tip**
> With `A` (switch connector) you lay the most recently placed track with its other connector – this quickly turns a right-hand turnout in the direction of travel into one that receives the track from the other side.

Checking the plan

Click **Home › Collision check** (`F7`). The list shows overlaps, spacing that is too tight and open ends; a click on an entry shows the spot in the plan (chapter 10).

Sample plan

Under **File › Load sample plan** the layout “Newtown station” opens, with scenery, wiring and signals. It is well suited for trying out all features.

6 Laying and editing track

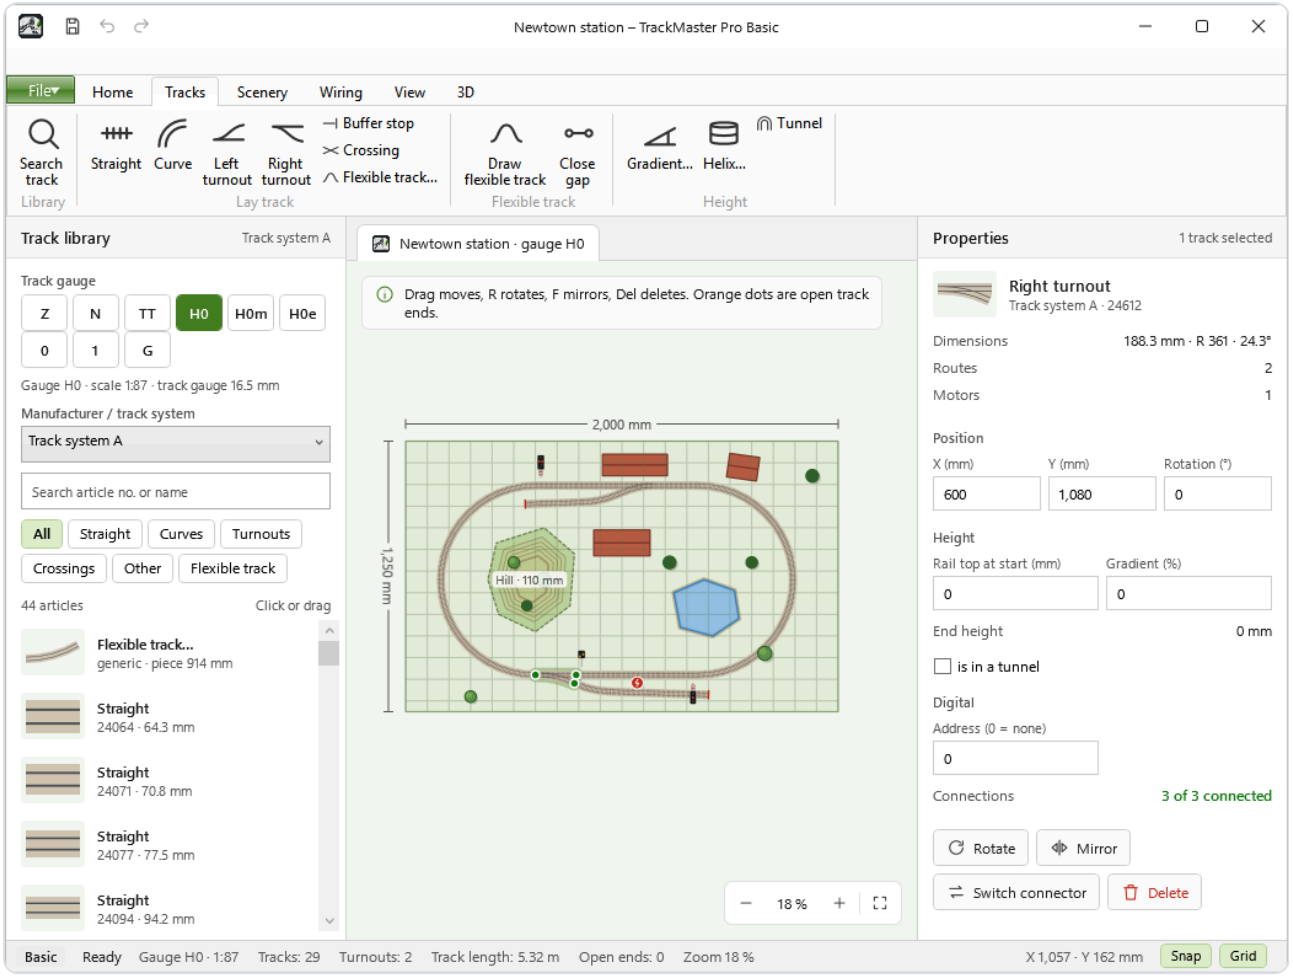


Figure 9 – Tracks tab with a selected turnout; the properties show its dimensions, height and digital address.

Track library

- Choose the **gauge** at the top (Z, N, TT, H0, 0, G and further gauges in the list).
- Choose the **track system** in the drop-down list.
- **Search** by article number or name; **Tracks › Search track** jumps straight into the search field.
- **Filter** by All, Straight, Curves, Turnouts, Crossings and Other.
- **Clicking** attaches the track to the active end, **dragging** places it freely on the baseboard; near a free end it snaps on.

The group **Tracks › Lay track** offers quick commands for **Straight**, **Curve**, **Left turnout**, **Right turnout**, **Buffer stop** and **Crossing** of the selected system.

Where the catalogue of a track system contains **turntables and transfer tables**, they have a group of their own in the library. They are attached like tracks; every track exit is a track end of its own.

> **Note on dimensions**
> The track geometry follows the catalogue data. A few track systems are stored with provisional dimensions and marked in the library; check these against the real product before building.

Selecting and moving

- **Click** on a track selects it, Shift+click adds more.
- **Dragging on a free area** draws a selection rectangle; Ctrl+A selects everything.
- **Dragging** moves the selection. If a free end comes close to another one, the whole group snaps on there.
- **Arrow keys** move by 1 mm, with Shift by 10 mm.
- Snapping can be switched off in the status bar with **Snap**.

Editing

Command	Key	Effect
Rotate 15° left / right	Shift+R / R	rotates the selection about its centre
Free rotate…	–	rotates the selection by any angle (quick choice ±15°, ±45°, ±90°)
Mirror	F	curves, turnouts and crossings reversed
Switch connector	A	lays the track with the next connector at the same spot
Duplicate	Ctrl+D	copy of the selection
Copy / Paste	Ctrl+C / Ctrl+V	tracks including feeders, isolating joints and signals via the clipboard, also into another plan of the same gauge; pasted at the mouse position
Delete	Del	removes tracks or the selected object
Undo / Redo	Ctrl+Z / Ctrl+Y	any number of steps

The position (X, Y in millimetres) and rotation of a track can also be entered exactly in the properties.

Labels and dimension lines

In the group **Home › Annotate** you place **text** (click the spot and enter the text) and **dimension lines** (click two points; track ends and baseboard corners snap on). The program calculates the length itself. Change text height, rotation and text in the properties; labels and dimensions also appear in the printout.

Flexible track

Flexible track can be laid in three ways:

Draw flexible track

1. Switch on **Tracks › Draw flexible track**.
2. Put the mouse on an open track end and drag. The flexible track leaves the track tangentially and bends along.
3. If you come close to another track end, it snaps on: the flexible track is then laid as a matching double curve that joins both ends without a kink.
4. Release the mouse button. Length and smallest radius are shown while dragging.

Reshaping: with the tool switched on, grab a laid flexible track at one end and drag – the other end stays in place.

Close gap

Click a track end (active end), select the counterpart and click **Tracks › Close gap**. TrackMaster Pro connects both ends with a suitably bent flexible track.

Flexible track with dimensions

Via **Tracks › Flexible track…** or the entry “Flexible track…” in the library you create a straight piece of any length or a curve with any radius and angle.

If a track system has flexible tracks of its own, they are listed individually in the library. The parts list counts flexible track in whole lengths of the respective size, with 5 % waste.

> **Caution**
> When dragging, watch the smallest radius shown. It should not be smaller than the smallest curve radius your vehicles can negotiate.

7 Heights, gradients and helixes

Height of a track

Every track has a **top-of-rail height** at its start and a **gradient** in percent. You enter both in the properties; TrackMaster Pro calculates the height at the other end. With **View › Heights** the heights at the track ends appear in the plan; higher sections are always drawn above lower ones.

Gradient over a track sequence

1. Select the tracks of the ramp (draw a rectangle or Shift+click).
2. Click **Tracks › Gradient…**.
3. Enter the **start height** and the **gradient in percent**; reverse the direction if needed.

The gradient is applied evenly over all selected tracks. If two parallel track sequences are selected – such as the two tracks of a double-track ramp or helix – the inner, shorter track gets exactly the gradient entered; the outer one rises so that it arrives at the same height.

Gradient	Assessment
up to 2 %	close to the prototype, suitable for all trains
2 to 3 %	common on model railway layouts
over 3 %	the plan check warns; long trains need a second locomotive
over 5 %	the plan check reports an error

Helix

A helix overcomes large differences in height on a small area. TrackMaster Pro builds it from curved tracks of the catalogue – **round** or **oval**, **single-track** or **double-track**.

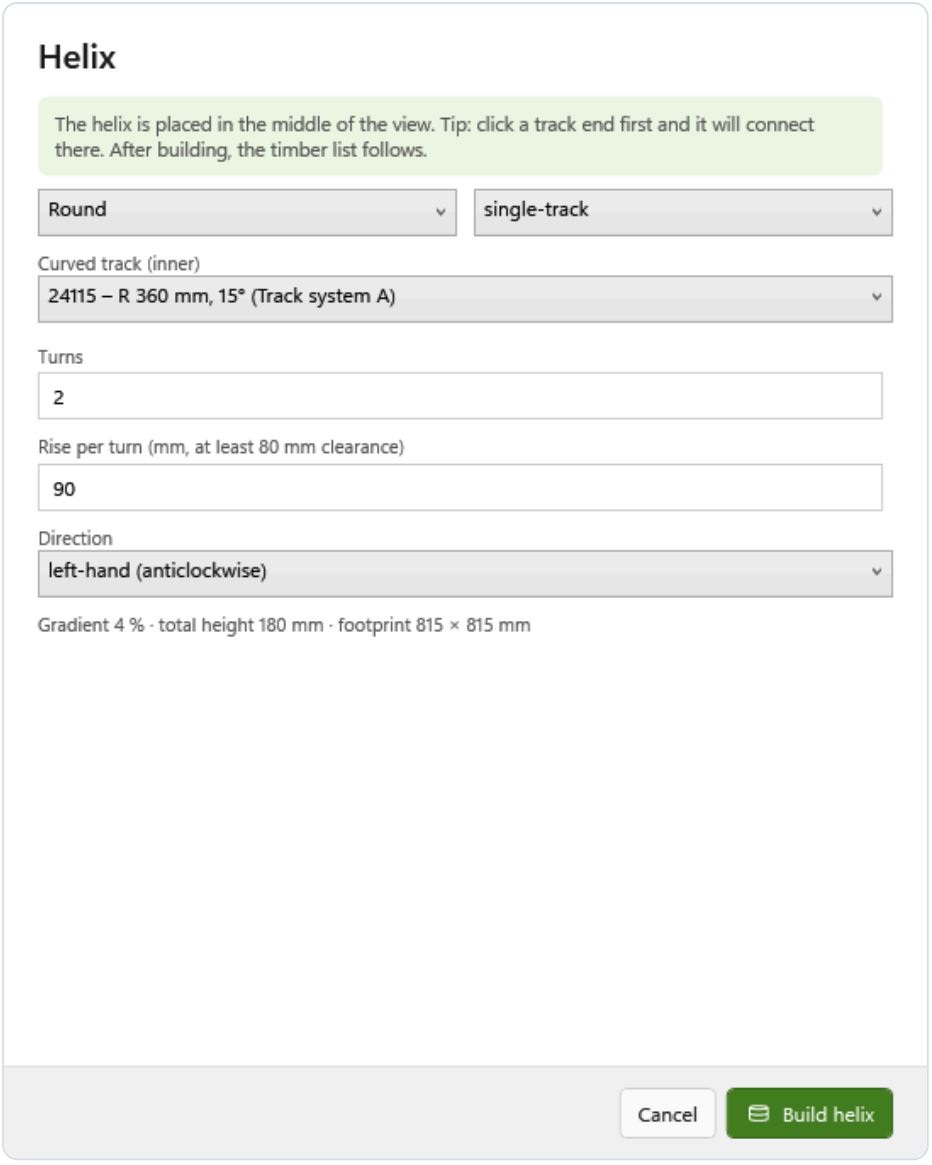


Figure 10 – Helix dialog with gradient, total height and space required.

1. Click a free track end if the helix should connect there. Without an active end it is created in the middle of the view.
2. Choose **Tracks › Helix…**.
3. Choose the **shape**: *Round* or *Oval* – with the oval, straight tracks lie along the two long sides; choose the straight track and the number per side.
4. Choose *single-track* or *double-track*. With double track the second track lies outside: as a catalogue curve with a matching radius or as flexible track with a freely chosen track spacing.
5. Choose the **curved track** for the inner track, the number of **turns**, the **height per turn** and the **direction**.
6. Below the fields, gradient, total height and space required are shown continuously. Click **Build helix**.

The height per turn must at least reach the clearance height of the gauge, otherwise no train fits under the next turn; the dialog points this out. Turns lying on top of each other are not connected to each other.

Helix timber list PRO

After building, TrackMaster Pro shows the **timber list** – everything you need for the helix substructure, with finished cutting dimensions. It can be copied or saved as a CSV file for a spreadsheet.

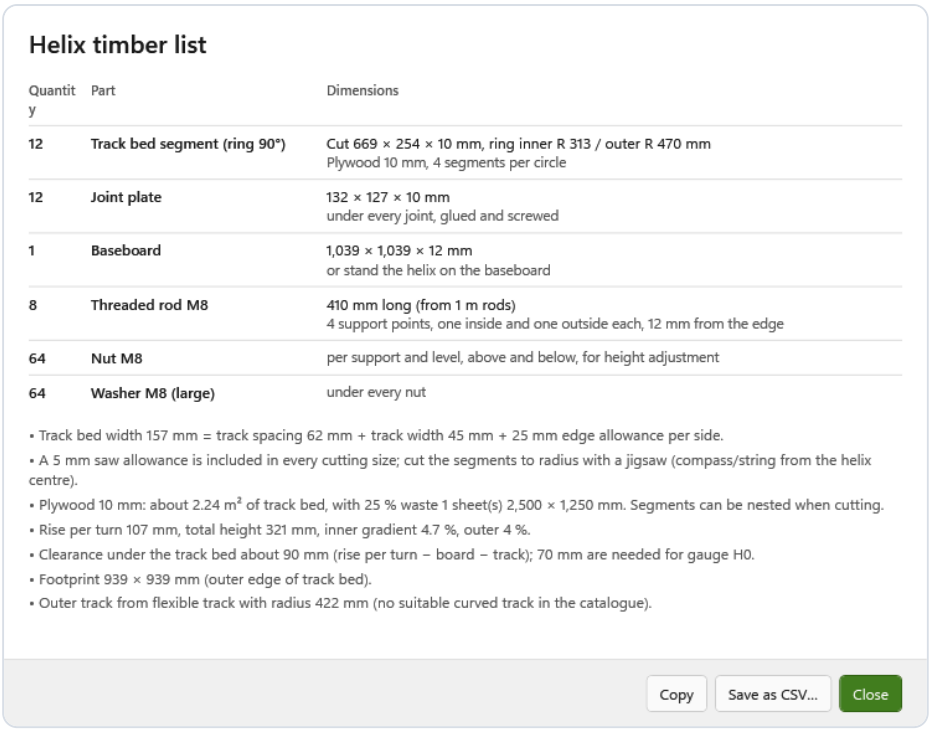


Figure 11 – Timber list of a double-track helix.

Part	Content
Track bed segments	ring segments of plywood with cutting dimensions (length × depth × thickness) and inner and outer radius. 4, 6, 8 or 12 segments per circle, so that none is longer than 1200 mm.
Straight track bed boards	with the oval, one board per long side and turn
Joint plates	under every joint, for gluing and screwing
Base plate	with a 50 mm margin all round – or stand the helix directly on the baseboard
Threaded rods, nuts, washers	one rod inside and outside per support point; nuts and large washers above and below each level, so that the height can be fine-tuned
Notes	track bed width, sheet requirement, gradient inside and outside, clear height and space required

Allowances

- **Track bed:** about 2.7 times the track gauge per track; with double track plus the track spacing.
- **Edge allowance:** at least 25 mm per side (for large gauges 1.5 times the track gauge) – room for the threaded rod hole 12 mm from the edge and for a guard rail.
- **Saw allowance:** 5 mm, already included in every cutting dimension.

- **Wood thickness:** 8 mm for small gauges, 10 mm up to gauge 0, 15 mm for large gauges; base plate at least 12 mm.
- **Threaded rods:** M8, M10 for large gauges. The length results from total height, base plate and projection.
- **Sheet requirement:** calculated in sheets of 2500 × 1250 mm with 25 % waste. The segments can be nested when cutting.

> **Tip**
> Mark out the segments with a string compass from the centre of the helix and cut them with a jigsaw. Drill the holes for the threaded rods with a template so that all levels lie exactly on top of each other.

> **Caution**
> If the clear height under the track bed is tight, the list shows a warning. Then increase the height per turn or choose thinner wood.

Tunnel

Select tracks and click **Tracks › Tunnel**. Tunnel tracks are drawn below the other tracks in the plan, get portals in 3D and count as permitted under terrain in the plan check.

8 Scenery

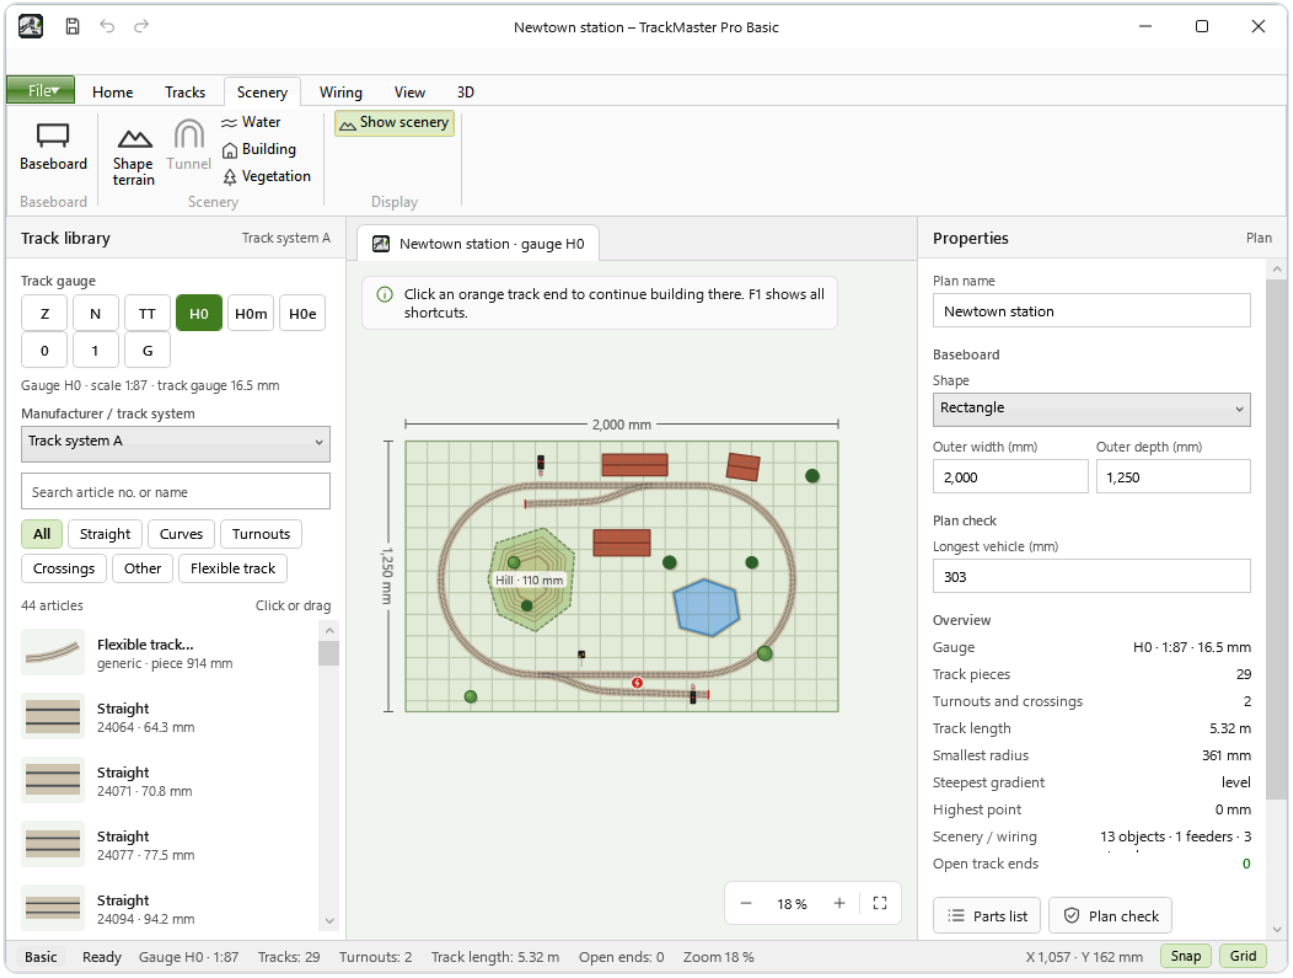


Figure 12 – Scenery tab with hill, lake, buildings and trees.

Tool	How it works
Shape terrain	Clicks set the corner points of a height area (hill, mountain, plateau). Enter closes the area, Esc cancels. Enter the height in the properties.
Water	Draw a lake or river as a polygon, as with terrain; the depth is in the properties.
Building	Draw a rectangle; width, depth, height and rotation can then be entered exactly.
Vegetation	Each click places a tree; diameter and height are adjustable.

Every object has a name and can be clicked, moved and deleted with Del. **Scenery › Show scenery** hides the scenery when you only want to see the tracks. The plan check reports tracks lying in buildings, in water or under terrain without a tunnel.

How the terrain is shown

- **Hills and mountains** rise from the edge of the area with a natural slope up to the height entered. In the track plan, height bands and contour lines show how steep the terrain is, as on a hiking map; every fifth line is bolder. The line spacing depends on the height (for example every 20 mm).
- **In the 3D view** gentle slopes are meadow, steeper ones earth and very steep ones rock. The meadow on the baseboard has several shades of green.
- **Water** has a shore strip. **Trees** are deciduous or conifers, shown with shadows in the track plan.
- Buildings, trees and piers stand on the terrain – a tree on the hill therefore stands on top of the slope.

9 Wiring, signals and digital

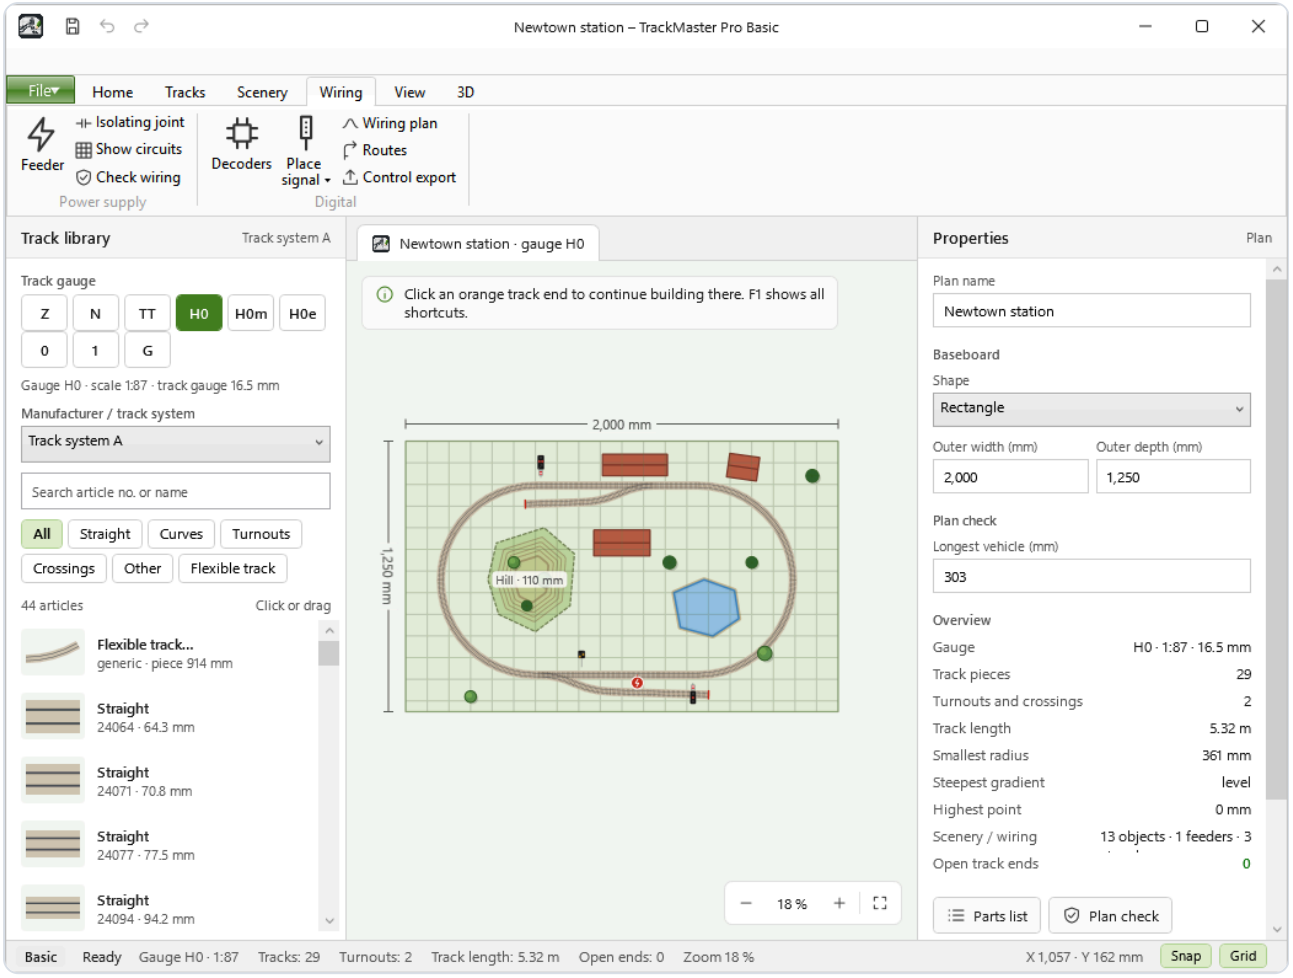


Figure 13 – Wiring tab with feeders, isolating joints and signals.

Feeders and isolating joints

- **Wiring › Feeder**: a click on a track places a connection. In the properties you assign it to a circuit or booster.
- **Wiring › Isolating joint**: a click on a track joint places insulated rail joiners.
- **Wiring › Show circuits** colours every power section in a colour of its own.
- A second click with the same tool on an existing feeder or signal removes it again; delete selected objects with Del.

Checking the wiring

Wiring › Check wiring shows sections without a feeder, reverse loops and addresses used twice. TrackMaster Pro detects **reverse loops** automatically in two-rail systems – there a reverse loop circuit with isolating joints is required. For centre-rail track systems this check is omitted, because reverse loops need no special circuit there.

Signals

Under **Wiring › Place signal** you choose the type of signal and then click a track end. The signals are shown as light signals of the German H/V signal system with a prototypical signal head – in the plan, in the 3D view and in the selection. Each shows its stop aspect; dark lamps can be seen in their real positions.

Signal	Stop aspect	Signal head
Main signal	Hp 0 – stop	green at the top, red in the middle, yellow at the bottom (green + yellow = Hp 2, proceed slowly); red and white mast plate
Exit signal	Hp 00 – stop	two red lamps side by side, plus green, yellow and two white lamps for Sh 1 (shunting permitted)
Block signal	Hp 0 – stop	green at the top, red at the bottom
Distant signal	Vr 0 – expect stop	two yellow lamps rising to the right, two green (Vr 1), yellow + green (Vr 2)
Shunting signal	Sh 0 – stop, no movement	dwarf signal: two red lamps horizontally, two white rising to the right (Sh 1)

Decoders and addresses

Wiring › Decoders lists all turnouts and signals with their digital addresses. Addresses can be entered individually or assigned automatically; conflicts are marked. Turnouts with two motors (three-way turnout, double slip) use two addresses.

Wiring plan

Wiring › Wiring plan summarises the wiring: power sections with their feeders, all isolating joints and the decoder assignment. It can be saved as a text file in the Pro edition.

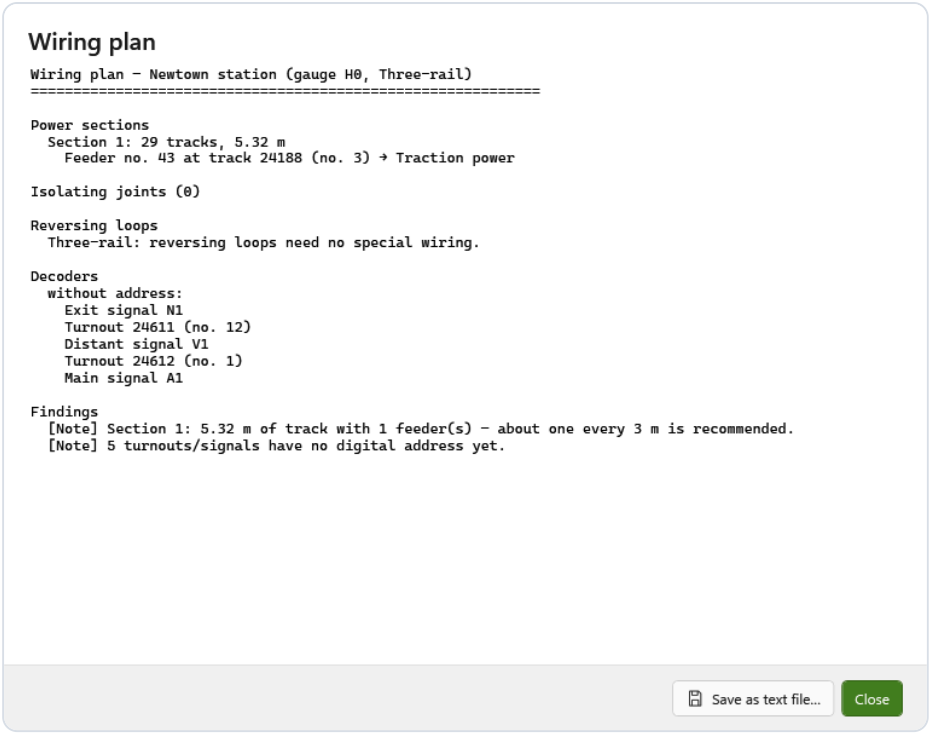


Figure 14 – Wiring plan.

Routes

Wiring › Routes finds all paths from one signal to the next signal in the direction of travel, to a buffer stop or to an open track end. Each route shows the turnouts with their position (straight, diverging, left or right), the length and the decoder addresses. Routes that need the same turnouts set differently are marked as a conflict.

Export for control software PRO

Wiring › Control export saves turnouts, signals, addresses, power sections and routes as a JSON file. From the routes window they can also be saved as text or CSV. This lets you take your planning into a layout control program without typing addresses twice.

10 Plan check

Home › Collision check (F7) examines the whole plan and lists all findings as error, warning or note. A click on an entry selects the tracks concerned and shows the spot.

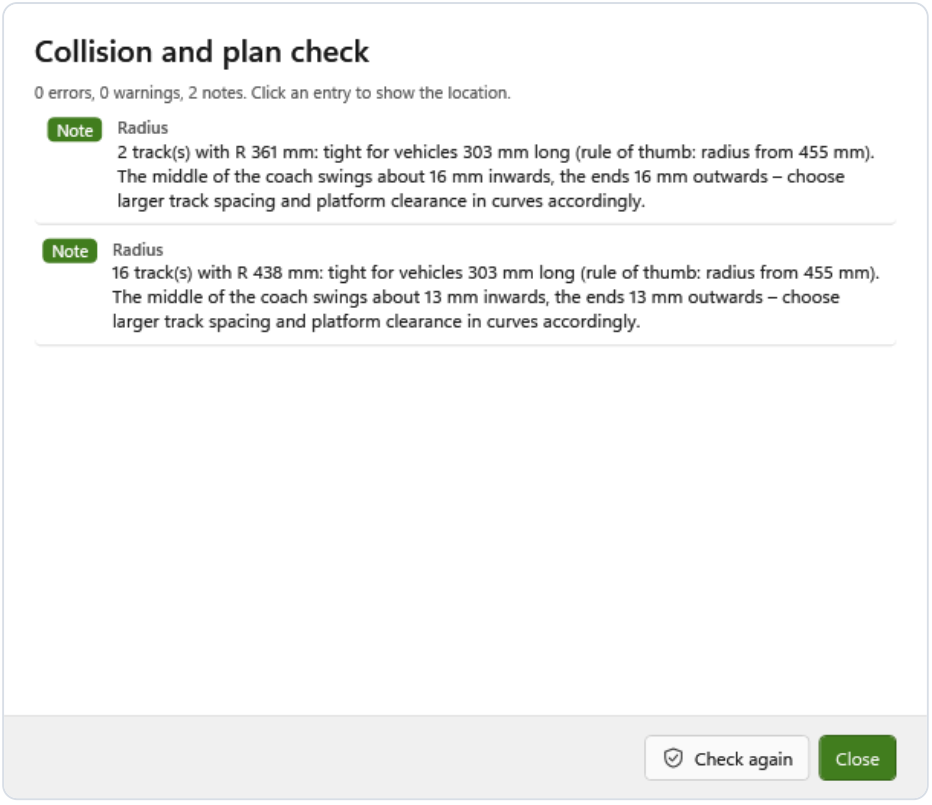


Figure 15 – Result of the plan check.

Check	What is reported
Track spacing and overlap	tracks that touch or lie too close together; for crossings at different heights the clearance height of the gauge is taken into account
Baseboard edge	tracks that project over the edge of the baseboard or into an open centre
Gradient	warning from 3 %, error from 5 %
Scenery	tracks in buildings, in water or under terrain without a tunnel
Open track ends	ends without a connection and without a buffer stop
Radius for vehicles	curves that are too tight for the longest vehicle, with the overhang of the vehicle's centre and ends
Gradient in curve	warning if a curve climbs more steeply than 2 % – in a curve a train pulls noticeably harder
S-curve	reverse curves with a small radius and no straight in between, where long coaches can lock buffers

For the three vehicle checks, enter the **longest vehicle** in millimetres in the plan properties (section **Plan check**, field **Longest vehicle (mm)**). Without an entry the program assumes a long passenger coach at the scale of the gauge.

11 3D view

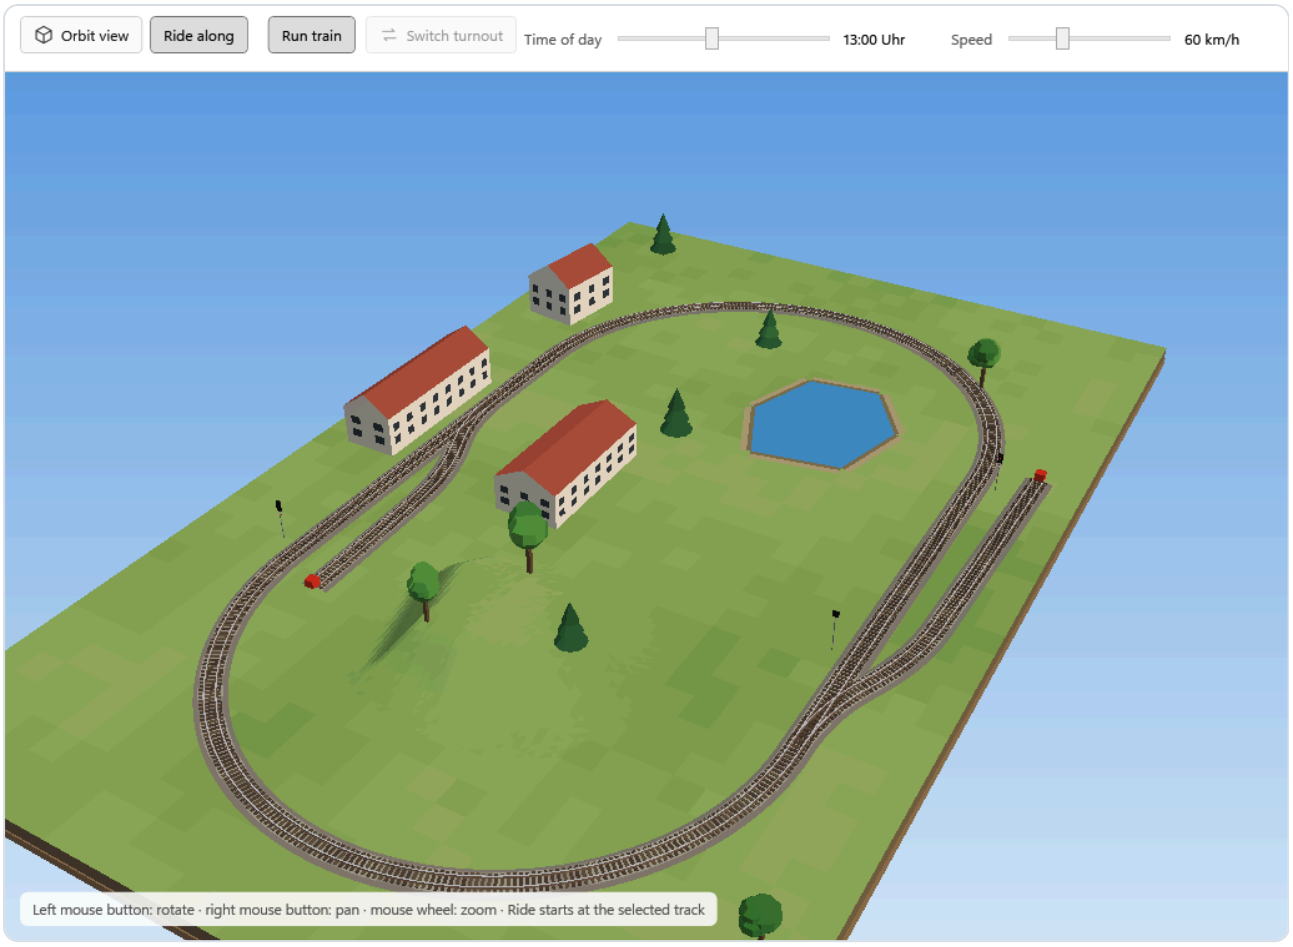


Figure 16 – The layout in 3D with terrain, buildings, trees and signals.

- **3D › 3D view**: dragging with the mouse rotates the layout, the mouse wheel zooms.
- **3D › Ride along**: you travel in the driver's cab over the tracks, starting at the selected track. You set the speed in prototype km/h.
- **3D › Time of day**: light from 5 am to 11 pm with the position of the sun, evening sky and lit windows.
- **Run train** in the 3D window: a train of a locomotive and three coaches runs over the layout. **Switch turnout** (W) switches the next turnout ahead of the train; the status line names it.

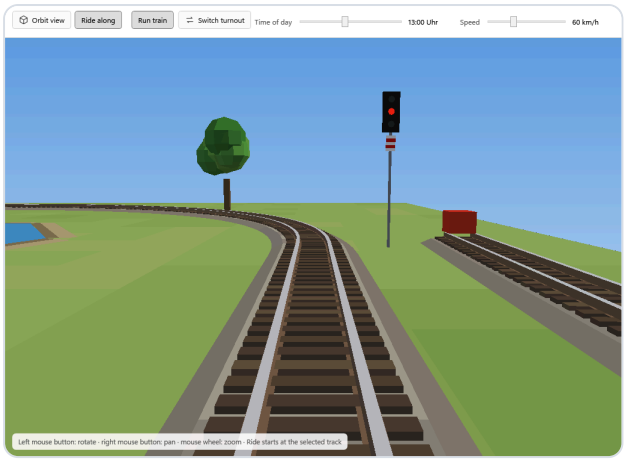


Figure 17 – Cab ride.

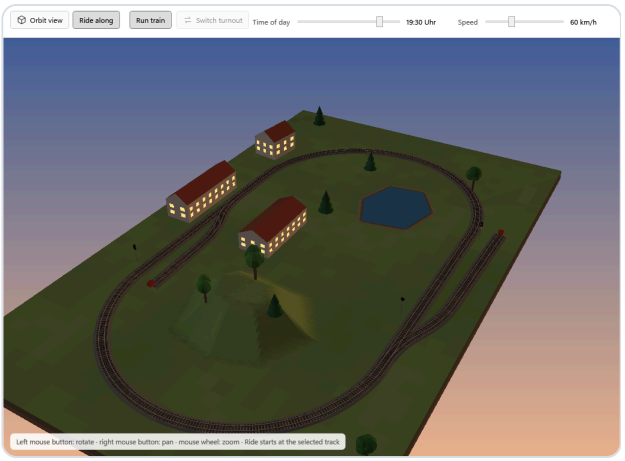


Figure 18 – Evening light.

The 3D view shows ballast bed, wooden sleepers and rails with a polished railhead, piers under raised tracks, tunnels, terrain, water, buildings, trees and signals. During the cab ride the view at cab height points slightly downwards, so that track, sleepers and turnouts ahead of the train are clearly visible.

12 Saving, parts list, printing and export

Saving small plans and opening work in both editions; the parts list, printing, the exports and saving large plans belong to the Pro edition.

Saving and opening

In the Basic edition, plans with up to 50 tracks can be saved; the Pro edition saves larger plans.

File › Save (Ctrl + S) and **Save as…** store the plan as a file with the extension **.trackmaster.json**. Opening (Ctrl + O) is also possible in the Basic edition. Plan files are interchangeable between Windows and Android and do not depend on the interface language. A plan file can also be opened with “Open with” or as a start parameter: `TrackMasterPro.exe MyLayout.trackmaster.json`.

Automatic backup: while you work, the program regularly backs up the plan in the background. If it was not closed properly – for example after a power cut – it offers to restore the backed-up state at the next start. The backup does not replace saving.

Parts list PRO

Home › Parts list counts all tracks by article number, with description and quantity, and adds the accessories: turnout motors, signals, feeders, insulated rail joiners and decoders. Flexible track is counted in whole lengths. With **Save as CSV** you take the list into a spreadsheet or your shopping list.

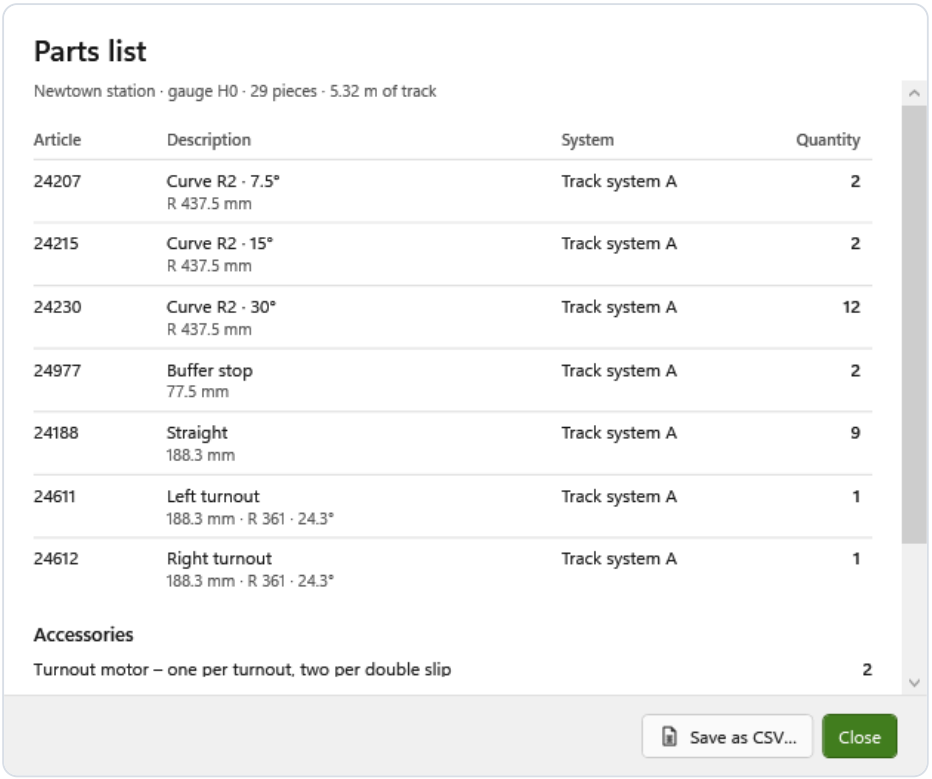


Figure 19 – Parts list with accessories.

Printing PRO

File › Print… (Ctrl+P) offers two kinds:

- **Overview**: the plan with title, baseboard and summary, reduced to one page.
- **Building template 1:1**: the plan at full size on several pages. Neighbouring pages overlap by a glue strip; registration marks and the page labels (A1, A2, B1 …) help when gluing them together. Lay the template on the baseboard and transfer the track layout. Set the actual size (100 %) in the print dialog and measure the 100 mm test dimension on each page.

Via the Windows print dialog you can also print to a PDF file.

Export PRO

- **SVG at 1:1 scale** (**File › Export as SVG (1:1)…**): a vector graphic at full size, for example as a template for a plotter or for printing on several pages.
- **Parts list as CSV** (**File › Parts list as CSV**).
- **Timber list as CSV** from the timber list window.
- **Wiring plan as a text file** from the wiring plan window.
- **Export for control software** (chapter 9).

13 The Android app

The app offers the same features as the Windows program, adapted to touch operation.

At the top is the ribbon with the tabs **Home, Tracks, Scenery, Wiring, View, 3D** and **File**, at the bottom the track library as a bar. Properties, plan check, helix, signals and the 3D view open as separate windows. In the Basic edition, Pro features carry a padlock. Choose design, font and font size under **View › Design and font** – with the same designs as on Windows. Copy and paste, routes, the language (**File › Sprache / Language**) as well as the train and turnouts in the 3D view are available too.

Gesture	Effect
Tap a piece in the library	attach at the active track end
Tap	select; make a free track end active
Drag	pan the view; on a selected piece: move the piece
Two fingers	zoom and pan
Rotate with two fingers	rotate the view freely; tapping the compass straightens it again
Long press	add a piece to the selection; on a free area: selection rectangle
Double tap	properties; on a free area: show the whole plan

The current plan is kept when you switch apps or lock the device. You save and open files via the Android file picker – in device storage or in cloud storage. This lets you start a plan on the tablet while on the move and continue on the PC.

14 Keyboard shortcuts and mouse commands

Key	Function
Ctrl + N	New plan
Ctrl + O	Open
Ctrl + S	Save (Basic up to 50 tracks)
Ctrl + P	Print PRO
Ctrl + Z / Ctrl + Y	Undo / Redo
Ctrl + A	Select all
Ctrl + D	Duplicate
Ctrl + C / Ctrl + V	Copy / Paste
Del	Delete
R / Shift + R	Rotate 15° right / left
F	Mirror
A	Switch connector
E	Next open track end
Arrow keys	Move 1 mm (Shift: 10 mm)
+ / − / 0	Zoom in / Zoom out / Whole layout
F7	Plan check
Enter / Esc	Close area / End tool
F1	Show keyboard shortcuts
W (3D window)	Switch the next turnout ahead of the train

Mouse	Function
Click on a track in the library	attach at the active track end
Drag a track from the library	place freely, snaps to nearby ends
Click on an orange end	select as the active track end
Drag a track	move (with snapping)
Shift +click	add to the selection
Drag on a free area	selection rectangle
Right / middle mouse button	pan the view
Space + drag	pan the view
Mouse wheel	zoom
Ctrl + mouse wheel	rotate the view (5°, with Shift 1°)
Click on the compass	straighten the view

15 Questions and solutions

A track does not snap on.

Check whether **Snap** is switched on in the status bar. Tracks only snap onto **free** ends; if the end is already connected, choose the next open end with E.

An oval does not quite close.

Small gaps occur when straights of different lengths are mixed. Close the gap with **Tracks › Close gap** or draw a flexible track.

A note about the Pro edition appears when saving.

The Basic edition saves plans with up to 50 tracks. The Pro edition saves larger plans. Install your licence under **File › Licence** (chapter 3).

The licence is reported as invalid.

The file must not be changed – not even by opening and saving it in a text editor. If the licence is bound to a computer, it applies only there; if an expiry date is entered, only until that day. Contact the publisher with your machine ID.

Windows reports “Windows protected your PC” during installation.

Click **More info** and **Run anyway**. The message appears for programs that Windows has not yet seen often.

Android does not install the app.

Allow the app you use to open the file (for example “Files” or the browser) to install unknown apps. If an older version with a different signature was already installed, uninstall it first.

The 3D view stays black or stutters.

Update the graphics driver. For very large layouts it helps to place trees and buildings sparingly at first.

The interface appears in the wrong language.

Choose **File › Sprache / Language…** and select the language. The menu item is labelled in both languages so it can always be found.

Where is my data?

Plans are where you saved them. Licence, settings and the automatic backup are in *%APPDATA%\TrackMaster Pro*. The program sends no data to third parties; at start-up it only fetches the current version number from the download page.

16 Glossary

Term	Meaning
Active track end	The free end marked in orange, where the next track is attached.
Connector	One end of a track piece; a turnout has three, a crossing four connectors.
Clearance height	Minimum height between two tracks lying on top of each other so that vehicles fit underneath; depends on the gauge.
Feeder	Power connection of a track section to a transformer, command station or booster.
Flexible track	Track supplied in lengths that can be bent to any radius and cut to length.
Helix	Spiral climbing line for overcoming large differences in height on a small area.
Stop aspect	Signal indication that means “stop” (Hp 0, Hp 00, Vr 0, Sh 0).
Reverse loop	Track arrangement in which a train returns to the line in the opposite direction; in two-rail systems this creates a short circuit that needs a special circuit.
Clear height	Free space between the top of rail and the underside of the track bed above.
Edge allowance	Addition to the track bed width for fixing and a guard rail.
Saw allowance	Addition to the cutting dimension for the saw cut and finishing.
Isolating joint	Insulated rail joint that separates two power sections.
Route	Path from one signal to the next with the turnout positions required.
Top of rail	Reference height of all height values in the plan.

TrackMaster Pro 1.4 · User manual, as of October 2026. Subject to change. All dimensions without guarantee; check the dimensions against the real product before cutting and buying.