THINGSTONE
TRACK8

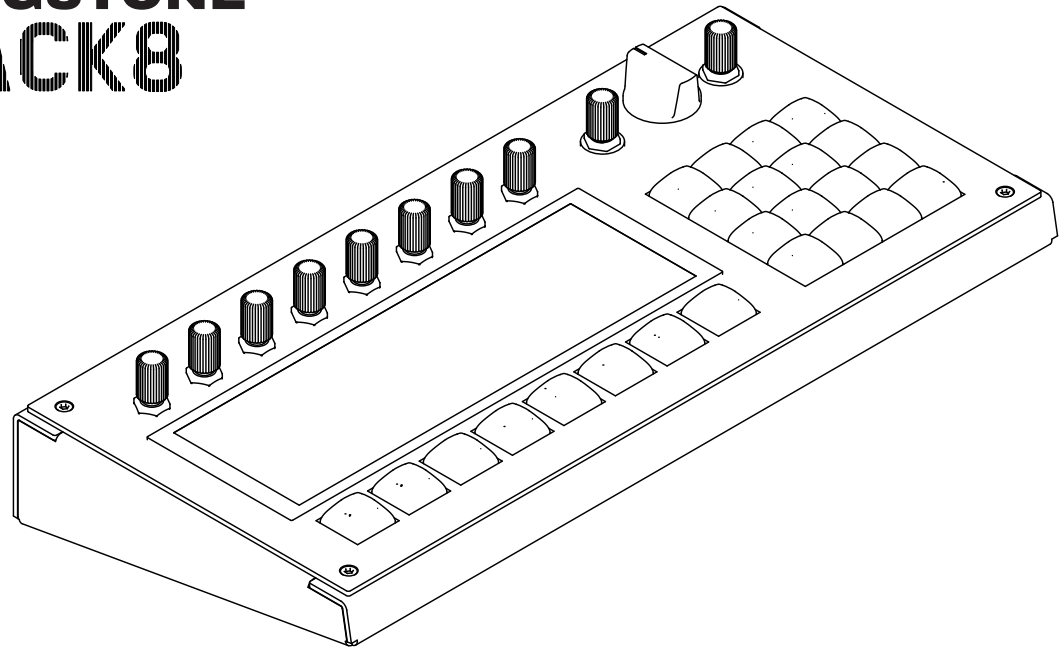

Manual

Version 1.1.0

Safety Instructions

1. Read all the instructions before using the product.
2. Do not use this product near water.
3. This product, in combination with an amplifier and headphones or speakers, may be capable of producing sound levels that could cause permanent hearing loss. Do not operate for a long period of time at high volume level or at a level that is uncomfortable.
4. The product should only be connected to a USB-C power supply that follows the PD standard.
5. The power supply should be unplugged from the outlet when left unused for a long period of time or during lightning storms.
6. Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.

Power Supply:

This device shall be powered via USB-C using a USB Power Delivery (PD) power supply capable of providing 9 V DC at 2.22 A minimum.

Thank You!

As a Software Engineer it was always my dream to build a Product you can hold in your hand. After 5 years of hard work, this dream finally came true.

I'd like to thank everyone that supported me on this journey. Thanks to all those who offered me advice and feedback. Thanks to all the Beta testers that were willing to spend precious hours with an unfinished product. Thanks to all who encouraged me to keep going and finish what I started. Thanks to my loving wife who always believed in me and Track8.

But most of all, thanks to **YOU**! It surely is a gamble to buy an expensive product from a new company. I hope you'll find using Track8 as joyful as I do. May we all create unforgettable music on Track8.

If Track8 does not meet your expectations, or if you find any bug or missing feature while using it. Do not hesitate to reach out to me. I'm thankful for all the feedback I can get.

Thank you!
Collin

Table of Contents

Connections 1
Hardware Overview 2
Buttons and Shortcuts 3
User Interface 4
Audio Path 5
Quick Start 7
Screens 8
- Audio Overview 8
- Audio Edit 10
- Midi Overview 16
- Midi Edit 18
- Master Fx 24
- Mastering 26
- Track Fx 28
- Audio / Midi Browser 30
- Settings 32
- Project Browser 34
- Audio Export 36
- Utility 38

Multitrack Recording 51
External Inputs 53
Access Internal SSD 54
Update Track8 55
Reset Base System 56
Troubleshooting 57
Power Light 58
General Information 59
Safety Instructions 60
Sicherheitshinweise 61
Consignes de sécurité 62
CE 63
FCC 64
ISED 65
Legal 66

Connections

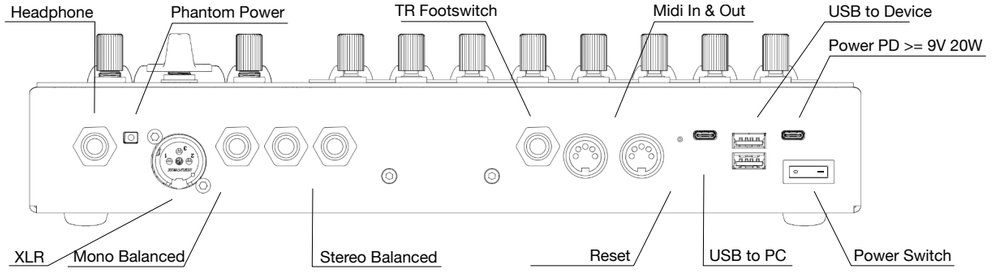

Hardware Overview

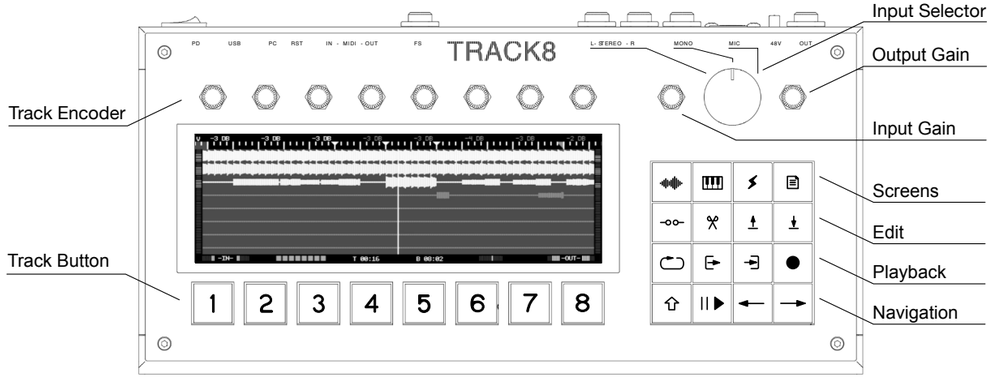

Buttons and Shortcuts

Screens

- Audio Overview
- ⇧ + Audio Overview
- Midi Overview
- ⇧ + Midi Overview
- Master FX
- ⇧ + Master FX
- Audio / Midi Browser
- ⇧ + Audio / Midi Browser

Edit

- Set Marker
- ⇧ + Clear all Markers
- Cut Area
- ⇧ + Cut all unmuted Tracks
- Copy Area
- ⇧ + Copy all unmuted Tracks
- Paste at Position
- ⇧ + Bounce Clipboard (Audio)

Playback Control

- Toggle Loop
- ⇧ + Toggle Punch
- Set Loop In
- ⇧ + Set Punch In
- Set Loop Out
- ⇧ + Set Punch Out
- Arm Record
- ⇧ + Undo

Navigation

- ⇧ Shift
- ⇧ + ⇧ Audio Overview
- Play / Pause
- ⇧ + Jump to Tape start
- Jump to Bar Left
- ⇧ + Jump to Beat Left
- Jump to Bar Right
- ⇧ + Jump to Beat Right

User Interface

Track 8 is designed to be easy to use. Most of the operations should be self-explanatory and discoverable. There are a couple of main principles the user interface follows:

- Track Encoder adjust the values at the top of the screen. If there are multiple values to adjust, pressing the Encoder toggles between the available parameters.
- Track Buttons let you select the active Track in the Overview Screens, or let you select an action at the Bottom of the screen
- The Shift Button activates alternative Functions. The Functions for the 4x4 Key Block are described above. Alternative functions for Track Encoders/Track Buttons depend on the selected screen.
- Inactive Values, Actions and Tracks are displayed muted. These can either be activated via the adjacent Track Button, or by pressing Shift (Delete Project)

Audio Path

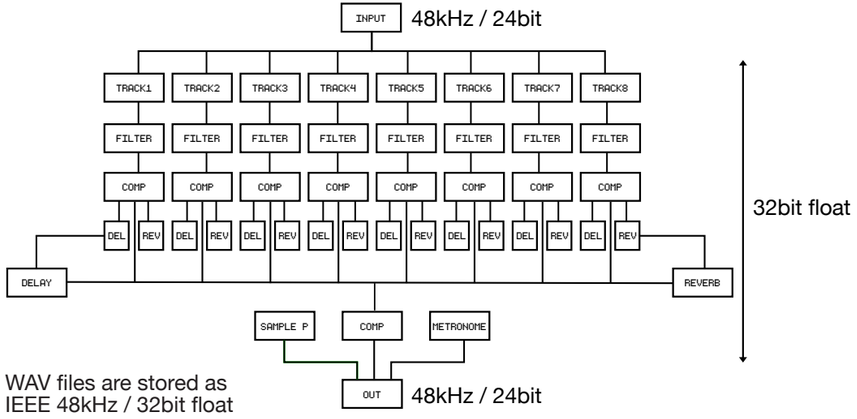

Quick Start

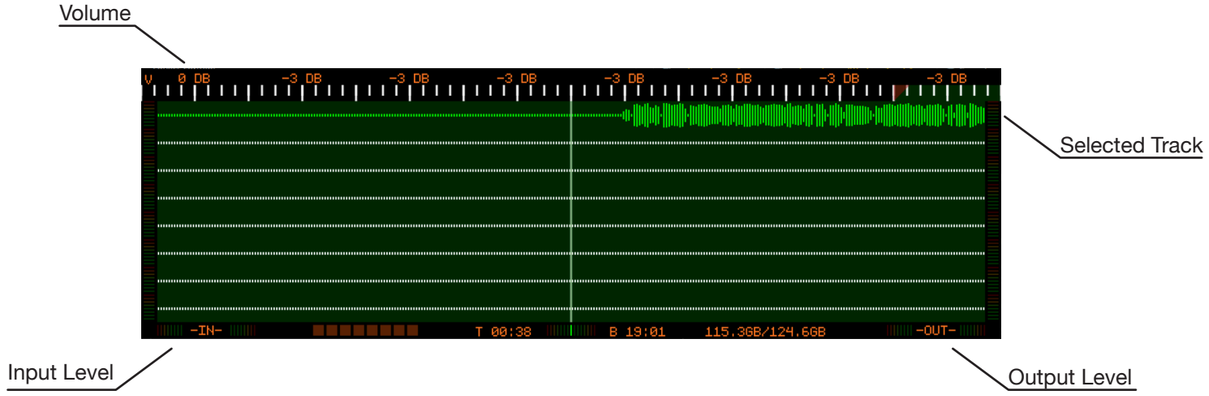

Quick Start

1. Power and connect
   - Connect a USB-C power supply (PD, 9V, ≥20W)
   - Connect headphones or speakers
   - Connect your instrument or microphone
   - Enable 48V only if using a condenser mic
2. Select an input
   - Press Input Selector
   - Play your instrument
   - Adjust Input Gain so the meter stays green
   - (Avoid red — clipping)
   - If you see input activity, you're good.
3. Arm a track
   - Press a Track Button (1–8) to select a track
   - Press Arm Record
   - The track is now ready to record
4. Record
   - Press Play
   - Recording starts immediately at the playhead
   - Press Play again to stop
5. Listen back
   - Press Play / Pause
   - Adjust Track Volume with the Track Encoder
6. Save or export (optional)
   - Open Settings
   - Use Project Browser to rename your project
   - Or export a Mix to USB

Audio Overview

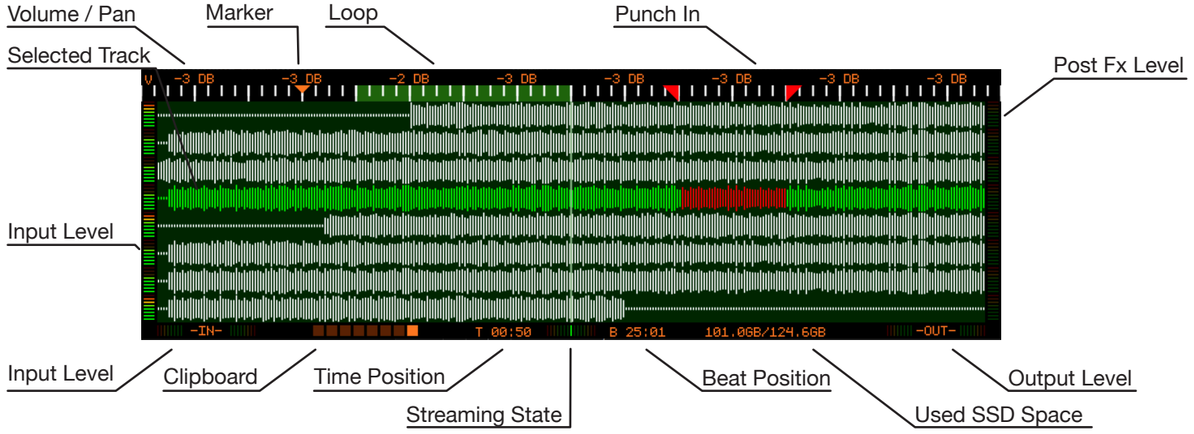

Audio Overview

- Track Encoder: Adjust Track Volume / Pan / Scroll
  Press any Encoder to switch between VOLUME/PAN/SCROLL.
- Track Button: Select active Track
  ⇧ + Track Button: Mute / Unmute Track
- The Input Level Indicator shows the incoming Audio Volume from the selected Track. Avoid red (clipping)
- Per Track Input level show the Audio Levels for each track.
- Per Track Post FX level show the Audio Levels after Track FX Filter and Compressor Stages
- The Output Indicator shows the sum of all Tracks after processed by the Master FX Section
- Make sure not to clip the Output. Avoid red (clipping)
- The Clipboard Indicator shows the origin Track of its content
- **Copy All** only takes unmuted Tracks into account

Audio Edit (Volume/Pan) ⇧ +

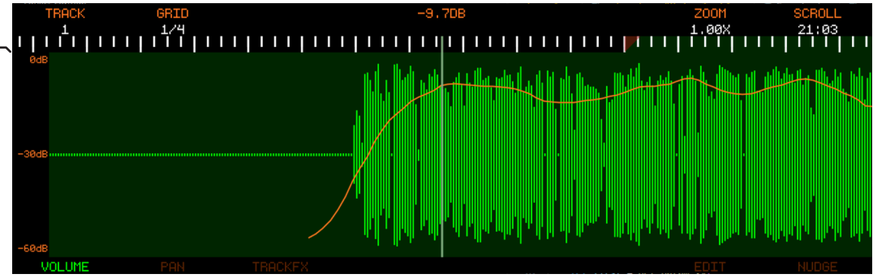

Press ⇧ + Track1 to clear Volume
Press ⇧ + Track2 to clear Pan
Press ⇧ + Track3 to clear Track Fx

Audio Edit (Volume/Pan) ⇧ +

- Encoder 1 - Track: Select active track
- Encoder 2 - Jump: Select edit precision in ms/grid
  Push Encoder: Toggle between ms / grid for scrolling
- Encoder 7 - Zoom: From 1x to 2048x
- Encoder 8 - Scroll: Move playhead position in **JUMP/GRID** increments
- Automations
  - Volume: Draw Volume automation via touch Screen
  - Pan: Draw Pan automation via touch Screen
  - Track FX: Draw automations for Filter, Compressor and Send values
  - If there is an automation present the automation category is drawn in green
  - With ⇧ + touch automations can be removed selectively
  - ⇧ + Track Buttons 1-3 delete all automations for the selected category

Audio Edit (Edit)

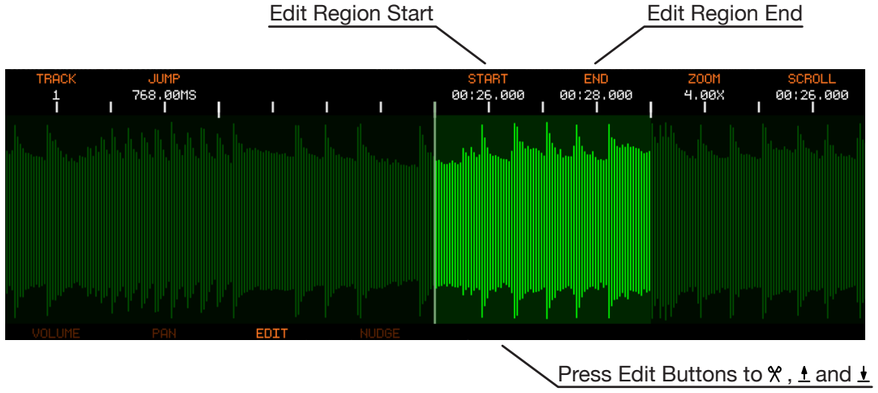

Audio Edit (Edit)

- Initial Position will be Playhead + 1 measure
- Select start and end position
- Cut and Copy Operations will only apply to this range
- Paste will paste at Playhead

Audio Edit (Nudge)

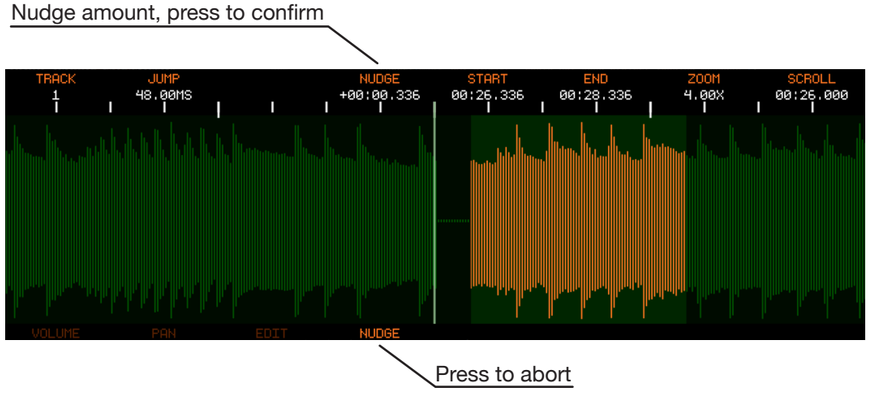

Audio Edit (Nudge)

- Select start and end position
- Nudge moves the selected range by **JUMP/GRID** amount
- Orange Audio indicates an active Nudge operation
- The temporary adjustment can be listened to by playing the tape
- Confirm by pressing the Nudge (4) Encoder
- Cancel a Nudge by pressing the Nudge Selector (Track 5) or by selecting another screen

Midi Overview

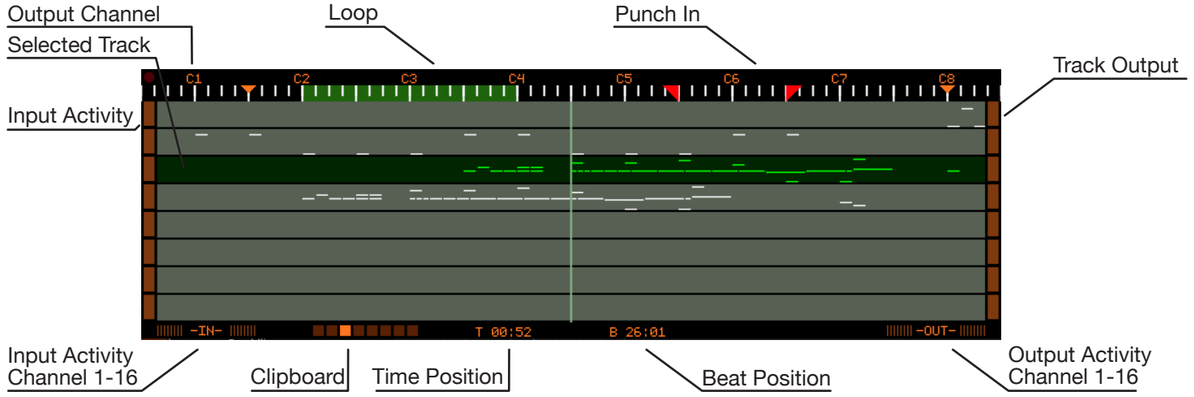

Midi Overview

- Track Encoder: Select Midi Output Channel 1-16 / Adjust Midi Offset
  Press any Encoder to toggle between Channel/Offset selection.
- Track Button: Select active Track
  ⇧ + Track Button: Mute / Unmute Track
- Midi Input (no matter what channel) is always routed to the active Midi Track
- The Input Activity meter shows the Channel the Input is receiving
- Midi Activity registers for all events (Note On, Note Off, CC, Pitch Bend)
- The Clipboard Indicator shows the origin Track of its content
- **Copy All** only takes unmuted Tracks into account

Midi Edit (Note) ⇧ + 🎹

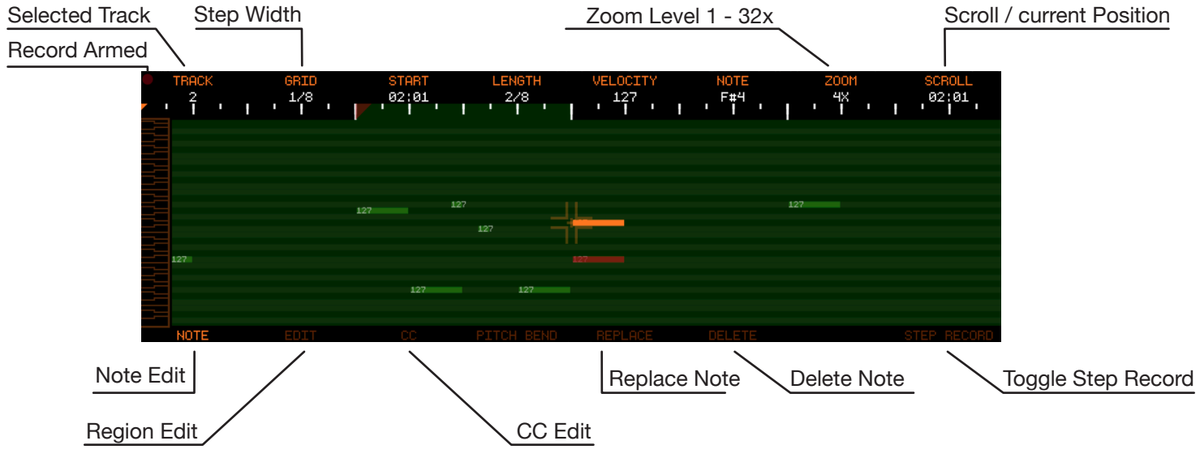

Midi Edit (Note) ⇧ + 🎹

- Encoder 1 - Track: Select active track
- Encoder 2 - Grid: Select granularity of operations
- Encoder 7 - Zoom: From 1x to 32x
- Encoder 8 - Scroll: Move playhead in **GRID** increments
- Track 8 - Step Record: Add created Note of **GRID** length and moves playhead by **GRID** forward
- To adjust a note:
  - Select the note
  - Push one of the Encoders 3-6, the selected note gets highlighted in orange
  - The note can now be edited in **START**, **LENGTH**, **VELOCITY** and **NOTE** (key)
  - To confirm the changes, push one of the Encoders 3-6 again
  - Unconfirmed changes can be dismissed by changing the screen

Midi Edit (Edit)

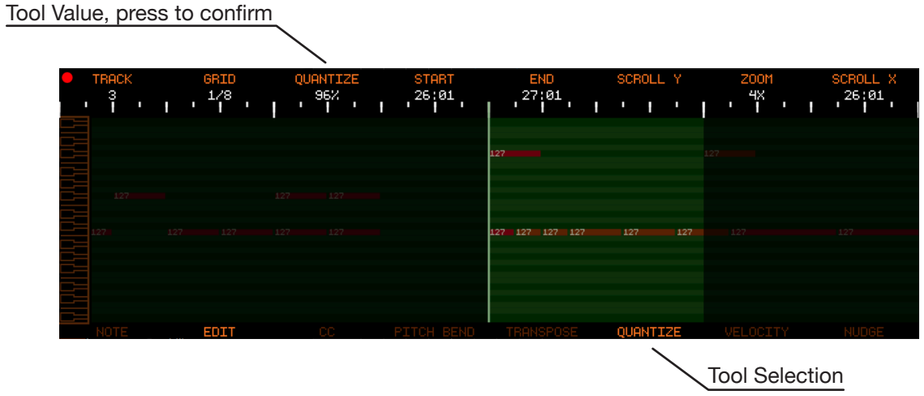

Midi Edit (Edit)

- Encoder 3 - Adjusts Amount
  - Adjusted Notes are overlaying original
  - Playback lets you prelisten to the adjustment
  - Confirm by pressing Encoder 3
  - Cancel by pressing the Track Button or switch screens
- Track 6 - Quantize: Correct Notes to the next nearest **GRID**, amount in Percent
  ⇧ + Encoder 3 allows access to Humanize and Swing
- Track 7 - Velocity: Adjust Notes Velocity in percent. 0 = Midi Vel:0. 100% = Midi Vel: 127
- Track 8 - Nudge: Nudge Notes by **GRID** amount

Midi Edit (CC / Pitch Bend)

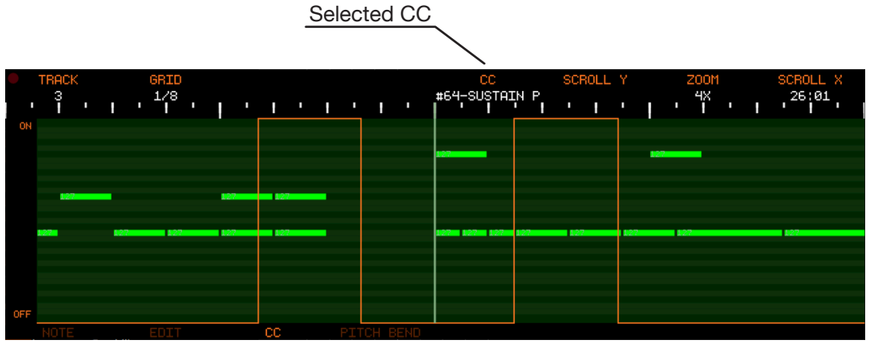

Press ⇧ + Track3 to clear CC
Press ⇧ + Track4 to clear Pitch

Midi Edit (CC / Pitch Bend)

- (CC) Encoder 5: Select active CC (defined)
  This lets you select from CCs defined by the Midi Specification
- (CC) ⇧ + Encoder 5: Select active CC (undefined)
  Midi CCs without a Midi definition. Free CCs
- Midi CCs defined as Pedal only allow for ON/OFF (0/127)
- All other CCs have a Range of 0-127
  ⇧ + Track 3: Clear all Values of selected CC from active Track
  ⇧ + Track 4: Clear all Pitch Bend Values from active Track
- ⇧ + touch lets you remove automation values selectively

Master Fx ⚡

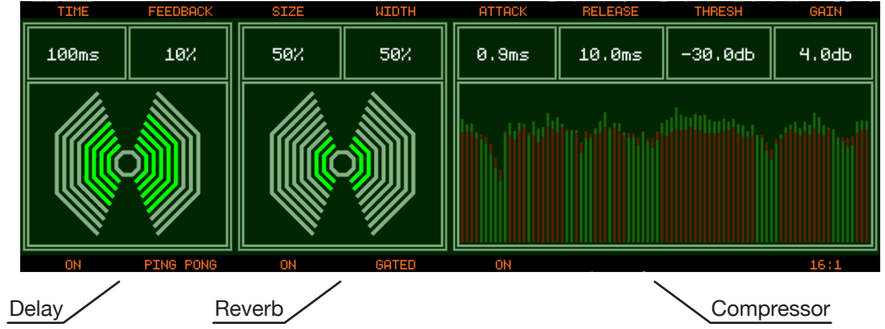

Master Fx ⚡

- Encoder 1+2 - Delay Parameter
  - Press Encoder 1 to toggle between time in ms/beats
  - Press Encoder 2 to between feedback and ping pong width
- Encoder 3 - Reverb Size
- Encoder 4 - Width/damp/pre-delay/gate threshold (Press Encoder 4 to toggle)
- Encoder 5-8 - Compressor Adjustments
  - Visualization allows you do judge the Compressor amount
  - Green: Pre Compressor, Muted Red: Post Compressor
  - Red indicated clipping of the Output Digital-Analog Converter (if the following Mastering section is bypassed)
- Track 2 - Toggle PingPong Delay on/off
- Track 4 - Toggle Reverb algorithms (MODERN / HALL / AMBIENT / GATED)

Mastering ⚡→

Mastering ⚡→

- The Mastering section sits at the end of the signal chain and can be reached in Master Fx by pressing the right arrow (→)
- Encoder 1: Input gain that lets you drive the mastering chain
- Encoder 2: Highpass filter to remove unwanted low frequencies
- Encoder 3: Tape type drive section with Drive and Thickness parameters
- Encoder 4-5: Low/High Shelf filters with adjustable Frequency.
- Encoder 6: High Frequency Compressor with Threshold and Frequency
- Encoder 7: Stereo Enhancer with gain settings for Low/High frequencies
- Encoder 8: Output gain to adjust the final volume. Make up for any loudness loss in the chain.
  - Make sure not to clip here (> 0dB = red)
- Each component can be enabled/disabled with the adjacent Track buttons. Track Button 8 sets the bypass of the whole Mastering section

Track Fx ⇧ + ⚡

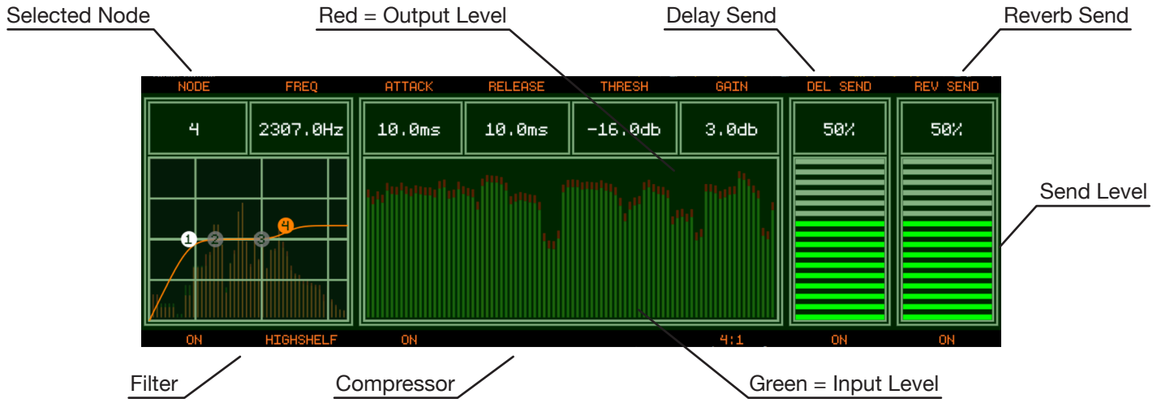

Track Fx ⇧ + ⚡

- Encoder 1 - Node: Select filter node
  - Press Encoder 1 to toggle node on/off
- Encoder 2 - Adjust Filter Frequency / Q Value / Gain (only for Shelf Filter Types)
  - Press Encoder 1 to toggle between FREQ/Q/GAIN
- Encoder 3 - 6 Compressor Adjustments
  - Visualization allows you do judge the Compressor amount
  - Green: Pre Compressor, Muted Red: Post Compressor
  - As audio path is 32 bit float, Red does not indicate clipping, but values above 1.0/-1.0
  - Press Encoder 3: Toggle between Attack and Sidechain input selection
- Encoder 7 - Send level to Master FX Delay
- Encoder 8 - Send level to Master FX Reverb

Audio / Midi Browser

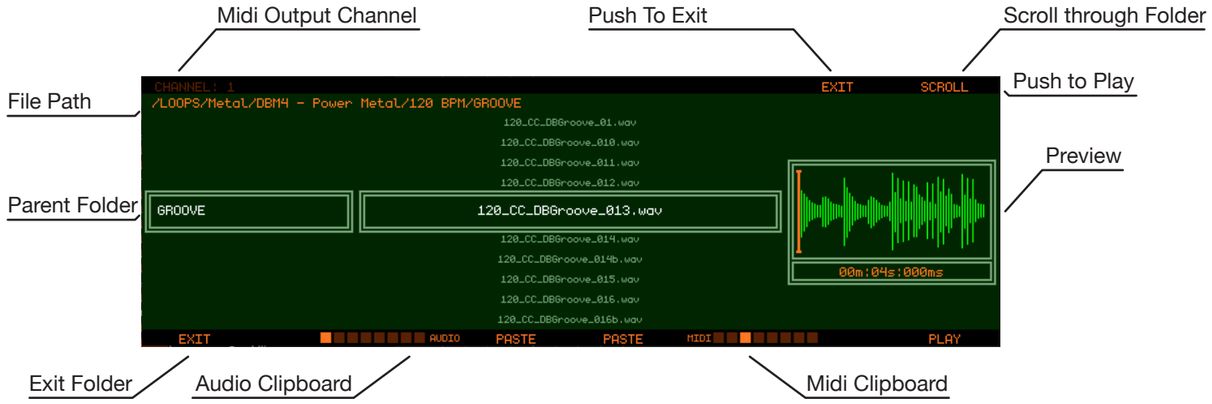

Audio / Midi Browser

- Encoder 1 - Select Midi output channel for Midi File playback
- Encoder 7 - Push to Exit Folder
- Encoder 8 - Scroll through files in current folder. Push Encoder to Play / Enter Folder

- Track 1 - Exit current folder to parent folder, select USB Storage device at root level
- Track 4 - Paste Audio from the audio clipboard into the current folder as .wav file
- Track 5 - Paste Midi from the midi clipboard into the current folder as .mid file
- Track 8 - Play currently selected Audio / Midi file. Enter Folder if selected Item is a Folder.

- ⤒ - Copy currently selected Audio / Midi file to clipboard

Settings ⇧ + 🗎

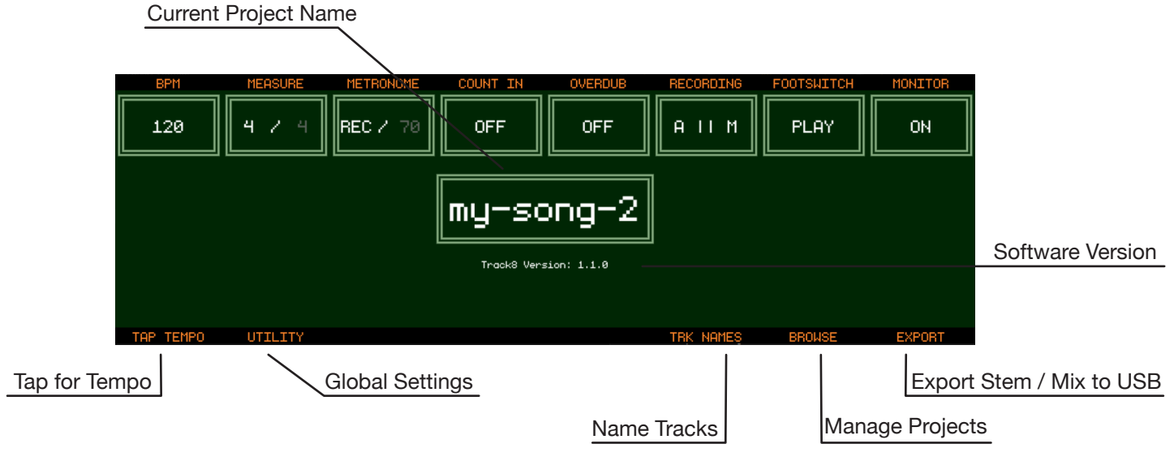

Settings ⇧ + 🗎

- Encoder 1 - Adjust Project Tempo
- Encoder 2 - Project Measure / Beats
  Press Encoder 2 to toggle between Measure / Beat
- Encoder 3 - Metronome Volume / Type
  Press Encoder 3 to toggle between Volume / Type
- Encoder 4 - Precount: OFF - 16 Beats
- Encoder 5 - Overdub: ON: Adds recording Input to Audio / Midi. OFF: recording input overwrites
- Encoder 6 - Recording: Select if on Recode Audio and Midi or Audio or Midi is recorded.
- Encoder 7 - Footswitch: PLAY: Tape starts/stops on press
- REC: Toggles Recording on press. Useful for manual punch-in
- REC-HOLD: Only records while Footswitch is pressed
- Encoder 8 - Monitoring: Disable for acoustic instruments to avoid Feedback

Project Browser

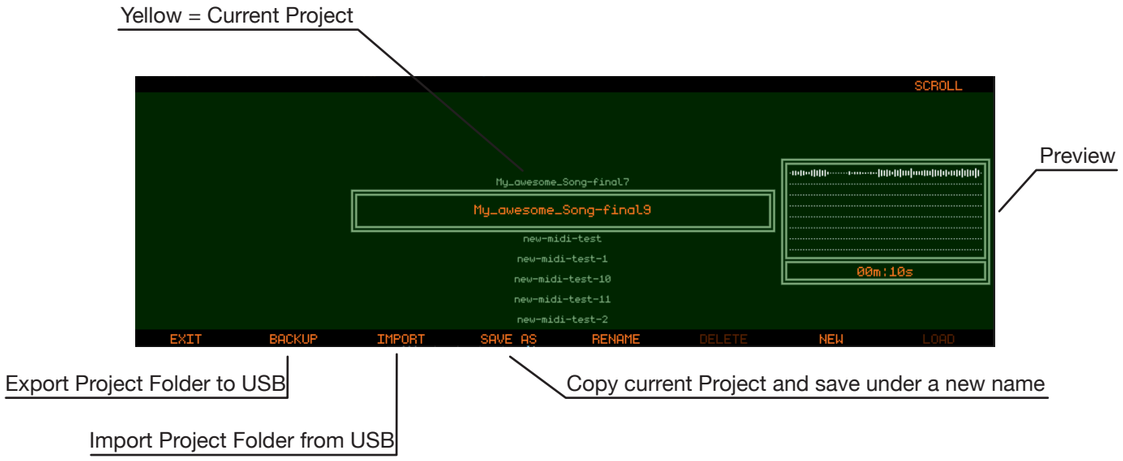

Project Browser

- Encoder 8 - Select Project
- Track 1 - Exit to Settings
- Track 2 - Backup Project to USB Storage
- Track 3 - Import Project from USB Storage
- Track 4 - Save current Project under new name and change the current project to the new one
- Track 5 - Rename current project
- Track 6 - Delete selected Project. Current Project can't be deleted. Change Projects first
- Track 7 - Create new Project
- Track 8 - Load selected Project
- Calculating the Preview takes some time, as all WAV files need to be read and condensed.

Audio Export

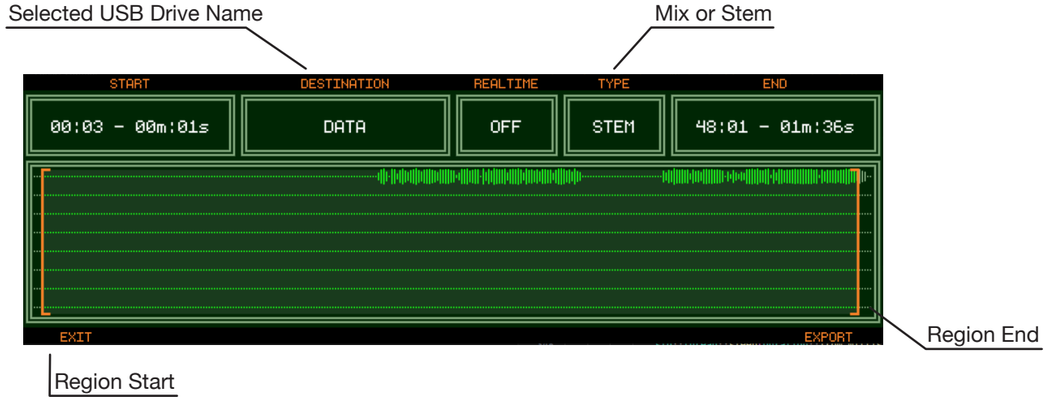

Audio Export

- Encoder 1+2 - Select Start Point (Encoder 1: Measures, Encoder2: Beats)
- Encoder 3+4 - Select destination USB Storage Device
- Encoder 5 - Select Export Type
  - Mix (Mixdown with current setting and FX)
  - Stem (raw .wav files of all Tracks)
- Encoder 6 - Realtime Export. Only available when an external Soundcard is connected. This allows to created a mix with outboard gear connected.
- Encoder 7 + 8 - Select End Point (Encoder 1: Measures, Encoder2: Beats)

- Mixdown export time depends on the tape length and can by quite long (~0.5 * tape length). Realtime exports take as long as the selected region (+ some overhead for finalizing and copying the file)

Utility

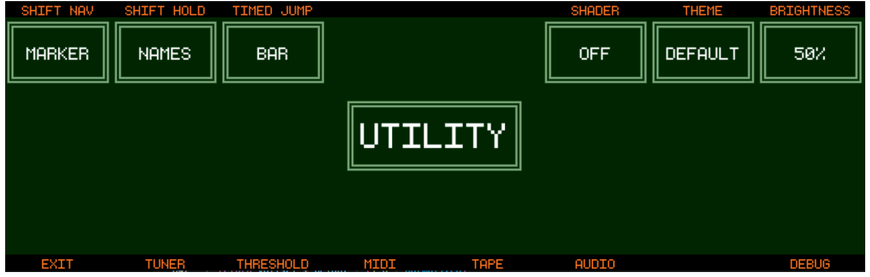

Utility

- Encoder 1 - Set ⇧ + Arrow action.
  - **BEATS** moves the playhead by one beat
  - **MARKER** jumps to the previous/next Marker
- Encoder 2 - If Names is selected, holding ⇧ shows an overlay with the configured track names and if applicable input/send/return channel names
- Encoder 3 - Allows to execute a timed jump either at the end of the bar or beat when moving between **MARKER** while playback
- Encoder 6 - Select to enable/disable the retro shader
- Encoder 7 - Select a color theme
  - Visit thingstone.com/theme-editor to create custom themes
  - Put the resulting **theme.json** into Track8 **bin/** folder (Check Page **54** on how to access the Track8 SSD)
- Encoder 8 - Adjust the Brightness

Utility - Tuner

Utility - Tuner

- Encoder 1 - If **FS** is selected for **FOOTSWITCH** in the project settings, choose **HOLD** or **TOGGLE**
- Encoder 2 - Choose between a circular or bar style display
- Encoder 6 - Select the minimum volume needed to register a note
- Encoder 7 - Select the clarity needed to register a note, decrease this if you try to tune a distorted signal
- Encoder 8 - Select your A frequency

Utility - Threshold

Utility - Threshold

- Encoder 1 - Toggle threshold recording
- Encoder 8 - Choose the minimum level to activate recording
- When a Track is armed for recording playback will automatically start when the input signal reached the threshold

Utility - Midi

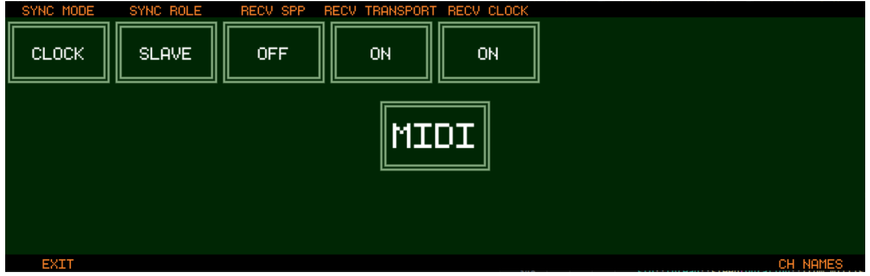

Utility - Midi

- Encoder 1 - Select Sync Mode, **CLOCK** or **MTC**
- Encoder 2 - Select sync role, **MASTER** or **SLAVE**
- Mode: **CLOCK**
  - Encoder 3 - Toggle send/receive SPP
  - Encoder 4 - Toggle send/receive Transport
  - Encoder 5 - Toggle send/receive Clock
- Mode: **MTC**
  - Encoder 3 - Select Offset for slave role, up to 60 min
  - Encoder 8 - Select Frame Rate
- Track 8 - Name the Midi Channels 1-16, to make Channel selection easier.

Utility - Tape

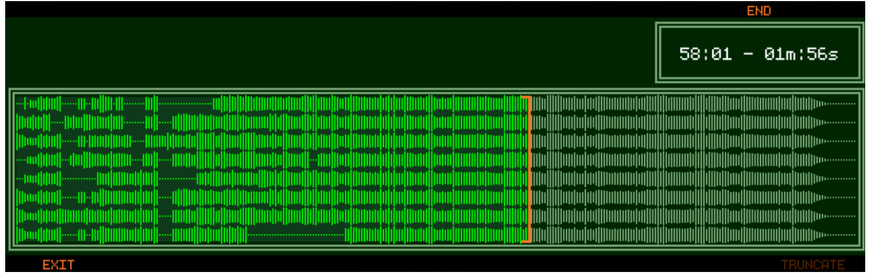

Utility - Tape

- Encoder 7/8 - Select the new End of the Tape

This allows you to trim the whole tape to a new length.

This action can’t be reverted!

Utility - Audio

Utility - Audio

- Select a connected class-compliant USB Soundcard
  - Must support 48kHz, if bus powered must draw less than 5W
- Mode
  - Multi-Track: Record to multiple tracks at a time
  - Single-Track: Record to the currently selected track (similar to internal Soundcard)
- Internal Monitoring: Send Main Out to Track8 Headphone Jack
  - Useful if you are connected to a rack mounted Soundcard with a difficult to reach main output
- Changes to Soundcard/Mode/Internal Monitoring or Buffer Size need to be applied with the Track 8 Button.

Utility - Audio

- TRK IN: Set the Input Mapping of each Track, If only one channel is selected -> mono
- TRK SEND: Set the Track Send channel. The signal is Post Volume/Pan, Pre FX
- TRK RETURN: Set the Track Return channel.
- EXTERNAL: Set external inputs. Allows you to feed up to 8 extra Stereo signals into the signal chain pre Master Fx.
- MAIN OUT: Sets the Main output channels.
- In the above mentioned screens, Encoder Push toggles between the left/right channel. If no second channel is configured the mapping is considered as mono.
- IO NAMES: Lets you set names to each Input/Output channel. For easier mapping.

Multitrack Recording

- When Multitrack Recording via an USB Soundcard is enabled:
  - Each channel gets an Track Input Channel indicator on the far left
  - Numbers on the right indicate Track Send / Track Return channels

- To prime a Track for recording, hold the Track Button and press Record
  - A primed Track is indicated by a red Input Channel
- When pressing record, all primed channels are armed for recording.
- Mono Channels are indicated by a single channel number. Stereo Channels show 2 channel numbers. The first channel is considered the left channel, the second channel the right channel.

Multitrack Recording

Audio Overview

- Multitrack Recording adds 2 Encoder Push Functions to the Track Encoders
  - RV: Adjusts the incoming return signal volume

  - RM: Adjusts the mix of the Track audio with the return audio

EXTERNAL INPUTS

External Inputs can be controlled on the Master Fx screen by pressing the left arrow (←)

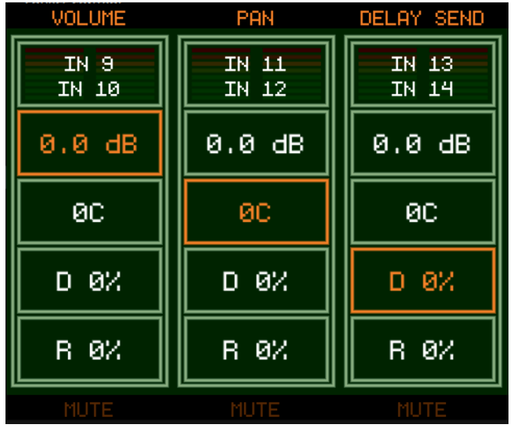

For each configured EXTERNAL channel

- Encoder Push selects the Encoder function
- VOLUME: Adjusts the digital input gain
- PAN: Adjusts the panning of the signal
- DELAY SEND: Amount of the signal that is sent to the Master Fx Delay
- REVERB SEND: Amount of the signal that is sent to the Master Fx Reverb

Access Internal SSD

To access the Project files execute the following steps:

- Connect Track8 via the USB-C to USB-A Cable to your PC (no USB-C to USB-C cable)
- Track8 will restart
- The internal SSD will appear as a Disk drive (TRACK8) in your file browser

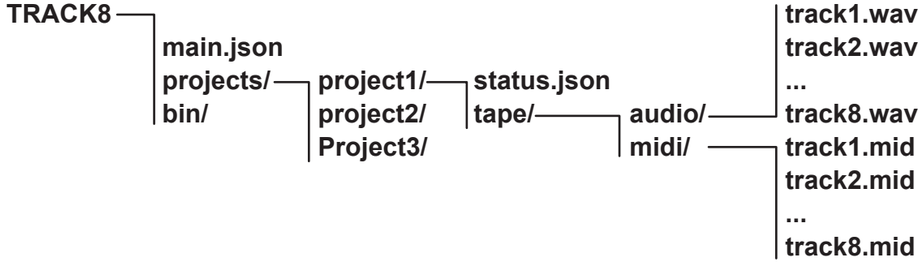

Update Track8

To update the Track8 Application, gain access to the internal SSD (see page 34) and:

- Download the Application Update from the latest release on following web page:
  - https://github.com/ThingstoneGmbH/Track8/releases
- Copy the new track8 file to the TRACK8 Drive into the **bin** folder (override existing)
- Safely unmount the TRACK8 Drive
- Pull the USB-c to USB-A cable
- Track8 will restart

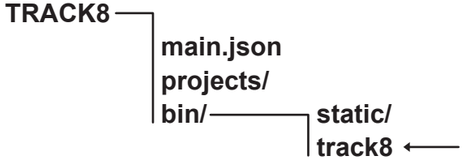

Reset the Base System

In case Track8 is unable to boot or a major update is released, execute the following steps:

- Download the Full Update from following web page and unzip it
  - https://github.com/ThingstoneGmbH/Track8/releases/tag/v1.0.0
- Connect the USB-C to USB-A Cable to your PC
- Hold down the RST Button with a paper clip
- At least one external drive will appear in your file manager: **bootfs**
- Use your Computers Disk Utility to restore the track8 base system onto **bootfs** Disk
- Safely unmount the TRACK8 Drive
- Power down Track8, wait until the Power light turns off
- Disconnect USB-A Cable
- Restart Track8

Troubleshooting / Feature Requests

- If something doesn't work:
  - No sound → check Track mute & Monitoring
  - No input → check Input Selector & Gain
  - Red output → lower Track Volume

If you experience any other issue do not hesitate to ask for support via:

- Email: info@thingstone.com
- Issue Tracker: https://github.com/ThingstoneGmbH/Track8

Feature Requests are always welcome. Please use the Track8 Github page to submit your request.

Power Light

The light at the back will tell you the current Power state:

- Green: Track8 is running, do not remove the power supply
- Red: Incompatible Power Supply. Please use a power Supply that offers Power Delivery (PD) at 9V >= 2.22A / 20W
- Off: Power can be removed

General Information

Inputs/Outputs:	Headphone (6.3mm Stereo phone jack), XLR balanced (with optional Phantom Power), Mono balanced (6.3mm Mono phone jack), Stereo balanced (2x6.3mm Mono phone jacks), Midi In/Out (DIN), Footswitch (6.3mm Mono phone jack), 2xUSB-A for Storage and Midi Devices, USB-C for PC Connection.
Power Supply:	USB-C Power Delivery 9V >= 2.22A / 20W
Power draw:	15W max. + USB Accessories
Dimensions:	340mm x 170mm x 60mm, 1.5kg

Precautions

Location:	Using this device in direct sunlight, extreme heat or humidity, excessive dust or dirt, excessive vibrations, close to magnetic or electromagnetic fields can cause malfunctions.
Power Supply:	Connect the AC adapter only to an AC outlet of the correct voltage. Do not connect the Device to an inappropriate AC adapter.
Handling:	Do not apply excessive force to switches or controls.
Care:	If the exterior becomes dirty, wipe it with a clean, dry cloth. Do not use liquid cleaners.
Disposal:	Do not discard this product along with ordinary household waste.

Safety Instructions

Please read these instructions for use and safety before use and use the product properly. The symbols used in this document indicate precautions intended to protect you or other users from loss or injury due to improper use. The symbols are defined as follows:

†	Indicates serious injury or death.
↯	Indicates injury or damage to the device.
△	Required or required action.
x	Prohibited or prohibited action.

† WARNING

Power supply (Refer to the instruction manual for detailed power supply information.)
△ Always use the DC power adapter specified for this device.
△ Read the safety instructions before using the DC power adapter.

↯ CAUTION

Product handling
△ Do not drop, strike, or apply excessive force to the device.
△ Do not allow objects or liquids to enter the device.

Operating environment
x Avoid operation in extremely high or low temperatures (0-40°C).
x Avoid operation near heat sources such as heaters or stoves.
x Avoid operation in high humidity, or near splashing water.
x Avoid operation in locations subject to strong vibrations.
x Avoid operation in environments with a lot of dust or sand.

Connecting cables and other devices
△ Always turn all devices OFF before making any connections.
△ Before transporting, all connected cables and the power adapter must be unplugged.

Volume
x Do not operate the device at high volume for extended periods.

Instructions for use

Interference from other electronic devices
To ensure high operational reliability, this device is designed to emit low levels of electromagnetic waves and is immune to them. However, if devices that emit strong electromagnetic waves or can be interfered with by them are operated in close proximity, interference may occur. In this case, increase the distance between the devices.
Electromagnetic interference and interference can cause malfunctions, data loss, noise, or other problems in any electronic device, including this one.

Cleaning
Wipe away dirt on the housing with a soft cloth. If necessary, use a slightly damp cloth to wipe the surfaces. Do not use aggressive cleaning agents or solvents such as acetone, paint thinner, brush cleaner, scouring cream, or benzine.

Notes on temperature
If the device is operated continuously for an extended period, it may become warm. This is completely normal and not a problem as long as it is not too hot to the touch.

Complete failure and malfunction
If any malfunctions or defects occur, immediately turn off the device and unplug it from the power supply.

Sicherheitshinweise

Bitte lesen Sie die vorliegenden Gebrauchs- und Sicherheitshinweise vor dem Gebrauch unbedingt durch und verwenden das Produkt ordnungsgemäß. Die in diesem Dokument verwendeten Symbole weisen auf Vorsichtsmaßnahmen hin, die Sie oder andere Benutzer vor Verlust oder Verletzung aufgrund von Fehlbedienung schützen sollen. Die Symbole sind wie folgt definiert:

†	Hier drohen ernsthafte Verletzungen bis hin zum Tod
↯	Hier kann es zu Verletzungen oder zu Schäden am Gerät kommen
△	Notwendige oder vorgeschriebene Handlung
x	Verbotene oder unzulässige Handlung

† WARNUNG

Stromversorgung (Ausführliche Informationen zur Stromversorgung finden Sie in der Bedienungsanleitung
△ Verwenden Sie immer das für dieses Gerät spezifizierte Gleichstromnetzteil.
△ Lesen Sie vor der Verwendung des Gleichstromnetzteiles die Sicherheitshinweise durch.

↯ VORSICHT

Produkthandhabung
△ Lassen Sie das Gerät nicht herunterfallen, stoßen Sie es nicht und üben keine übermäßige Kraft aus.
△ Es dürfen weder Gegenstände noch Flüssigkeiten ins Gerät gelangen.

Betriebsumgebung
x Vermeiden Sie einen Betrieb unter besonders hohen oder niedrigen Temperaturen (0-40°C).
x Vermeiden Sie den Betrieb in der Nähe von Wärmequellen wie Heizgeräten oder Öfen.
x Vermeiden Sie einen Betrieb in hoher Luftfeuchtigkeit oder in der Nähe von Spritzwasser.
x Vermeiden Sie den Betrieb an Orten mit starkenVibrationen.
x Vermeiden Sie den Betrieb in einer Umgebung mit viel Staub oder Sand.

Anschluss von Kabeln und weiteren Geräten
△ Schalten Sie immer zuerst alle Geräte AUS, bevor Sie Verkabelungen vornehmen
△ Vor dem Transpport müssen alle angeschlossenen Kabel und das Netzteil vom Gerät abgezogen sein

Lautstärke
x Betreiben Sie das Gerät nicht länger mit hoher Lautstärke

Gebrauchshinweise

Einstreuungen mit anderen elektronischen Geräten
Zur Gewährleistung einer hohen Betriebssicherheit gibt dieses Gerät konstruktionsbedingt wenig elektromagnetische Wellen ab und unempfindlich gegen diese. Wenn jedoch Geräte, die starke elektromagnetischen Wellen abgeben oder dadurch gestört werden können, in unmittelbarer Nähe betrieben werden, kann es zu Einstreuungen kommen. In diesem Fall vergrößern Sie den Abstand zwischen den Geräten.
Elektromagnetische Störungen und Einstreuungen können bei jedem elektronischen Gerät, so wie bei diesem, zu Fehlverhalten, Datenverlust, Störgeräuschen oder anderen Problemen führen.

Reinigung
Wischen Sie Schmutz auf dem Gehäuse mit einem weichen Tuch ab. Falls nötig, verwenden Sie ein leicht feuchtes Tuch zum Abwischen der Oberflächen. Verwenden Sie keine aggressiven Reinigungs- und Lösungsmittel wie Aceton, Farbverdünner, Pinselreiniger, Scheuermilch oder Reinigungsbenzin.

Anmerkungen zur Temperatur
Bei durchgehendem Betrieb über einen längeren Zeitraum kann sich das Gerät erwärmen. Dieses Verhalten ist völlig normal und unproblematisch, solange es nicht zu heiß zum anfassen ist.

Komplettausfall und Fehlfunktion
Sobald Fehlfunktionen oder Defekte auftreten, schalten Sie das Gerät umgehend ab und ziehen die Stromversorgung ab.

Consignes de sécurité

Veuillez lire attentivement ces instructions d'utilisation et de sécurité avant toute utilisation et utiliser le produit correctement. Les symboles utilisés dans ce document indiquent les précautions à prendre pour vous protéger, vous et les autres utilisateurs, contre toute perte ou blessure due à une mauvaise utilisation. Les symboles sont définis comme suit:

†	Indique une blessure grave, voire mortelle.
↯	Indique une blessure ou un dommage à l'appareil.
△	Action requise ou obligatoire.
x	Action interdite ou interdite.

† AVERTISSEMENT

Alimentation (consultez le manuel d'instructions pour plus d'informations sur l'alimentation)
△ Utilisez toujours l'adaptateur secteur CC spécifié pour cet appareil.
△ Lisez les consignes de sécurité avant d'utiliser l'adaptateur secteur CC.

↯ ATTENTION

Manipulation du produit
△ Ne laissez pas tomber l'appareil, ne le heurtez pas et n'exercez pas de force excessive sur celui-ci.
△ Ne laissez pas d'objets ou de liquides pénétrer dans l'appareil.

Environnement d'utilisation
x Évitez de l'utiliser à des températures extrêmement élevées ou basses (0 à 40 °C).
x Évitez d'utiliser l'appareil à proximité de sources de chaleur telles que des radiateurs ou des cuisinières.
x Évitez de l'utiliser dans des endroits très humides ou à proximité de projections d'eau.
x Évitez de l'utiliser dans des endroits soumis à de fortes vibrations.
x Évitez de l'utiliser dans des environnements poussiéreux ou sablonneux.

Connexion des câbles et autres appareils
△ Éteignez toujours tous les appareils avant d'effectuer toute connexion.
△ Avant le transport, tous les câbles connectés et l'adaptateur secteur doivent être débranchés.

Volume
x N'utilisez pas l'appareil à volume élevé pendant une période prolongée.

Mode d'emploi

Interférences avec d'autres appareils électroniques
Afin de garantir une fiabilité opérationnelle élevée, cet appareil est conçu pour émettre de faibles niveaux d'ondes électromagnétiques et est insensible à celles-ci. Cependant, si des appareils émettant de fortes ondes électromagnétiques ou susceptibles d'être perturbés par celles-ci sont utilisés à proximité, des interférences peuvent se produire. Dans ce cas, augmentez la distance entre les appareils.
Les interférences électromagnétiques et les interférences peuvent provoquer des dysfonctionnements, des pertes de données, du bruit ou d'autres problèmes dans tout appareil électronique, y compris celui-ci.

Nettoyage
Essuyez la saleté sur le boîtier avec un chiffon doux. Si nécessaire, utilisez un chiffon légèrement humide pour essuyer les surfaces. N'utilisez pas de produits de nettoyage agressifs ni de solvants tels que l'acétone, les diluants à peinture, les nettoyants pour pinceaux, les crèmes à récurer ou l'essence.

Remarques sur la température
L'appareil peut chauffer en cas d'utilisation prolongée en continu. Ce phénomène est tout à fait normal et ne constitue pas un problème tant qu'il n'est pas trop chaud au toucher.

Panne totale et dysfonctionnement
En cas de dysfonctionnement ou de défaut, éteignez immédiatement l'appareil et débranchez-le du secteur.

CE

EU - DECLARATION OF CONFORMITY

TRACK8

Manufacturer:	Thingstone GmbH
Address:	Bruchsaler Str. 18 76356 Weingarten, Germany
Product name:	Track8

Thingstone GmbH hereby declares that these device types comply with the relevant standards and directives listed below:

2014/30/EU	[EMV]
2011/65/EU & 2015/863/EU	[ROHS]
DIN EN ISO/IEC 17025	
IEC 62368-1:2018	

Weingarten, 18.09.2025

Collin Raddatz,
Geschäftsführer Thingstone GmbH

FCC

FCC Compliance

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

This device is intended to be powered by an external USB-C power supply that is compliant with FCC Part 15 Class B.
Use of non-compliant or poorly filtered power supplies may result in increased electromagnetic emissions and may cause the device to exceed FCC regulatory limits.

Responsible Party (FCC SDoC):

Americas Compliance Consulting LLC, dba iCertifi
5809 US-2, Suite B, Albeni Plaza
Priest River, ID 83856
United States
Email: fccagent@icertifi.com

ISED

ISED Compliance

This Class B digital apparatus complies with Canadian ICES-003.

This device is intended to be powered by an external USB-C power supply that is compliant with ICES-003 Class B.

Conformité ISDE

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Cet appareil est destiné à être alimenté par une alimentation externe USB-C conforme à la norme NMB-003 classe B.

Legal
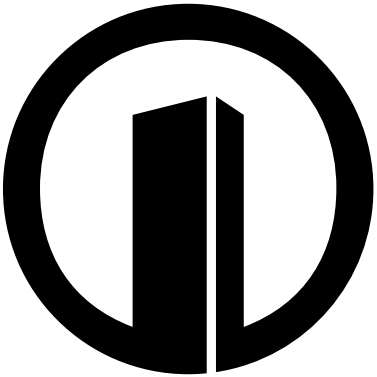
Thingstone GmbH
Bruchsaler Str. 18
76356 Weingarten
Tel. +49 15110533333
info@thingstone.com
http://www.thingstone.com
Geschäftsführer Collin Raddatz
HRB 749403 Amtsgericht Mannheim
Ust.IDNr. DE 365945203
St-Nr. 34418 / 14725