

Hybrid AC/DC Module Technical Notebook

Current C++ Architecture, Information Models, Mathematical Models, and Solver Workflows

HACDCPF C++ Module

May 14, 2026

Contents

1	Scope and Documentation Contract	3
1.1	Implemented Runtime Families	3
1.2	Current Stub and Absent Boundaries	4
1.3	Documentation Principle	4
1.4	Canonical Modeling Pipeline	5
1.5	Important Boundary Between “Implemented” and “Declared”	5
2	Nomenclature	6
2.1	Notation Policy	6
2.2	Index and Qualifier Conventions	6
2.3	Canonical Naming Grammar	7
2.4	Superscript/Subscript Rule	7
2.5	Integration Status Codes	7
3	Current C++ Architecture	7
3.1	Source Layout	7
3.2	Top-Level Public API	8
3.3	Build-Time Optional Features	8
3.4	Algorithm Index	9
4	Engine Solver System	9
4.1	Forwarded Engine Surface	10
4.2	Local Newton Solver Class	10
4.3	OPF Use of Engine Facilities	10
5	Native NLP and Interior-Point Details	11
5.1	Native AC OPF Loop	11
5.2	Parity IPM Loop	11
6	Native IPM Versus Parity IPM	11
7	Symbols, Indexing, and Sign Convention	12
7.1	Electrical Bases	12
7.2	Sets and Indexing	13
7.3	Core AC and DC State Variables	13
7.4	Unified Sign Convention: Bus Injection Positive	13
7.5	Power-Balance Template	14

8	Information Models and Field Dictionaries	14
8.1	Modeling Layers Used by the Code	14
8.2	System Containers and Solver-Level Metadata	15
8.3	Component Inventory	17
8.4	AC Network Elements	19
8.5	Load Models and Demand-Side Components	21
8.6	Generation, Storage, and Aggregation Components	22
8.7	DC and Power-Electronic Components	24
8.8	Optional Three-Phase Models	25
9	I/O Contracts, Sheet Dictionaries, and JSON Keys	26
9.1	Serialization Families	26
9.2	Global Parsing and Workbook Rules	27
9.3	Hybrid System JSON Contract	28
9.4	Excel Input Workbook Contract	34
9.5	Compact Power-Flow Workbook Additions	43
9.6	Dedicated Result Workbooks	44
9.7	Current I/O Coverage Gaps That Matter to Engineering Work	47
9.8	Interpretation	48
10	Detailed I/O Field Dictionaries	49
10.1	System Metadata	49
10.2	AC Network and Demand Models	49
10.3	Generation and Storage Models	57
10.4	DC and Hybrid Coordination Models	60
10.5	Cross-Reference	67
11	Output and Report Field Dictionaries	67
11.1	Export Families	68
11.2	Result Semantic Conventions	68
11.3	Solver-Specific Result Notes	70
11.4	Consumer Contracts	72
11.5	Power-Flow Result JSON	74
11.6	Dedicated Power-Flow Result Sheets	75
11.7	Compact Power-Flow Result Columns	81
11.8	Dedicated OPF Sheets	81
11.9	Carbon Result JSON and Workbook Dictionaries	83
11.10	Current Output-Side Gaps	88
12	Power-Flow Models	89
12.1	Scope and Architecture Overview	89
12.2	Mathematical Problem Form	91
12.3	VSC Converter Model	92
12.4	DCDC Converter Model	92
12.5	Jacobian Structure	93
12.6	Hybrid Newton Algorithm	94
12.7	Fast-Decoupled Power Flow (FDPF)	95
12.8	DC-Only Power Flow	96
12.9	Adaptive Islanded Solver	96
12.10	HELM Solver	97
12.11	Error Handling and Diagnostics	97
12.12	Maintainability Roadmap: Code-Duplication Inventory	97

12.13 Numerical Performance (Release Mode)	98
13 Optimal Power Flow Models	99
13.1 Problem Form and Runtime Scope	99
13.2 Code Map	99
13.3 Pseudocode Map	100
13.4 Current Status	100
13.5 Top-Level Solver Routing	100
13.6 Fast Dispatch + PF Fallback (AC-Only Path)	100
13.7 Native Primal-Dual OPF Formulation	101
13.7.1 Decision Variables	101
13.7.2 Objective	101
13.7.3 Equality Constraints	101
13.7.4 Bounds and Nonlinear Limits	102
13.7.5 KKT System and Globalization	102
13.8 Parity Full-Space Formulation	102
13.8.1 Decision Variables	102
13.8.2 Objective	102
13.8.3 Equality Constraints	102
13.8.4 Inequality Constraints	103
13.8.5 Primal-Dual IPM System	104
13.9 Component Coverage by Solver Path	104
13.10 AC OPF Result JSON Contract	105
13.11 Fallback Behavior	105
13.12 DC Optimal Power Flow (<code>solve_dc_opf</code>)	105
13.12.1 Decision Variables	105
13.12.2 Network Model	106
13.12.3 Objective Function	106
13.12.4 Constraints	106
13.12.5 Solver Backend Selection	107
13.12.6 Locational Marginal Prices	107
13.13 Reactive Power Optimization (<code>solve_rpo</code>)	107
13.13.1 Problem Structure	107
13.13.2 Objective Functions	107
13.13.3 Algorithm: Four-Phase Outer Approximation	107
13.13.4 Inner NLP Solver	108
13.13.5 Result Structure	108

1 Scope and Documentation Contract

This notebook is the implementation-facing handbook for the current `hacdcpf` C++ module. It connects mathematical models to the public data structures, preprocessing steps, solver paths, optional build features, and result objects that are present in the repository now. It deliberately separates implemented runtime code from declared stubs and absent/planned APIs.

1.1 Implemented Runtime Families

The current notebook covers these implemented module families:

- the public model layer under `include/hacdcpf/model`;
- canonical projection and solver-data assembly in `src/model` and `src/power_flow`;

- hybrid AC/DC power flow through `solve_power_flow`;
- DC-only, FDPF, linearized AC/DC, adaptive/islanded, distributed-slack, HELM, and continuation PF entry points exposed in the power-flow headers;
- AC OPF through `solve_ac_opf`, including native reduced-space and parity full-space IPM routes;
- DC OPF through `solve_dc_opf`;
- reactive-power optimization through `solve_rpo`;
- JSON, MATPOWER/JPC, case-builder, PF result JSON, OPF result JSON, and carbon result JSON support;
- optional Excel workbook I/O when `HACDCPF_ENABLE_EXCEL=ON`;
- optional OpenDSS bridge source inclusion when `HACDCPF_ENABLE_OPENDSS=ON`.

1.2 Current Stub and Absent Boundaries

Area	Current code status
<code>analysis::solve_distribution_power_flow</code>	Declared and compiled, but <code>src/analysis/distribution_power_flow.cpp</code> returns a non-converged result with <code>status="not_implemented"</code> .
<code>run_distribution_resilience_assessment</code>	Public facade exists, but <code>src/analysis/resilience_assessment.cpp</code> returns <code>completed=false</code> and <code>status="not_implemented"</code> .
<code>analysis::run_carbon_analysis</code>	Result structs and JSON/Excel serializers exist; the analysis source currently returns <code>tracing_verified=false</code> , <code>matrix_solved=false</code> , and empty result arrays.
Time-series PF	<code>time_series_pf.hpp</code> defines data types; <code>time_series_pf.cpp</code> is a stub translation unit and does not implement a simulation routine.
Reliability assessment	Headers define option/result types; no implemented public assessment solver is exposed by <code>hacdcpf.hpp</code> .
Short-circuit analysis	No public <code>compute_short_circuit</code> , <code>SCOptions</code> , or <code>BusFaultResult</code> header exists in the current include tree.
Optimal network reconfiguration	No public <code>solve_optimal_reconfiguration</code> header/API exists in the current include tree.
Annual production and lifecycle simulation	No public annual-production or lifecycle-simulation solver APIs exist in the current include tree.

1.3 Documentation Principle

This notebook follows four rules.

1. Equations are written in the same sign convention as the current C++ implementation.
2. Field explanations are tied to concrete structs, not generic textbook entities.
3. Each component is classified by how it enters a module: direct state, fixed injection, projected equivalent, or not yet consumed.
4. Extension points declared in headers are explicitly separated from functionality that is already wired in source files.

1.4 Canonical Modeling Pipeline

The steady-state solvers do not consume every rich component table directly. Instead, the dominant runtime path is:

1. start from a public `HybridPowerSystem`,
2. call `project_to_canonical_models`,
3. build `SolverData` through `make_solver_data`,
4. assemble residuals, Jacobians, or optimization models for PF and OPF.

The projection stage currently performs the following transformations:

- `FlexibleLoad` → equivalent `Load`,
- `AsymmetricLoad` → equivalent aggregated `Load`,
- `Transformer2W` and `Transformer3W` → one or more equivalent `ACBranch` objects,
- `Switch` → equivalent `ACBranch` whose `in_service` flag follows the switch state,
- `CircuitBreaker` → equivalent `ACBranch`, followed by zero-impedance bus merging when switches or circuit breakers are present,
- `Charger` → accumulation into `ChargingStation` demand,
- `VirtualPowerPlant` and `Microgrid` → equivalent `AC StaticGenerator` rows,
- `MobileStorage` → equivalent `AC Storage` at its current bus,
- `EnergyRouter` → internal DC buses plus VSC/DCDC equivalents,
- optional `ThreePhaseACSystem` → canonical single-phase-equivalent AC models when the explicit AC system is absent.

1.5 Important Boundary Between “Implemented” and “Declared”

The parity OPF formulation now instantiates **all** enhanced component decision blocks as runtime variables with full Jacobian and Hessian wiring:

- generator dispatch (P_g, Q_g) ,
- VSC converter power $(P^{\text{conv,ac}}, Q^{\text{conv,ac}}, P^{\text{conv,dc}})$,
- DCDC converter input power P^{dcdc} with analytical I^2R loss derivatives,
- DC bus voltages v^{dc} ,

- per-bus load shedding ($\Delta P_d, \Delta Q_d$) with VOLL penalty,
- curtailable renewable dispatch ($P^{\text{ren}}, Q^{\text{ren}}$) for `RenewableGen` with `curtailable=true` and `PVSystem` with `controllable=true`,
- storage dispatch ($P^{\text{stor}}, Q^{\text{stor}}$) for AC storage and $P^{\text{stor},\text{dc}}$ for DC storage,
- flexible load adjustment P^{flex} .

These are no longer extension hooks: they are wired decision variable blocks with explicit mapping arrays in `parity_formulation.cpp`. The OPF JSON serializer preserves the enhanced dispatch arrays as both legacy bare arrays and structured dispatch objects with identity maps.

2 Nomenclature

2.1 Notation Policy

This notebook uses a strict notation policy consistent with the C++ module:

- scalar variables use italic math symbols, for example P_i, Q_i, V_i ,
- sets use calligraphic symbols, for example $\mathcal{N}_{ac}, \mathcal{E}_{dc}$,
- all semantic qualifiers use upright superscripts via $\cdot$, for example $P_i^{\text{spec}}, P_i^{\text{calc}}, V_k^{\text{dc}}$,
- for variable symbols, subscripts are reserved for ordered indices (bus/component/time) and not for semantic class labels,
- set symbols may use compact domain tags in subscript, e.g., $\mathcal{N}_{ac}, \mathcal{E}_{dc}$,
- model-family and semantic words must stay in superscripts: write $P^{\text{dcdc}}, P^{\text{flex}}, P_r^{\text{rated}}, c_r^{\text{curt}}$, and $\mathcal{R}^{\text{curt}}$.

2.2 Index and Qualifier Conventions

Token	Meaning
i, j	AC bus indices
k, m	DC bus indices
c	converter index (VSC / DCDc)
b	branch index
g	generator index
spec	specified (assembled) quantity from component injections/demands
calc	network-calculated quantity from current state
ac, dc	AC-side / DC-side quantity qualifier
conv	converter-side quantity qualifier
dcdc, flex	DCDC-dispatch / flexible-load variable class qualifier
rated, curt	rated-capacity / curtailment-related qualifier
min, max	lower/upper operating bounds

2.3 Canonical Naming Grammar

Use the canonical symbol template

$$X_{\text{indices}}^{\text{qualifiers}}, \quad (1)$$

with the following rules:

- index block (.): ordered indices only $(i, j, k, c, r, t, \dots)$,
- qualifier block ('): semantic tags only (spec, calc, conv, dcdc, flex, rated, curt, min, max, $\dots$),
- when multiple qualifiers are needed, order them as: model/class $\rightarrow$ side or direction $\rightarrow$ status/bound/cost.

Examples:

$$P_i^{\text{conv,ac}}, \quad P_k^{\text{dcdc,in}}, \quad P_r^{\text{rated}}, \quad c_r^{\text{curt}}. \quad (2)$$

2.4 Superscript/Subscript Rule

Rule	Usage
Subscript (.)	for variable symbols: ordered indices only (i, j, k, c, r, t) ; set symbols may use domain tags $(\mathcal{N}_{ac}, \mathcal{E}_{dc})$.
Superscript (')	semantic labels: domain, role, operating mode, variable class, bounds, and status qualifiers.
Forbidden mixed style	avoid semantic words in subscript, such as P_{dcdc} , P_{flex} , $\mathcal{R}_{curt}$, P_{rated} , c_{curt} .
Preferred style	P^{dcdc} , P^{flex} , $\mathcal{R}^{\text{curt}}$, P^{rated} , c^{curt} .

2.5 Integration Status Codes

The integration matrix uses these codes:

- D: direct model consumption in the module,
- F: fixed-only consumption (no explicit variable),
- P: consumed after projection to canonical equivalents,
- N: not consumed by the module.

3 Current C++ Architecture

This section describes the repository as it exists in the current C++ module. The library target is `hacdcpf`, configured from the top-level `CMakeLists.txt` as a C++20 static library. The build links against `mipsolvers::mipsolvers`; that dependency supplies the shared engine types, solver adapters, and numerical backends used by the OPF and RPO code.

3.1 Source Layout

Directory	Current role
<code>include/hacdcpf/model</code>	Public data structures for AC, DC, converter, switching, three-phase, and result models.
<code>include/hacdcpf/api</code>	High-level public API facade in <code>hacdcpf.hpp</code> .
<code>include/hacdcpf/power_flow</code> and <code>src/power_flow</code>	Hybrid Newton PF, DC PF, FDPF, adaptive/islanded/distributed-slack variants, HELM, continuation, Jacobian assembly, and PF utilities.
<code>include/hacdcpf/optimal_power_flow</code> and <code>src/optimal_power_flow</code>	AC OPF routing, parity formulation, parity IPM, DC OPF, and reactive-power optimization.
<code>include/hacdcpf/power_models</code> and <code>src/power_models</code>	Builder-style models for AC OPF, AC/DC OPF, DC OPF, LinDistFlow, and SCUC experiments.
<code>include/hacdcpf/io</code> and <code>src/io</code>	MATPOWER/JSON/JPC case I/O, optional Excel workbook I/O, optional OpenDSS bridge, and case builders.
<code>include/hacdcpf/analysis</code> and <code>src/analysis</code>	Declared analysis families; several source files are currently stubs and are called out in Section 1.2.
<code>include/hacdcpf/engine</code>	Compatibility/forwarding headers into <code>mipsolvers::engine</code> , plus the <code>hacdcpf</code> Newton PF class declaration. There is no <code>src/engine</code> directory in this repository.

3.2 Top-Level Public API

The facade header `include/hacdcpf/api/hacdcpf.hpp` currently exposes:

- PF: `solve_power_flow`, `solve_dc_power_flow`, `solve_power_flow_adaptive`, `solve_power_flow_islanded`, `solve_power_flow_distributed_slack`, `solve_power_flow_distributed_slack_full`, `solve_power_flow_fdpf`, and `solve_ac_dc_power_flow`;
- persistent PF handles: `create_solver_handle`, `reset_solver_handle`, `solve_handle`, `solve_dc_handle`, and `destroy_solver_handle`;
- OPF: `solve_ac_opf`, `solve_dc_opf`, and `solve_rpo`;
- analysis facade: `run_distribution_resilience_assessment`, which is currently backed by a stub implementation.

Lower-level namespaces expose additional solver objects and helper entry points. The power-flow namespace includes `solve_hybrid`, `solve_hybrid_adaptive`, `solve_ac`, `solve_dc`, `FDPFSolver`, `AdaptiveSolver`, `DistributedSlackSolver`, `HelmSolver`, `CpfSolver`, `HomotopyContinuationSolver`, and the header-only `solve_three_phase` wrapper.

3.3 Build-Time Optional Features

CMake option	Default	Current effect
HACDCPF_BUILD_TESTS	ON	Enables the Catch2 test targets under <code>tests/</code> .
HACDCPF_ENABLE_EXCEL	OFF	Adds <code>src/io/excel_io.cpp</code> ; otherwise <code>HACDCPF_NO_EXCEL</code> is defined and the public Excel functions throw.
HACDCPF_ENABLE_OPENDSS	OFF	Adds <code>src/io/opendss_bridge.cpp</code> ; otherwise OpenDSS bridge functionality is absent from the build.

3.4 Algorithm Index

The notebook uses the following code-aligned algorithm labels.

Label	Main implementation	Purpose
A1	<code>src/model/network_utils.cpp</code>	Rich-model projection to canonical solver inputs.
A2	<code>src/power_flow/solver_data.cpp</code>	<code>SolverData</code> construction, injection aggregation, and matrix build.
A3	<code>src/power_flow/newton_solver.cpp</code>	Hybrid AC/DC Newton power flow.
A4	<code>src/power_flow/fdpf_solver.cpp</code>	AC fast-decoupled power flow.
A5	<code>src/power_flow/dc_solver.cpp</code>	DC-only power flow.
A6	<code>src/power_flow/adaptive_solver.cpp</code>	Island-aware PF orchestration.
A7	<code>src/power_flow/distributed_slack_solver.cpp</code>	Simplified and full distributed-slack PF.
A8	<code>src/optimal_power_flow/ac_opf.cpp</code>	AC OPF top-level routing and fallback selection.
A9	<code>src/optimal_power_flow/parity_formulation.cpp</code>	Full-space parity NLP construction and derivatives.
A10	<code>src/optimal_power_flow/parity_ipm.cpp</code>	Mehrotra/Gondzio-style parity IPM solve loop.
A11	<code>src/optimal_power_flow/dc_opf.cpp</code>	DC OPF QP/LP model build and backend dispatch.
A12	<code>src/optimal_power_flow/reactive_power_opt.cpp</code>	Reactive-power optimization by OA/coordinate search.

4 Engine Solver System

The `hacdcpf::engine` namespace in this repository is mainly a compatibility facade over `mipsolvers::engine`. The local headers keep historical include paths stable while importing engine symbols with `using` declarations. Current implementation files for LCQP, dual simplex, branch and cut, and external adapters live in the `mipsolvers` dependency, not under `src/engine` in this repository.

4.1 Forwarded Engine Surface

Local forwarding header	Imported symbols / role
<code>engine/problem_types.h</code> <code>pp</code>	Problem-class enums, symbolic model structs, LP/QP/MIP/NLP/MINLP model types, <code>SolveStats</code> , and <code>SolveResult</code> .
<code>engine/kernel/ipm/lcqp_solver.hpp</code>	<code>LCQPOptions</code> and <code>NativeLCQPAdapter</code> .
<code>engine/kernel/lp_kernel/dual_simplex.hpp</code>	Simplex options, basis/result types, <code>StandardFormLP</code> , and <code>solve_lp_with_basis</code> .
<code>engine/kernel/linear_algebra/linear_solver.hpp</code>	Sparse solver abstraction and Eigen-based sparse solver factories.
<code>engine/kernel/globalization/globalization.hpp</code>	Dogleg, trust-region update, and pseudo-transient continuation helpers.
<code>engine/solver/external_adapters.hpp</code>	<code>HighsAdapter</code> , <code>IpoptAdapter</code> , <code>ScipAdapter</code> , and <code>GurobiAdapter</code> .
<code>engine/branch_and_cut.hpp</code>	Branching and node-selection enums plus B&C statistics/result/option types.

There are no local PDLP or LP-IPM backends documented by the current headers. The backends visible through this compatibility layer are LCQP, dual simplex, HiGHS, Ipopt, SCIP, and Gurobi, subject to the configuration of `mipsolvers` and the optional external packages available at build time.

4.2 Local Newton Solver Class

The one local engine-style solver declaration is `include/hacdcpf/engine/solver/native/nle/newton_solver.hpp`. Its implementation is `src/power_flow/newton_solver.cpp`; it is the hybrid PF Newton class used by the power-flow module. The file is not an engine implementation directory and does not define the optimization-engine LCQP or LP backends.

4.3 OPF Use of Engine Facilities

Consumer	Engine dependency	Current behavior
DC OPF	LCQP, Gurobi, HiGHS, dual simplex	Auto tries <code>NativeQP</code> , then Gurobi, then HiGHS, then native dual simplex. LMP arrays are currently filled with zeros because dual extraction is marked TODO in <code>dc_opf.cpp</code> .
RPO	BCStats only for result reporting	The current source runs an OA/coordinate-search workflow and reuses B&C statistics fields for counters; it does not call a generic branch-and-bound solve loop.

Consumer	Engine dependency	Current behavior
Parity AC OPF	local parity IPM	Uses the local KKT assembly and Eigen dense/sparse factorizations in <code>parity_ipm.cpp</code> .
Native AC OPF	local reduced-space KKT loop	Uses custom KKT assembly and factorization in <code>ac_opf.cpp</code> .

5 Native NLP and Interior-Point Details

The nonlinear OPF solvers are local to `src/optimal_power_flow`. They do not dispatch through an external NLP engine by default. The AC OPF entry point selects either a native reduced-space primal-dual path or the parity full-space IPM path described in Section 13.

5.1 Native AC OPF Loop

The native path in `ac_opf.cpp` uses variables for non-slack AC angles, PQ voltage magnitudes, generator dispatch, DC voltage magnitudes, and VSC converter powers. Equality rows cover AC balances, DC balances, and VSC energy balance. Bound constraints are handled with barrier terms, while nonlinear branch and converter limits enter through exterior penalty terms. If this path fails and `ACOPFOptions::allow_fallback` is true, the code falls back to the fast dispatch plus AC PF projection route.

5.2 Parity IPM Loop

The parity path builds explicit equality and inequality rows in `parity_formulation.cpp` and solves the resulting full-space NLP in `parity_ipm.cpp`. The solve loop uses a Mehrotra predictor-corrector step with second-order complementarity correction, iterative refinement, and fraction-to-boundary primal/dual step lengths. Current centering is

$$\sigma = \left(\frac{\mu_{aff}}{\mu_{cur} + 10^{-16}} \right)^3 \quad (3)$$

after clamping the ratio to $[0, 1]$. The implementation also applies up to two extra Gondzio corrector solves when enabled by the current loop logic.

The KKT system is solved with Eigen `SparseLU` on sparse systems or `PartialPivLU` on dense systems. There is no separate local NLP/IPM engine source tree beneath `src/engine`.

6 Native IPM Versus Parity IPM

The two AC OPF nonlinear routes differ mainly in variable coverage and in how constraints are represented.

Feature	Native reduced-space path	Parity full-space path
Primary files	<code>ac_opf.cpp</code>	<code>parity_formulation.cpp</code> , <code>parity_ipm.cpp</code>
AC bus variables	non-slack angles and PQ magnitudes	full AC angle and magnitude blocks with bounds
Generator dispatch	P_g, Q_g variables	P_g, Q_g variables

Feature	Native reduced-space path	Parity full-space path
VSC converters	explicit P^{ac}, Q^{ac}, P^{dc} variables and balance rows	explicit P^{ac}, Q^{ac}, P^{dc} variables and balance rows
DC bus voltages	variables, with tight bounds for DC_V buses	variables with DC balance rows and DC branch limits
Load shedding	not modeled	$\Delta P_d, \Delta Q_d$ variables with VOLL penalty
Curtailable renewable / PV	fixed injections	packed decision vectors pre _{n_mw} , qren _{mvar} with identity maps
Storage	fixed injection	AC and DC storage active dispatch packed into pstor _{mw} ; AC storage also has qstor _{mv} _{ar}
DCDC converters	not modeled as decision variables	input-side pdc _{dc} _{mw} variables folded into DC bus balance physics
Flexible loads	projected/fixed demand	pf _{flex} _{mw} variables with identity maps
Failure fallback	fast dispatch plus AC PF if allowed	native path if allowed, then native fallback behavior

The parity result stores enhanced component outputs in packed arrays. The maps **ren**_{map}, **stor**_{map}, **dc**_{dc}_{map}, and **flex**_{map} must be used to join those arrays back to the original component collections. For storage, **source_type**=0 denotes AC storage and **source_type**=1 denotes DC storage.

One implementation quirk is important for code review: **ConstraintIndex** still allocates **n**_{dc}_{dc}_{bal} and **i**_{dc}_{dc}_{bal}, and **build_problem** includes those rows in **n**_{eq}_{total}. The current equality evaluator leaves the dedicated DCDC rows unpopulated; DCDC physics is represented instead through the DC bus balance rows.

7 Symbols, Indexing, and Sign Convention

7.1 Electrical Bases

$$S_{base} = \text{system apparent-power base (MVA)}, \quad (4)$$

$$V_{base} = \text{nominal line-line voltage base (kV)}, \quad (5)$$

$$Z_{base} = \frac{V_{base}^2}{S_{base}}, \quad (6)$$

$$I_{base} = \frac{S_{base}}{\sqrt{3}V_{base}}. \quad (7)$$

7.2 Sets and Indexing

$$\mathcal{N}_{ac} : \text{AC buses}, \quad \mathcal{E}_{ac} : \text{AC branches}, \quad (8)$$

$$\mathcal{N}_{dc} : \text{DC buses}, \quad \mathcal{E}_{dc} : \text{DC branches}, \quad (9)$$

$$\mathcal{N}_{sl} : \text{AC slack buses}, \quad \mathcal{N}_{PQ} : \text{AC PQ buses}, \quad (10)$$

$$\mathcal{N}_{PV} : \text{AC PV buses}, \quad \mathcal{N}_{sl}^{dc} : \text{DC voltage-controlled buses}. \quad (11)$$

The public model stores external bus identifiers in each component (`bus`, `from_bus`, `to_bus`). Most solver kernels then remap those identifiers into contiguous zero-based local indices.

7.3 Core AC and DC State Variables

$$V_i = v_i e^{j\theta_i}, \quad (12)$$

$$Y_{ij} = G_{ij} + jB_{ij}, \quad (13)$$

$$V_k^{dc} = v_k^{dc}, \quad (14)$$

$$P_k^{dc,calc} = v_k^{dc} (G_{dc} v^{dc})_k. \quad (15)$$

For the main Newton power-flow path, the state vector is

$$x_{PF} = \begin{bmatrix} \theta_{\mathcal{N}_{ac} \setminus \mathcal{N}_{sl}} & v_{\mathcal{N}_{PQ}} & v_{\mathcal{N}_{dc} \setminus \mathcal{N}_{sl}^{dc}}^{dc} \end{bmatrix}^\top. \quad (16)$$

For the native primal-dual AC OPF path, the decision vector is extended to include generator dispatch and converter operating points:

$$x_{OPF} = \begin{bmatrix} \theta & v & P_g & Q_g & v^{dc} & P^{conv,ac} & Q^{conv,ac} & P^{conv,dc} \end{bmatrix}^\top, \quad (17)$$

with additional load-shedding variables in the parity formulation.

7.4 Unified Sign Convention: Bus Injection Positive

The current C++ module uses one consistent notation in the PF kernels and the notebook adopts the same rule:

Positive active or reactive power at a bus means injection into the network from the component attached to that bus.

Loads therefore store positive demand values in their data model, but they enter power-balance equations with a minus sign.

Quantity / field	Positive value means	Consequence in equations
<code>Generator::pg_mw</code> , <code>qg_mvar</code>	generator injects active/reactive power into its AC bus	added to P_i^{spec}, Q_i^{spec} .
<code>Load::p_mw</code> , <code>q_mvar</code>	consumption requested from the network	subtracted from P_i^{spec}, Q_i^{spec} ; ZIP dependence scales the subtraction.

Quantity / field	Positive value means	Consequence in equations
<code>Storage::p_mw</code>	discharge to the grid; charging is negative P	treated as generation when positive, load when negative.
<code>Microgrid::p_exchange_mw</code>	export from the microgrid to the host AC grid	added as AC-bus injection in PF; ignored when the microgrid is islanded.
<code>VSCConverter</code> AC-side $P^{\text{conv,ac}}$	converter injects active power into the AC bus	positive AC injection must be balanced by negative DC-bus injection plus losses.
<code>VSCConverter</code> DC-side $P^{\text{conv,dc}}$	converter injects active power into the DC bus	the current code enforces $P^{\text{conv,ac}} + P^{\text{conv,dc}} + P^{\text{loss}} = 0$.
<code>DCDCConverter::p_ref_mw</code>	positive transfer from <code>bus_in</code> toward <code>bus_out</code>	implemented as negative injection at <code>bus_in</code> and positive injection at <code>bus_out</code> .
<code>BranchFlow::pf_mw</code>	active power sent from <code>from_bus</code> to <code>to_bus</code>	reporting only; no sign reversal in stored result.

7.5 Power-Balance Template

With bus-injection-positive notation, the balance equations are written as

$$\Delta P_i = P_i^{\text{spec}} - P_i^{\text{calc}}, \quad (18)$$

$$\Delta Q_i = Q_i^{\text{spec}} - Q_i^{\text{calc}}, \quad (19)$$

$$\Delta P_k^{\text{dc}} = P_k^{\text{dc,spec}} - P_k^{\text{dc,calc}}. \quad (20)$$

The specified term is assembled by adding all component injections and then subtracting all demand terms. This is the convention followed by the PF residual evaluator, the native AC OPF assembly, and the parity formulation.

8 Information Models and Field Dictionaries

8.1 Modeling Layers Used by the Code

The code base uses three distinct model layers.

1. **Public information model:** the rich structs under `include/hacdcpf/model/` used by I/O, case builders, and external callers.
2. **Canonical steady-state model:** the projected subset generated by `project_to_canonical_models`, where rich components are converted into equivalent loads, branches, or aggregated injections.
3. **Solver assembly model:** `powerflow::SolverData`, which stores contiguous vectors, aggregated per-bus injections, ZIP coefficients, and sparse matrices needed by the PF and OPF kernels.

8.2 System Containers and Solver-Level Metadata

System containers

Struct / group	Fields and meaning	Primary consumers
<code>ACSystem</code>	buses, branches, generators, static_generators, loads, flexible_loads, asymmetric_loads, shunts, storage, renewable_gens, pv_systems, external_grids, transformers_2w, transformers_3w, switches, circuit_breakers, charging_stations, chargers, motors; plus base_mva, freq_hz, name.	PF, OPF, I/O, projection
<code>DCSystem</code>	buses, branches, loads, storage, static_generators, dc_static_generators, pv_arrays, dc_circuit_breakers, plus base_mva and name.	PF, OPF, I/O
<code>HybridPowerSystem</code>	Holds ac, dc, vsc_converters, dcdc_converters, energy_routers, mobile_storage, vpps, microgrids, global base_mva, name, optional three_phase_ac, and optional provenance maps bus_merge_map and branch_expand_map.	all top-level APIs
<code>ThreePhaseACSystem</code>	Optional unbalanced AC subsystem with three-phase buses, lines, transformers, loads, generators, and external grids. It is projected to canonical AC objects when the explicit <code>ACSystem</code> is empty.	projection, PF, I/O

Power-flow options and results

Struct / group	Fields and meaning	Primary consumers
<code>InitialState</code>	vm, va, vdc provide optional warm starts for AC magnitude, AC angle, and DC voltage states.	Newton PF, DC PF
<code>ReactiveLimit</code>	qmin, qmax define reactive limits used by adaptive/PV-PQ logic.	adaptive PF extensions
<code>DistributedSlack</code>	participating_buses, participation_factors, reference_bus, and optional max_participation_p describe how slack mismatch is redistributed.	distributed-slack PF

Struct / group	Fields and meaning	Primary consumers
PowerFlowOptions	Iteration and tolerance controls: <code>max_iter</code> , <code>tol</code> ; robustness controls: line search, regularization, and step clipping; PV/PQ and converter hysteresis parameters; ZIP weights; solver profiling flag; <code>loss_model</code> ; FDPF iteration cap.	PF family
SolverProfiling	Sparse-factorization counters, line-search and regularization statistics, PV/PQ switches, converter-mode switches, timing vectors, and cumulative timing totals.	PF result diagnostics
PowerFlowResult	Solved states <code>vm</code> , <code>va</code> , <code>vdc</code> ; status fields <code>converged</code> , <code>iterations</code> , <code>residual</code> ; and derived reports <code>branch_flows</code> , <code>vsc_transfers</code> , <code>dc_dc_transfers</code> , <code>er_port_transfers</code> .	PF family outputs
AdaptiveSolverResult , IslandedSolveResult , DistributedSlackResult	Variants of PF results that additionally expose detected <code>islands</code> , distributed-slack allocations, and buses hitting slack-sharing limits.	adaptive / islanded / distributed-slack PF

Analysis and OPF options/results

Struct / group	Fields and meaning	Primary consumers
ACOPFOptions	Inner/outer iteration caps, feasibility/stationarity tolerances, barrier schedule, merit-penalty and regularization terms, line-search settings, parallel AC evaluation threads, and path-selection flags <code>enable_primal_dual</code> , <code>use_parity_ipm</code> , <code>allow_fallback</code> .	AC OPF
ACOPFResult	Voltage solution, generator dispatch, optional bus-level load shedding, converter operating points, convergence metrics, status text, and profiling summary.	AC OPF output
DCOPFOptions , DCOPFResult	DC approximation controls, backend selector, branch-limit flag, load-shedding flag, voltage angles, generator dispatch, branch flows, load shedding, zero-filled LMP/vector dual placeholders, and solver status.	DC OPF
RPOOptions , RPOResult	Reactive-power objective settings, search limits, voltage/generator before/after vectors, tap and shunt changes, loss metrics, status, and B&C-style statistics fields reused as counters.	RPO

Struct / group	Fields and meaning	Primary consumers
Analysis result types	Distribution PF, resilience, reliability, time-series, and carbon headers define option/result structs, but the corresponding analysis runtime implementations are currently stubs or type-only surfaces; see Section 1.2.	analysis declarations

`powerflow::SolverData`

Group	Fields and meaning	Primary consumers
Canonical component tables	Copies of projected AC/DC buses, branches, generators, converters, DCDC converters, energy routers, loads, DERs, shunts, switches, charging stations, external grids, VPPs, microgrids, and mobile storage.	PF, native OPF
Aggregated steady-state injections	<code>pg</code> , <code>qg</code> hold per-bus generation after aggregation of generators, static generators, renewables, PV, storage, VPPs, microgrids, and mobile storage.	PF, native OPF
Demand model data	<code>has_component_loads</code> , <code>pd_pu</code> , <code>qd_pu</code> , and per-bus ZIP coefficient vectors describe the demand model after load-table aggregation.	PF, native OPF
Network matrices	<code>ybus</code> and <code>gdc</code> store the canonical AC admittance and DC conductance matrices; <code>build_id</code> is used to validate Jacobian-pattern caching.	PF, native OPF
Bookkeeping	<code>base_mva</code> , <code>loss_model</code> , and global ZIP weights copied from <code>PowerFlowOptions</code> .	PF, native OPF

8.3 Component Inventory

Table 15 enumerates the rich public models currently present in the repository.

Table 15: Public component-model inventory

Struct	Mathematical role	Current steady-state integration mode
<code>ACBus</code>	AC state host, voltage limits, embedded bus demand and shunt	direct
<code>ACBranch</code>	AC series/shunt admittance, tap and phase-shift branch	direct
<code>Transformer2W</code>	named two-winding transformer with short-circuit/tap data	projected to <code>ACBranch</code>

Struct	Mathematical role	Current steady-state integration mode
Transformer3W	explicit three-winding transformer with pairwise short-circuit data	projected to three ACBranch equivalents
ExternalGrid	slack source and source-equivalent metadata	direct PF source metadata; richer fault fields are stored but no public SC solver is present
AsynchronousMotor	motor fault-contribution metadata	stored by the model and I/O; no public SC solver currently consumes it
Generator	synchronous generator dispatch and limits	direct
StaticGenerator	fixed/scaled distributed generation	direct fixed injection
RenewableGen	renewable injection with curtailment metadata	fixed injection in PF/native OPF; parity OPF decision variable when curtailable
PVSystem	PV inverter and array metadata	fixed injection in PF/native OPF; parity OPF decision variable when controllable
Load	AC demand with ZIP and motor-fraction metadata	direct
FlexibleLoad	demand-response model	projected to Load for PF; parity OPF has packed flexible-load variables
AsymmetricLoad	per-phase aggregate demand	projected to Load
Shunt	fixed or stepped shunt element	direct fixed shunt in PF; switchable steps are RPO discrete controls
Switch	switching device with electrical/protection data	projected to ACBranch for PF/OPF
CircuitBreaker	high-voltage breaker on an AC bus pair	projected to ACBranch ; can trigger zero-impedance bus merging
ChargingStation	aggregate EV charging demand	direct fixed load
Charger	individual EV charger	aggregated into ChargingStation on projection
Storage	stationary storage power and energy state	fixed injection in PF/native OPF; parity OPF dispatch variable for AC and DC storage
MobileStorage	relocatable storage resource	projected to AC Storage at current bus
VirtualPowerPlant	aggregated DER portfolio	projected to AC StaticGenerator at aggregation bus

Struct	Mathematical role	Current steady-state integration mode
Microgrid	PCC exchange model	projected to <code>AC Static Generator</code> at aggregation bus/PCC when grid-connected
DCBus	DC voltage host and DC demand host	direct
DCBranch	DC resistive branch	direct
DCLoad	DC active demand	direct
StaticGeneratorDC	typed DC active-power source with profile/control metadata	stored in <code>dc.dc_static_generators</code> ; serialized and available for DC injection assembly where supported
PVArrayDC	DC-side photovoltaic array metadata and setpoint	stored in <code>dc.pv_arrays</code> ; serialized and available for DC injection assembly where supported
DCCircuitBreaker	breaker on a DC bus pair	stored and serialized; no projection equivalent currently runs in <code>network_utils.cpp</code>
VSCConverter	AC/DC coupling with loss model and control mode	direct
DCDCConverter	DC/DC transfer device with efficiency and I^2R conduction loss	direct in PF and parity OPF (decision variable with Jacobian and Hessian)
EnergyRouterPort	AC or DC port injection for a multi-port router	direct fixed injection
EnergyRouter	multi-port converter container	direct through its ports
ThreePhaseACBus	optional unbalanced bus model	projected to <code>ACBus</code>
ThreePhaseACLine	optional unbalanced line model	projected to <code>ACBranch</code> using positive sequence
ThreePhaseTransformer	optional unbalanced transformer model	projected to <code>Transformer2W</code> equivalent
ThreePhaseLoad	optional unbalanced load model	projected to <code>Load</code>
ThreePhaseGenerator	optional unbalanced generator model	projected to <code>Generator</code>
ThreePhaseExternalGrid	optional unbalanced slack/grid equivalent	projected to <code>ExternalGrid</code>

8.4 AC Network Elements

ACBus

Field group	Detailed explanation	Used by
Identity and topology	<code>index</code> is the external bus identifier referenced by other components; <code>name</code> is purely descriptive; <code>area</code> and <code>zone</code> are retained for partitioning and reporting.	shared model / solver inputs
Steady-state electrical state	<code>bus_type</code> , <code>vm_pu</code> , <code>va_deg</code> , <code>base_kv</code> , <code>vmax_pu</code> , <code>vmin_pu</code> , <code>in_service</code> . These fields initialize the PF state, define slack/PV/PQ behavior, and bound voltages.	PF, OPF
Embedded demand and shunt	<code>pd_mw</code> , <code>qd_mvar</code> store fallback bus demand when no load table is present; <code>gs_mw</code> , <code>bs_mvar</code> store bus shunt terms.	PF, OPF
Resilience / geography	<code>n_customers</code> , <code>importance</code> , <code>latitude</code> , <code>longitude</code> . These are not yet decision variables, but they are useful for planning logic, GIS, or load-priority extensions.	planning / future use

ACBranch

Field group	Detailed explanation	Used by
Connectivity	<code>index</code> , <code>from_bus</code> , <code>to_bus</code> , <code>in_service</code> , <code>name</code> . Bus references use external bus IDs.	PF, OPF
Positive-sequence electrical data	<code>r_pu</code> , <code>x_pu</code> , <code>b_pu</code> , <code>tap</code> , <code>shift_deg</code> . These define the AC π -model and branch-flow reporting.	PF, OPF
Ratings and physical metadata	<code>rate_a_mva</code> , <code>rate_b_mva</code> , <code>rate_c_mva</code> , <code>length_km</code> . <code>rate_a_mva</code> is used directly by OPF thermal limits.	OPF, reporting
Reliability and sequence data	<code>failure_rate</code> , <code>mttr_hr</code> , <code>r0_pu</code> , <code>x0_pu</code> , <code>b0_pu</code> , and transformer-nameplate fields <code>vn_hv_kv</code> , <code>vn_lv_kv</code> , <code>sn_mva</code> . These are stored for planning/fault-model extensions, but no public SC solver is present.	model/I/O metadata

Transformer2W, Transformer3W, Switch, and CircuitBreaker

Struct	Field-level explanation	Current treatment
Transformer2W	Identity/connectivity fields <code>index</code> , <code>name</code> , <code>hv_bus</code> , <code>lv_bus</code> , <code>in_service</code> ; nameplate fields <code>sn_mva</code> , <code>vn_hv_kv</code> , <code>vn_lv_kv</code> ; short-circuit fields <code>vk_percent</code> , <code>vk_r_percent</code> , <code>pk_kw</code> ; no-load fields <code>pfe_kw</code> , <code>i0_percent</code> ; tap-changer fields <code>tap_side</code> , <code>tap_pos</code> , <code>tap_min</code> , <code>tap_max</code> , <code>tap_neutral</code> , <code>tap_step_percent</code> ; phase shift <code>shift_deg</code> ; zero-sequence fields <code>z0_percent</code> , <code>x0_r0</code> ; reliability fields <code>mtbf_hours</code> , <code>mttr_hours</code> .	projected to one equivalent ACBranch

Struct	Field-level explanation	Current treatment
Transformer3W	Connectivity <code>hv_bus</code> , <code>mv_bus</code> , <code>lv_bus</code> ; per-winding ratings <code>sn_hv_mva</code> , <code>sn_mv_mva</code> , <code>sn_lv_mva</code> ; pairwise short-circuit data <code>vk_hv_mv_percent</code> , <code>vk_hv_lv_percent</code> , <code>vk_mv_lv_percent</code> and the matching <code>vk_r</code> fields; tap data and phase shifts <code>shift_mv_deg</code> , <code>shift_lv_deg</code> .	projected to three equivalent ACBranch objects
Switch	Topology fields <code>bus_from</code> , <code>bus_to</code> , <code>closed</code> ; electrical fields <code>r_contact_ohm</code> , <code>z_ohm</code> , <code>i_rated_ka</code> , <code>i_breaking_ka</code> ; protection fields <code>element_type</code> , <code>element_id</code> ; automation fields <code>is_remote</code> , <code>is_automated</code> , <code>t_operation_s</code> ; reliability fields <code>p_sw_fail</code> , <code>mtbf_hours</code> , <code>mttr_hours</code> , <code>t_scheduled_hr</code> , <code>t_tp_hr</code> .	projected to equivalent branch with <code>in_service=closed</code>
CircuitBreaker	AC breaker fields <code>index</code> , <code>name</code> , <code>bus_from</code> , <code>bus_to</code> , <code>in_service</code> , <code>breaker_type</code> , <code>closed</code> , <code>z_ohm</code> , <code>rated_voltage_kv</code> , <code>i_rated_ka</code> , <code>i_breaking_ka</code> , <code>element_type</code> , <code>element_id</code> .	projected to equivalent branch; if switches or breakers exist, zero-impedance bus merging may run after projection

ExternalGrid and AsynchronousMotor

Struct	Field-level explanation	Current treatment
ExternalGrid	<code>bus</code> , <code>vm_pu</code> , <code>va_deg</code> establish slack voltage targets; <code>s_sc_max_mva</code> , <code>s_sc_min_mva</code> , <code>rx_max</code> , <code>rx_min</code> , <code>r_pu</code> , <code>x_pu</code> , <code>r0_pu</code> , <code>x0_pu</code> , <code>vn_kv</code> , <code>ikq_ka</code> , <code>x_r</code> store source-equivalent/fault metadata; <code>controllable</code> can support dispatch logic.	PF source metadata; additional fields are stored for future analysis
AsynchronousMotor	<code>bus</code> , <code>vn_kv</code> , <code>sn_mva</code> , <code>r_pu</code> , <code>x_pu</code> , <code>x_r</code> , <code>lrc</code> , <code>poles</code> , <code>cos_phi</code> , <code>efficiency</code> , <code>r0_pu</code> , <code>x0_pu</code> . These fields describe possible motor fault contribution, not a steady-state PF state.	model/I/O metadata

8.5 Load Models and Demand-Side Components

Struct	Field-level explanation	Current treatment
Load	Identity fields <code>index</code> , <code>bus</code> , <code>name</code> , <code>in_service</code> ; steady-state demand <code>p_mw</code> , <code>q_mvar</code> ; model selector <code>model</code> ; ZIP coefficients <code>z_percent_p</code> , <code>i_percent_p</code> , <code>p_percent_p</code> , and the matching <code>q</code> fields; demand-response metadata <code>controllable</code> , <code>p_min_mw</code> , <code>cost_mw</code> ; load-priority metadata <code>priority</code> , <code>n_customers</code> , <code>profile_id</code> ; motor-fraction metadata <code>sn_mva</code> , <code>motor_percent</code> , <code>x_sub_pu</code> , <code>r_sc_pu</code> .	direct in PF/OPF
FlexibleLoad	Baseline demand <code>p_mw</code> , <code>q_mvar</code> ; flexibility envelope <code>flex_up_mw</code> , <code>flex_down_mw</code> , <code>flex_duration_h</code> ; response timing <code>response_time_s</code> , <code>ramp_rate_mw_min</code> , <code>availability_pct</code> ; <code>control_area</code> .	projected to equivalent Load for PF; parity OPF has <code>pflex_mw</code> variables
AsymmetricLoad	Per-phase rated values <code>pa_rated_mw</code> , ..., <code>qc_rated_mvar</code> ; per-phase actual values <code>pa_mw</code> , ..., <code>qc_mvar</code> ; connection, grounded, scaling; ZIP shares <code>const_z_percent</code> , <code>const_i_percent</code> , <code>const_p_percent</code> .	projected to aggregated Load
DCLoad	<code>p_mw</code> is the direct active demand at a DC bus; <code>controllable</code> , <code>p_min_mw</code> , <code>cost_mw</code> , and <code>profile_id</code> are control metadata for future extensions.	direct in DC PF and hybrid OPF balances
ChargingStation	<code>bus</code> , <code>n_fast</code> , <code>n_slow</code> , <code>num_chargers</code> ; capacity fields <code>p_fast_max_kw</code> , <code>p_slow_max_kw</code> , <code>max_power_kw</code> ; utilization fields <code>simultaneity_factor</code> , <code>power_factor</code> , <code>utilization_rate</code> ; aggregated operating demand <code>p_total_kw</code> , <code>q_total_kvar</code> .	direct fixed load
Charger	<code>station_id</code> links the charger to its parent station; <code>charger_type</code> , <code>p_rated_kw</code> , <code>p_ch_max_kw</code> , <code>p_ch_min_kw</code> , <code>eta</code> , <code>v2g_capable</code> , <code>p_dis_max_kw</code> .	aggregated into ChargingStation during projection

8.6 Generation, Storage, and Aggregation Components

Struct	Field-level explanation	Current treatment
Generator	Dispatch/state fields <code>pg_mw</code> , <code>qg_mvar</code> , <code>vg_pu</code> , <code>is_slack</code> ; limits <code>pmax_mw</code> , <code>pmin_mw</code> , <code>qmax_mvar</code> , <code>qmin_mvar</code> ; quadratic cost coefficients <code>cost_c2</code> , <code>cost_c1</code> , <code>cost_c0</code> ; unit-commitment metadata <code>startup_cost</code> , <code>shutdown_cost</code> , <code>min_up_time_hr</code> , <code>min_dn_time_hr</code> , <code>ramp_up_mw_min</code> , <code>ramp_dn_mw_min</code> ; machine/stability data <code>mbase_mva</code> , <code>inertia_h</code> , <code>droop_r</code> , <code>xd_pu</code> , <code>xdp_pu</code> , <code>xdpp_pu</code> , <code>td0p_s</code> , <code>td0pp_s</code> ; SC and environmental metadata <code>ra_pu</code> , <code>vn_kv</code> , <code>cos_phi</code> , <code>xq_pu</code> , <code>xd_xq</code> , <code>x0_pu</code> , <code>r0_pu</code> , emission factors, outage rate, and repair time.	direct
StaticGenerator	Fixed or scaled DER injection <code>p_mw</code> , <code>q_mvar</code> , <code>scaling</code> ; device rating/limits <code>p_rated_mw</code> , <code>sn_mva</code> , <code>pmax_mw</code> , <code>pmin_mw</code> , <code>qmax_mvar</code> , <code>qmin_mvar</code> ; control metadata <code>controllable</code> , <code>v_ref_pu</code> , <code>k_p</code> , <code>k_q</code> ; SC metadata <code>k</code> , <code>rx</code> .	direct fixed injection
RenewableGen	type, actual output <code>p_mw</code> , <code>q_mvar</code> , rated power <code>p_rated_mw</code> , reactive limits, curtailability flag, curtailment cost, capacity factor, profile pointer, and avoided-emission factor.	fixed injection in PF/native OPF; parity OPF uses <code>pren_mw/qren_mvar</code> for curtailable rows
PVSystem	Actual output <code>p_mw</code> , <code>q_mvar</code> ; inverter limits and control <code>sn_mva</code> , <code>pmax_mw</code> , <code>pmin_mw</code> , <code>qmax_mvar</code> , <code>qmin_mvar</code> , <code>control_mode</code> , <code>controllable</code> , <code>v_ac_set_pu</code> , <code>v_dc_set_pu</code> ; inverter efficiency <code>inverter_eff</code> , <code>loss_percent</code> ; array data <code>num_series</code> , <code>num_parallel</code> , <code>vmpp</code> , <code>impp</code> , <code>voc</code> , <code>isc</code> , <code>alpha_isc</code> , <code>beta_voc</code> ; environmental state <code>irradiance</code> , <code>temperature</code> .	fixed injection in PF/native OPF; parity OPF uses renewable dispatch variables for controllable rows
Storage	Snapshot dispatch <code>p_mw</code> , <code>q_mvar</code> ; power limits <code>p_rated_mw</code> , <code>pmax_mw</code> , <code>pmin_mw</code> , <code>qmax_mvar</code> , <code>qmin_mvar</code> ; energy state <code>e_rated_mwh</code> , <code>soc_init</code> , <code>soc_min</code> , <code>soc_max</code> ; efficiency <code>eta_charge</code> , <code>eta_discharge</code> , <code>self_discharge_pct</code> ; lifecycle <code>max_cycles</code> , <code>current_cycles</code> , <code>soh</code> , <code>replacement_cost</code> .	fixed injection in PF/native OPF; parity OPF has AC and DC storage dispatch variables
MobileStorage	Reuses storage-style power and energy fields and adds mobility fields <code>is_mobile</code> , <code>status</code> , <code>current_location</code> , <code>target_bus</code> , <code>e_consumption_mwh_km</code> , <code>max_travel_distance_km</code> .	projected to AC Storage at its current bus
VirtualPowerPlant	Fleet counts, aggregated capacities, output fields <code>p_output_mw</code> , <code>q_output_mvar</code> , limits, and ramp rates.	projected to AC StaticGenerator at aggregation bus

Struct	Field-level explanation	Current treatment
Microgrid	PCC/aggregation bus, internal bus list, operating-mode fields <code>operating_mode</code> , <code>islanding_capability</code> , <code>auto_reconnection</code> ; exchange limits and current <code>p_exchange_mw</code> ; aggregate capability metrics and droop/voltage setpoints.	projected to AC <code>StaticGenerator</code> when grid-connected

8.7 DC and Power-Electronic Components

Struct	Field-level explanation	Current treatment
DCBus	<code>index</code> , <code>bus_type</code> , <code>vm_pu</code> , <code>vmax_pu</code> , <code>vmin_pu</code> , <code>pd_mw</code> , <code>in_service</code> , <code>name</code> , <code>base_kv</code> , <code>area</code> , <code>zone</code> , <code>n_customers</code> , <code>importance</code> , <code>is_load</code> , <code>latitude</code> , <code>longitude</code> . <code>pd_mw</code> is used only when the dedicated DC load table is empty.	direct
DCBranch	<code>from_bus</code> , <code>to_bus</code> , <code>r_pu</code> , <code>rate_a_mva</code> , <code>length_km</code> , <code>base_kv</code> , <code>s_max_mva</code> , <code>n_parallel</code> , <code>mtbf_hours</code> , <code>mttr_hours</code> , <code>t_scheduled_hr</code> , <code>in_service</code> .	direct
StaticGeneratorDC	<code>index</code> , <code>bus</code> , <code>in_service</code> , <code>name</code> , <code>type</code> , <code>p_set_mw</code> , <code>scaling</code> , <code>profile_id</code> , <code>pmax_mw</code> , <code>pmin_mw</code> , <code>controller</code> , <code>mtbf_hours</code> , <code>mttr_hours</code> , <code>t_scheduled_hr</code> .	stored in <code>dc.dc_static_generators</code> ; serialized as its own DC source family
PVArrayDC	<code>index</code> , <code>bus</code> , <code>in_service</code> , <code>name</code> , <code>p_set_mw</code> , <code>profile_id</code> , array electrical parameters, environmental state, and reliability fields.	stored in <code>dc.pv_arrays</code> ; serialized as its own DC PV family
DCCircuitBreaker	<code>index</code> , <code>name</code> , <code>bus_from</code> , <code>bus_to</code> , <code>in_service</code> , <code>breaker_type</code> , <code>closed</code> , <code>r_ohm</code> , <code>rated_voltage_kv</code> , <code>i_rated_ka</code> , <code>i_breaking_ka</code> , <code>element_type</code> , <code>element_id</code> .	stored and serialized; no current projection equivalent
VSCConverter	Connectivity <code>bus_ac</code> , <code>bus_dc</code> ; control mode <code>control_mode</code> ; topology type; setpoints <code>p_set_mw</code> , <code>q_set_mvar</code> , <code>v_dc_set_pu</code> , <code>v_ac_set_pu</code> ; loss parameters <code>eta</code> , <code>loss_percent</code> , <code>loss_mw</code> ; control gains <code>k_vdc</code> , <code>k_p</code> , <code>k_q</code> ; limits and ratings including <code>vn_ac_kv</code> , <code>vn_dc_kv</code> ; controllability, grid-forming and SC-current metadata, and reliability fields.	direct in PF and OPF; some C++ fields are not serialized by the current JSON writer

Struct	Field-level explanation	Current treatment
DCDCConverter	Connectivity <code>bus_in</code> , <code>bus_out</code> ; operating mode <code>control_mode</code> ; references <code>p_ref_mw</code> (output-side referenced), <code>v_ref_pu</code> ; rating fields <code>sn_mva</code> , <code>vn_in_kv</code> , <code>vn_out_kv</code> ; efficiency <code>eta</code> ; conduction-loss resistance <code>r_eq_pu</code> ; droop gain <code>k_droop</code> ; limits <code>pmax_mw</code> , <code>pmin_mw</code> ; <code>controllable</code> , <code>f_switching_hz</code> , and reliability fields. Sign convention: positive direction is <code>bus_in</code> → <code>bus_out</code> ; PF uses output-referenced <code>p_ref_mw</code> , OPF uses input-referenced P^{in} .	direct in PF and parity OPF; some C++ fields are not serialized by the current JSON writer
EnergyRouterPort	<code>bus</code> , <code>port_type</code> , <code>side</code> , <code>voltage_level_kv</code> , operating injection <code>p_mw</code> , <code>q_mvar</code> , <code>v_pu</code> , efficiency <code>eta</code> ; limits and control metadata.	expanded by projection into internal converter equivalents
EnergyRouter	Container fields <code>router_type</code> , <code>num_ports</code> , <code>ports</code> ; rating/loss fields; <code>control_mode</code> , <code>power_dispatch_strategy</code> , <code>t_scheduled_hr</code> ; device-level limits and reliability.	expanded by projection into internal DC buses, VSCs, and DCDC converters

8.8 Optional Three-Phase Models

Struct	Field-level explanation	Current treatment
ThreePhaseACBus	Per-phase voltages <code>vm_a_pu</code> , <code>va_a_deg</code> , <code>vm_b_pu</code> , ...; per-phase demand and shunts; common voltage limits, area, and zone.	projected to ACBus by phase summation / averaging
ThreePhaseACLine	Positive- and zero-sequence per-km parameters, optional precomputed per-unit values, parallel count, thermal rating, and reliability data.	projected to ACBranch using positive-sequence values
ThreePhaseTransformer	Two-winding transformer with vector group, positive- and zero-sequence short-circuit data, tap changer, and phase shift.	projected to Transformer2W equivalent before branch projection
ThreePhaseLoad	Connection type, grounding flag, per-phase powers, ZIP shares, and motor fraction.	projected to aggregated Load
ThreePhaseGenerator	Per-device dispatch and limits plus sequence impedances <code>xd_pu</code> , <code>xdpp_pu</code> , <code>x2_pu</code> , <code>x0_pu</code> , <code>r0_pu</code> .	projected to Generator
ThreePhaseExternalGrid	Per-sequence grid-equivalent impedances and short-circuit capacities.	projected to ExternalGrid

Struct	Field-level explanation	Current treatment
<code>ThreePhaseBusResult</code>	Per-phase solved voltage and injection report. The current one-line notebook path documents the model, but the main steady-state solvers still operate on projected single-phase equivalents.	reporting / future unbalanced workflows

9 I/O Contracts, Sheet Dictionaries, and JSON Keys

The model dictionaries in the previous section explain the physical meaning of each field. This section documents the external I/O contract actually exposed by the current C++ implementation: JSON path names, Excel sheet names, column names, defaulting rules, aggregated views, and the current serialization gaps.

9.1 Serialization Families

API entry point	Artifact	Direction	Practical behavior
<code>to_json / from_json</code>	one JSON document for <code>HybridPowerSystem</code>	bidirectional	covers the major public model families attached to <code>HybridPowerSystem</code> , including circuit breakers, DC static generators, DC PV arrays, DC circuit breakers, <code>ac.motors</code> , and optional <code>three_phase_ac</code> ; several C++ struct fields are still not serialized.
<code>load_excel / save_excel</code>	public Excel API declared in <code>excel_io.hpp</code>	bidirectional when enabled	without <code>HACDCPF_ENABLED_EXCEL</code> , both inline functions throw; with Excel enabled, the header declares these names, while the current source defines the workbook helpers below under <code>load_xlsx/save_xlsx</code> .
source-only <code>save_xlsx / load_xlsx</code>	engineering workbook with one table per supported component class	bidirectional when compiled	implemented in <code>src/io/excel_io.cpp</code> ; input-oriented Excel template plus derived aggregated views such as <code>ACLoad</code> and <code>DCLoad</code> .
source-only PF workbook helpers	dedicated/compact PF result workbooks	export only	<code>src/io/excel_io.cpp</code> implements result workbook writers, but these helper names are not declared in <code>include/hacdcpf/io/excel_io.hpp</code> .

API entry point	Artifact	Direction	Practical behavior
source-only OPF workbook helpers	dedicated/compact OPF result workbooks	export only	write <code>OPF_*</code> sheets; compact OPF export does not append <code>result_*</code> columns into input tables.
<code>power_flow_result_to_json / save_power_flow_result_json</code>	PF result JSON	export only	serializes convergence summary plus AC/DC bus states, AC/DC branch flows, VSC transfers, and DCDC transfers.
<code>opf_result_to_json / opf_result_from_json</code>	AC OPF result JSON	bidirectional	serializes solver status, solver path, primal solution vectors, enhanced dispatch arrays with identity maps, legacy dispatch arrays, and profiling summary.
<code>save_carbon_results_xlsx / carbon_result_to_json</code>	carbon-analysis workbook / JSON	export only for Excel, bidirectional for JSON	uses dedicated report-oriented structures, not the main system model.

9.2 Global Parsing and Workbook Rules

Rule	Current implementation behavior
JSON missing keys	Most JSON importers use <code>jget(..., default)</code> ; missing optional keys are silently defaulted. Whole arrays are optional as well.
JSON required keys	Identity and connectivity fields are usually mandatory: for example <code>index</code> , <code>bus</code> , <code>from_bus</code> , <code>to_bus</code> , <code>hv_bus</code> , <code>lv_bus</code> , <code>bus_ac</code> , and <code>bus_dc</code> .
JSON enums	Enum values are string-coded: for example <code>PQ/PV/SLACK</code> , <code>DC_V/DC_P</code> , <code>VDC_Q</code> , <code>Wind</code> , <code>FuelCell</code> , <code>Recloser</code> , <code>Islanded</code> .
Excel header row	All Excel tables use row 1 as the header row. Data rows start at row 2.
Excel row termination	Readers stop at the first row with an empty <code>index</code> cell. This means blank rows inside a table terminate import early.
Excel missing sheets	<code>load_xlsx</code> silently skips missing sheets; the corresponding component vector remains empty.
Excel boolean parser	<code>TRUE</code> , <code>T</code> , <code>YES</code> , <code>Y</code> , and <code>1</code> map to <code>true</code> ; <code>FALSE</code> , <code>F</code> , <code>NO</code> , <code>N</code> , and <code>0</code> map to <code>false</code> .
Sheet precedence	For AC loads, <code>Load</code> is preferred; <code>ACLoad</code> is used only as a fallback. For DC loads, <code>DCLoadRaw</code> is preferred; <code>DCLoad</code> is only a fallback.
Bus-demand synchronization	After Excel import, <code>sync_bus_demands_from_load_tables(sys)</code> is called so the bus-level embedded demand reflects the explicit load tables.

Rule	Current implementation behavior
Aggregated Excel views	ACBus and DCBus written by the Excel exporters are aggregated bus views, not always the raw struct contents; ACLoad and DCLoad are explicitly derived tables.
Empty result sheets in templates	save_xlsx currently pre-creates the Results_* sheets even though it does not fill them. A freshly exported template therefore contains empty result tabs.

9.3 Hybrid System JSON Contract

Top-level JSON object

JSON path	Value type	Current meaning
name	scalar string	top-level HybridPowerSystem::name .
base_mva	scalar number	top-level system base.
ac	object	AC subsystem object with its own name, base, frequency, and AC component arrays.
dc	object	DC subsystem object with its own name, base, and DC component arrays.
vsc_converters	array	top-level VSC array.
dc.dcdc_converters	array	exported DC/DC converter array nested inside the DC subsystem; import also accepts legacy top-level dcdc_converters .
energy_routers	array	top-level multi-port router array; ports are nested inside each router object.
mobile_storage	array	top-level mobile-storage array.
vpps	array	top-level virtual power plant array.
microgrids	array	top-level microgrid array.
three_phase_ac	object	optional unbalanced AC subsystem with its own base, frequency, and three-phase component arrays.

Current JSON caveats

Public model area	Current JSON status
Standalone energy-router port array	not used; ports appear only as nested objects under each energy_routers[i].ports .
Load short-circuit subfields	the embedded SC motor-fraction fields sn_mva , motor_percent , x_sub_pu , and r_sc_pu are still not part of the main ac.loads[] JSON contract.

Public model area	Current JSON status
Excel API names	the public header exposes <code>load_excel/save_excel</code> , but the optional source file currently defines <code>load_xlsx/save_xlsx</code> and additional workbook result helpers that are not public-header declarations.
DC bus/branch struct fields	DCBus and DCBranch have more C++ struct fields than the current JSON writer exports; see Section 02b_io_field_dictionaries.

AC-network and demand JSON objects

Model	JSON path	Required keys on import	Other exported keys
ACBus	<code>ac.buses[]</code>	index	<code>bus_type</code> , <code>pd_mw</code> , <code>qd_mvar</code> , <code>vm_pu</code> , <code>va_deg</code> , <code>area</code> , <code>base_kv</code> , <code>vmax_pu</code> , <code>vmin_pu</code> , <code>gs_mw</code> , <code>bs_mvar</code> , <code>zone</code> , <code>in_service</code> , <code>name</code> , <code>n_customers</code> , <code>importance</code> , <code>latitude</code> , <code>longitude</code>
ACBranch	<code>ac.branches[]</code>	index, <code>from_bus</code> , <code>to_bus</code>	<code>r_pu</code> , <code>x_pu</code> , <code>b_pu</code> , <code>tap</code> , <code>shift_deg</code> , <code>rate_a_mva</code> , <code>rate_b_mva</code> , <code>rate_c_mva</code> , <code>in_service</code> , <code>name</code> , <code>length_km</code> , <code>failure_rate</code> , <code>mttr_hr</code>
Load	<code>ac.loads[]</code>	index, bus	<code>in_service</code> , <code>name</code> , <code>p_mw</code> , <code>q_mvar</code> , <code>model</code> , <code>z_percent_p</code> , <code>i_percent_p</code> , <code>p_percent_p</code> , <code>z_percent_q</code> , <code>i_percent_q</code> , <code>p_percent_q</code> , <code>controllable</code> , <code>p_min_mw</code> , <code>cost_mw</code> , <code>priority</code> , <code>n_customers</code> , <code>profile_id</code>
FlexibleLoad	<code>ac.flexible_loads[]</code>	index, bus	<code>in_service</code> , <code>name</code> , <code>p_mw</code> , <code>q_mvar</code> , <code>flex_up_mw</code> , <code>flex_down_mw</code> , <code>flex_duration_h</code> , <code>response_time_s</code> , <code>ramp_rate_mw_min</code> , <code>availability_pct</code> , <code>controllable</code> , <code>priority</code> , <code>control_area</code>
AsymmetricLoad	<code>ac.asymmetric_loads[]</code>	index, bus	<code>in_service</code> , <code>name</code> , <code>connection</code> , <code>grounded</code> , <code>paRated_mw</code> , <code>qaRated_mvar</code> , <code>pbRated_mw</code> , <code>qbRated_mvar</code> , <code>pcRated_mw</code> , <code>qcRated_mvar</code> , <code>pa_mw</code> , <code>qa_mvar</code> , <code>pb_mw</code> , <code>qb_mvar</code> , <code>pc_mw</code> , <code>qc_mvar</code> , <code>scaling</code> , <code>const_z_percent</code> , <code>const_i_percent</code> , <code>const_p_percent</code> , <code>controllable</code> , <code>priority</code>
Shunt	<code>ac.shunts[]</code>	index, bus	<code>in_service</code> , <code>name</code> , <code>gs_mw</code> , <code>bs_mvar</code> , <code>switchable</code> , <code>n_steps</code> , <code>current_step</code> , <code>bs_per_step</code>
Switch	<code>ac.switches[]</code>	index, <code>bus_from</code> , <code>bus_to</code>	<code>name</code> , <code>in_service</code> , <code>switch_type</code> , <code>closed</code> , <code>r_contact_ohm</code> , <code>z_ohm</code> , <code>iRated_ka</code> , <code>iBreaking_ka</code> , <code>element_type</code> , <code>element_id</code> , <code>is_remote</code> , <code>is_automated</code> , <code>t_operation_s</code> , <code>p_sw_fail</code> , <code>mtbf_hours</code> , <code>mttr_hours</code>
CircuitBreaker	<code>ac.circuit_breakers[]</code>	index, <code>bus_from</code> , <code>bus_to</code>	<code>name</code> , <code>in_service</code> , <code>breaker_type</code> , <code>closed</code> , <code>z_ohm</code> , <code>rated_voltage_kv</code> , <code>iRated_ka</code> , <code>iBreaking_ka</code> , <code>element_type</code> , <code>element_id</code>

Model	JSON path	Required keys on import	Other exported keys
ChargingStation	ac.charging_stations[]	index, bus	name, location, in_service, n_fast, n_slow, num_chargers, p_fast_max_kw, p_slow_max_kw, max_power_kw, simultaneity_factor, power_factor, utilization_rate, p_total_kw, q_total_kvar, mtbf_hours, mttr_hours
Charger	ac.chargers[]	index	name, station_id, charger_type, in_service, p_rated_kw, p_ch_max_kw, p_ch_min_kw, eta, v2g_capable, p_dis_max_kw, mtbf_hours, mttr_hours
Asynchronous Motor	ac.motors[]	index, bus	name, in_service, machine ratings, direct / zero-sequence parameters, locked-rotor data, and efficiency metadata
ExternalGrid	ac.external_grids[]	index, bus	name, in_service, vm_pu, va_deg, s_sc_max_mva, s_sc_min_mva, rx_max, rx_min, r_pu, x_pu, r0_pu, x0_pu, vn_kv, controllable
Transformer2W	ac.transformers_2w[]	index, hv_bus, lv_bus	name, std_type, in_service, sn_mva, vn_hv_kv, vn_lv_kv, vk_percent, vkr_percent, pk_kw, pfe_kw, i0_percent, tap_side, tap_pos, tap_min, tap_max, tap_neutral, tap_step_percent, shift_deg, vector_group, z0_percent, x0_r0, mtbf_hours, mttr_hours
Transformer3W	ac.transformers_3w[]	index, hv_bus, mv_bus, lv_bus	name, std_type, in_service, sn_hv_mva, sn_mv_mva, sn_lv_mva, vn_hv_kv, vn_mv_kv, vn_lv_kv, vk_hv_mv_percent, vk_hv_lv_percent, vk_mv_lv_percent, vkr_hv_mv_percent, vkr_hv_lv_percent, vkr_mv_lv_percent, pfe_kw, i0_percent, tap_side, tap_pos, tap_step_percent, shift_mv_deg, shift_lv_deg, mtbf_hours, mttr_hours

Generation, storage, and hybrid JSON objects

Model	JSON path	Required keys on import	Other exported keys
Generator	ac.generators[]	index, bus	in_service, pg_mw, qg_mvar, vg_pu, pmax_mw, pmin_mw, qmax_mvar, qmin_mvar, is_slack, cost_c2, cost_c1, cost_c0, name, fuel_type, startup_cost, shutdown_cost, min_up_time_hr, min_dn_time_hr, ramp_up_mw_min, ramp_dn_mw_min, mbase_mva, inertia_h, droop_r, xd_pu, xdp_pu, xdpp_pu, td0p_s, td0pp_s, emission_factor_tco2_mwh, nox_factor_kg_mwh, so2_factor_kg_mwh, forced_outage_rate, mtrr_hr
StaticGenerator	ac.static_generators[] or dc.static_generators[]	index, bus	in_service, name, sgen_type, p_mw, q_mvar, p_rated_mw, sn_mva, pmax_mw, pmin_mw, qmax_mvar, qmin_mvar, scaling, controllable, v_ref_pu, k_p, k_q, k, rx, co2_emission_rate, mtbf_hours, mtrr_hours
RenewableGen	ac.renewable_generators[]	index, bus	in_service, name, type, p_mw, q_mvar, p_rated_mw, qmax_mvar, qmin_mvar, curtailable, cost_curtail_mwh, capacity_factor, profile_id, emission_offset_tco2_mwh
PVSystem	ac.pv_systems[]	index, bus	in_service, name, p_mw, q_mvar, sn_mva, pmax_mw, pmin_mw, qmax_mvar, qmin_mvar, control_mode, controllable, v_ac_set_pu, v_dc_set_pu, inverter_eff, loss_percent, num_series, num_parallel, vmpp, impp, voc, isc, alpha_isc, beta_voc, irradiance, temperature, mtbf_panel_hours, mtrr_panel_hours, mtbf_inverter_hours, mtrr_inverter_hours
Storage	ac.storage[] or dc.storage[]	index, bus	in_service, name, p_mw, q_mvar, p_rated_mw, pmax_mw, pmin_mw, qmax_mvar, qmin_mvar, e_rated_mwh, soc_init, soc_min, soc_max, soc_carbon_intensity_tco2_mwh, eta_charge, eta_discharge, self_discharge_pct, max_cycles, current_cycles, soh, replacement_cost, forced_outage_rate, mtrr_hr
DCBus	dc.buses[]	index	bus_type, vm_pu, vmax_pu, vmin_pu, pd_mw, in_service, name, latitude, longitude
DCBranch	dc.branches[]	index, from_bus, to_bus	r_pu, rate_a_mva, in_service, name, length_km
VSCConverter	vsc_converters[]	index, bus_ac, bus_dc	in_service, control_mode, p_set_mw, q_set_mvar, v_dc_set_pu, v_ac_set_pu, eta, loss_percent, loss_mw, k_vdc, pmax_mw, pmin_mw, qmax_mvar, qmin_mvar, p_rated_mw, name, forced_outage_rate, mtrr_hr
StaticGeneratorDC	dc.dc_static_generators[]	index, bus	in_service, name, type, p_set_mw, scaling, profile_id, pmax_mw, pmin_mw, controllable, mtbf_hours, mtrr_hours, t_scheduled_hr

Model	JSON path	Required keys on import	Other exported keys
PVArrayDC	dc.pv_arrays[]	index, bus	in_service, name, p_set_mw, profile_id, num_series, num_parallel, vmpp, impp, voc, isc, alpha_isc, beta_voc, temperature, irradiance, mtbf_hours, mttr_hours, t_scheduled_hr
DCCircuitBreaker	dc.dc_circuit_breakers[]	index, bus_from, bus_to	name, in_service, breaker_type, closed, r_ohm, rated_voltage_kv, i_rated_ka, i_breaking_ka, element_type, element_id
DCDCConverter	dc.dcdc_converters[]	index, bus_in, bus_out	in_service, name, control_mode, p_ref_mw, v_ref_pu, sn_mva, vn_in_kv, vn_out_kv, eta, r_eq_pu, pmax_mw, pmin_mw, k_droop, mtbf_hours, mttr_hours
EnergyRouterPort	energy_routers[].ports[]	index, bus	name, port_type, voltage_level_kv, p_mw, q_mvar, v_pu, pmax_mw, pmin_mw, qmax_mvar, qmin_mvar, control_mode, p_set_mw, q_set_mvar, v_set_pu, in_service
EnergyRouter	energy_routers[]	index	name, in_service, router_type, num_ports, ports, p_rated_mw, vn_ac_kv, vn_dc_kv, loss_percent, pmax_mw, pmin_mw, qmax_mvar, qmin_mvar, mtbf_hours, mttr_hours
MobileStorage	mobile_storage[]	index, bus	in_service, name, p_mw, q_mvar, p_rated_mw, pmax_mw, pmin_mw, qmax_mvar, qmin_mvar, e_rated_mwh, soc_init, soc_min, soc_max, eta_charge, eta_discharge, max_cycles, current_cycles, soh, is_mobile, status, current_location, target_bus, e_consumption_mwh_km, max_travel_distance_km, mtbf_hours, mttr_hours
VirtualPowerPlant	vpps[]	index	name, description, pcc_bus, resource-count fields, aggregate capability / output terms, ramp limits, reliability metadata, and in_service; import also accepts legacy aggregation_bus
Microgrid	microgrids[]	index	name, description, in_service, pcc_bus, internal_buses, operating_mode, islanding_capability, auto_reconnection, p_exchange_max_mw, p_exchange_min_mw, p_import_max_mw, p_export_max_mw, p_exchange_mw, total_generation_mw, total_storage_mwh, total_load_mw, capacity_mw, peak_load_mw, f_set_hz, v_set_pu, k_droop, area, mtbf_hours, mttr_hours
ThreePhaseACSystem	three_phase_ac	none	name, base_mva, base_freq_hz, and component arrays for buses, lines, transformers, loads, generators, and external grids

Model	JSON path	Required keys on import	Other exported keys
ThreePhaseAC Bus	three_phase_ac.buses[]	index	bus_type, name, base_kv, in_service, vm_a_pu, va_a_deg, vm_b_pu, va_b_deg, vm_c_pu, va_c_deg, pd_a_mw, qd_a_mvar, pd_b_mw, qd_b_mvar, pd_c_mw, qd_c_mvar, gs_a_mw, bs_a_mvar, gs_b_mw, bs_b_mvar, gs_c_mw, bs_c_mvar, vmin_pu, vmax_pu, area, zone
ThreePhaseAC Line	three_phase_ac.lines[]	index, from_bus, to_bus	name, in_service, length_km, parallel, r1_ohm_per_km, x1_ohm_per_km, c1_nf_per_km, r0_ohm_per_km, x0_ohm_per_km, c0_nf_per_km, r1_pu, x1_pu, b1_pu, r0_pu, x0_pu, b0_pu, max_i_ka, rate_a_mva, failure_rate, mttr_hr
ThreePhase Transformer	three_phase_ac.transformers[]	index, hv_bus, lv_bus	name, in_service, nameplate data, leakage and magnetizing terms, zero-sequence data, tap settings, vector group, and reliability metadata
ThreePhaseLoad	three_phase_ac.loads[]	index, bus	name, in_service, connection, grounded, p_a_mw, q_a_mvar, p_b_mw, q_b_mvar, p_c_mw, q_c_mvar, const_z_percent, const_i_percent, const_p_percent, motor_percent, lrc_pu, x_r_ratio
ThreePhase Generator	three_phase_ac.generators[]	index, bus	name, in_service, is_slack, dispatch setpoints / limits, voltage target, machine base, and sequence reactance terms
ThreePhase ExternalGrid	three_phase_ac.external_grids[]	index, bus	name, in_service, voltage target, short-circuit level bounds, R/X bounds, and sequence Thevenin terms

Result JSON objects

JSON artifact	Top-level keys	Current note
PowerFlowResult JSON	converged, iterations, residual, ac_buses, dc_buses, ac_branch_flows, dc_branch_flows, vsc_transfers, dcdc_transfers	export-only helper writes solved bus states, AC/DC branch flow and loading fields, and converter transfer reports.

JSON artifact	Top-level keys	Current note
ACOPFResult JSON	converged, iterations, outer_iterations, objective, max_constraint_violation, max_stationarity, status, solver_path, vm, va, vdc, pg_mw, qg_mvar, dpd_mw, dqd_mvar, pac_mw, qac_mvar, enhanced dispatch objects, legacy dispatch arrays, profiling	enhanced dispatch objects are renewable_dispatch, storage_dispatch, dcdc_dispatch, and flex_dispatch; each contains values plus a map of original_index/source_type.
CarbonAnalysisResult JSON	tracing_verified, matrix_solved, matrix_residual, load_carbon, dc_load_carbon, branch_carbon, dc_branch_carbon, bus_carbon, dc_bus_carbon, vsc_carbon, dcdc_carbon, storage_carbon, energy_router_carbon, generator_loss_allocation, tracing_summary, matrix_summary	AC/DC load arrays carry the same scalar fields plus nested generator_supply_mw; branch / converter / router arrays expose loss and direction fields; storage_carbon adds charge/discharge-side storage semantics including traced charging intensity.

9.4 Excel Input Workbook Contract

Input-sheet catalog

Sheet	Primary model / load target	Columns	Current note
Info	global metadata	Key, Value	loader recognizes name, base_mva, ac_freq_hz, three_phase_name, three_phase_base_mva, and three_phase_base_freq_hz.
ACBus	ACBus	index, name, bus_type, pd_mw, qd_mvar, vm_pu, va_deg, base_kv, vmin_pu, vmax_pu, gs_mw, bs_mvar, area, zone, in_service, n_customers, importance, latitude, longitude	write path uses aggregated AC demand, not necessarily the raw bus fields.
ACBranch	ACBranch	index, name, from_bus, to_bus, r_pu, x_pu, b_pu, tap, shift_deg, rate_a_mva, rate_b_mva, rate_c_mva, length_km, in_service, failure_rate, mttr_hr	near-1:1 with JSON coverage.
Generator	Generator	index, name, bus, pg_mw, qg_mvar, vg_pu, pmax_mw, pmin_mw, qmax_mvar, qmin_mvar, is_slack, fuel_type, mbase_mva, cost_c2, cost_c1, cost_c0, in_service, inertia_h, droop_r, ramp_up_mw_min, ramp_dn_mw_min	Excel omits the deeper machine, emissions, and commitment fields that JSON keeps.
Load	Load	index, name, bus, p_mw, q_mvar, model, z_percent_p, i_percent_p, p_percent_p, z_percent_q, i_percent_q, p_percent_q, controllable, priority, cost_mw, in_service	raw explicit AC load table.

Sheet	Primary model / load target	Columns	Current note
ACLoad	fallback Load import; aggregated export view	same columns as Load	written as a derived table that aggregates Load, charging stations, charging storage, VPP imports, microgrid imports, and AC router ports.
FlexibleLoad	FlexibleLoad	index, name, bus, p_mw, q_mvar, flex_up_mw, flex_down_mw, flex_duration_h, response_time_s, ramp_rate_mw_min, availability_pct, controllible, priority, control_area, in_service	dedicated Excel input sheet now exists; these rows are converted to canonical Load equivalents before PF and also have parity OPF variables.
AsymmetricLoad	AsymmetricLoad	index, name, bus, connection, grounded, pa_rated_mw, qa_rated_mvar, pb_rated_mw, qb_rated_mvar, pc_rated_mw, qc_rated_mvar, pa_mw, qa_mvar, pb_mw, qb_mvar, pc_mw, qc_mvar, scaling, const_z_percent, const_i_percent, const_p_percent, controllible, priority, in_service	dedicated Excel input sheet now exists; solver-side use still relies on projection to a single Load equivalent.
StaticGenerator	AC StaticGenerator	index, name, bus, sgen_type, p_mw, q_mvar, p_rated_mw, sn_mva, pmax_mw, pmin_mw, qmax_mvar, qmin_mvar, scaling, controllible, in_service	Excel omits control, SC, emissions, and reliability metadata.
Storage	AC Storage	index, name, bus, p_mw, q_mvar, p_rated_mw, pmax_mw, pmin_mw, qmax_mvar, qmin_mvar, e_rated_mwh, soc_init, soc_min, soc_max, eta_charge, eta_discharge, in_service	Excel omits life-cycle and outage fields.
RenewableGen	RenewableGen	index, name, bus, type, p_mw, q_mvar, p_rated_mw, qmax_mvar, qmin_mvar, curtailable, capacity_factor, in_service	Excel omits cost_curtail_mwh, profile_id, and emission-offset metadata.
PVSystem	PVSystem	index, name, bus, p_mw, q_mvar, sn_mva, pmax_mw, pmin_mw, qmax_mvar, qmin_mvar, control_mode, inverter_eff, in_service	Excel keeps only a narrow operational subset; JSON is much richer.
Shunt	Shunt	index, name, bus, gs_mw, bs_mvar, switchable, n_steps, current_step, bs_per_step, in_service	near-1:1 with JSON coverage.
ExternalGrid	ExternalGrid	index, name, bus, vm_pu, va_deg, s_sc_max_mva, s_sc_min_mva, rx_max, rx_min, controllible, in_service	Excel omits explicit Thevenin impedance fields present in JSON.
Transformer2W	Transformer2W	index, name, hv_bus, lv_bus, sn_mva, vn_hv_kv, vn_lv_kv, vk_percent, vkr_percent, pfe_kw, i0_percent, tap_side, tap_pos, tap_min, tap_max, tap_neutral, tap_step_percent, shift_deg, vector_group, in_service	Excel omits std_type, pk_kw, zero-sequence, and reliability fields.

Sheet	Primary model / load target	Columns	Current note
Transformer3W	Transformer3W	index, name, std_type, hv_bus, mv_bus, lv_bus, sn_hv_mva, sn_mv_mva, sn_lv_mva, vn_hv_kv, vn_mv_kv, vn_lv_kv, vk_hv_mv_percent, vk_hv_lv_percent, vk_mv_lv_percent, vkr_hv_mv_percent, vkr_hv_lv_percent, vkr_mv_lv_percent, pfe_kw, i0_percent, tap_side, tap_pos, tap_step_percent, shift_mv_deg, shift_lv_deg, mtbf_hours, mtrr_hours, in_service	dedicated Excel input sheet now exists; solver-side treatment still projects the device into equivalent branches.
ChargingStation	ChargingStation	index, name, bus, n_fast, n_slow, num_chargers, p_fast_max_kw, p_slow_max_kw, max_power_kw, simultaneity_factor, power_factor, p_total_kw, q_total_kvar, in_service	Excel omits location, utilization_rate, and reliability fields.
Charger	Charger	index, name, station_id, charger_type, in_service, p_rated_kw, p_ch_max_kw, p_ch_min_kw, eta, v2g_capable, p_dis_max_kw, mtbf_hours, mtrr_hours	dedicated Excel input sheet now exists; charger rows are linked to their parent station by station_id.
Asynchronous Motor	Asynchronous Motor	index, name, bus, machine ratings, direct / zero-sequence parameters, SC motor data, and in_service	dedicated Excel input sheet now exists for short-circuit motor data.
Switch	Switch	index, name, bus_from, bus_to, switch_type, closed, in_service	Excel keeps only the topology/status subset.
CircuitBreaker	CircuitBreaker	index, name, bus_from, bus_to, breaker_type, closed, z_ohm, rated_voltage_kv, i_rated_ka, i_breaking_ka, element_type, element_id, in_service	dedicated AC breaker sheet.
DCBus	DCBus	index, name, bus_type, vm_pu, vmax_pu, vmin_pu, pd_mw, in_service	write path uses aggregated DC demand.
DCLoad	fallback DCLoad import; aggregated export view	index, name, bus, p_mw, controllable, p_min_mw, cost_mw, in_service	written as derived aggregated DC demand.
DCLoadRaw	raw DCLoad table	same columns as DCLoad	preserves the unaggregated DC load objects and is preferred on import.
DCBranch	DCBranch	index, name, from_bus, to_bus, r_pu, rate_a_mva, length_km, in_service	near-1:1 with JSON coverage.
DCStorage	DC Storage	same columns as Storage	same coverage limits as AC storage.
DCStaticGen	DC StaticGenerator	same columns as StaticGenerator	same coverage limits as AC static generators.
DCStaticGenerator	StaticGeneratorDC	index, name, bus, type, p_set_mw, scaling, profile_id, pmax_mw, pmin_mw, controllable, mtbf_hr, mtrr_hr, t_scheduled_hr, in_service	preferred explicit typed DC source sheet; importer also accepts legacy DCStaticGeneratorDC.
DCPVArray	PVArrayDC	index, name, bus, p_set_mw, profile_id, num_series, num_parallel, vmpp, impp, voc, isc, alpha_isc, beta_voc, temperature, irradiance, mtbf_hr, mtrr_hr, t_scheduled_hr, in_service	typed DC PV array sheet.

Sheet	Primary model / load target	Columns	Current note
DCCircuitBreaker	DCCircuitBreaker	index, name, bus_from, bus_to, breaker_type, closed, r_ohm, rated_voltage_kv, i_rated_ka, i_breaking_ka, element_type, element_id, in_service	dedicated DC breaker sheet.
VSCConverter	VSCConverter	index, name, bus_ac, bus_dc, control_mode, p_set_mw, q_set_mvar, v_dc_set_pu, v_ac_set_pu, eta, loss_percent, pmax_mw, pmin_mw, qmax_mvar, qmin_mvar, p_rated_mw, in_service	Excel omits loss_mw, k_vdc, and outage metadata.
DCDCConverter	DCDCConverter	index, name, bus_in, bus_out, control_mode, p_ref_mw, v_ref_pu, sn_mva, eta, pmax_mw, pmin_mw, in_service	Excel omits voltage-rating, droop, resistance, and reliability fields.
EnergyRouter	EnergyRouter	index, name, router_type, num_ports, p_rated_mw, vn_ac_kv, vn_dc_kv, loss_percent, pmax_mw, pmin_mw, qmax_mvar, qmin_mvar, mtbf_hours, mtrr_hours, in_service	router-level metadata now has a dedicated Excel sheet.
EnergyRouter Port	EnergyRouter Port	router_index, index, name, bus, port_type, voltage_level_kv, p_mw, q_mvar, v_pu, pmax_mw, pmin_mw, qmax_mvar, qmin_mvar, control_mode, p_set_mw, q_set_mvar, v_set_pu, in_service	port rows are matched back to their parent router through router_index.
VPP	VirtualPower Plant	index, name, pcc_bus, aggregate output / limit snapshot, selected resource counts, and in_service	Excel writes pcc_bus from aggregation_bus; it omits description, EV/load counts, aggregate capability, ramp rates, and reliability.
Microgrid	Microgrid	index, name, pcc_bus, operating_mode, islanding_capability, p_exchange_mw, p_exchange_max_mw, total_generation_mw, total_load_mw, in_service	Excel omits internal_buses and most planning/control metadata.
MobileStorage	MobileStorage	index, name, bus, status, p_mw, q_mvar, p_rated_mw, e_rated_mwh, soc_init, in_service	Excel keeps only a snapshot subset and omits most mobility/limit metadata.
ThreePhaseBus	ThreePhaseAC Bus	index, name, bus_type, base_kv, vm_a_pu, va_a_deg, vm_b_pu, va_b_deg, vm_c_pu, va_c_deg, pd_a_mw, qd_a_mvar, pd_b_mw, qd_b_mvar, pd_c_mw, qd_c_mvar, gs_a_mw, bs_a_mvar, gs_b_mw, bs_b_mvar, gs_c_mw, bs_c_mvar, vmin_pu, vmax_pu, area, zone, in_service	explicit unbalanced bus table for the optional three_phase_ac subsystem.
ThreePhaseLine	ThreePhaseAC Line	index, name, from_bus, to_bus, length_km, parallel, r1_ohm_per_km, x1_ohm_per_km, c1_nf_per_km, r0_ohm_per_km, x0_ohm_per_km, c0_nf_per_km, r1_pu, x1_pu, b1_pu, r0_pu, x0_pu, b0_pu, max_i_ka, rate_a_mva, failure_rate, mtrr_hr, in_service	sequence-parameter line sheet for explicit unbalanced input.
ThreePhase Transformer	ThreePhase Transformer	index, name, buses, nameplate data, leakage / zero-sequence terms, tap settings, reliability metadata, and in_service	explicit three-phase transformer input sheet; solver path still projects it to Transformer2W.

Sheet	Primary model / load target	Columns	Current note
ThreePhaseLoad	ThreePhaseLoad	index, name, bus, connection, grounded, p_a_mw, q_a_mvar, p_b_mw, q_b_mvar, p_c_mw, q_c_mvar, const_z_percent, const_i_percent, const_p_percent, motor_percent, lrc_pu, x_r_ratio, in_service	explicit unbalanced demand table; projected before main PF/OPF assembly.
ThreePhaseGenerator	ThreePhaseGenerator	index, name, bus, slack flag, dispatch setpoints / limits, sequence reactance terms, and in_service	explicit unbalanced generator sheet with sequence impedance meta-data.
ThreePhaseExternalGrid	ThreePhaseExternalGrid	index, name, bus, voltage target, SC level bounds, sequence impedance terms, and in_service	explicit three-phase grid-equivalent sheet.

Remaining field-level Excel caveats

Area	Current Excel status
Load short-circuit motor subfields	the embedded SC fields <code>sn_mva</code> , <code>motor_percent</code> , <code>x_sub_pu</code> , and <code>r_sc_pu</code> still do not have dedicated Load/ACLoad workbook columns.
ThreePhaseACSystem metadata container	subsystem metadata is carried in <code>Info</code> keys rather than a dedicated <code>ThreePhaseInfo</code> sheet.

JSON Key / Excel Column Dictionary for the Newly Added Contracts

The next tables are intentionally 1:1 with the current serializer code. The “JSON default” text below means the value used by `from_json` when a key is absent. Excel uses the exact sheet and column names shown here.

Optional three-phase subsystem metadata: `three_phase_ac` and `Info`

Field	Excel sheet / column	JSON default / import rule	Meaning
<code>name</code>	<code>Info[three_phase_name]</code>	default "Three-Phase ACSystem"	user-visible subsystem name for the optional explicit unbalanced AC network
<code>base_mva</code>	<code>Info[three_phase_base_mva]</code>	default 100.0	per-subsystem power base; independent from top-level <code>base_mva</code>
<code>extttCircuitBreaker</code>	<code>ac.circuit_breakers[]</code>	<code>index, bus_from, bus_to</code>	<code>name, in_service, breaker_type, closed, z_ohm, rated_voltage_kv, i_rated_ka, i_breaking_ka, element_type, element_id</code>
<code>base_freq_hz</code>	<code>Info[three_phase_base_freq_hz]</code>	default 50.0	nominal subsystem frequency in Hz
<code>buses[]</code>	sheet <code>ThreePhaseBus</code>	missing array / sheet keeps vector empty	explicit three-phase bus family
<code>lines[]</code>	sheet <code>ThreePhaseLine</code>	missing array / sheet keeps vector empty	explicit three-phase line family
<code>transformers[]</code>	sheet <code>ThreePhaseTransformer</code>	missing array / sheet keeps vector empty	explicit three-phase transformer family

Field	Excel sheet / column	JSON default / import rule	Meaning
<code>loads[]</code>	sheet <code>ThreePhaseLoad</code>	missing array / sheet keeps vector empty	explicit unbalanced load family
<code>generators[]</code>	sheet <code>ThreePhaseGenerator</code>	missing array / sheet keeps vector empty	explicit three-phase generator family
<code>external_grids[]</code>	sheet <code>ThreePhaseExternalGrid</code>	missing array / sheet keeps vector empty	explicit sequence-based grid-equivalent family

Asynchronous motor contract: `ac.motors[]` and sheet `AsynchronousMotor`

Field	Excel column	JSON default / import rule	Meaning
<code>index</code>	<code>index</code>	required on JSON import; blank Excel <code>index</code> stops table import	stable device identifier
<code>bus</code>	<code>bus</code>	required on JSON import	connected AC bus index
<code>name</code>	<code>name</code>	default empty string	display label only
<code>in_service</code>	<code>in_service</code>	default <code>true</code>	availability flag; not a solved PF state
<code>vn_kv</code>	<code>vn_kv</code>	default 0.0	rated terminal voltage in kV
<code>sn_mva</code>	<code>sn_mva</code>	default 0.0	rated apparent-power metadata for motor fault-contribution models
<code>r_pu</code>	<code>r_pu</code>	default 0.0	motor equivalent positive-sequence resistance input
<code>x_pu</code>	<code>x_pu</code>	default 0.0	motor equivalent positive-sequence reactance input
<code>x_r</code>	<code>x_r</code>	default 0.0	X/R ratio metadata for short-circuit-style motor models
<code>lrc</code>	<code>lrc</code>	default 0.0	locked-rotor current ratio
<code>poles</code>	<code>poles</code>	default 2	machine pole count
<code>cos_phi</code>	<code>cos_phi</code>	default 0.85	rated power factor
<code>efficiency</code>	<code>efficiency</code>	default 0.95	rated efficiency factor
<code>r0_pu</code>	<code>r0_pu</code>	default 0.0	zero-sequence resistance input for unsymmetrical faults
<code>x0_pu</code>	<code>x0_pu</code>	default 0.0	zero-sequence reactance input for unsymmetrical faults

Three-phase bus contract: `three_phase_ac.buses[]` and sheet `ThreePhaseBus`

Field	Excel column	JSON default / import rule	Meaning
<code>index</code>	<code>index</code>	required on JSON import; blank Excel <code>index</code> stops table import	stable bus identifier
<code>name</code>	<code>name</code>	default empty string	bus label
<code>bus_type</code>	<code>bus_type</code>	default PQ	bus category using the same string tokens as the AC bus model

Field	Excel column	JSON default / import rule	Meaning
base_kv	base_kv	default 0.0	nominal line-to-line bus voltage base
in_service	in_service	default true	availability flag
vm_a_pu, vm_b_pu, vm_c_pu	same columns	default 1.0 each	per-phase initial or specified voltage magnitudes
va_a_deg, va_b_deg, va_c_deg	same columns	defaults 0.0, -120.0, 120.0	phase-angle initialization in degrees for phase order a, b, c
pd_a_mw, pd_b_mw, pd_c_mw	same columns	default 0.0	explicit per-phase active demand before projection
qd_a_mvar, qd_b_mvar, qd_c_mvar	same columns	default 0.0	explicit per-phase reactive demand before projection
gs_a_mw, gs_b_mw, gs_c_mw	same columns	default 0.0	per-phase conductance shunt terms
bs_a_mvar, bs_b_mvar, bs_c_mvar	same columns	default 0.0	per-phase susceptance shunt terms
vmin_pu	vmin_pu	default 0.9	lower per-unit voltage bound
vmax_pu	vmax_pu	default 1.1	upper per-unit voltage bound
area	area	default 1	planning / reporting area tag
zone	zone	default 1	planning / reporting zone tag

Three-phase line contract: `three_phase_ac.lines[]` and sheet `ThreePhaseLine`

Field	Excel column	JSON default / import rule	Meaning
index	index	required on JSON import; blank Excel index stops table import	stable line identifier
from_bus, to_bus	same columns	required on JSON import	line terminal bus indices
name	name	default empty string	line label
in_service	in_service	default true	availability flag
length_km	length_km	default 0.0	physical route length
parallel	parallel	default 1	number of parallel circuits represented by the row
r1_ohm_per_km, x1_ohm_per_km, c1_nf_per_km	same columns	default 0.0	positive-sequence per-km impedance / capacitance data
r0_ohm_per_km, x0_ohm_per_km, c0_nf_per_km	same columns	default 0.0	zero-sequence per-km impedance / capacitance data
r1_pu, x1_pu, b1_pu	same columns	default 0.0	positive-sequence per-unit branch parameters
r0_pu, x0_pu, b0_pu	same columns	default 0.0	zero-sequence per-unit branch parameters
max_i_ka	max_i_ka	default 0.0	thermal current limit in kA
rate_a_mva	rate_a_mva	default 0.0	apparent-power rating used by planning / screening logic
failure_rate	failure_rate	default 0.0	reliability failure-rate input
mttr_hr	mttr_hr	default 0.0	repair-time input in hours

Three-phase transformer contract: `three_phase_ac.transformers[]` and sheet `ThreePhaseTransformer`

Field	Excel column	JSON default / import rule	Meaning
<code>index</code>	<code>index</code>	required on JSON import; blank Excel <code>index</code> stops table import	stable transformer identifier
<code>hv_bus, lv_bus</code>	same columns	required on JSON import	high-voltage and low-voltage terminal bus indices
<code>name</code>	<code>name</code>	default empty string	transformer label
<code>in_service</code>	<code>in_service</code>	default <code>true</code>	availability flag
<code>sn_mva</code>	<code>sn_mva</code>	default 0.0	rated apparent power
<code>vn_hv_kv, vn_lv_kv</code>	same columns	default 0.0	rated winding voltages
<code>vk_percent, vkr_percent</code>	same columns	default 0.0	short-circuit magnitude and resistive share in percent
<code>pfe_kw, i0_percent</code>	same columns	default 0.0	no-load loss and excitation-current inputs
<code>vector_group</code>	<code>vector_group</code>	default empty string	winding connection / clock notation for zero-sequence path interpretation
<code>vk0_percent, vkr0_percent, mag0_percent, mag0_rx, si0_hv_partial</code>	same columns	defaults 0.0 except <code>si0_hv_partial=0.5</code>	zero-sequence transformer data preserved for SC and future unbalanced workflows
<code>tap_side, tap_pos, tap_min, tap_max, tap_neutral</code>	same columns	default 0	tap-changer placement and discrete tap position meta-data
<code>tap_step_percent</code>	<code>tap_step_percent</code>	default 0.0	tap step size in percent
<code>shift_deg</code>	<code>shift_deg</code>	default 0.0	phase shift angle in degrees
<code>mtbf_hours, mttr_hours</code>	same columns	default 0.0	reliability inputs retained in the explicit contract

Three-phase load contract: `three_phase_ac.loads[]` and sheet `ThreePhaseLoad`

Field	Excel column	JSON default / import rule	Meaning
<code>index</code>	<code>index</code>	required on JSON import; blank Excel <code>index</code> stops table import	stable load identifier
<code>bus</code>	<code>bus</code>	required on JSON import	connected three-phase bus index
<code>name</code>	<code>name</code>	default empty string	load label
<code>in_service</code>	<code>in_service</code>	default <code>true</code>	availability flag
<code>connection</code>	<code>connection</code>	default <code>"wye"</code>	wiring model; current code expects free-form connection text such as <code>wye</code> or <code>delta</code>
<code>grounded</code>	<code>grounded</code>	default <code>true</code>	grounding-path assumption for the connection
<code>p_a_mw, p_b_mw, p_c_mw</code>	same columns	default 0.0	per-phase active demand
<code>q_a_mvar, q_b_mvar, q_c_mvar</code>	same columns	default 0.0	per-phase reactive demand
<code>const_z_percent, const_i_percent</code>	same columns	default 0.0	ZIP-model constant-impedance and constant-current shares

Field	Excel column	JSON default / import rule	Meaning
<code>const_p_percent</code>	<code>const_p_percent</code>	default 100.0	ZIP-model constant-power share
<code>motor_percent</code>	<code>motor_percent</code>	default 0.0	embedded motor-fraction share inside the unbalanced load object
<code>lrc_pu</code>	<code>lrc_pu</code>	default 0.0	locked-rotor current ratio for the embedded motor fraction
<code>x_r_ratio</code>	<code>x_r_ratio</code>	default 0.0	X/R ratio for the embedded motor fraction

Three-phase generator contract: `three_phase_ac.generators[]` and sheet `ThreePhaseGenerator`

Field	Excel column	JSON default / import rule	Meaning
<code>index</code>	<code>index</code>	required on JSON import; blank Excel <code>index</code> stops table import	stable generator identifier
<code>bus</code>	<code>bus</code>	required on JSON import	connected three-phase bus index
<code>name</code>	<code>name</code>	default empty string	generator label
<code>in_service</code>	<code>in_service</code>	default <code>true</code>	availability flag
<code>is_slack</code>	<code>is_slack</code>	default <code>false</code>	slack-machine indicator for explicit three-phase studies
<code>p_mw, q_mvar</code>	same columns	default 0.0	current active / reactive injection setpoints
<code>vm_pu</code>	<code>vm_pu</code>	default 1.0	terminal voltage target or initialization
<code>pmax_mw, pmin_mw, qmax_mvar, qmin_mvar</code>	same columns	default 0.0	capability limits
<code>mbase_mva</code>	<code>mbase_mva</code>	default 0.0	machine MVA base for the sequence reactances
<code>xd_pu, xdpp_pu, x2_pu, x0_pu, r0_pu</code>	same columns	default 0.0	positive / subtransient / negative / zero-sequence machine impedance set

Three-phase external-grid contract: `three_phase_ac.external_grids[]` and sheet `ThreePhaseExternalGrid`

Field	Excel column	JSON default / import rule	Meaning
<code>index</code>	<code>index</code>	required on JSON import; blank Excel <code>index</code> stops table import	stable external-grid identifier
<code>bus</code>	<code>bus</code>	required on JSON import	connected three-phase bus index
<code>name</code>	<code>name</code>	default empty string	source label
<code>in_service</code>	<code>in_service</code>	default <code>true</code>	availability flag
<code>vm_pu</code>	<code>vm_pu</code>	default 1.0	Thevenin voltage magnitude target
<code>va_deg</code>	<code>va_deg</code>	default 0.0	Thevenin voltage angle in degrees

Field	Excel column	JSON default / import rule	Meaning
s_sc_max_mva, s_sc_min_mva	same columns	default 0.0	short-circuit strength limits
rx_max, rx_min	same columns	default 0.0	R/X ratio bounds used in equivalent-source parametrization
r1_pu, x1_pu	same columns	default 0.0	positive-sequence Thevenin impedance
r2_pu, x2_pu	same columns	default 0.0	negative-sequence Thevenin impedance
r0_pu, x0_pu	same columns	default 0.0	zero-sequence Thevenin impedance

9.5 Compact Power-Flow Workbook Additions

Sheet updated by save_results_compact.xlsx	Appended columns	Current note
ACBus	result_vm_pu, result_va_deg	solved AC bus state.
DCBus	result_vdc_pu	solved DC voltage.
ACBranch	result_pf_mw, result_qf_mvar, result_pt_mw, result_qt_mvar	branch terminal powers.
DCBranch	result_v_from_pu, result_v_to_pu, result_i_pu, result_p_from_mw, result_p_to_mw, result_loss_mw	derived from solved DC bus voltages and branch resistance.
Storage	result_vm_pu, result_va_deg	bus-state annotation only; storage dispatch is not recomputed.
DCStorage	result_vdc_pu	bus-state annotation only.
Load	result_vm_pu, result_va_deg	bus-state annotation on the raw AC load table.
ACLoad	result_vm_pu, result_va_deg	bus-state annotation on the aggregated AC load view.
DCLoad	result_vdc_pu	bus-state annotation on the aggregated DC load view.
ChargingStation	result_vm_pu, result_va_deg	station bus state.
VSCConverter	result_p_ac_mw, result_q_ac_mvar, result_p_dc_mw, result_loss_mw, result_v_ac_pu, result_v_dc_pu	solved converter transfer and terminal voltages.
DCDCConverter	result_p_in_mw, result_p_out_mw, result_loss_mw, result_v_in_pu, result_v_out_pu	solved converter transfer and terminal voltages.
VPP	result_vm_pu, result_va_deg	aggregation-bus annotation only.

Sheet updated by save_results_c ompact_xlsx	Appended columns	Current note
Microgrid	result_vm_pu, result_va_deg	PCC-bus annotation only.
MobileStorage	result_vm_pu, result_va_deg	current bus annotation only.
Results_Summary	Key, Value	key-value sheet with converged, iterations, and residual.

9.6 Dedicated Result Workbooks

Dedicated power-flow result sheets

Sheet	Columns	Current note
Results_ACBus	index, name, vm_pu, va_deg	solved AC bus state.
Results_DCBus	index, name, vm_pu	this sheet uses the AC-style column name <code>vm_pu</code> even though the value is the DC solved voltage.
Results_Branch Flow	index, from_bus, to_bus, pf_mw, qf_mvar, pt_mw, qt_mvar	branch flows reported in branch order.
Results_DCBranch	index, name, from_bus, to_bus, in_service, v_from_pu, v_to_pu, i_pu, p_from_mw, p_to_mw, loss_mw	computed from solved voltages and branch resistance.
Results_VSCConverter	index, name, bus_ac, bus_dc, in_service, control_mode, p_ac_mw, q_ac_mvar, p_dc_mw, loss_mw, p_set_mw, q_set_mvar, v_ac_pu, v_dc_pu, eta, loss_percent	includes both solved transfer and original setpoint metadata.
Results_DCDCConverter	index, name, bus_in, bus_out, in_service, control_mode, p_ref_mw, v_ref_pu, v_in_pu, v_out_pu, eta, p_in_mw, p_out_mw, loss_mw	includes both solved transfer and original reference metadata.
Results_Storage_AC	index, name, bus, in_service, p_mw, q_mvar, soc, soh, vm_pu, va_deg	uses <code>soc_init</code> as the reported <code>soc</code> .
Results_Storage_DC	index, name, bus, in_service, p_mw, q_mvar, soc, soh, vdc_pu	uses <code>soc_init</code> as the reported <code>soc</code> .
Results_ChargingStation	index, name, bus, in_service, num_chargers, p_total_kw, q_total_kvar, max_power_kw, utilization_rate, vm_pu, va_deg	station bus state plus current aggregate demand fields.

Sheet	Columns	Current note
Results_Charger	index, name, station_id, station_bus, in_service, charger_type, p_rated_kw, p_ch_max_kw, p_dis_max_kw, eta, v2g_capable, vm_pu, va_deg	charger_type now uses the same string token family as JSON and workbook input sheets.
Results_EnergyRouter	index, name, in_service, router_type, num_ports, p_rated_mw, loss_percent, p_port_sum_mw, q_port_sum_mvar	device-level summary only; solved per-port values live in the port sheet.
Results_EnergyRouterPort	router_index, port_index, port_name, bus, port_type, control_mode, in_service, p_mw, q_mvar, v_solved_pu	flattens nested router ports into one table.
Results_VPP	index, name, aggregation_bus, in_service, p_output_mw, q_output_mvar, pmax_mw, pmin_mw, vm_pu, va_deg	aggregation-bus annotation only.
Results_Microgrid	index, name, pcc_bus, operating_mode, in_service, p_exchange_mw, total_generation_mw, total_load_mw, vm_pu, va_deg, internal_buses	internal_buses is written as one comma-separated string.
Results_MobileStorage	index, name, bus, status, in_service, p_mw, q_mvar, soc, target_bus, vm_pu, va_deg	uses soc_init as the reported soc.
Results_Summary	Key, Value	keys are converged, iterations, and residual.

Result-Sheet Enum and Flag Conventions

Artifact	Field	Output representation	Field note
Results_VSCConverter	control_mode	string token: PQ, VDC_Q, VDC_VAC	copied from the input converter mode; not a solver-selected mode switch
Results_DCDCConverter	control_mode	string token: Voltage, Power, Droop	copied from the input converter mode
Results_Charger	charger_type	string token: AC_L1, AC_L2, DC_Fast	now aligned with JSON and workbook input instead of numeric enum codes
Results_EnergyRouterPort	port_type	string token: AC or DC	physical port side classification
Results_EnergyRouterPort	control_mode	string token: PQ, VF, Droop	copied from the input port control mode

Artifact	Field	Output representation	Field note
Results_Microgrid	operating_mode	string token: Grid Connected, Islanded, Transition	reported operating mode metadata, not a PF state variable
Results_MobileStorage	status	string token: Stationary, InTransit, Deployed	reported mobility state metadata
Results_Charger	v2g_capable	boolean token: TRUE / FALSE	static capability flag, not current dispatch direction
Results_* device sheets	in_service	boolean token: TRUE / FALSE	copied device availability flag across result workbooks
Results_Summary, OPF_Summary	converged	boolean token: TRUE / FALSE	solver convergence outcome

Dedicated OPF and carbon result sheets

Sheet	Columns	Current note
OPF_Bus	index, name, base_kv, vm_pu, va_deg, dpd_mw, dqd_mvar	bus voltages plus bus-level load shedding vectors.
OPF_Generator	index, name, bus, pg_mw, qg_mvar, pmax_mw, pmin_mw, qmax_mvar, qmin_mvar, cost_c2, cost_c1, cost_c0, fuel_type	generator dispatch report.
OPF_Converter	index, name, bus_ac, bus_dc, pac_mw, qac_mvar	only VSC converters are reported here.
OPF_Summary	Key, Value	keys are converged, iterations, outer_iterations, objective, max_constraint_violation, max_stationarity, and status.
LoadCarbon	load_index, bus, demand_mw, carbon_intensity_tco2_mwh, total_emissions_tco2	dedicated carbon workbook, sheet 1.
DCLoadCarbon	load_index, bus, demand_mw, carbon_intensity_tco2_mwh, total_emissions_tco2	dedicated carbon workbook, sheet 2.
BusCarbon	bus_index, carbon_intensity_tco2_mwh	dedicated carbon workbook, sheet 3.
DCBusCarbon	bus_index, carbon_intensity_tco2_mwh	dedicated carbon workbook, sheet 4.
BranchCarbon	branch_index, from_bus, to_bus, loss_mw, carbon_intensity_tco2_mwh, total_emissions_tco2	dedicated carbon workbook, sheet 5.

Sheet	Columns	Current note
DCBranchCarbon	branch_index, from_bus, to_bus, loss_mw, carbon_intensity_tco2_mwh, total_emissions_tco2	dedicated carbon workbook, sheet 6.
VSCCarbon	converter_index, bus_ac, bus_dc, ac_to_dc, input_power_mw, output_power_mw, loss_mw, carbon_intensity_tco2_mwh, total_emissions_tco2	dedicated carbon workbook, sheet 7.
DCDCCarbon	converter_index, bus_in, bus_out, input_to_output, input_power_mw, output_power_mw, loss_mw, carbon_intensity_tco2_mwh, total_emissions_tco2	dedicated carbon workbook, sheet 8.
StorageCarbon	storage_index, bus, is_dc, p_mw, soc, stored_energy_mwh, soc_carbon_intensity_tco2_mwh, carbon_intensity_tco2_mwh, total_emissions_tco2	dedicated carbon workbook sheet for explicit storage charge/discharge carbon semantics.
EnergyRouterCarbon	router_index, input_power_mw, output_power_mw, loss_mw, active_input_ports, active_output_ports, carbon_intensity_tco2_mwh, total_emissions_tco2	dedicated carbon workbook sheet for router-internal loss allocation reconstructed from port transfers.
Summary	key-value blocks for tracing and matrix summaries	dedicated carbon workbook summary sheet; contains generation/load/loss totals, balance errors, and flags such as <code>tracing_verified</code> and <code>matrix_solved</code> .

9.7 Current I/O Coverage Gaps That Matter to Engineering Work

Public model area	JSON system file	Excel input workbook	Engineering consequence
ACBus, ACBranch, DCBus, DCBranch	yes	yes	core network objects are available in both I/O families.
Generator, Load, Shunt, ExternalGrid	yes	yes	Excel coverage is narrower than JSON for the richer machine / source metadata.
StaticGenerator, RenewableGen, PVSystem, Storage	yes	yes	Excel exposes only the operational subset; JSON is the better notebook-to-code contract for detailed studies.
Transformer2W	yes	yes	Excel omits zero-sequence and reliability fields.

Public model area	JSON system file	Excel input workbook	Engineering consequence
Transformer3W	yes	yes	JSON and Excel now both carry the explicit 3-winding transformer data, although solver use still goes through projection.
FlexibleLoad, AsymmetricLoad	yes	yes	both I/O families now preserve the rich pre-projection load models.
ChargingStation	yes	yes	input support exists in both families.
Charger	yes	yes	both I/O families now preserve per-charger metadata; the parent station link remains <code>station_id</code> .
DCLoad	yes	yes	the main system JSON and Excel workbook are now aligned for the explicit DC load table.
VSCConverter, DCCDC Converter	yes	yes	Excel coverage is narrower than JSON.
EnergyRouter, EnergyRouterPort	yes	yes	router studies can now use either JSON or Excel input, with ports flattened into a dedicated Excel table.
VPP, Microgrid, MobileStorage	yes	yes	Excel again keeps only a reduced operational subset.
AsynchronousMotor	yes	yes	the SC motor model now has a stable external contract in both families.
ThreePhaseACSystem family	yes	yes	the optional unbalanced subsystem can now round-trip through both JSON and Excel, although main PF/OPF/SC still consume it after projection.

9.8 Interpretation

The current I/O layer is already useful, but it is not a single canonical schema yet.

1. JSON is now the richest external representation for the full current `HybridPowerSystem` container, including `ac.motors` and optional `three_phase_ac`.
2. Excel is an engineering workbook interface with deliberate aggregation and reduced field coverage.
3. The JSON and Excel paths are now aligned for `DCLoad`, `Transformer3W`, `FlexibleLoad`, `AsymmetricLoad`, `Charger`, `EnergyRouter`, `AsynchronousMotor`, and the `ThreePhaseACSystem` family.
4. The remaining gaps are now field-level rather than family-level, especially the SC-specific motor-fraction fields embedded inside `Load` and the lack of dedicated result-workbook contracts for explicit three-phase solved states.

10 Detailed I/O Field Dictionaries

This section expands the per-field contract to the remaining public model families. Section 02a_io_contracts already gives detailed field maps for **AsynchronousMotor**, the optional **three_phase_ac** family, and the result-sheet enum conventions. The tables below complete the same JSON-key / Excel-column dictionary pattern for the other current input models.

When the “Excel sheet / column” entry says **none**, the engineering workbook does not preserve that JSON field directly. When two workbook sheet names are listed, the first is the preferred explicit input table and the second is a fallback or derived view with the same column family.

10.1 System Metadata

Field	Excel sheet / column	JSON default / import rule	Meaning / preservation note
name	Info[name]	default "HybridAC/DC System"	top-level HybridPowerSystem display name
base_mva	Info[base_mva]	default 100.0	top-level system power base; workbook import also copies it into ac.base_mva and dc.base_mva
ac.name	none	default "ACSystem"	JSON-only AC subsystem label
ac.base_mva	none	default 100.0	JSON-only AC subsystem base; workbook uses the shared top-level base_mva instead
ac.freq_hz	Info[ac_freq_hz]	default 50.0	nominal AC frequency in Hz
dc.name	none	default "DCSystem"	JSON-only DC subsystem label
dc.base_mva	none	default 100.0	JSON-only DC subsystem base; workbook again uses the shared top-level base_mva
three_phase_ac.*	Info[three_phase_*] plus dedicated sheets	see Section 02a_io_contracts	optional explicit unbalanced subsystem documented in the earlier detailed dictionary

10.2 AC Network and Demand Models

ACBus : **ac.buses[]** / sheet ACBus

Field	Excel sheet / column	JSON default / import rule	Meaning / preservation note
index	ACBus.index	required on JSON import; blank Excel index stops table import	stable bus identifier
name	ACBus.name	default empty string	bus label
bus_type	ACBus.bus_type	default PQ	bus category token PQ/PV/SL ACK/ISOLATED

Field	Excel sheet / column	JSON default / import rule	Meaning / preservation note
pd_mw, qd_mvar	same columns	default 0.0	embedded bus demand snapshot; workbook export may contain synchronized aggregated demand rather than original raw struct values
vm_pu, va_deg	same columns	defaults 1.0, 0.0	initial or specified bus voltage magnitude and angle
base_kv	ACBus.base_kv	default 110.0	nominal bus voltage base
vmin_pu, vmax_pu	same columns	defaults 0.9, 1.1	voltage operating bounds
gs_mw, bs_mvar	same columns	default 0.0	shunt conductance and susceptance embedded at the bus
area, zone	same columns	defaults 1, 1	planning / reporting partitions
in_service	ACBus.in_service	default true	availability flag
n_customers	ACBus.n_customers	default 0	customer-count metadata
importance	ACBus.importance	default 1.0	bus criticality / weighting metadata
latitude, longitude	same columns	default 0.0	geospatial metadata only

ACBranch : ac.branches[] / sheet ACBranch

Field	Excel sheet / column	JSON default / import rule	Meaning / preservation note
index	ACBranch.index	required on JSON import; blank Excel index stops table import	stable branch identifier
from_bus, to_bus	same columns	required on JSON import	branch terminal bus indices
name	ACBranch.name	default empty string	branch label
r_pu, x_pu, b_pu	same columns	default 0.0	series resistance, series reactance, and total shunt charging in per unit
tap	ACBranch.tap	default 1.0	off-nominal tap ratio used in the branch model
shift_deg	ACBranch.shift_deg	default 0.0	phase-shifting angle in degrees
rate_a_mva, rate_b_mva, rate_c_mva	same columns	default 0.0	thermal / planning ratings
length_km	ACBranch.length_km	default 0.0	physical route length metadata
in_service	ACBranch.in_service	default true	availability flag
failure_rate, mtrr_hr	same columns	default 0.0	reliability metadata
r0_pu, x0_pu, b0_pu, vn_hv_kv, vn_lv_kv, sn_mva	none	not part of the current JSON / Excel contract	struct-level short-circuit and transformer-nameplate helpers currently stay internal to the in-memory model

Load : ac.loads[] / sheet Load (fallback ACLoad)

Field	Excel sheet / column	JSON default / import rule	Meaning / preservation note
<code>index</code>	<code>Load.index</code> or <code>ACLoad.index</code>	required on JSON import; blank Excel <code>index</code> stops table import	stable load identifier
<code>bus</code>	<code>Load.bus</code> or <code>ACLoad.bus</code>	required on JSON import	connected AC bus index
<code>name</code>	same column	default empty string	load label
<code>in_service</code>	same column	default <code>true</code>	availability flag
<code>p_mw, q_mvar</code>	same columns	default 0.0	active and reactive demand
<code>model</code>	same column	default <code>ConstantPower</code>	ZIP / exponential / constant-power load-model token
<code>z_percent_p, i_percent_p, p_percent_p</code>	same columns	defaults 0.0, 0.0, 100.0	active-power ZIP shares
<code>z_percent_q, i_percent_q, p_percent_q</code>	same columns	defaults 0.0, 0.0, 100.0	reactive-power ZIP shares
<code>controllable</code>	same column	default <code>false</code>	whether shedding / dispatch logic may treat the load as controllable
<code>p_min_mw</code>	<code>none</code>	default 0.0	JSON-only minimum retained active demand; workbook currently omits this field for AC loads
<code>cost_mw</code>	same column	default 0.0	marginal shedding or curtailment penalty
<code>priority</code>	same column	default <code>Medium</code>	service-priority token <code>Low/Medium/High/Critical</code>
<code>n_customers</code>	<code>none</code>	default 0	JSON-only customer-count metadata
<code>profile_id</code>	<code>none</code>	default -1	JSON-only profile linkage identifier
<code>sn_mva, motor_percent, x_sub_pu, r_sc_pu</code>	<code>none</code>	not part of the current main JSON contract	short-circuit helper fields remain outside the stable Load I/O contract

`FlexibleLoad : ac.flexible_loads[] / sheet FlexibleLoad`

Field	Excel sheet / column	JSON default / import rule	Meaning / preservation note
<code>index, bus</code>	corresponding columns	required on JSON import; blank Excel <code>index</code> stops table import	stable identifier and connected AC bus
<code>name</code>	<code>FlexibleLoad.name</code>	default empty string	load label
<code>in_service</code>	<code>FlexibleLoad.in_service</code>	default <code>true</code>	availability flag
<code>p_mw, q_mvar</code>	same columns	default 0.0	baseline active and reactive demand
<code>flex_up_mw, flex_down_mw</code>	same columns	default 0.0	upward / downward flexibility envelope in MW
<code>flex_duration_h</code>	same column	default 0.0	duration for which the flex envelope can be sustained
<code>response_time_s</code>	same column	default 0.0	response latency in seconds
<code>ramp_rate_mw_min</code>	same column	default 0.0	adjustment ramp-rate limit
<code>availability_pct</code>	same column	default 100.0	expected availability of the flexibility service

Field	Excel sheet / column	JSON default / import rule	Meaning / preservation note
controllable	same column	default true	whether the flexibility service is enabled
priority	same column	default Medium	load-service priority token
control_area	same column	default empty string	operator / aggregation area tag

AsymmetricLoad : `ac.asymmetric_loads[]` / **sheet** **AsymmetricLoad**

Field	Excel sheet / column	JSON default / import rule	Meaning / preservation note
index, bus	corresponding columns	required on JSON import; blank Excel index stops table import	stable identifier and connected AC bus
name	AsymmetricLoad.name	default empty string	load label
in_service	AsymmetricLoad.in_service	default true	availability flag
connection	AsymmetricLoad.connection	default empty string	wiring model string such as wye or delta
grounded	AsymmetricLoad.grounded	default true	grounding-path assumption
paRatedMw, pbRatedMw, pcRatedMw	same columns	default 0.0	rated per-phase active demand
qaRatedMvar, qbRatedMvar, qcRatedMvar	same columns	default 0.0	rated per-phase reactive demand
paMw, pbMw, pcMw	same columns	default 0.0	current per-phase active demand
qaMvar, qbMvar, qcMvar	same columns	default 0.0	current per-phase reactive demand
scaling	AsymmetricLoad.scaling	default 1.0	overall scaling factor applied to the phase values
constZPercent, constIPercent	same columns	default 0.0	ZIP constant-impedance and constant-current shares
constPPercent	same column	default 100.0	ZIP constant-power share
controllable	same column	default false	controllability flag
priority	same column	default Medium	load-service priority token

Shunt : `ac.shunts[]` / **sheet** **Shunt**

Field	Excel sheet / column	JSON default / import rule	Meaning / preservation note
index, bus	corresponding columns	required on JSON import; blank Excel index stops table import	stable identifier and connected AC bus
name	Shunt.name	default empty string	shunt label
in_service	Shunt.in_service	default true	availability flag
gsMw, bsMvar	same columns	default 0.0	fixed shunt conductance and susceptance
switchable	Shunt.switchable	default false	whether the shunt is modeled as stepped / switchable

Field	Excel sheet / column	JSON default / import rule	Meaning / preservation note
<code>n_steps</code>	<code>Shunt.n_steps</code>	default 1	number of available discrete shunt steps
<code>current_step</code>	<code>Shunt.current_step</code>	default 1	currently selected shunt step
<code>bs_per_step</code>	<code>Shunt.bs_per_step</code>	default 0.0	susceptance increment per step

ExternalGrid : `ac.external_grids[]` / **sheet** ExternalGrid

Field	Excel sheet / column	JSON default / import rule	Meaning / preservation note
<code>index, bus</code>	corresponding columns	required on JSON import; blank Excel <code>index</code> stops table import	stable identifier and connected AC bus
<code>name</code>	<code>ExternalGrid.name</code>	default empty string	source label
<code>in_service</code>	<code>ExternalGrid.in_service</code>	default <code>true</code>	availability flag
<code>vm_pu, va_deg</code>	same columns	defaults 1.0, 0.0	voltage magnitude and angle target for the slack / Thevenin source
<code>s_sc_max_mva, s_sc_min_mva</code>	same columns	default 0.0	short-circuit strength range
<code>rx_max, rx_min</code>	same columns	default 0.0	R/X ratio bounds for equivalent-source construction
<code>r_pu, x_pu</code>	<code>none</code>	default 0.0	JSON-only explicit positive-sequence Thevenin impedance
<code>r0_pu, x0_pu</code>	<code>none</code>	default 0.0	JSON-only zero-sequence source impedance
<code>vn_kv</code>	<code>none</code>	default 0.0	JSON-only nominal source voltage rating
<code>ikq_ka, x_r</code>	<code>none</code>	not part of the current JSON / Excel contract	struct-level IEC 60909 helper fields currently stay internal and are not preserved by either import path
<code>controllable</code>	<code>ExternalGrid.controllable</code>	default <code>true</code>	whether optimization logic may vary the source dispatch

Transformer2W : `ac.transformers_2w[]` / **sheet** Transformer2W

Field	Excel sheet / column	JSON default / import rule	Meaning / preservation note
<code>index, hv_bus, lv_buses</code>	corresponding columns	required on JSON import; blank Excel <code>index</code> stops table import	stable identifier and terminal bus indices
<code>name</code>	<code>Transformer2W.name</code>	default empty string	transformer label
<code>std_type</code>	<code>none</code>	default empty string	JSON-only library / standard type name
<code>in_service</code>	<code>Transformer2W.in_service</code>	default <code>true</code>	availability flag

Field	Excel sheet / column	JSON default / import rule	Meaning / preservation note
sn_mva	Transformer2W.sn_mva	default 0.0	rated apparent power
vn_hv_kv, vn_lv_kv	same columns	default 0.0	winding rated voltages
vk_percent, vkr_percent	same columns	default 0.0	short-circuit magnitude and resistive share in percent
pk_kw	none	default 0.0	JSON-only load-loss field retained in the richer transformer contract
pfe_kw, i0_percent	same columns	default 0.0	no-load loss and excitation current
tap_side, tap_pos, tap_min, tap_max, tap_neutral	same columns	default 0	tap-changer placement and discrete tap metadata
tap_step_percent	Transformer2W.tap_step_percent	default 0.0	tap step size in percent
shift_deg	Transformer2W.shift_deg	default 0.0	phase-shift angle in degrees
vector_group	Transformer2W.vector_group	default empty string	winding connection / clock notation
z0_percent, x0_r0	none	default 0.0	JSON-only zero-sequence impedance parameters
mtbf_hours, mtr_hours	none	default 0.0	JSON-only reliability metadata

Transformer3W : `ac.transformers_3w[]` / sheet Transformer3W

Field	Excel sheet / column	JSON default / import rule	Meaning / preservation note
index, hv_bus, mv_bus, lv_bus	corresponding columns	required on JSON import; blank Excel index stops table import	stable identifier and three winding bus indices
name	Transformer3W.name	default empty string	transformer label
std_type	Transformer3W.std_type	default empty string	library / standard type name
in_service	Transformer3W.in_service	default true	availability flag
sn_hv_mva, sn_mv_mva, sn_lv_mva	same columns	default 0.0	winding ratings on the HV / MV / LV sides
vn_hv_kv, vn_mv_kv, vn_lv_kv	same columns	default 0.0	winding rated voltages
vk_hv_mv_percent, vk_hv_lv_percent, vk_mv_lv_percent	same columns	default 0.0	pairwise short-circuit magnitudes
vkr_hv_mv_percent, vkr_hv_lv_percent, vkr_mv_lv_percent	same columns	default 0.0	pairwise resistive shares
pfe_kw, i0_percent	same columns	default 0.0	no-load loss and excitation-current data
tap_side, tap_pos	same columns	default 0	tap-changer side and current position
tap_step_percent	Transformer3W.tap_step_percent	default 0.0	tap step size in percent
shift_mv_deg, shift_lv_deg	same columns	default 0.0	phase shifts from HV to MV / LV windings

Field	Excel sheet / column	JSON default / import rule	Meaning / preservation note
mtbf_hours, mttr_hours	same columns	default 0.0	reliability metadata preserved in both JSON and workbook

Switch : `ac.switches[]` / **sheet** Switch

Field	Excel sheet / column	JSON default / import rule	Meaning / preservation note
index, bus_from, bus_to	corresponding columns	required on JSON import; blank Excel index stops table import	stable identifier and terminal bus indices
name	Switch.name	default empty string	switch label
in_service	Switch.in_service	default true	availability flag
switch_type	Switch.switch_type	default CircuitBreaker	switching-device token such as Recloser or Fuse
closed	Switch.closed	default true	topology status flag
r_contact_ohm, z_ohm	none	default 0.0	JSON-only detailed contact / arc impedance inputs
i_rated_ka, i_breaking_ka	none	default 0.0	JSON-only current capability ratings
element_type, element_id	none	defaults 0, 0	JSON-only foreign-key reference to the protected element
is_remote, is_automated	none	default false	JSON-only automation metadata
t_operation_s, p_sw_fail	none	default 0.0	JSON-only operation timing and failure-probability metadata
mtbf_hours, mttr_hours	none	default 0.0	JSON-only reliability metadata

CircuitBreaker : `ac.circuit_breakers[]` / **sheet** CircuitBreaker

Field	Excel sheet / column	JSON default / import rule	Meaning / preservation note
index, bus_from, bus_to	corresponding columns	required on JSON import; blank Excel index stops table import	stable identifier and terminal bus indices
name	CircuitBreaker.name	default empty string	breaker label
in_service	CircuitBreaker.in_service	default true	availability flag
breaker_type	CircuitBreaker.breaker_type	default CB	breaker-type token parsed by breaker_type_from_str
closed	CircuitBreaker.closed	default true	topology status flag
z_ohm	CircuitBreaker.z_ohm	default 0.0	AC breaker impedance
rated_voltage_kv, i_rated_ka, i_breaking_ka	same columns	default 0.0	voltage and current ratings
element_type, element_id	same columns	defaults empty string, 0	optional protected-element reference

ChargingStation : ac.charging_stations[] / sheet ChargingStation

Field	Excel sheet / column	JSON default / import rule	Meaning / preservation note
index, bus	corresponding columns	required on JSON import; blank Excel index stops table import	stable identifier and connected AC bus
name	ChargingStation.name	default empty string	station label
location	none	default empty string	JSON-only free-form location descriptor
in_service	ChargingStation.in_service	default true	availability flag
n_fast, n_slow, num_chargers	same columns	default 0	counts of charger assets by class and in total
p_fast_max_kw, p_slow_max_kw	same columns	default 0.0	per-charger maximum power by service class
max_power_kw	same column	default 0.0	aggregate station power ceiling
simultaneity_factor	same column	default 1.0	diversification factor used in the aggregate station model
power_factor	same column	default 0.95	station-level reactive-power assumption
utilization_rate	none	default 0.0	JSON-only expected utilization metadata
p_total_kw, q_total_kvar	same columns	default 0.0	aggregate present demand of the station
mtbf_hours, mttr_hours	none	default 0.0	JSON-only reliability metadata

Charger : ac.chargers[] / sheet Charger

Field	Excel sheet / column	JSON default / import rule	Meaning / preservation note
index	Charger.index	required on JSON import; blank Excel index stops table import	stable charger identifier
name	Charger.name	default empty string	charger label
station_id	Charger.station_id	default 0	parent charging-station foreign key
charger_type	Charger.charger_type	default AC_L2	charger-class token AC_L1/AC_L2/DC_Fast
in_service	Charger.in_service	default true	availability flag
pRated_kw	Charger.pRated_kw	default 0.0	rated charger power
pCh_max_kw, pCh_min_kw	same columns	default 0.0	charging power limits
eta	Charger.eta	default 0.95	charger conversion efficiency
v2g_capable	Charger.v2g_capable	default false	whether reverse power flow is allowed
pDis_max_kw	Charger.pDis_max_kw	default 0.0	maximum discharging power when V2G is enabled
mtbf_hours, mttr_hours	same columns	default 0.0	reliability metadata preserved in both JSON and workbook

10.3 Generation and Storage Models

Generator : `ac.generators[]` / sheet Generator

Field	Excel sheet / column	JSON default / import rule	Meaning / preservation note
<code>index, bus</code>	corresponding columns	required on JSON import; blank Excel <code>index</code> stops table import	stable identifier and connected AC bus
<code>name</code>	<code>Generator.name</code>	default empty string	generator label
<code>in_service</code>	<code>Generator.in_service</code>	default <code>true</code>	availability flag
<code>pg_mw, qg_mvar</code>	same columns	default 0.0	active and reactive generation setpoints
<code>vg_pu</code>	<code>Generator.vg_pu</code>	default 1.0	voltage setpoint on the connected bus
<code>pmax_mw, pmin_mw, qmax_mvar, qmin_mvar</code>	same columns	default 0.0	operating capability limits
<code>is_slack</code>	<code>Generator.is_slack</code>	default <code>false</code>	slack-machine flag
<code>fuel_type</code>	<code>Generator.fuel_type</code>	default <code>Unknown</code>	fuel-type token such as <code>Gas</code> , <code>Wind</code> , or <code>Solar</code>
<code>cost_c2, cost_c1, cost_c0</code>	same columns	default 0.0	quadratic production-cost coefficients
<code>startup_cost, shutdown_cost, min_up_time_hr, min_down_time_hr</code>	<code>none</code>	default 0.0	JSON-only unit-commitment metadata
<code>ramp_up_mw_min, ramp_dn_mw_min</code>	same columns	default 0.0	ramp-rate limits
<code>mbase_mva, inertia_h, droop_r</code>	same columns	defaults 0.0, 0.0, 0.05	machine base, inertia, and governor droop metadata
<code>xd_pu, xdp_pu, xdp_pu, td0p_s, td0pp_s</code>	<code>none</code>	default 0.0	JSON-only machine dynamic / short-circuit parameters
<code>ra_pu, vn_kv, cos_phi, xq_pu, xd_xq, x0_pu, r0_pu</code>	<code>none</code>	not part of the current JSON / Excel contract	additional short-circuit parameters exist in the C++ struct but are not yet serialized or workbook-backed
<code>emission_factor_tco2_mwh, nox_factor_kg_mwh, so2_factor_kg_mwh</code>	<code>none</code>	default 0.0	JSON-only emissions metadata
<code>forced_outage_rate, mtrr_hr</code>	<code>none</code>	default 0.0	JSON-only reliability metadata

StaticGenerator : `ac.static_generators[]` or `dc.static_generators[]` / sheets StaticGenerator and DCStaticGen

Field	Excel sheet / column	JSON default / import rule	Meaning / preservation note
<code>index, bus</code>	corresponding columns	required on JSON import; blank Excel <code>index</code> stops table import	stable identifier and connected AC or DC bus
<code>name</code>	corresponding <code>name</code> column	default empty string	generator label

Field	Excel sheet / column	JSON default / import rule	Meaning / preservation note
<code>in_service</code>	corresponding <code>in_service</code> column	default <code>true</code>	availability flag
<code>sgen_type</code>	corresponding <code>sgen_type</code> column	default <code>Other</code>	generator-type token such as <code>Wind</code> , <code>Battery</code> , or <code>FuelCell</code>
<code>p_mw</code> , <code>q_mvar</code>	same columns	default 0.0	present active / reactive injection
<code>p_rated_mw</code> , <code>sn_mva</code>	same columns	default 0.0	rated active power and apparent power
<code>pmax_mw</code> , <code>pmin_mw</code> , <code>qmax_mvar</code> , <code>qmin_mvar</code>	same columns	default 0.0	operating capability limits
<code>scaling</code>	same column	default 1.0	scalar multiplier for the static generation profile
<code>controllable</code>	same column	default <code>false</code>	controllability flag
<code>v_ref_pu</code> , <code>k_p</code> , <code>k_q</code> , <code>k_rx</code>	<code>none</code>	defaults 1.0, 0.0, 0.0, 1.0, 0.0	JSON-only control and equivalent-source tuning parameters
<code>co2_emission_rate</code>	<code>none</code>	default 0.0	JSON-only emissions metadata
<code>mtbf_hours</code> , <code>mttr_hours</code>	<code>none</code>	default 0.0	JSON-only reliability metadata

Storage : `ac.storage[]` or `dc.storage[]` / sheets `Storage` and `DCStorage`

Field	Excel sheet / column	JSON default / import rule	Meaning / preservation note
<code>index</code> , <code>bus</code>	corresponding columns	required on JSON import; blank Excel <code>index</code> stops table import	stable identifier and connected bus
<code>name</code>	corresponding <code>name</code> column	default empty string	storage label
<code>in_service</code>	corresponding <code>in_service</code> column	default <code>true</code>	availability flag
<code>p_mw</code> , <code>q_mvar</code>	same columns	default 0.0	present active and reactive dispatch
<code>p_rated_mw</code>	same column	default 0.0	rated converter power
<code>pmax_mw</code> , <code>pmin_mw</code> , <code>qmax_mvar</code> , <code>qmin_mvar</code>	same columns	default 0.0	operating limits
<code>e_rated_mwh</code>	same column	default 0.0	energy capacity
<code>soc_init</code> , <code>soc_min</code> , <code>soc_max</code>	same columns	defaults 0.5, 0.1, 0.9	initial and admissible state-of-charge values
<code>soc_carbon_intensity_tco2_mwh</code>	same column	default 0.0	explicit carbon intensity of the stored energy state used by carbon-flow analysis during discharge
<code>eta_charge</code> , <code>eta_discharge</code>	same columns	default 0.95	charging and discharging efficiency
<code>self_discharge_pct</code>	<code>none</code>	default 0.0	JSON-only storage leakage metadata
<code>max_cycles</code> , <code>current_cycles</code>	<code>none</code>	defaults 5000, 0	JSON-only lifecycle counters
<code>soh</code>	<code>none</code>	default 1.0	JSON-only state-of-health value
<code>replacement_cost</code>	<code>none</code>	default 0.0	JSON-only replacement-cost metadata

Field	Excel sheet / column	JSON default / import rule	Meaning / preservation note
<code>forced_outage_rate</code> , <code>mtrr_hr</code>	<code>none</code>	default 0.0	JSON-only reliability metadata

RenewableGen : `ac.renewable_gens[]` / sheet **RenewableGen**

Field	Excel sheet / column	JSON default / import rule	Meaning / preservation note
<code>index</code> , <code>bus</code>	corresponding columns	required on JSON import; blank Excel <code>index</code> stops table import	stable identifier and connected AC bus
<code>name</code>	<code>RenewableGen.name</code>	default empty string	generator label
<code>in_service</code>	<code>RenewableGen.in_service</code>	default <code>true</code>	availability flag
<code>type</code>	<code>RenewableGen.type</code>	default <code>Wind</code>	renewable-type token such as <code>Wind</code> , <code>SolarPV</code> , or <code>Hydro</code>
<code>p_mw</code> , <code>q_mvar</code>	same columns	default 0.0	present active and reactive output
<code>p_rated_mw</code>	same column	default 0.0	rated active power
<code>qmax_mvar</code> , <code>qmin_mvar</code>	same columns	default 0.0	reactive capability limits
<code>curtailable</code>	same column	default <code>true</code>	whether curtailment is allowed
<code>cost_curtail_mwh</code>	<code>none</code>	default 0.0	JSON-only curtailment penalty
<code>capacity_factor</code>	<code>RenewableGen.capacity_factor</code>	default 0.3	expected normalized availability
<code>profile_id</code>	<code>none</code>	default -1	JSON-only profile linkage identifier
<code>emission_offset_tco2_mwh</code>	<code>none</code>	default 0.0	JSON-only avoided-emissions metadata

PVSystem : `ac.pv_systems[]` / sheet **PVSystem**

Field	Excel sheet / column	JSON default / import rule	Meaning / preservation note
<code>index</code> , <code>bus</code>	corresponding columns	required on JSON import; blank Excel <code>index</code> stops table import	stable identifier and connected AC bus
<code>name</code>	<code>PVSystem.name</code>	default empty string	PV system label
<code>in_service</code>	<code>PVSystem.in_service</code>	default <code>true</code>	availability flag
<code>p_mw</code> , <code>q_mvar</code>	same columns	default 0.0	present active and reactive output
<code>sn_mva</code>	<code>PVSystem.sn_mva</code>	default 0.0	apparent-power rating
<code>pmax_mw</code> , <code>pmin_mw</code> , <code>qmax_mvar</code> , <code>qmin_mvar</code>	same columns	default 0.0	operating capability limits
<code>control_mode</code>	<code>PVSystem.control_mode</code>	default <code>MPPT</code>	inverter control-mode token; one of <code>MPPT</code> , <code>VoltVar</code> , <code>VoltWatt</code> , <code>FixedPF</code> , or <code>Curtailed</code>
<code>controllable</code>	<code>none</code>	default <code>false</code>	JSON-only controllability flag

Field	Excel sheet / column	JSON default / import rule	Meaning / preservation note
<code>v_ac_set_pu</code> , <code>v_dc_set_pu</code>	none	default 1.0	JSON-only AC/DC voltage reference targets
<code>inverter_eff</code>	<code>PVSystem.inverter_eff</code>	default 0.97	inverter efficiency
<code>loss_percent</code>	none	default 0.0	JSON-only miscellaneous loss factor
<code>num_series</code> , <code>num_parallel</code> , <code>vmpp</code> , <code>impp</code> , <code>voc</code> , <code>isc</code> , <code>alpha_isc</code> , <code>beta_voc</code>	none	default 0 or 0.0	JSON-only panel-array electrical metadata
<code>irradiance</code> , <code>temperature</code>	none	defaults 1000.0, 25.0	JSON-only environmental inputs
<code>mtbf_panel_hours</code> , <code>mttr_panel_hours</code> , <code>mtbf_inverter_hours</code> , <code>mttr_inverter_hours</code>	none	default 0.0	JSON-only reliability metadata

10.4 DC and Hybrid Coordination Models

`DCBus : dc.buses[] / sheet DCBus`

Field	Excel sheet / column	JSON default / import rule	Meaning / preservation note
<code>index</code>	<code>DCBus.index</code>	required on JSON import; blank Excel <code>index</code> stops table import	stable DC bus identifier
<code>name</code>	<code>DCBus.name</code>	default empty string	bus label
<code>bus_type</code>	<code>DCBus.bus_type</code>	default <code>DC_P</code>	DC bus-type token <code>DC_P</code> or <code>DC_V</code>
<code>vm_pu</code>	<code>DCBus.vm_pu</code>	default 1.0	DC voltage magnitude in per unit
<code>vmax_pu</code> , <code>vmin_pu</code>	same columns	defaults 1.1, 0.9	DC voltage operating bounds
<code>pd_mw</code>	<code>DCBus.pd_mw</code>	default 0.0	embedded DC demand snapshot; workbook export may reflect synchronized aggregate demand
<code>in_service</code>	<code>DCBus.in_service</code>	default <code>true</code>	availability flag
<code>latitude</code> , <code>longitude</code>	none	defaults 0.0; import also accepts <code>lat/lon</code> aliases	JSON-only coordinates
<code>base_kv</code> , <code>area</code> , <code>zone</code> , <code>n_customers</code> , <code>importance</code> , <code>is_load</code>	none	not part of current JSON / Excel contract	C++ struct fields that are not preserved by either serializer

`DCBranch : dc.branches[] / sheet DCBranch`

Field	Excel sheet / column	JSON default / import rule	Meaning / preservation note
<code>index, from_bus, to_bus</code>	corresponding columns	required on JSON import; blank Excel <code>index</code> stops table import	stable identifier and terminal bus indices
<code>name</code>	<code>DCBranch.name</code>	default empty string	branch label
<code>r_pu</code>	<code>DCBranch.r_pu</code>	default 0.0	branch resistance in per unit
<code>rate_a_mva</code>	<code>DCBranch.rate_a_mva</code>	default 0.0	branch rating
<code>length_km</code>	<code>DCBranch.length_km</code>	default 0.0	physical route length meta-data
<code>in_service</code>	<code>DCBranch.in_service</code>	default <code>true</code>	availability flag
<code>base_kv, s_max_mva, n_parallel, mtbf_hours, mttr_hours, t_scheduled_hr</code>	<code>none</code>	not part of current JSON / Excel contract	C++ struct fields that are not preserved by either serializer

DCLoad : `dc.loads[]` / sheet `DCLoadRaw` (fallback `DCLoad`)

Field	Excel sheet / column	JSON default / import rule	Meaning / preservation note
<code>index, bus</code>	corresponding columns	required on JSON import; blank Excel <code>index</code> stops table import	stable identifier and connected DC bus
<code>name</code>	same column	default empty string	load label
<code>in_service</code>	same column	default <code>true</code>	availability flag
<code>p_mw</code>	same column	default 0.0	active demand
<code>controllable</code>	same column	default <code>false</code>	controllability flag
<code>p_min_mw</code>	same column	default 0.0	minimum retained demand under curtailment
<code>cost_mw</code>	same column	default 0.0	marginal curtailment penalty
<code>profile_id</code>	<code>none</code>	default -1	JSON-only profile linkage identifier

StaticGeneratorDC : `dc.dc_static_generators[]` / sheet `DCStaticGenerator`

Field	Excel sheet / column	JSON default / import rule	Meaning / preservation note
<code>index, bus</code>	corresponding columns	required on JSON import; blank Excel <code>index</code> stops table import	stable identifier and connected DC bus
<code>name</code>	<code>DCStaticGenerator.name</code>	default empty string	source label
<code>in_service</code>	<code>DCStaticGenerator.in_service</code>	default <code>true</code>	availability flag
<code>type</code>	<code>DCStaticGenerator.type</code>	default empty string	free-form DC source type
<code>p_set_mw</code>	<code>DCStaticGenerator.p_set_mw</code>	default 0.0	active-power setpoint
<code>scaling</code>	<code>DCStaticGenerator.scaling</code>	default 1.0	profile scaling factor
<code>profile_id</code>	<code>DCStaticGenerator.profile_id</code>	default -1	profile linkage identifier

Field	Excel sheet / column	JSON default / import rule	Meaning / preservation note
<code>pmax_mw</code> , <code>pmin_mw</code>	same columns	default 0.0	operating limits
<code>controllable</code>	<code>DCStaticGenerator.controllable</code>	default <code>false</code>	controllability flag
<code>mtbf_hours</code> , <code>mttr_hours</code>	Excel columns <code>mtbf_hr</code> , <code>mttr_hr</code>	default 0.0	reliability metadata; Excel uses the <code>hr</code> suffix
<code>t_scheduled_hr</code>	same column	default 0.0	scheduled outage duration metadata

PVArrayDC : `dc.pv_arrays[]` / sheet DCPVArray

Field	Excel sheet / column	JSON default / import rule	Meaning / preservation note
<code>index</code> , <code>bus</code>	corresponding columns	required on JSON import; blank Excel <code>index</code> stops table import	stable identifier and connected DC bus
<code>name</code>	<code>DCPVArray.name</code>	default empty string	DC PV array label
<code>in_service</code>	<code>DCPVArray.in_service</code>	default <code>true</code>	availability flag
<code>p_set_mw</code>	<code>DCPVArray.p_set_mw</code>	default 0.0	active-power setpoint
<code>profile_id</code>	<code>DCPVArray.profile_id</code>	default -1	profile linkage identifier
<code>num_series</code> , <code>num_parallel</code>	same columns	default 0	array topology
<code>vmpp</code> , <code>impp</code> , <code>voc</code> , <code>isc</code>	same columns	default 0.0	module electrical parameters
<code>alpha_isc</code> , <code>beta_voc</code>	same columns	default 0.0	temperature coefficients
<code>temperature</code> , <code>irradiance</code>	same columns	defaults 25.0, 1000.0	operating condition inputs
<code>mtbf_hours</code> , <code>mttr_hours</code>	Excel columns <code>mtbf_hr</code> , <code>mttr_hr</code>	default 0.0	reliability metadata; Excel uses the <code>hr</code> suffix
<code>t_scheduled_hr</code>	same column	default 0.0	scheduled outage duration metadata

VSCConverter : `vsc_converters[]` / sheet VSCConverter

Field	Excel sheet / column	JSON default / import rule	Meaning / preservation note
<code>index</code> , <code>bus_ac</code> , <code>bus_dc</code>	corresponding columns	required on JSON import; blank Excel <code>index</code> stops table import	stable identifier and AC/DC terminal bus indices
<code>name</code>	<code>VSCConverter.name</code>	default empty string	converter label
<code>in_service</code>	<code>VSCConverter.in_service</code>	default <code>true</code>	availability flag
<code>control_mode</code>	<code>VSCConverter.control_mode</code>	default PQ	converter-mode token PQ/VDC_Q/VDC_VAC
<code>p_set_mw</code> , <code>q_set_mvar</code>	same columns	default 0.0	AC-side active and reactive setpoints
<code>v_dc_set_pu</code> , <code>v_ac_set_pu</code>	same columns	default 1.0	DC and AC voltage references
<code>eta</code>	<code>VSCConverter.eta</code>	default 0.99	conversion efficiency
<code>loss_percent</code>	<code>VSCConverter.loss_percent</code>	default 0.0	generic loss factor
<code>loss_mw</code>	<code>none</code>	default 0.0	JSON-only fixed loss term

Field	Excel sheet / column	JSON default / import rule	Meaning / preservation note
<code>k_vdc</code>	<code>none</code>	default 0.1	JSON-only DC-voltage droop coefficient
<code>pmax_mw, pmin_mw, qmax_mvar, qmin_mvar</code>	same columns	default 0.0	operating capability limits
<code>p_rated_mw</code>	<code>VSCConverter.p_rated_mw</code>	default 0.0	converter rating
<code>forced_outage_rate, mttr_hr</code>	<code>none</code>	default 0.0	JSON-only reliability meta-data
<code>type, vn_ac_kv, vn_dc_kv, k_p, k_q, v_ref_pu, f_ref_hz, controllable, grid-forming / SC fields, t_scheduled_hr</code>	<code>none</code>	not part of current JSON / Excel contract	newer C++ struct fields that are not preserved by either serializer

DCDCConverter : `dc.dcdc_converters[]` / **sheet** `DCDCConverter`

Field	Excel sheet / column	JSON default / import rule	Meaning / preservation note
<code>index, bus_in, bus_out</code>	corresponding columns	required on JSON import; blank Excel <code>index</code> stops table import	stable identifier and input / output DC bus indices
<code>name</code>	<code>DCDCConverter.name</code>	default empty string	converter label
<code>in_service</code>	<code>DCDCConverter.in_service</code>	default <code>true</code>	availability flag
<code>control_mode</code>	<code>DCDCConverter.control_mode</code>	default <code>Voltage</code>	control-mode token <code>Voltage/Power/Droop</code>
<code>p_ref_mw</code>	<code>DCDCConverter.p_ref_mw</code>	default 0.0	active-power reference
<code>v_ref_pu</code>	<code>DCDCConverter.v_ref_pu</code>	default 1.0	output-voltage reference
<code>sn_mva</code>	<code>DCDCConverter.sn_mva</code>	default 0.0	converter rating
<code>vn_in_kv, vn_out_kv</code>	<code>none</code>	default 0.0	JSON-only nominal voltage ratings
<code>eta</code>	<code>DCDCConverter.eta</code>	default 0.98	conversion efficiency
<code>r_eq_pu</code>	<code>none</code>	default 0.0	JSON-only equivalent resistance
<code>pmax_mw, pmin_mw</code>	same columns	default 0.0	power limits
<code>k_droop</code>	<code>none</code>	default 0.0	JSON-only droop coefficient
<code>mtbf_hours, mttr_hours</code>	<code>none</code>	default 0.0	JSON-only reliability meta-data
<code>controllable, f_switching_hz, t_scheduled_hr</code>	<code>none</code>	not part of current JSON / Excel contract	C++ struct fields that are not preserved by either serializer

DCCircuitBreaker : `dc.dc_circuit_breakers[]` / **sheet** `DCCircuitBreaker`

Field	Excel sheet / column	JSON default / import rule	Meaning / preservation note
<code>index, bus_from, bus_to</code>	corresponding columns	required on JSON import; blank Excel <code>index</code> stops table import	stable identifier and terminal DC bus indices
<code>name</code>	<code>DCCircuitBreaker.name</code>	default empty string	breaker label

Field	Excel sheet / column	JSON default / import rule	Meaning / preservation note
<code>in_service</code>	<code>DCCircuitBreaker.in_service</code>	default <code>true</code>	availability flag
<code>breaker_type</code>	<code>DCCircuitBreaker.breaker_type</code>	default CB	breaker-type token parsed by <code>breaker_type_from_str</code>
<code>closed</code>	<code>DCCircuitBreaker.closed</code>	default <code>true</code>	topology status flag
<code>r_ohm</code>	<code>DCCircuitBreaker.r_ohm</code>	default 0.0	DC breaker resistance
<code>rated_voltage_kv</code> , <code>i_rated_ka</code> , <code>i_breaking_ka</code>	same columns	default 0.0	voltage and current ratings
<code>element_type</code> , <code>element_id</code>	same columns	defaults empty string, 0	optional protected-element reference

EnergyRouter : `energy_routers[]` / **sheet** `EnergyRouter`

Field	Excel sheet / column	JSON default / import rule	Meaning / preservation note
<code>index</code>	<code>EnergyRouter.index</code>	required on JSON import; blank Excel <code>index</code> stops table import	stable router identifier
<code>name</code>	<code>EnergyRouter.name</code>	default empty string	router label
<code>in_service</code>	<code>EnergyRouter.in_service</code>	default <code>true</code>	availability flag
<code>router_type</code>	<code>EnergyRouter.router_type</code>	default empty string	free-form router classification token
<code>num_ports</code>	<code>EnergyRouter.num_ports</code>	default 0	expected number of ports; workbook import may later recompute it from the separate port table
<code>ports[]</code>	sheet <code>EnergyRouterPort</code>	missing JSON array keeps the vector empty	nested port objects are flattened into a dedicated workbook sheet
<code>p_rated_mw</code>	<code>EnergyRouter.p_rated_mw</code>	default 0.0	total router rating
<code>vn_ac_kv</code> , <code>vn_dc_kv</code>	same columns	default 0.0	nominal AC/DC voltage ratings
<code>loss_percent</code>	<code>EnergyRouter.loss_percent</code>	default 0.0	aggregate conversion loss factor
<code>pmax_mw</code> , <code>pmin_mw</code> , <code>qmax_mvar</code> , <code>qmin_mvar</code>	same columns	default 0.0	aggregate operating limits
<code>mtbf_hours</code> , <code>mttr_hours</code>	same columns	default 0.0	reliability metadata preserved in both JSON and workbook
<code>control_mode</code> , <code>power_dispatch_strategy</code> , <code>t_scheduled_hr</code>	<code>none</code>	not part of current JSON / Excel contract	C++ struct fields that are not preserved by either serializer

EnergyRouterPort : `nested energy_routers[].ports[]` / **sheet** `EnergyRouterPort`

Field	Excel sheet / column	JSON default / import rule	Meaning / preservation note
<code>router_index</code>	<code>EnergyRouterPort.router_index</code>	workbook-only join key	parent router identifier used because ports are nested in JSON but flattened in Excel

Field	Excel sheet / column	JSON default / import rule	Meaning / preservation note
<code>index</code>	<code>EnergyRouterPort.index</code>	required on JSON import; workbook row also needs <code>router_index</code>	stable port identifier within its router
<code>name</code>	<code>EnergyRouterPort.name</code>	default empty string	port label
<code>bus</code>	<code>EnergyRouterPort.bus</code>	required on JSON import	connected AC or DC bus index
<code>port_type</code>	<code>EnergyRouterPort.port_type</code>	default AC	side-type token AC or DC
<code>voltage_level_kv</code>	<code>EnergyRouterPort.voltage_level_kv</code>	default 0.0	nominal port voltage level
<code>p_mw, q_mvar</code>	same columns	default 0.0	present active and reactive transfer assigned to the port
<code>v_pu</code>	<code>EnergyRouterPort.v_pu</code>	default 1.0	local port voltage state or initialization
<code>pmax_mw, pmin_mw, qmax_mvar, qmin_mvar</code>	same columns	default 0.0	operating limits
<code>control_mode</code>	<code>EnergyRouterPort.control_mode</code>	default PQ	control-mode token PQ/VF/Droop
<code>p_set_mw, q_set_mvar, v_set_pu</code>	same columns	defaults 0.0, 0.0, 1.0	reference setpoints for the local port controller
<code>in_service</code>	<code>EnergyRouterPort.in_service</code>	default true	availability flag
<code>side, eta</code>	none	not part of current JSON / Excel contract	C++ port fields that are not preserved by either serializer

VirtualPowerPlant : vpps[] / sheet VPP

Field	Excel sheet / column	JSON default / import rule	Meaning / preservation note
<code>index</code>	<code>VPP.index</code>	required on JSON import; blank Excel <code>index</code> stops table import	stable VPP identifier
<code>name</code>	<code>VPP.name</code>	default empty string	VPP label
<code>description</code>	none	default empty string	JSON-only free-form description
<code>aggregation_bus / JSON pcc_bus</code>	<code>VPP.pcc_bus</code>	exporter writes <code>pcc_bus</code> ; importer accepts <code>pcc_bus</code> or legacy <code>aggregation_bus</code> ; default 0	reporting / control aggregation bus stored in the C++ <code>aggregation_bus</code> member
<code>in_service</code>	<code>VPP.in_service</code>	default true	availability flag
<code>n_pv_systems, n_wind_turbines, n_battery_systems</code>	same columns	default 0	asset counts preserved in both JSON and workbook
<code>n_ev_chargers, n_controllable_loads</code>	none	default 0	JSON-only aggregation metadata
<code>p_generation_sum_mw, e_storage_sum_mwh, p_load_controllable_mw</code>	none	default 0.0	JSON-only aggregate capability metadata
<code>p_output_mw, q_output_mvar</code>	same columns	default 0.0	present aggregated power output

Field	Excel sheet / column	JSON default / import rule	Meaning / preservation note
pmax_mw, pmin_mw	same columns	default 0.0	aggregate operating limits
ramp_up_max_mw_min, ramp_down_max_mw_min	none	default 0.0	JSON-only ramping meta-data
mtbf_hours, mttr_hours	none	default 0.0	JSON-only reliability meta-data

Microgrid : microgrids[] / sheet Microgrid

Field	Excel sheet / column	JSON default / import rule	Meaning / preservation note
index	Microgrid.index	required on JSON import; blank Excel index stops table import	stable microgrid identifier
name	Microgrid.name	default empty string	microgrid label
description	none	default empty string	JSON-only free-form description
in_service	Microgrid.in_service	default true	availability flag
pcc_bus	Microgrid.pcc_bus	exporter writes pcc_bus; importer accepts pcc_bus or legacy aggregation_bus; default 0	point-of-common-coupling bus index stored in the C++ aggregation_bus member
internal_buses	none	missing JSON array keeps the vector empty	JSON-only explicit internal bus membership list
operating_mode	Microgrid.operating_mode	default GridConnected	operating-mode token; one of GridConnected, Islanded, or Transition
islanding_capability	Microgrid.islanding_capability	default false	whether the microgrid may island
auto_reconnection	none	default false	JSON-only reconnection automation flag
p_exchange_max_mw, p_exchange_min_mw	Excel keeps only p_exchange_max_mw	default 0.0	aggregate exchange limits with the host grid
p_import_max_mw, p_export_max_mw	none	default 0.0	JSON-only directional exchange limits
p_exchange_mw	Microgrid.p_exchange_mw	default 0.0	present net power exchange at the PCC
total_generation_mw, total_load_mw	same columns	default 0.0	current aggregate generation and demand
total_storage_mwh, capacity_mw, peak_load_mw	none	default 0.0	JSON-only planning meta-data
f_set_hz, v_set_pu, k_droop	none	defaults 50.0, 1.0, 0.0	JSON-only islanded-control targets
area	none	default 0	JSON-only area tag
mtbf_hours, mttr_hours	none	default 0.0	JSON-only reliability meta-data

MobileStorage : mobile_storage[] / sheet MobileStorage

Field	Excel sheet / column	JSON default / import rule	Meaning / preservation note
<code>index, bus</code>	corresponding columns	required on JSON import; blank Excel <code>index</code> stops table import	stable identifier and current connected bus
<code>name</code>	<code>MobileStorage.name</code>	default empty string	unit label
<code>in_service</code>	<code>MobileStorage.in_service</code>	default <code>true</code>	availability flag
<code>p_mw, q_mvar</code>	same columns	default 0.0	present dispatch at the current location
<code>p_rated_mw</code>	<code>MobileStorage.p_rated_mw</code>	default 0.0	converter power rating
<code>pmax_mw, pmin_mw, qmax_mvar, qmin_mvar</code>	<code>none</code>	default 0.0	JSON-only operating limits
<code>e_rated_mwh</code>	<code>MobileStorage.e_rated_mwh</code>	default 0.0	energy capacity
<code>soc_init</code>	<code>MobileStorage.soc_init</code>	default 0.5	initial state of charge
<code>soc_min, soc_max</code>	<code>none</code>	defaults 0.1, 0.9	JSON-only admissible state-of-charge bounds
<code>eta_charge, eta_discharge</code>	<code>none</code>	default 0.95	JSON-only efficiency metadata
<code>max_cycles, current_cycles, soh</code>	<code>none</code>	defaults 5000, 0, 1.0	JSON-only lifecycle / health metadata
<code>is_mobile</code>	<code>none</code>	default <code>true</code>	JSON-only flag distinguishing mobile vs. stationary storage representation
<code>status</code>	<code>MobileStorage.status</code>	default <code>Stationary</code>	mobility-state token; one of <code>Stationary</code> , <code>InTransit</code> , or <code>Deployed</code>
<code>current_location</code>	<code>none</code>	default empty string	JSON-only free-form location string
<code>target_bus</code>	<code>none</code>	default 0	JSON-only relocation target
<code>e_consumption_mwh_km, max_travel_distance_km</code>	<code>none</code>	default 0.0	JSON-only transportation-energy metadata
<code>mtbf_hours, mttr_hours</code>	<code>none</code>	default 0.0	JSON-only reliability metadata

10.5 Cross-Reference

The only remaining detailed dictionaries not repeated in this section are the ones already written in Section 02a_io_contracts:

1. `AsynchronousMotor`
2. the optional `three_phase_ac` metadata container
3. `ThreePhaseBus`, `ThreePhaseLine`, `ThreePhaseTransformer`, `ThreePhaseLoad`, `ThreePhaseGenerator`, and `ThreePhaseExternalGrid`
4. result-sheet enum and flag conventions

11 Output and Report Field Dictionaries

This section applies the same field-level dictionary template to the current export artifacts. Section 02a_io_contracts already catalogs which workbooks and JSON serializers exist; the tables below make the output-side contract explicit at workbook-column and JSON-key level.

11.1 Export Families

Artifact	Export path	Direction	Current note
PowerFlowResult dedicated workbook	source-only workbook helper	export only	writes the Results_* sheets only when optional Excel support is compiled.
PowerFlowResult compact workbook	save_results_compact.xlsx	export only	rewrites input sheets and appends result_* columns to selected tables, plus Results_Summary .
PowerFlowResult JSON	power_flow_result_to_json / save_power_flow_result.json	export only	serializes convergence summary plus AC/DC bus states, AC/DC branch flows, VSC transfers, and DC/DC transfers.
ACOPFResult dedicated workbook	save_opf_results.xlsx	export only	writes OPF_* sheets only.
ACOPFResult compact workbook	save_opf_results_compact.xlsx	export only	rewrites input sheets but still emits separate OPF_* sheets; no opf_* columns are appended into input tables.
ACOPFResult JSON	opf_result_to_json / opf_result_from_json	bidirectional	serializes scalar summary, solver_path , bus / generator / converter vectors, enhanced dispatch objects with maps, legacy dispatch arrays, and OPF profiling block.
CarbonAnalysisResult workbook	save_carbon_results.xlsx	export only	writes AC/DC load and bus sheets, AC/DC branch-loss sheets, converter-loss sheets, storage / EnergyRouter sheets, and block-style Summary .
CarbonAnalysisResult JSON	carbon_result_to_json / carbon_result_from_json	bidirectional	preserves the richer tracing maps and the hybrid AC/DC carrier results that the workbook flattens.
Short-circuit and ONR artifacts	absent from the current public API	none	the current public headers in this repository do not expose compute_short_circuit , BusFaultResult , or solve_optimal_reconfiguration ; no output field contract is documented for them.

11.2 Result Semantic Conventions

Semantic aspect	Current rule	Main artifacts	Engineering note
Electrical units	Active power uses MW, reactive power uses Mvar, AC / DC voltage magnitudes use pu, AC voltage angle uses degree, and current stays in pu unless the field name explicitly says ka .	PF / OPF workbooks and JSON	Workbook and JSON field names usually encode the unit directly, for example pg_mw , va_deg , loss_mw , and matrix_residual .
Carbon units	Carbon intensity uses tCO2/MWh ; total emissions use tCO2 .	Carbon workbook and JSON	The JSON / workbook field names use the suffixes _tco2_mwh and _tco2 ; no implicit mass-unit conversion is applied by the exporter.
Vector order	Numerical result vectors follow solver-side component order, not sparse physical ids. vm , va , dpg_mw , and dqg_mvar follow AC-bus order; vdc follows DC-bus order; pg_mw , qg_mvar follow AC-generator order; pac_mw , qac_mvar follow VSC order.	PF / OPF JSON and workbook exports	Consumers should treat workbook rows and JSON vectors as aligned to the source component arrays unless a sheet explicitly says otherwise.
Row identity	Workbook result sheets copy source model index values when a source component exists; Results_BranchFlow.index is currently ACBranch::index .	PF workbooks and PF JSON	For branch-flow joins, use the source component index plus terminal buses; do not assume row number equals component id.
Fallback values	When a solver vector entry is absent or out of range, exporters write deterministic defaults: typically 0.0 for powers, angles, counters, and residual-like scalars, or 1.0 for voltage magnitudes.	PF / OPF workbooks	This keeps workbook shapes stable, but it means a consumer must distinguish “solver wrote a fallback” from “the physical result is exactly zero” using convergence and artifact context.

Semantic aspect	Current rule	Main artifacts	Engineering note
JSON missing keys	JSON importers keep absent arrays or object maps empty and default absent scalar keys to false, zero, or empty string according to the target field type.	OPF / carbon JSON	The JSON contracts are intentionally sparse-friendly; round-trip consumers should not require every optional key to be present.
Echoed vs solved values	Some exported fields are metadata echoes or derived annotations rather than true solver states: storage <code>soc</code> comes from input <code>soc_init</code> ; router port sums come from stored port structs; <code>Results_DC Branch</code> is recomputed from solved voltages and branch resistance.	PF workbooks	Consumers should not infer that every result-sheet field belongs to the nonlinear state vector.
Boolean spelling	PF / OPF workbook booleans use the standard workbook token form produced by <code>bool_str</code> ; carbon <code>Summary</code> uses lowercase <code>true/false</code> .	Result workbooks	Downstream parsers should normalize workbook booleans instead of assuming one literal spelling.
Conditional sheets	Some result sheets are pre-created even when no rows are written. <code>OPF_Converter</code> is the main example.	PF / OPF workbooks	Empty sheets are part of the current export contract and do not by themselves indicate an error.
Object-map semantics	Carbon contribution maps are exported as JSON object maps keyed by internal carbon-source id rather than positional arrays.	Carbon JSON	Map-key order is not semantically meaningful; workbook export intentionally flattens these maps away.
Stub / absent analysis outputs	Distribution power flow, resilience, and carbon analysis currently return stub-style results; short-circuit and ONR public output APIs are absent.	analysis namespace and scope boundary	The serializers listed here describe existing export code paths, but they do not imply that every analysis family has an implemented solver producing those artifacts.

11.3 Solver-Specific Result Notes

Solver path	Result fields with special meaning	Where visible	Current note
Hybrid PF Newton / FDPF / DC PF	<code>converged</code> , <code>iterations</code> , <code>residual</code>	<code>Results_Summary</code> and compact PF summary sheet	The public PF artifacts expose only the compact scalar summary; detailed profiling arrays stay in memory and are not serialized.
Hybrid PF converter transfer postprocessing	<code>p_ac_mw</code> , <code>q_ac_mvar</code> , <code>p_dc_mw</code> , <code>loss_mw</code> , plus DC/DC transfer fields	dedicated and compact PF workbooks	Converter rows are matched by converter <code>index</code> ; when a solved transfer is missing, the exporter falls back to setpoints and static metadata.
Native AC OPF IPM	<code>outer_iterations</code> , <code>profiling.final_barrier_mu</code> , profiling counters	<code>OPF_Summary</code> and <code>ACOPFResult</code> JSON	These fields are meaningful primarily for the native IPM path; they may remain zero-like on simpler fallback paths.
Parity OPF formulation	<code>dpd_mw</code> , <code>dqd_mvar</code>	<code>OPF_Bus</code> and <code>ACOPFResult</code> JSON	The parity path exposes explicit active / reactive load-shedding vectors. On runs without shedding, the vectors may still exist but stay numerically zero.
OPF fallback selection	<code>status</code> , convergence flags, and partial vectors	<code>OPF_Summary</code> , <code>ACOPFResult</code> JSON	Consumers should read <code>status</code> together with <code>converged</code> ; some fallback paths can return structurally valid but less detailed result blocks.
Carbon tracing method	<code>tracing_verified</code> and <code>tracing_summary.*</code>	carbon workbook and JSON	These fields describe graph-tracing consistency, not matrix-solver success.
Carbon matrix method	<code>matrix_solved</code> , <code>matrix_residual</code> , and <code>matrix_summary.*</code>	carbon workbook and JSON	<code>matrix_residual</code> is specific to the matrix solve; it is not directly comparable to PF or OPF residual metrics.
Distribution resilience stub	<code>completed=false</code> , <code>status=not_implemented</code>	public API result object	the facade exposes <code>run_distribution_resilience_assessment</code> , but the implementation currently returns a stub result rather than a populated report workbook or JSON artifact.

11.4 Consumer Contracts

Results_* workbook family

Consumer slice	Join key	Stable / optional fields	Compatibility constraint
Results_ACBus, Results_DCBus	index	voltage fields are stable; name is descriptive only	consumers should join by index rather than row number even though row order follows the source bus tables.
Entity sheets with explicit ids	index on converter, storage, charging-station, charger, router, VPP, micro-grid, and mobile-storage sheets	identity and meta-data columns are stable; solved voltages / transfer values may fall back to deterministic defaults	additive columns are expected to be backward compatible; consumers should read by header name instead of fixed workbook position.
Results_Energy RouterPort	pair (router_index, port_index)	solved transfer fields may fall back to stored port meta-data; port_name is descriptive only	the flattened port contract is stable at the key-field level, not at the row-order level.
Results_Branch Flow	index copied from ACBranch::index, plus from_bus/to_bus	flow, loss_mw, and loading_pct fields are stable	consumers should still read by header name and tolerate non-contiguous source branch ids.
Results_Summary	Key	current scalar keys are stable; extra keys may appear additively	consumers should parse it as a name/value sheet and must not depend on fixed row numbers.

OPF_* workbook family and ACOPFResult JSON

Consumer slice	Join key	Stable / optional fields	Compatibility constraint
OPF_Bus	index	vm_pu, va_deg, dpd_mw, and dqd_mvar are the stable solved fields; name and base_kv are echoes	workbook rows align to sys.ac.buses , but consumers should still join by index .
OPF_Generator	index	dispatch fields are stable; cost and fuel_type columns are echoed metadata	unknown future columns should be ignored, and consumers should not assume the sheet contains only solved variables.

Consumer slice	Join key	Stable / optional fields	Compatibility constraint
OPF_Converter	index	<code>pac_mw</code> and <code>qac_mvar</code> are stable when the sheet has rows	the sheet may be present but empty when no VSC converters exist, so emptiness is not itself an error condition.
OPF_Summary and JSON scalar block	workbook Key; JSON top-level scalar names	convergence, iteration, objective, residual-like, <code>solver_path</code> , and status fields are stable	summary consumers should tolerate additive keys while continuing to treat existing keys as stable.
ACOPFResult vector and dispatch blocks	AC-bus order for <code>vm</code> , <code>va</code> , <code>vdc</code> , <code>dpd_mw</code> , <code>dqd_mvar</code> ; generator order for <code>pg_mw</code> , <code>qg_mvar</code> ; VSC order for <code>pac_mw</code> , <code>qac_mvar</code> ; map arrays for enhanced dispatch	the profiling object is optional on import; absent arrays stay empty	JSON serializes <code>renewable_dispatch</code> , <code>storage_dispatch</code> , <code>dc_dc_dispatch</code> , <code>flex_dispatch</code> , plus legacy arrays <code>pren_mw</code> , <code>qren_mvar</code> , <code>pstor_mw</code> , <code>qstor_mvar</code> , <code>pdcdc_mw</code> , and <code>pflex_mw</code> .

CarbonAnalysisResult JSON

Consumer slice	Join key	Stable / optional fields	Compatibility constraint
top-level scalar block	top-level key names	<code>tracing_verified</code> , <code>matrix_solved</code> , and <code>matrix_residual</code> are stable; absent keys default to zero-like values on import	additive scalar keys are backward compatible because the current importer only reads known fields.
<code>load_carbon[]</code> and <code>dc_load_carbon[]</code>	<code>load_index</code>	the explicit scalar fields are stable; <code>generator_supply_mw</code> may be absent and then defaults to an empty map	array order follows producer-side load order, but consumers should join by <code>load_index</code> when combining with other artifacts.
<code>branch_carbon[]</code> and <code>dc_branch_carbon[]</code>	<code>branch_index</code>	the explicit scalar fields are stable; <code>generator_loss_mw</code> may be absent and then defaults to an empty map	object-map key order is not stable and must not be used as a semantic ordering.

Consumer slice	Join key	Stable / optional fields	Compatibility constraint
<code>bus_carbon[]</code> and <code>dc_bus_carbon[]</code>	<code>bus_index</code>	the explicit scalar fields are stable; absent array keeps the vector empty	row order follows producer-side bus order, but <code>bus_index</code> is the durable join key.
<code>vsc_carbon[]</code> and <code>dc_dc_carbon[]</code>	<code>converter_index</code>	scalar direction and power fields are stable; <code>generator_loss_mw</code> may be absent and then defaults to an empty map	consumers should join on converter index and not rely on array order once projected-canonical filtering is enabled.
<code>storage_carbon[]</code>	pair (<code>storage_index</code> , <code>is_dc</code>)	scalar storage-state fields are stable; <code>source_supply_mw</code> may be absent and then defaults to an empty map	<code>p_mw</code> uses the bus-injection sign convention and determines whether the row should be interpreted as discharge or charging sink.
<code>energy_router_carbon[]</code>	<code>router_index</code>	scalar router loss fields are stable; <code>source_loss_mw</code> may be absent and then defaults to an empty map	consumers should join by router index and not infer semantics from workbook row order.
generator-allocation maps and summary blocks	source-id string for maps; top-level object name for summaries	<code>generator_loss_allocation</code> , <code>tracing_summary</code> , and <code>matrix_summary</code> are stable object names	map keys are JSON strings of internal source ids, and consumers must normalize them back to integer identifiers if a typed downstream schema requires that.

11.5 Power-Flow Result JSON

JSON key / row object	Fields	Population rule	Meaning / note
top-level scalar block	<code>converged</code> , <code>iterations</code> , <code>residual</code>	copied from <code>PowerFlowResult</code>	solver summary for the exported result
<code>ac_buses[]</code>	<code>index</code> , <code>name</code> , <code>vm_pu</code> , <code>va_deg</code>	component identity from <code>sys.ac.buses</code> ; solved values from <code>result.vm/result.va</code> , falling back to stored bus <code>vm_pu/va_deg</code>	solved AC bus states

JSON key / row object	Fields	Population rule	Meaning / note
<code>dc_buses[]</code>	<code>index, name, vm_pu</code>	component identity from <code>sys.dc.buses</code> ; solved value from <code>result.vdc</code> , falling back to stored bus <code>vm_pu</code>	solved DC bus states
<code>ac_branch_flows[]</code>	<code>index, name, from_bus, to_bus, pf_mw, qf_mvar, pt_mw, qt_mvar, loss_mw, loading_pct</code>	<code>index</code> and terminals copied from <code>ACBranch</code> ; flow values copied from <code>result.branch_flows</code> ; loading computed against rating fallback logic	AC branch-flow rows use original branch indices, not row ordinals
<code>dc_branch_flows[]</code>	<code>index, name, from_bus, to_bus, pf_mw, pt_mw, loss_mw, loading_pct</code>	component identity from <code>DCBranch</code> ; flow values from <code>result.dc_branch_flows</code> when present	DC branch-flow rows
<code>vsc_transfers[]</code>	<code>index, bus_ac, bus_dc, p_ac_mw, q_ac_mvar, p_dc_mw, loss_mw</code>	copied from <code>result.vsc_transfers</code> aligned with VSC order	AC/DC converter transfer rows
<code>dcdc_transfers[]</code>	<code>index, bus_in, bus_out, p_in_mw, p_out_mw, loss_mw</code>	copied from <code>result.dcdc_transfers</code> aligned with DC/DC converter order	DC/DC converter transfer rows

11.6 Dedicated Power-Flow Result Sheets

Results_ACBus

Field	Workbook sheet / column	Population rule	Meaning / note
<code>index</code>	<code>Results_ACBus.index</code>	copied from <code>sys.ac.buses[i].index</code>	stable AC bus identifier
<code>name</code>	<code>Results_ACBus.name</code>	copied from <code>sys.ac.buses[i].name</code>	descriptive bus label
<code>vm_pu, va_deg</code>	same columns	copied from <code>result.v</code> and <code>result.va[i]</code> ; out-of-range fallback 0.0	solved AC voltage magnitude and angle in bus-vector order

Results_DCBus

Field	Workbook sheet / column	Population rule	Meaning / note
<code>index</code>	<code>Results_DCBus.index</code>	copied from <code>sys.dc.buses[i].index</code>	stable DC bus identifier
<code>name</code>	<code>Results_DCBus.name</code>	copied from <code>sys.dc.buses[i].name</code>	descriptive bus label
<code>vm_pu</code>	<code>Results_DCBus.vm_pu</code>	copied from <code>result.vdc[i]</code> ; out-of-range fallback 0.0	solved DC voltage; the sheet keeps the AC-style column name <code>vm_pu</code>

Results_BranchFlow

Field	Workbook sheet / column	Population rule	Meaning / note
<code>index</code>	<code>Results_BranchFlow.index</code>	copied from <code>sys.ac.branches[i].index</code>	source AC branch identifier
<code>from_bus, to_bus</code>	same columns	copied from <code>sys.ac.branches[i]</code> when present; fallback 0	terminal buses of the reported AC branch row
<code>pf_mw, qf_mvar</code>	same columns	copied from <code>result.branch_flows[i]</code>	sending-end active and reactive power
<code>pt_mw, qt_mvar</code>	same columns	copied from <code>result.branch_flows[i]</code>	receiving-end active and reactive power
<code>loss_mw</code>	<code>Results_BranchFlow.loss_mw</code>	computed as <code>max(pf_mw+pt_mw, 0.0)</code>	exported AC branch loss
<code>loading_pct</code>	<code>Results_BranchFlow.loading_pct</code>	computed from the larger terminal apparent power over <code>rate_a_mva</code> , system base MVA, or AC base MVA fallback	branch loading percentage

Results_DCBranch

Field	Workbook sheet / column	Population rule	Meaning / note
<code>index, name</code>	corresponding columns	copied from <code>sys.dc.branches[i]</code>	stable identifier and label
<code>from_bus, to_bus</code>	same columns	copied from <code>sys.dc.branches[i]</code>	terminal DC bus indices
<code>in_service</code>	same column	copied from <code>sys.dc.branches[i].in_service</code> via <code>bool_str</code>	availability flag in workbook boolean-token form
<code>v_from_pu, v_to_pu</code>	same columns	looked up from solved <code>result.vdc</code> by branch terminal bus; fallback 1.0	solved DC terminal voltages
<code>i_pu</code>	<code>Results_DCBranch.i_pu</code>	computed as $(v_{\text{from}} - v_{\text{to}})/r_{\text{pu}}$ when in service and <code>r_pu</code> >0; else 0.0	derived branch current on system base
<code>p_from_mw, p_to_mw</code>	same columns	computed from solved terminal voltages, derived current, and system base MVA	terminal powers implied by the solved DC branch state
<code>loss_mw</code>	<code>Results_DCBranch.loss_mw</code>	computed as <code>p_from_mw+p_to_mw</code>	exported branch-loss figure

Field	Workbook sheet / column	Population rule	Meaning / note
loading_pct	Results_DCBranch.loading_pct	computed from terminal active powers over <code>s_max_mva</code> , <code>rate_a_mva</code> , or base MVA fallback	DC branch loading percentage

Results_VSCConverter

Field	Workbook sheet / column	Population rule	Meaning / note
index, name, bus_ac, bus_dc	corresponding columns	copied from <code>sys.vsc_converters[i]</code>	stable converter identity and terminal buses
in_service, control_mode	same columns	copied from the input converter object	static converter metadata, not a solver-selected mode switch
p_ac_mw, q_ac_mvar, p_dc_mw, loss_mw	same columns	taken from matching <code>result.vsc_transfers[index]</code> when available; fallback uses <code>p_set_mw</code> , <code>q_set_mvar</code> , and stored <code>loss_mw</code>	solved transfer report with deterministic metadata fallback
p_set_mw, q_set_mvar	same columns	copied from <code>sys.vsc_converters[i]</code>	original setpoint metadata retained beside solved transfer values
v_ac_pu, v_dc_pu	same columns	solved voltages looked up by terminal buses; fallback 1.0	terminal AC and DC voltage annotations
eta, loss_percent	same columns	copied from the input converter object	static efficiency / loss metadata

Results_DCDCConverter

Field	Workbook sheet / column	Population rule	Meaning / note
index, name, bus_in, bus_out	corresponding columns	copied from <code>sys.dcdc_converters[i]</code>	stable converter identity and terminal buses
in_service, control_mode	same columns	copied from the input converter object	static converter metadata
p_ref_mw, v_ref_pu, eta	same columns	copied from <code>sys.dcdc_converters[i]</code>	original reference and efficiency metadata
v_in_pu, v_out_pu	same columns	solved voltages looked up by terminal buses; fallback 1.0	terminal DC voltage annotations
p_in_mw, p_out_mw, loss_mw	same columns	taken from matching <code>result.dcdc_transfers[index]</code> when available; fallback uses <code>p_ref_mw</code> and derived zero-loss default	solved DC/DC transfer report with metadata fallback

Results_Storage_AC

Field	Workbook sheet / column	Population rule	Meaning / note
index, name, bus_in, service	corresponding columns	copied from <code>sys.ac_storage[i]</code>	stable identity, connected bus, and availability

Field	Workbook sheet / column	Population rule	Meaning / note
p_mw, q_mvar	same columns	copied from <code>sys.ac.storage[i]</code>	current storage dispatch snapshot; not solved from a storage state estimator
soc	Results_Storage_AC.soc	copied from <code>sys.ac.storage[i].soc_init</code>	reported state of charge is the input initial SOC
soh	Results_Storage_AC.soh	copied from <code>sys.ac.storage[i].soh</code>	stored state-of-health metadata
vm_pu, va_deg	same columns	solved AC bus voltage looked up by <code>bus</code> ; fallback 1.0/0.0	bus-state annotation for the storage location

Results_Storage_DC

Field	Workbook sheet / column	Population rule	Meaning / note
index, name, bus, in_service	corresponding columns	copied from <code>sys.dc.storage[i]</code>	stable identity, connected bus, and availability
p_mw, q_mvar	same columns	copied from <code>sys.dc.storage[i]</code>	current storage dispatch snapshot
soc	Results_Storage_DC.soc	copied from <code>sys.dc.storage[i].soc_init</code>	reported state of charge is the input initial SOC
soh	Results_Storage_DC.soh	copied from <code>sys.dc.storage[i].soh</code>	stored state-of-health metadata
vdc_pu	Results_Storage_DC.vdc_pu	solved DC voltage looked up by <code>bus</code> ; fallback 1.0	bus-state annotation for the storage location

Results_ChargingStation

Field	Workbook sheet / column	Population rule	Meaning / note
index, name, bus, in_service	corresponding columns	copied from <code>sys.ac.charging_stations[i]</code>	stable station identity, connected bus, and availability
num_chargers, p_total_kw, q_total_kvar, max_power_kw, utilization_rate	same columns	copied from <code>sys.ac.charging_stations[i]</code>	current aggregate station metadata; no per-solver charging dispatch reconstruction is performed here
vm_pu, va_deg	same columns	solved AC bus voltage looked up by <code>bus</code> ; fallback 1.0/0.0	bus-state annotation for the station location

Results_Charger

Field	Workbook sheet / column	Population rule	Meaning / note
index, name, station_id	corresponding columns	copied from <code>sys.ac.chargers[i]</code>	stable charger identity and parent-station link
station_bus	Results_Charger.station_bus	joined from the parent charging-station map by <code>station_id</code> ; fallback 0	resolved AC bus of the parent charging station

Field	Workbook sheet / column	Population rule	Meaning / note
<code>in_service</code> , <code>charger_type</code> , <code>p_rate_d_kw</code> , <code>p_ch_max_kw</code> , <code>p_dis_max_kw</code> , <code>eta</code> , <code>v2g_capable</code>	same columns	copied from <code>sys.ac.chargers[i]</code>	static charger metadata repeated in the result workbook
<code>vm_pu</code> , <code>va_deg</code>	same columns	solved AC bus voltage looked up by the resolved <code>station_bus</code> ; fallback 1.0/0.0	station-bus voltage annotation, not per-charger internal electrical state

Results_EnergyRouter

Field	Workbook sheet / column	Population rule	Meaning / note
<code>index</code> , <code>name</code> , <code>in_service</code> , <code>router_type</code> , <code>num_ports</code> , <code>pRated_mw</code> , <code>loss_percent</code>	corresponding columns	copied from <code>sys.energy_routers[i]</code>	router metadata preserved in the result workbook
<code>p_port_sum_mw</code> , <code>q_port_sum_mvar</code>	same columns	computed by summing the stored router-port <code>p_mw</code> / <code>q_mvar</code> values	router-level summary over the current port structs; it does not re-sum the solved transfer table

Results_EnergyRouterPort

Field	Workbook sheet / column	Population rule	Meaning / note
<code>router_index</code> , <code>port_index</code> , <code>port_name</code> , <code>bus</code>	corresponding columns	copied from each nested port row under <code>sys.energy_routers[*].ports[*]</code>	flattened router / port identity and connected bus
<code>port_type</code> , <code>control_mode</code> , <code>in_service</code>	same columns	copied from the nested port object	static port metadata
<code>p_mw</code> , <code>q_mvar</code> , <code>v_solved_pu</code>	same columns	taken from the matching solved router-port transfer when available; fallback uses the port's stored <code>p_mw</code> , <code>q_mvar</code> , and solved bus voltage	solved per-port transfer report with deterministic metadata fallback

Results_VPP

Field	Workbook sheet / column	Population rule	Meaning / note
<code>index</code> , <code>name</code> , <code>aggregation_bus</code> , <code>in_service</code>	corresponding columns	copied from <code>sys.vpps[i]</code>	stable VPP identity and aggregation location
<code>p_output_mw</code> , <code>q_output_mvar</code> , <code>pmax_mw</code> , <code>pmin_mw</code>	same columns	copied from <code>sys.vpps[i]</code>	current VPP aggregate output / limits metadata

Field	Workbook sheet / column	Population rule	Meaning / note
vm_pu, va_deg	same columns	solved AC bus voltage looked up by <code>aggregation_bus</code> ; fallback 1.0/0.0	aggregation-bus state annotation

Results_Microgrid

Field	Workbook sheet / column	Population rule	Meaning / note
index, name, pcc_bus, operating_mode, in_service	corresponding columns	copied from <code>sys.microgrids[i]</code>	microgrid identity and current mode metadata
p_exchange_mw, total_generation_mw, total_load_mw	same columns	copied from <code>sys.microgrids[i]</code>	current aggregate exchange / generation / demand snapshot
vm_pu, va_deg	same columns	solved AC bus voltage looked up by <code>pcc_bus</code> ; fallback 1.0/0.0	PCC bus-state annotation
internal_buses	<code>Results_Microgrid.internal_buses</code>	comma-joined string formed from the stored microgrid membership vector	flattened membership list; workbook does not preserve the vector structure directly

Results_MobileStorage

Field	Workbook sheet / column	Population rule	Meaning / note
index, name, bus, status, in_service	corresponding columns	copied from <code>sys.mobile_storage[i]</code>	mobile-storage identity, current location, and mobility state metadata
p_mw, q_mvar	same columns	copied from <code>sys.mobile_storage[i]</code>	current dispatch snapshot
soc	<code>Results_MobileStorage.soc</code>	copied from <code>sys.mobile_storage[i].soc_init</code>	reported state of charge is the input initial SOC
target_bus	<code>Results_MobileStorage.target_bus</code>	copied from <code>sys.mobile_storage[i].target_buses</code>	relocation target metadata
vm_pu, va_deg	same columns	solved AC bus voltage looked up by the current bus; fallback 1.0/0.0	current-bus state annotation

Results_Summary

Field	Workbook sheet / column	Population rule	Meaning / note
converged	<code>Results_Summary</code> row with <code>Key=converged</code>	written from <code>result.converged</code> via <code>bool_string</code>	PF convergence flag using workbook boolean-token form
iterations	<code>Results_Summary</code> row with <code>Key=iterations</code>	written from <code>result.iterations</code>	total PF iteration count
residual	<code>Results_Summary</code> row with <code>Key=residual</code>	written from <code>result.residual</code>	final PF residual metric

11.7 Compact Power-Flow Result Columns

Field	Workbook sheet / column	Population rule	Meaning / note
<code>result_vm_pu</code> , <code>result_va_deg</code>	ACBus appended columns	copied from <code>result.v</code> <code>m[i]</code> and <code>result.va[i]</code> in AC bus order	compact PF solved AC bus state
<code>result_vdc_pu</code>	DCBus appended column	copied from <code>result.vdc</code> <code>[i]</code> in DC bus order	compact PF solved DC bus voltage
<code>result_pf_mw</code> , <code>result_qf_mvar</code> , <code>result_pt_mw</code> , <code>result_qt_mvar</code>	ACBranch appended columns	copied from <code>result.bra</code> <code>nch_flows[i]</code>	compact PF AC branch- flow report
<code>result_v_from_pu</code> , <code>result_v_to_pu</code> , <code>result_i_pu</code> , <code>result_p_from_mw</code> , <code>result_p_to_mw</code> , <code>result_loss_mw</code>	DCBranch appended columns	recomputed from solved DC voltages and branch resistance, same as <code>Results_DCBranch</code>	compact PF DC branch report
<code>result_vm_pu</code> , <code>result_va_deg</code>	Storage, Load, ACLoad, Char- gingStation, VPP, Microgrid, MobileStorage appended columns	solved AC voltage looked up by each row's connected bus or aggre- gation bus	compact PF AC-side bus- state annotation on input tables
<code>result_vdc_pu</code>	DCStorage, DCLoad appended column	solved DC voltage looked up by each row's connected bus	compact PF DC-side bus- state annotation on input tables
<code>result_p_ac_mw</code> , <code>result_q_ac_mvar</code> , <code>result_p_dc_mw</code> , <code>result_loss_mw</code> , <code>result_v_ac_pu</code> , <code>result_v_dc_pu</code>	VSCConverter appended columns	populated from match- ing <code>result.vsc_trans</code> <code>fers[index]</code> plus solved terminal voltages	compact PF converter transfer report
<code>result_p_in_mw</code> , <code>result_p_out_mw</code> , <code>result_loss_mw</code> , <code>result_v_in_pu</code> , <code>result_v_out_pu</code>	DCDCConverter appended columns	populated from match- ing <code>result.dcdc_tr</code> <code>ansfers[index]</code> plus solved terminal voltages	compact PF DC/DC con- verter report
<code>Results_Summary</code>	separate sheet still written in compact PF export	same key-value rows as the dedicated PF result workbook	compact PF export still carries a standalone sum- mary sheet

11.8 Dedicated OPF Sheets

OPF_Bus

Field	Workbook sheet / column	Population rule	Meaning / note
<code>index</code> , <code>name</code> , <code>base</code> <code>_kv</code>	corresponding columns	copied from <code>sys.ac.bu</code> <code>ses[i]</code>	stable bus identity and base- voltage metadata
<code>vm_pu</code> , <code>va_deg</code>	same columns	copied from <code>result.v</code> <code>m[i]</code> and <code>result.va[i]</code> ; out-of-range fallback 0.0	optimal AC bus voltage solu- tion
<code>dpd_mw</code> , <code>dqd_mvar</code>	same columns	copied from <code>result.dpd</code> <code>_mw[i]</code> and <code>result.dqd</code> <code>_mvar[i]</code> ; out-of-range fallback 0.0	parity-formulation bus-level active / reactive load shedding

OPF_Generator

Field	Workbook sheet / column	Population rule	Meaning / note
index, name, bus	corresponding columns	copied from <code>sys.ac.generators[i]</code>	stable generator identity and connected bus
pg_mw, qg_mvar	same columns	copied from <code>result.pg_mw[i]</code> and <code>result.qg_mvar[i]</code> ; fallback to input <code>pg_mw/qg_mvar</code>	optimal generator dispatch
pmax_mw, pmin_mw, qmax_mvar, qmin_mvar	same columns	copied from <code>sys.ac.generators[i]</code>	generator capability meta-data retained beside the optimal point
cost_c2, cost_c1, cost_c0, fuel_type	same columns	copied from <code>sys.ac.generators[i]</code>	cost-model and fuel meta-data used for interpretation

OPF_Converter

Field	Workbook sheet / column	Population rule	Meaning / note
index, name, bus_ac, bus_dc	corresponding columns	copied from <code>sys.vsc_converters[i]</code>	stable VSC identity and terminal buses
pac_mw, qac_mvar	same columns	copied from <code>result.pac_mw[i]</code> and <code>result.qac_mvar[i]</code> ; out-of-range fallback 0.0	optimal AC-side converter operating point

OPF_Summary

Field	Workbook sheet / column	Population rule	Meaning / note
converged	OPF_Summary row with Key=converged	written from <code>result.converged</code> via <code>bool_str</code>	OPF convergence flag
iterations	OPF_Summary row with Key=iterations	written from <code>result.iterations</code>	total inner-iteration count
outer_iterations	OPF_Summary row with Key=outer_iterations	written from <code>result.outer_iterations</code>	barrier / outer-loop iteration count
objective	OPF_Summary row with Key=objective	written from <code>result.objective</code>	final objective value
max_constraint_violation	OPF_Summary row with Key=max_constraint_violation	written from <code>result.max_constraint_violation</code>	worst final feasibility residual
max_stationarity	OPF_Summary row with Key=max_stationarity	written from <code>result.max_stationarity</code>	worst final first-order optimality metric
status	OPF_Summary row with Key=status	written from <code>result.status</code>	textual solver termination status

ACOPFResult JSON

Field	JSON key / path	Export / import rule	Meaning / note
converged, iterations, outer_iterations, objective, max_constraint_violation, max_stationarity, status	top-level scalar keys	bidirectional; missing keys default to false, zero, or empty string	OPF scalar summary block

Field	JSON key / path	Export / import rule	Meaning / note
vm, va	top-level arrays	bidirectional; absent array keeps the vector empty	bus-voltage vectors in bus order
pg_mw, qg_mvar	top-level arrays	bidirectional; absent array keeps the vector empty	generator dispatch vectors in generator order
dpd_mw, dqd_mvar	top-level arrays	bidirectional; absent array keeps the vector empty	bus-level parity load-shedding vectors
pac_mw, qac_mvar	top-level arrays	bidirectional; absent array keeps the vector empty	VSC AC-side operating-point vectors
profiling.linear_solver_backend	profiling[linear_solver_backend]	bidirectional; default empty string	linear solver backend name recorded by the OPF run
profiling.analyze_calls, profiling.linear_solve_calls	same nested keys	bidirectional; default 0	OPF linear-solver call counters
factorization_calls	same nested key	bidirectional; default 0	OPF sparse factorization counter
profiling.total_iterations	profiling[total_iterations]	bidirectional; default 0	total OPF inner iterations reported by the solver
profiling.accepted_steps	same nested key	bidirectional; default 0	accepted line-search steps
profiling.rejected_steps	same nested key	bidirectional; default 0	rejected line-search steps
profiling.final_barrier_mu	profiling[final_barrier_mu]	bidirectional; default 0.0	final barrier parameter reported by the IPM path
pren_mw, qren_mvar, pstor_mw, qstor_mvar, pdcdc_mw, pflex_mw	none	not part of the current JSON or workbook contract	enhanced component-dispatch vectors exist in ACOPFResult but are not serialized today

11.9 Carbon Result JSON and Workbook Dictionaries

CarbonAnalysisResult JSON

Field	JSON key / path	Export / import rule	Meaning / note
tracing_verified, matrix_solved	top-level scalar booleans	bidirectional; default false	method-level status flags for tracing and matrix solutions
matrix_residual	top-level scalar number	bidirectional; default 0.0	residual metric from the matrix method
load_carbon[] and dc_load_carbon[]	top-level arrays	bidirectional; absent array keeps the vector empty	per-load tracing results for AC loads and DC loads respectively
*.load_index, bus, demand_mw, carbon_intensity_tco2_mwh, total_emissions_tco2	nested keys on each AC/DC load row	bidirectional; defaults 0 or 0.0	flat load-level carbon report fields
per-load generator_supply_mw map	nested object map keyed by source id	bidirectional; absent map keeps the per-load map empty	source-contribution map preserved only in JSON form

Field	JSON key / path	Export / import rule	Meaning / note
<code>branch_carbon[]</code> and <code>dc_branch_carbon[]</code>	top-level arrays	bidirectional; absent array keeps the vector empty	per-branch loss-allocation results for AC branches and DC branches respectively
<code>*.branch_index,</code> <code>from_bus,</code> <code>to_bus,</code> <code>loss_mw,</code> <code>carbon_intensity_tco2_mwh,</code> <code>total_emissions_tco2</code>	nested keys on each AC/DC branch row	bidirectional; defaults 0 or 0.0	flat branch-loss carbon report fields
per-branch <code>generator_loss_mw</code> map	nested object map keyed by source id	bidirectional; absent map keeps the per-branch map empty	source loss-allocation map preserved only in JSON form
<code>bus_carbon[]</code> and <code>dc_bus_carbon[]</code>	top-level arrays	bidirectional; absent array keeps the vector empty	matrix-based AC-bus and DC-bus carbon intensities
<code>*.bus_index,</code> <code>carbon_intensity_tco2_mwh</code>	nested keys on each AC/DC bus row	bidirectional; defaults 0 or 0.0	explicit bus-level carbon report fields
<code>vsc_carbon[]</code>	top-level array	bidirectional; absent array keeps the vector empty	converter-loss report for VSC links in projected-converter order
<code>vsc_carbon[].converter_index,</code> <code>bus_ac,</code> <code>bus_dc,</code> <code>ac_to_dc,</code> <code>input_power_mw,</code> <code>output_power_mw,</code> <code>loss_mw,</code> <code>carbon_intensity_tco2_mwh,</code> <code>total_emissions_tco2</code>	nested keys on each VSC row	bidirectional; defaults 0, false, or 0.0	reports actual hybrid transfer direction plus converter loss carbon intensity
<code>dcdc_carbon[]</code>	top-level array	bidirectional; absent array keeps the vector empty	converter-loss report for DCDC links in projected-converter order
<code>dcdc_carbon[].converter_index,</code> <code>bus_in,</code> <code>bus_out,</code> <code>input_to_output,</code> <code>input_power_mw,</code> <code>output_power_mw,</code> <code>loss_mw,</code> <code>carbon_intensity_tco2_mwh,</code> <code>total_emissions_tco2</code>	nested keys on each DCDC row	bidirectional; defaults 0, false, or 0.0	reports actual DC/DC transfer direction plus converter loss carbon intensity
<code>storage_carbon[]</code>	top-level array	bidirectional; absent array keeps the vector empty	per-storage carbon report covering both explicit discharge-side sources and traced charging-side sinks
<code>storage_carbon[].storage_index,</code> <code>bus,</code> <code>is_dc,</code> <code>p_mw,</code> <code>soc,</code> <code>stored_energy_mwh,</code> <code>soc_carbon_intensity_tco2_mwh,</code> <code>carbon_intensity_tco2_mwh,</code> <code>total_emissions_tco2</code>	nested keys on each storage row	bidirectional; defaults 0, false, or 0.0	<code>p_mw</code> keeps the bus-injection sign convention; charging rows additionally preserve a source-attribution map in JSON

Field	JSON key / path	Export / import rule	Meaning / note
<code>energy_router_carbon[]</code>	top-level array	bidirectional; absent array keeps the vector empty	per-router internal-loss report reconstructed from port transfer signs and magnitudes
<code>energy_router_carbon[].router_index, input_power_mw, output_power_mw, loss_mw, active_input_ports, active_output_ports, carbon_intensity_tco2_mwh, total_emissions_tco2</code>	nested keys on each router row	bidirectional; defaults 0 or 0.0	router loss is derived from actual port mismatch; JSON preserves the source-loss map
<code>generator_loss_allocation</code> entries	top-level object map keyed by source id	bidirectional; absent map keeps the allocation map empty	total MW of branch and converter losses allocated to each internal source id
<code>tracing_summary.*</code> , <code>matrix_summary.*</code>	nested summary objects	bidirectional; absent object keeps defaults	system-level emissions summary blocks for the tracing and matrix methods
<code>tracing_summary.total_generation_emissions_tco2, total_load_emissions_tco2, total_loss_emissions_tco2, balance_error_tco2, balance_error_pct</code>	same nested keys under both summary objects	bidirectional; default 0.0	emissions-balance totals and consistency metrics

LoadCarbon

Field	Workbook sheet / column	Population rule	Meaning / note
<code>load_index, bus, demand_mw, carbon_intensity_tco2_mwh, total_emissions_tco2</code>	corresponding columns	copied from each <code>result.load_carbon[i]</code> row	flat workbook view of the per-load carbon result without the generator-contribution map

DCLoadCarbon

Field	Workbook sheet / column	Population rule	Meaning / note
<code>load_index, bus, demand_mw, carbon_intensity_tco2_mwh, total_emissions_tco2</code>	corresponding columns	copied from each <code>result.dc_load_carbon[i]</code> row	flat workbook view of the per-DC-load carbon result without the source-contribution map

BusCarbon

Field	Workbook sheet / column	Population rule	Meaning / note
<code>bus_index</code> , <code>carbon_intensity_tco2_mwh</code>	corresponding columns	copied from each <code>result.bus_carbon[i]</code> row	flat workbook view of the per-bus carbon intensity

DCBusCarbon

Field	Workbook sheet / column	Population rule	Meaning / note
<code>bus_index</code> , <code>carbon_intensity_tco2_mwh</code>	corresponding columns	copied from each <code>result.dc_bus_carbon[i]</code> row	flat workbook view of the per-DC-bus carbon intensity

BranchCarbon

Field	Workbook sheet / column	Population rule	Meaning / note
<code>branch_index</code> , <code>from_bus</code> , <code>to_bus</code> , <code>loss_mw</code> , <code>carbon_intensity_tco2_mwh</code> , <code>total_emissions_tco2</code>	corresponding columns	copied from each <code>result.branch_carbon[i]</code> row	flat workbook view of the per-branch carbon-loss result without the generator-loss map

DCBranchCarbon

Field	Workbook sheet / column	Population rule	Meaning / note
<code>branch_index</code> , <code>from_bus</code> , <code>to_bus</code> , <code>loss_mw</code> , <code>carbon_intensity_tco2_mwh</code> , <code>total_emissions_tco2</code>	corresponding columns	copied from each <code>result.dc_branch_carbon[i]</code> row	flat workbook view of the per-DC-branch carbon-loss result without the source-loss map

VSCCarbon

Field	Workbook sheet / column	Population rule	Meaning / note
<code>converter_index</code> , <code>bus_ac</code> , <code>bus_dc</code>	corresponding columns	copied from each <code>result.vsc_carbon[i]</code> row	stable converter identifier and terminal buses
<code>ac_to_dc</code>	corresponding column	exported as lowercase workbook string <code>true/false</code>	actual solved transfer direction, not merely the input setpoint sign
<code>input_power_mw</code> , <code>output_power_mw</code> , <code>loss_mw</code>	corresponding columns	copied from each <code>result.vsc_carbon[i]</code> row	carrier input, carrier output, and converter loss in MW
<code>carbon_intensity_tco2_mwh</code> , <code>total_emissions_tco2</code>	corresponding columns	copied from each <code>result.vsc_carbon[i]</code> row	loss-side carbon intensity and the corresponding converter-loss emissions

DCDCCarbon

Field	Workbook sheet / column	Population rule	Meaning / note
converter_index, bus_in, bus_out	corresponding columns	copied from each <code>result.dcdc_carbon[i]</code> row	stable converter identifier and declared input/output buses
input_to_output	corresponding column	exported as lowercase workbook string <code>true/false</code>	actual solved transfer direction relative to the declared <code>bus_in/bus_out</code> pair
input_power_mw, output_power_mw, loss_mw	corresponding columns	copied from each <code>result.dcdc_carbon[i]</code> row	converter input, converter output, and DCDC loss in MW
carbon_intensity_tco2_mwh, total_emissions_tco2	corresponding columns	copied from each <code>result.dcdc_carbon[i]</code> row	loss-side carbon intensity and the corresponding converter-loss emissions

StorageCarbon

Field	Workbook sheet / column	Population rule	Meaning / note
storage_index, bus	corresponding columns	copied from each <code>result.storage_carbon[i]</code> row	stable storage identifier and connected bus
is_dc	corresponding column	exported as lowercase workbook string <code>true/false</code>	distinguishes AC storage from DC storage when indices overlap across subsystems
p_mw	corresponding column	copied from <code>result.storage_carbon[i].p_mw</code>	signed storage dispatch in bus-injection convention; positive means discharge, negative means charging sink
soc, stored_energy_mwh	corresponding columns	copied from the storage carbon result row	reported storage state snapshot used by the carbon model
soc_carbon_intensity_tco2_mwh	corresponding column	copied from the storage carbon result row	explicit carbon intensity of stored energy used when the unit discharges
carbon_intensity_tco2_mwh, total_emissions_tco2	corresponding columns	copied from the storage carbon result row	current-mode carbon intensity and emissions; charging uses traced incoming intensity, discharging uses SOC intensity

EnergyRouterCarbon

Field	Workbook sheet / column	Population rule	Meaning / note
router_index	corresponding column	copied from each <code>result.energy_router_carbon[i]</code> row	stable energy-router identifier
input_power_mw, output_power_mw, loss_mw	corresponding columns	copied from the router carbon result row	router-wide input, output, and internally allocated loss reconstructed from solved port transfers
active_input_ports, active_output_ports	corresponding columns	copied from the router carbon result row	number of non-zero sending and receiving ports participating in the router carbon graph
carbon_intensity_tco2_mwh, total_emissions_tco2	corresponding columns	copied from the router carbon result row	loss-side carbon intensity and the corresponding router-loss emissions

Summary in the carbon workbook

Field	Workbook sheet / cell block	Population rule	Meaning / note
TracingMethod	Summary [A1]	literal label written at row 1	heading for the tracing summary block
tracing_summary. total_generation_emi ssions_tco2	Summary [A2:B2]	key literal plus result .tracing_summary.tot al_generation_emi ssions_tco2	tracing-method generation emissions total
tracing_summary. total_load_emi ssions_tco2	Summary [A3:B3]	key literal plus result .tracing_summary.tot al_load_emi ssions_tco2	tracing-method load emissions total
tracing_summary. total_loss_emi ssions_tco2	Summary [A4:B4]	key literal plus result .tracing_summary.tot al_loss_emi ssions_tco2	tracing-method loss emissions total
tracing_summary. balance_error_tco 2	Summary [A5:B5]	key literal plus result .tracing_summary.bal ance_error_tco2	tracing-method absolute emissions-balance error
tracing_summary. balance_error_pc t	Summary [A6:B6]	key literal plus result .tracing_summary.bal ance_error_pct	tracing-method relative emissions-balance error
tracing_verified	Summary [A7:B7]	key literal plus lower- case string true/false	tracing verification flag; note the lowercase boolean spelling differs from PF / OPF workbooks
MatrixMethod	Summary [A9]	literal label written at row 9	heading for the matrix-summary block
matrix_summary.t otal_generation_emi ssions_tco2	Summary [A10:B10]	key literal plus result .matrix_summary.tota l_generation_emi ssions_tco2	matrix-method generation emissions total
matrix_summary.t otal_load_emi ssions_tco2	Summary [A11:B11]	key literal plus result .matrix_summary.tota l_load_emi ssions_tco2	matrix-method load emissions total
matrix_summary.t otal_loss_emi ssions_tco2	Summary [A12:B12]	key literal plus result .matrix_summary.tota l_loss_emi ssions_tco2	matrix-method loss emissions total
matrix_summary.b alance_error_tco 2	Summary [A13:B13]	key literal plus result .matrix_summary.bala nce_error_tco2	matrix-method absolute emissions-balance error
matrix_summary.b alance_error_pct	Summary [A14:B14]	key literal plus result .matrix_summary.bala nce_error_pct	matrix-method relative emissions-balance error
matrix_solved	Summary [A15:B15]	key literal plus lower- case string true/false	matrix-solver success flag
matrix_residual	Summary [A16:B16]	key literal plus result .matrix_residual	matrix-method residual metric

11.10 Current Output-Side Gaps

Area	Artifact	Status	Engineering consequence
PowerFlowResult JSON import	PF JSON	export only	PF result JSON can be written, but there is no matching public result-from-JSON reader.

Area	Artifact	Status	Engineering consequence
PF profiling block	PF workbooks	not exported	the in-memory <code>PowerFlowResult.profil</code> <code>ing</code> structure is not written to workbook output.
<code>ACOPFResult</code> en- hanced dispatch vectors	OPF JSON / work- book	exported with packed seman- tics	Renewable, storage, DC/DC, and flexible- load dispatch vectors are exported as packed variable arrays with companion <code>ComponentRef</code> identity maps. JSON uses structured <code>renewable_dispatch</code> / <code>storage_dispatch</code> / <code>dc_dc_dispatch</code> / <code>flex_dispatch</code> objects; workbook sheets use <code>var_idx</code> , <code>source_type</code> , and <code>component_index</code> columns.
carbon contribution maps	carbon workbook	not exported	<code>generator_supply_mw</code> , <code>generator_loss</code> <code>_mw</code> , <code>source_supply_mw</code> , <code>source_loss_mw</code> , and <code>generator_loss_allocation</code> are available only in JSON.
<code>OPF_Converter</code>	OPF workbook	conditional population	the sheet is only populated when VSC converters exist; otherwise the sheet may stay empty even though the workbook pre-creates it.
short-circuit out- puts	public API / files	absent	this repository does not currently expose a short-circuit result API or any work- book / JSON serializer for it.
ONR outputs	public API / files	absent	this repository does not currently expose <code>solve_optimal_reconfiguration</code> or a workbook / JSON output contract for network reconfiguration.

12 Power-Flow Models

12.1 Scope and Architecture Overview

This chapter documents the steady-state hybrid AC/DC power-flow (PF) module in `src/power_flow/`. The legacy engine include path `include/hacdcpf/engine/solver/native/nle/newton_solver.hpp` is a declaration/compatibility entry point for the same Newton class; there is no corresponding `src/engine` implementation directory in this repository.

The facade in `include/hacdcpf/api/hacdcpf.hpp` exposes these public PF entry points:

Public API	Primary implemen- tation / declaration	Scope
<code>solve_power_flow</code>	<code>src/power_flow/hybrid.cpp</code>	Hybrid AC/DC Newton through <code>powerflow::solve_hybrid</code> .
<code>solve_dc_power_flow</code>	<code>src/power_flow/dc.cpp</code> / <code>dc_solver.cpp</code>	DC-only Newton result wrapper.
<code>solve_power_flow_adaptive</code>	<code>src/power_flow/adaptive_solver.cpp</code>	Adaptive island-aware solve through <code>powerflow::solve_hybrid_adaptive</code> .
<code>solve_power_flow_islanded</code>	<code>src/power_flow/adaptive_solver.cpp</code>	Explicit islanded solve wrapper.

Public API	Primary implementation / declaration	Scope
<code>solve_power_flow_distributed_slack</code>	<code>src/power_flow/distributed_slack_solver.cpp</code>	Simplified distributed-slack solve.
<code>solve_power_flow_distributed_slack_full</code>	<code>src/power_flow/distributed_slack_solver.cpp</code>	Full-Jacobian distributed-slack solve.
<code>create_solver_handle</code> , <code>reset_solver_handle</code> , <code>solve_handle</code> , <code>solve_dc_handle</code> , <code>destroy_solver_handle</code>	API handle facade	Reusable solver-handle lifecycle and solve calls.
<code>solve_power_flow_fast_dp</code>	<code>src/power_flow/fast_dp_solver.cpp</code>	Fast-decoupled AC-only PF.
<code>solve_ac_dc_power_flow_linearized</code>	<code>src/power_flow/analytic_linearized_pf.cpp</code>	Linearized AC-angle/DC result helper.

Table 120: Public power-flow API family.

The lower-level `hacdcpf::powerflow` namespace additionally declares `solve_ac`, `solve_dc`, `FDPFSolver::solve`, `AdaptiveSolver::solve`, `DistributedSlackSolver` simplified and full-Jacobian solves, `HelmSolver::solve`, `CpfSolver::solve`, and `HomotopyContinuationSolver::solve`. The header-only `three_phase.hpp` wrapper references an analysis-side `solve_three_phase_nr` symbol that is not part of the public `hacdcpf.hpp` facade.

The standard PF paths share canonical preprocessing through model projection, `solver_data.cpp`, and `admittance_builder.cpp`. The main Newton kernel is implemented in `src/power_flow/newton_solver.cpp`; its class is declared through the legacy engine header and re-exported from `include/hacdcpf/power_flow/newton_solver.hpp`.

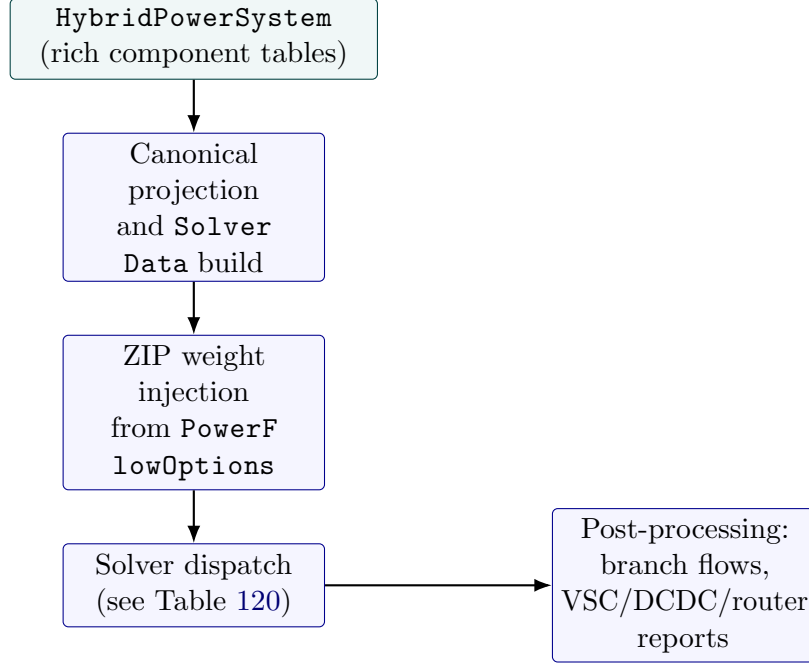


Figure 1: Shared execution pipeline for all power-flow API variants.

12.2 Mathematical Problem Form

The Newton kernel solves the hybrid residual system

$$F(x) = 0, \quad x = \begin{bmatrix} \theta_{\mathcal{N}_{ac} \setminus \mathcal{N}_{sl}} \\ v_{\mathcal{N}_{PQ}} \\ v_{\mathcal{N}_{dc} \setminus \mathcal{N}_{sl}^{\text{dc}}}^{\text{dc}} \end{bmatrix}, \quad (21)$$

where $\mathcal{N}_{sl}$ and $\mathcal{N}_{sl}^{\text{dc}}$ are the sets of AC and DC slack buses, and $\mathcal{N}_{PQ}$ is the set of PQ buses.

AC bus mismatch. For each non-slack AC bus i ,

$$\Delta P_i = P_i^{\text{spec}} - P_i^{\text{calc}}, \quad i \in \mathcal{N}_{ac} \setminus \mathcal{N}_{sl}, \quad (22)$$

$$\Delta Q_i = Q_i^{\text{spec}} - Q_i^{\text{calc}}, \quad i \in \mathcal{N}_{PQ}, \quad (23)$$

where the calculated nodal injections are

$$P_i^{\text{calc}} = \sum_{j \in \mathcal{N}_{ac}} v_i v_j (G_{ij} \cos \theta_{ij} + B_{ij} \sin \theta_{ij}), \quad (24)$$

$$Q_i^{\text{calc}} = \sum_{j \in \mathcal{N}_{ac}} v_i v_j (G_{ij} \sin \theta_{ij} - B_{ij} \cos \theta_{ij}), \quad (25)$$

with $\theta_{ij} = \theta_i - \theta_j$ and $(G_{ij} + jB_{ij})$ the (i, j) entry of the sparse bus admittance matrix Y_{bus} .

DC bus mismatch. For each non-DC-slack bus k ,

$$\Delta P_k^{\text{dc}} = P_k^{\text{dc,spec}} - P_k^{\text{dc,calc}}, \quad (26)$$

$$P_k^{\text{dc,calc}} = v_k^{\text{dc}} \left(G_{dc} v^{\text{dc}} \right)_k. \quad (27)$$

Specified-injection assembly.

$$P_i^{\text{spec}} = P_i^{\text{g,agg}} - P_i^{\text{load}}(v_i) + P_i^{\text{vsc}}, \quad (28)$$

$$Q_i^{\text{spec}} = Q_i^{\text{g,agg}} - Q_i^{\text{load}}(v_i) + Q_i^{\text{vsc}}, \quad (29)$$

where the aggregated generation vectors are

$$P_i^{\text{g,agg}} = P_i^{\text{gen}} + P_i^{\text{sg}} + P_i^{\text{ren}} + P_i^{\text{pv}} + P_i^{\text{stor}} + P_i^{\text{vpp}} + P_i^{\text{mg}} + P_i^{\text{ms}}, \quad (30)$$

$$Q_i^{\text{g,agg}} = Q_i^{\text{gen}} + Q_i^{\text{sg}} + Q_i^{\text{ren}} + Q_i^{\text{pv}} + Q_i^{\text{stor}} + Q_i^{\text{vpp}} + Q_i^{\text{ms}}. \quad (31)$$

Here P_i^{mg} is microgrid exchange at the PCC bus in `GridConnected` mode.

ZIP demand model. The runtime voltage-dependent load model is

$$P_i^{\text{load}}(v_i) = P_{i,0}(w_{P,0,i} + w_{P,1,i}v_i + w_{P,2,i}v_i^2), \quad (32)$$

$$Q_i^{\text{load}}(v_i) = Q_{i,0}(w_{Q,0,i} + w_{Q,1,i}v_i + w_{Q,2,i}v_i^2). \quad (33)$$

The ZIP weights are populated in one of three assembly cases: (1) explicit `Load`/charging-station tables present, (2) charging-station tables only, (3) neither table — global `zip_pw/zip_qw` from `PowerFlowOptions` are used.

12.3 VSC Converter Model

The converter model uses bus-injection-positive signs on both AC and DC sides. Three control modes are supported.

Loss model. With active transfer p (p.u.), AC-side proxy current $I^{\text{ac}} = |p|/v^{\text{dc,safe}}$, $v^{\text{dc,safe}} = \max(v^{\text{dc}}, 0.1)$:

$$P^{\text{loss,lin}} = (1 - \eta)|p|, \quad (34)$$

$$P^{\text{loss,cur}} = a + b I^{\text{ac}} + c (I^{\text{ac}})^2, \quad a = \frac{\text{loss_mw}}{S_{\text{base}}}, \quad b = \frac{\text{loss_pct}}{100}, \quad c = 1 - \eta. \quad (35)$$

`PQ_MODE`.

$$P^{\text{conv,ac}} = P^{\text{set}}, \quad Q^{\text{conv,ac}} = Q^{\text{set}}, \quad P^{\text{conv,dc}} = -(P^{\text{set}} + P^{\text{loss}}). \quad (36)$$

`VDC_Q` and `VDC_VAC`.

$$P^{\text{tr}} = k^{\text{vdc}}[(v^{\text{dc}})^2 - (v^{\text{dc,set}})^2], \quad P^{\text{conv,ac}} = P^{\text{tr}} - P^{\text{loss}}, \quad P^{\text{conv,dc}} = -P^{\text{tr}}. \quad (37)$$

In `VDC_VAC` mode the Newton loop enforces $v^{\text{ac}} = v^{\text{ac,set}}$ for the converter AC bus by hard-clamping the trial AC voltage after updates. If `SolverData::enable_augmented_equations` is enabled, that clamp is skipped and the VDC/VAC bus is instead handled by the augmented-equation path in `newton_solver.cpp`.

12.4 DCDC Converter Model

The DCDC converter connects `bus_in` to `bus_out`. Power `p_ref_mw` is output-side referenced.

$$P^{\text{in}} = \begin{cases} P^{\text{ref}}/\eta, & P^{\text{ref}} \geq 0, \\ P^{\text{ref}} \cdot \eta, & P^{\text{ref}} < 0, \end{cases} \quad P^{\text{out}} = P^{\text{ref}} - r_{eq} \frac{(P^{\text{in}})^2}{(v^{\text{dc,in}})^2}. \quad (38)$$

12.5 Jacobian Structure

The linearized Newton system is

$$J \Delta x = F(x), \quad J = \begin{bmatrix} J_{\theta\theta} & J_{\theta V} & J_{\theta V^{dc}} \\ J_{V\theta} & J_{VV} & J_{VV^{dc}} \\ 0 & J_{V^{dc}V} & J_{V^{dc}V^{dc}} \end{bmatrix}. \quad (39)$$

The sparse Jacobian pattern is cached in a `PatternCache` keyed by matrix storage addresses and a monotone `build_id`, and is rebuilt only on topology changes.

AC diagonal entries (with ZIP load corrections).

$$\frac{\partial \Delta P_i}{\partial v_i} = \frac{P_i^{\text{calc}}}{v_i} + G_{ii}v_i - P_{i,0}(w_{P,1,i} + 2w_{P,2,i}v_i), \quad (40)$$

$$\frac{\partial \Delta Q_i}{\partial v_i} = \frac{Q_i^{\text{calc}}}{v_i} - B_{ii}v_i - Q_{i,0}(w_{Q,1,i} + 2w_{Q,2,i}v_i). \quad (41)$$

In the code, v_i is floored at `min_vm_pu` (configurable via `RobustNonlinearOptions`) to prevent zero-division.

DC entries.

$$\frac{\partial P_k^{\text{dc,calc}}}{\partial v_m^{\text{dc}}} = \begin{cases} (G_{dc}v^{\text{dc}})_k + G_{kk}^{\text{dc}}v_k^{\text{dc}}, & m = k, \\ G_{km}^{\text{dc}}v_k^{\text{dc}}, & m \neq k. \end{cases} \quad (42)$$

AC/DC coupling. When `enable_coupled_jacobian` is set, the converter Jacobian blocks $\partial P^{\text{vsc}}/\partial v^{\text{dc}}$, $\partial Q^{\text{vsc}}/\partial v^{\text{dc}}$, and $\partial P^{\text{dc}}/\partial v^{\text{ac}}$ have pattern slots. The current `converter_dc_jacobian_vm_ac` implementation returns zero because the old AC-side converter resistance term was removed, so the $\partial P^{\text{dc}}/\partial v^{\text{ac}}$ block is structurally present but numerically zero today. The coupling entries are pre-registered as `CouplingEntry` records in `JacobianPattern` and updated in-place each iteration without re-analyzing the pattern.

12.6 Hybrid Newton Algorithm

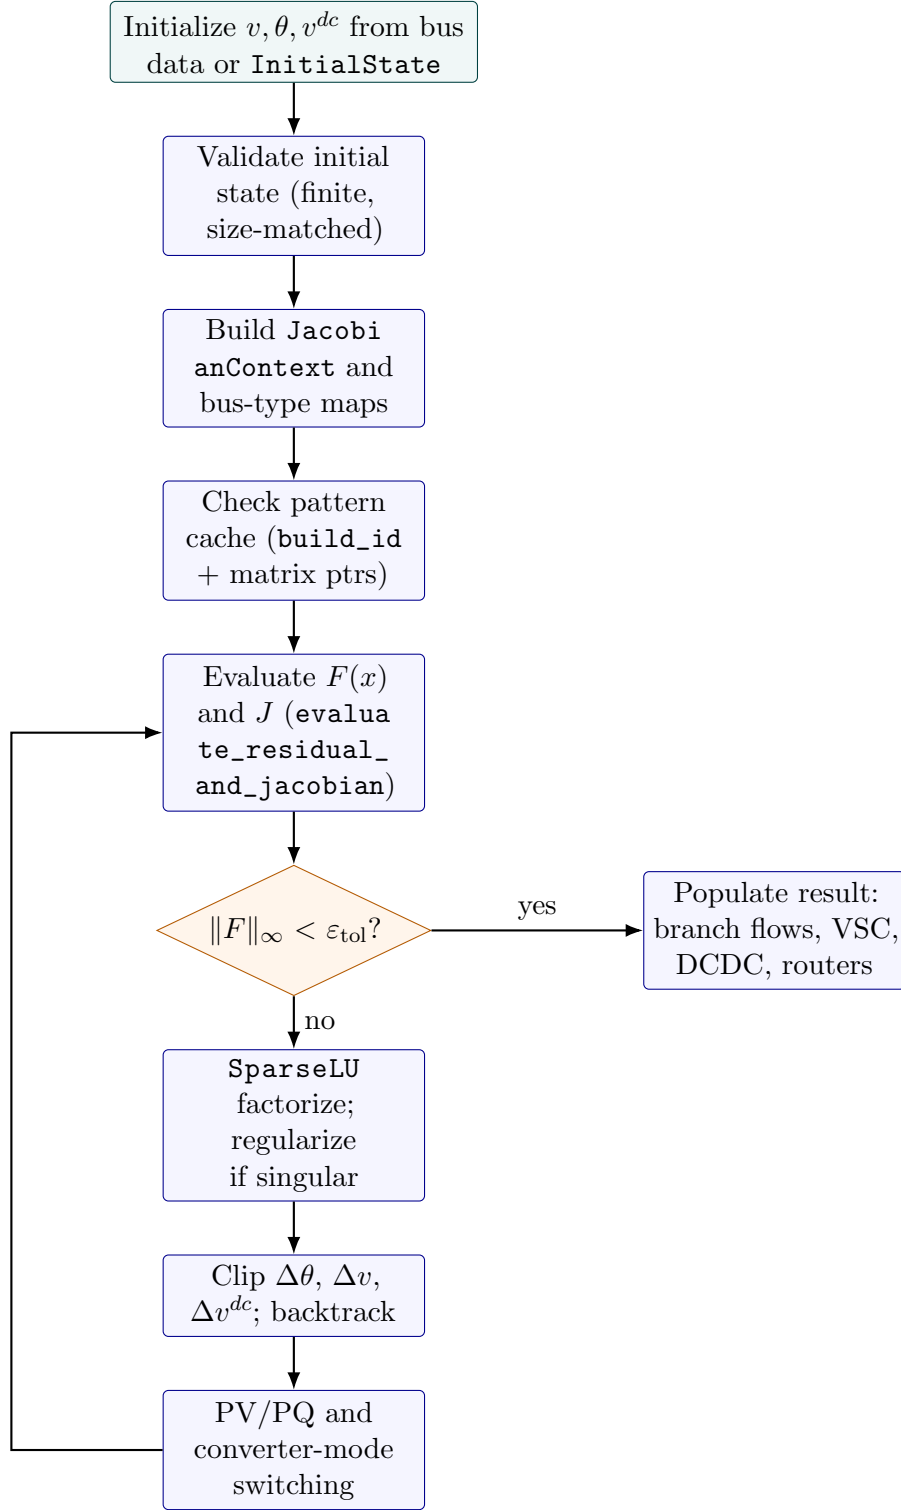


Figure 2: Hybrid AC/DC Newton power-flow algorithm (`NewtonSolver::solve`).

Algorithm PF-1: Hybrid Newton PF

- 1: **procedure** `NEWTONSOLVER::SOLVE`(*data*, *opt*, *init*)
- 2: Validate *init*: check size, NaN, Inf; **throw** `invalid_argument` on failure
- 3: $x \leftarrow$ flat start or *init* values; build `JacobianContext`

```

4:    $x_{ctx}.\text{min\_vm\_pu} \leftarrow \text{opt.robust\_nonlinear.min\_vm\_pu}$ 
5:   for  $k = 1, \dots, \text{opt.max\_iter}$  do
6:      $F, J \leftarrow \text{evaluate\_residual\_and\_jacobian}(x, ctx, pattern)$ 
7:     if  $\|F\|_\infty < \text{opt.tol}$  then break
8:     end if
9:      $\text{SparseLU}(J) \Delta x = F$ ; if singular then regularize and retry
10:    Clip  $\Delta x$ :  $|\Delta \theta| \leq \Delta \theta_{\max}, |\Delta v| \leq \Delta v_{\max}$ 
11:    Backtracking line search; accept best step
12:    PV/PQ hysteresis switching; converter mode switching
13:  end for
14:  if not converged then return a result with converged=false, final iteration count,
    residual, and any available state vectors
15:  Post-process branch, VSC, DCDC, router flows; return result
16: end procedure

```

Robust nonlinear pipeline. The solver implements a five-phase robustification pipeline controlled by `RobustNonlinearOptions`:

1. **Phase 1 – Scaling and diagnostics:** residual-equation scaling, variable scaling, and Jacobian row/column equilibration; condition-number proxy monitor.
2. **Phase 2 – Nonmonotone line search and smooth NCP:** Grippo–Lampariello–Lucidi nonmonotone Armijo search; optional μ -perturbed Fischer–Burmeister complementarity for PV/PQ switching.
3. **Phase 3 – LM trust-region fallback:** Levenberg–Marquardt step $(J^\top J + \lambda I)\Delta x = -J^\top F$ when Newton line search fails; SER-based pseudo-transient continuation.
4. **Phase 4 – Homotopy continuation:** ramp loads and converter setpoints from flat start to target in adaptive λ steps.
5. **Phase 5 – Krylov fallback:** Newton–GMRES with Schur-complement AC/DC block preconditioner (opt-in; not active by default).

12.7 Fast-Decoupled Power Flow (FDPF)

The FDPF solver builds two constant susceptance matrices from Y_{bus} :

$$B' = -\Im \left\{ Y_{bus}^{(R=0, b=0, \text{tap}=1)} \right\}, \quad (43)$$

$$B'' = -\Im \left\{ Y_{bus}^{(\text{full shunts and charging, zero phase shift})} \right\}, \quad (44)$$

and then alternates P- θ and Q-V decoupled solves:

$$B' \Delta \theta = \Delta P / v, \quad (45)$$

$$B'' \Delta v = \Delta Q / v. \quad (46)$$

Both B' and B'' are factorized once via `Eigen::SparseLU`; only the right-hand sides change across iterations. The solver is AC-only (no DC or converter coupling).

Algorithm PF-2: Fast-Decoupled PF

- 1: **procedure** FDPFSOLVER::SOLVE($data, opt$)
- 2: Build reduced $B'_{\mathcal{N} \setminus \{sl\}}, B''_{\mathcal{N}_{PQ}}$; factorize
- 3: **if** factorization failed **then** return non-converged result

```

4:   end if
5:   for  $k = 1, \dots, \text{opt.fdpf\_max\_iter}$  do
6:       Convert/use dense ybus_dense; compute  $\Delta P/v$ ,  $\Delta Q/v$  with all-pairs loops
7:       if  $\|\Delta P/v\|_\infty < \varepsilon$  and  $\|\Delta Q/v\|_\infty < \varepsilon$  then break
8:       end if
9:        $\Delta \theta \leftarrow (B')^{-1}(\Delta P/v)$ ; update  $\theta$ 
10:       $\Delta v \leftarrow (B'')^{-1}(\Delta Q/v)$ ; update  $v$ 
11:   end for
12: end procedure

```

12.8 DC-Only Power Flow

The DC solver iterates on non-slack DC voltages using dense LU on the small reduced Jacobian:

$$J_{dc} \Delta v^{\text{dc}} = \Delta P^{\text{dc}}, \quad (47)$$

$$J_{dc,kl} = \begin{cases} (G_{dc} v^{\text{dc}})_k + G_{kk}^{\text{dc}} v_k^{\text{dc}}, & l = k, \\ G_{kl}^{\text{dc}} v_k^{\text{dc}}, & l \neq k. \end{cases} \quad (48)$$

DC bus injections are assembled from **DCLoad**, DC storage, DC static generators, DC PV arrays, VSC DC-side injections, DCDC transfers, and DC **EnergyRouter** ports. A backtracking line search over $\alpha \in \{1, \frac{1}{2}, \dots\}$ is applied with voltages floored at **kMinVdc** to prevent collapse.

12.9 Adaptive Islanded Solver

The adaptive solver handles multi-island AC/DC topologies that a single global solve cannot address:

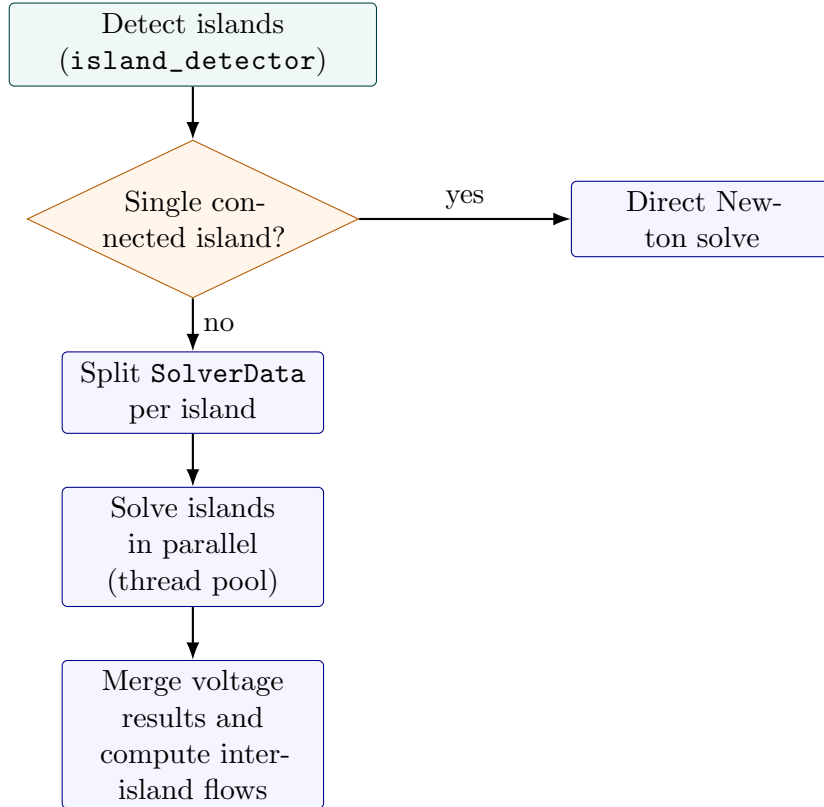


Figure 3: Adaptive islanded power-flow workflow.

12.10 HELM Solver

The HELM (Holomorphic Embedding Load-flow Method) solver constructs a power series in a complex embedding parameter $s \in \mathbb{C}$:

$$V_i(s) = \sum_{n=0}^N a_n^{(i)} s^n. \quad (49)$$

The recursion for order n coefficients follows from the holomorphic embedding of the network equations. Convergence is tested via Padé approximants $[M/M]$ evaluated at $s = 1$:

$$V_i(1) \approx \frac{P_M(1)}{Q_M(1)}. \quad (50)$$

In the current source, HELM is a standalone `HelmSolver::solve` path. `HelmWarmStart::DCPF` and `HelmWarmStart::GaussSeidel` are options consumed inside `HelmSolver::solve`; the hybrid Newton and adaptive solver paths do not call HELM as an automatic fallback.

12.11 Error Handling and Diagnostics

The public result structs do not contain a `SolverFailureReason` enum. `PowerFlowResult` exposes `converged`, `iterations`, `residual`, solved state vectors, flow/transfer vectors, and profiling metadata. `DCPowerFlowResult`, `AdaptiveSolveResult`, `IslandedSolveResult`, and `DistributedSlackResult` use their own compact status fields and nested results.

The solver **throws** `std::invalid_argument` for structural API violations (e.g., size mismatch, NaN in initial state) and **returns a non-converged result** for numerical failures. This two-tier policy separates programming errors from expected numerical difficulties.

12.12 Maintainability Roadmap: Code-Duplication Inventory

All six items D1–D6 from the original inventory were resolved across two refactoring passes (*code-dedup-D1-D5* and *code-dedup-D3-D6*).

D1 — `inf_norm` (DONE). The anonymous-namespace duplicate removed from `jacobian_builder.cpp` and `dc_solver.cpp`. The canonical definition now lives in `include/hacdcpf/power_flow/pf_utils.hpp` as an inline function. Test files `test_powerflow_performance.cpp` updated to use `hacdcpf::powerflow::inf_norm` via a `using` declaration.

D2 — DC injection assembly (DONE). The 80-line DC injection loop extracted into `assemble_dc_injections(data, vm, va, vdc, pdc_spec)`, declared in a new header `include/hacdcpf/power_flow/pf_injection_assembly.hpp` and implemented in `src/power_flow/pf_injection_assembly.cpp`. Both `dc_solver.cpp` and `residual_evaluator.cpp` now call this single canonical function.

D3 — Duplicated B' matrix construction (DONE). The anonymous-namespace functions `build_bp` and `build_bpp` were removed from `fdpf_solver.cpp` and replaced with calls to a new utility `build_susceptance_matrix(data, flags)` implemented in `admittance_builder.cpp`. A `BpBuildFlags` struct (declared in `admittance_builder.hpp`) controls all assembly variants: zero resistance, zero line charging, unit tap, zero phase shift, and optional bus shunt susceptance. Convenience factories `make_bp_flags(min_x_pu)` and `make_bpp_flags()` cover the two FDPF use cases.

D4 — DC initial-state warm-start (DONE). The size-guarded copy of `init->vdc` with NaN/Inf validation extracted into `load_dc_initial_state(init,dc_buses,vdc)` in `pf_utils.hpp`. Applied to both `dc_solver.cpp` and `newton_solver.cpp`.

D5 — Bus-type classification loop (DONE). The manual AC bus classification into SLACK/PV/PQ sets extracted into `classify_ac_buses(data)` returning an `AcBusSets` struct (all in `pf_utils.hpp`). Applied to `fdpf_solver.cpp`, `residual_evaluator.cpp`, and the helper in `test_unified_pf_upgrade.cpp`.

D6 — jacobian_builder.cpp file split (DONE). The monolithic `jacobian_builder.cpp` was split into three focused compilation units:

- `jacobian_pattern.cpp` — `build_jacobian_pattern` and its anonymous-namespace helpers (`rc_key`, `add_pattern_position`, `build_entry_to_nz`, `lookup_nz`);
- `ac_kernel.cpp` — `evaluate_ac_kernel_serial`, `evaluate_ac_kernel_parallel`, and `effective_ac_threads`;
- `jacobian_builder.cpp` (retained) — `build_power_spec`, `evaluate_residual_impl`, `evaluate_residual_and_jacobian`, and `evaluate_residual_only`.

The cross-file linkage between `jacobian_builder.cpp` and `ac_kernel.cpp` is provided by an internal header `include/hacdcpf/power_flow/ac_kernel_impl.hpp`.

12.13 Numerical Performance (Release Mode)

Benchmarks were run on 84 MATPOWER cases (`build_rel`, Apple M4, `-O3-DNDEBUG`, single thread) using `build_rel/helm_powerflow_benchmark../data`. Four paths are compared: NR = hybrid Newton, FD = fast-decoupled, HE = HELM standalone, HE+DC = HELM with DC warm start.

Case	<i>N</i>	Branches	NR ms	FD ms	HE ms	HE+DC ms
case14	14	20	0.0	0.3	0.1	0.1
case57	57	80	0.1	2.9	0.6	0.6
case118	118	186	0.4	11.5	1.8	1.9
case300	300	411	0.9	59.5	div	div
case1354pegase	1354	1991	15.2	skip	div	div
case1888rte	1888	2531	10.8	skip	135.8	136.5
case2383wp	2383	2896	3.8	skip	117.6	109.3
case2736sp	2736	3504	5.6	skip	75.2	76.6
case3012wp	3012	3572	35.0	skip	124.3	126.9
case6468rte	6468	9000	31.7	skip	297.7	296.2
case8387pegase	8387	14561	46.7	skip	1776.5	1786.7
case13659pegase	13659	20467	95.9	skip	skip	skip
	10000	12706	21.8	skip	4327.9	4389.7
case_ACTIVSg10k						
	25000	32230	64.3	skip	skip	skip
case_ACTIVSg25k						

Case	N	Branches	NR ms	FD ms	HE ms	HE+DC ms
case_SyntheticUSA	82000	104121	1745.2	skip	skip	skip

Table 121: Power-flow solver timing (release mode, Apple M4, single thread, post D1–D5 refactor). “div” = diverged, “skip” = case excluded from path at this size.

Key observations:

- The hybrid Newton path converges on the 82000-bus USA synthetic system in 1.75 s with 17 iterations after the D1–D5 refactoring pass (no regression vs. pre-refactoring baseline).
- Newton solve time scales approximately as $O(N^{1.2})$ in practice for typical sparse transmission systems.
- FDPF is 10–200× slower than Newton on small-to-medium cases due to the current $O(N^2)$ dense Ybus iteration in the power-injection loop; replacing it with a sparse row iteration remains an open performance item.
- HELM converges on most well-conditioned cases under 2000 buses but diverges on stressed systems (case300, case1354pegase); it remains useful as a warm-start provider for Newton on difficult cases.
- The D1–D6 refactoring passes introduced no performance regression: Newton solve times match the pre-refactoring baseline on all benchmark cases.

13 Optimal Power Flow Models

13.1 Problem Form and Runtime Scope

This chapter covers the OPF family built on top of canonical AC/DC network projection. The implemented runtime problem classes are:

- nonlinear AC/DC OPF for the native primal-dual and parity-IPM routes,
- DC OPF with a true-QP model and LP fallback backends,
- reactive-power optimization over discrete taps and shunts by outer-approximation / coordinate-search heuristics.

The runtime solver family is selected from option flags and DC-network presence.

13.2 Code Map

The current implementation is concentrated in:

- `src/optimal_power_flow/ac_opf.cpp` for top-level AC OPF routing and native reduced-space solve orchestration,
- `src/optimal_power_flow/parity_formulation.cpp` and `src/optimal_power_flow/parity_ipm.cpp` for the parity full-space NLP route,

- `src/optimal_power_flow/dc_opf.cpp` for DC OPF model build and backend selection,
- `src/optimal_power_flow/reactive_power_opt.cpp` for the four-phase outer-approximation / coordinate-search workflow,
- `include/hacdcopf/engine` forwarding headers for LCQP, dual simplex, HiGHS, Gurobi, and related engine facilities supplied by the `mipsolvers` dependency.

There is no `src/engine` directory in this repository.

13.3 Pseudocode Map

The relevant code-aligned workflows are:

- Algorithms A8–A10 in Section 3.4 for AC OPF routing, parity-NLP construction, and parity-IPM solve,
- Algorithm A11 for DC OPF,
- Algorithm A12 for reactive-power optimization,
- Section 4 for the forwarding engine surface used by DC OPF and RPO result statistics.

13.4 Current Status

The AC OPF family has multiple implemented routes, but backend coverage differs by path. Parity and native nonlinear routes are the main AC/DC engines; DC OPF builds a specialized QP/LP model; RPO currently runs an OA/coordinate-search workflow and reuses branch-and-cut-style statistics fields for counters.

13.5 Top-Level Solver Routing

The public `solve_ac_opf` path selects among three solver families. A key implementation rule is automatic DC routing: if the case has DC buses or VSC converters and `enable_primal_dual=false`, the options are internally overridden to `enable_primal_dual=true, use_parity_ipm=true`.

Path	Trigger	Current behavior
Fast dispatch + PF fallback (AC-only)	<code>enable_primal_dual=false</code> and no forced DC parity routing	Drops DC and converter subsystems, solves economic dispatch, then runs AC PF projection.
Native primal-dual OPF	<code>enable_primal_dual=true, use_parity_ipm=false</code>	Uses a custom sparse KKT loop with AC equations, DC-bus equations, and converter power-balance equations.
Parity primal-dual IPM	<code>enable_primal_dual=true, use_parity_ipm=true</code> or auto-enabled by DC presence	Builds the parity full-space NLP and solves by Mehrotra-type primal-dual IPM. Optional fallback to native path when enabled.

13.6 Fast Dispatch + PF Fallback (AC-Only Path)

This path is used for fastest feasible dispatch recovery in AC-only operation. It solves a clipped economic dispatch first, then projects via AC PF.

Economic dispatch stage.

$$\min_{P_g} \sum_{g \in \mathcal{G}} (c_{2g} P_g^2 + c_{1g} P_g + c_{0g}), \quad (51)$$

subject to generator bounds and $\sum_g P_g = P_D$ (clamped to feasible range). For quadratic units, the code uses incremental-cost clipping $P_g = \text{clip}((\lambda - c_1)/(2c_2), P_g^{\min}, P_g^{\max})$.

Feasibility projection stage. The dispatch is passed to AC Newton PF; resulting bus injections are split back across generators at each bus and clamped to individual bounds. If direct projection fails, one reshaped economic-dispatch attempt is executed before declaring failure.

13.7 Native Primal-Dual OPF Formulation

13.7.1 Decision Variables

For the native path, variables are

$$x_{nat} = \left[\theta_{\mathcal{N}_{ac} \setminus \mathcal{N}_{sl}} \quad v_{\mathcal{N}_{PQ}} \quad P_g \quad Q_g \quad v^{\text{dc}} \quad P^{\text{conv,ac}} \quad Q^{\text{conv,ac}} \quad P^{\text{conv,dc}} \right]^\top. \quad (52)$$

The implementation includes all DC bus voltages in v^{dc} ; for DC_V buses, tight bounds are built around the setpoint.

13.7.2 Objective

$$\min_x f(x) = \sum_{g \in \mathcal{G}} (c_{2g} P_g^2 + c_{1g} P_g + c_{0g}). \quad (53)$$

13.7.3 Equality Constraints

AC equations. AC rows reuse the PF residual kernel (with converter table disabled in that kernel call), then subtract explicit converter variables:

$$g_{P,i} = \left(P_i^{\text{spec,PF}} - P_i^{\text{calc}} \right) - \sum_{c \in \mathcal{C}_i} P_c^{\text{ac}} = 0, \quad i \in \mathcal{N}_{ac} \setminus \mathcal{N}_{sl}, \quad (54)$$

$$g_{Q,i} = \left(Q_i^{\text{spec,PF}} - Q_i^{\text{calc}} \right) - \sum_{c \in \mathcal{C}_i} Q_c^{\text{ac}} = 0, \quad i \in \mathcal{N}_{PQ}. \quad (55)$$

DC equations. For each DC bus k :

$$g_k^{\text{dc}} = P_{d,k}^{\text{dc}} + V_k^{\text{dc}} (G_{dc} V^{\text{dc}})_k - \sum_{c \in \mathcal{C}_k^{\text{dc}}} P_c^{\text{dc}} = 0. \quad (56)$$

Converter energy balance. For converter c :

$$g_c^{\text{conv}} = P_c^{\text{ac}} + P_c^{\text{dc}} + P_c^{\text{loss}} = 0, \quad (57)$$

$$P_c^{\text{loss}} = a_c + b_c I_c^{\text{ac}} + (1 - \eta_c) (I_c^{\text{ac}})^2, \quad (58)$$

$$I_c^{\text{ac}} = \frac{\sqrt{(P_c^{\text{ac}})^2 + (Q_c^{\text{ac}})^2 + \epsilon}}{V_c^{\text{ac}}}, \quad \epsilon = 10^{-6}. \quad (59)$$

13.7.4 Bounds and Nonlinear Limits

Variable bounds are enforced for $\theta, v, P_g, Q_g, v^{\text{dc}}, P^{\text{conv,ac}}, Q^{\text{conv,ac}}, P^{\text{conv,dc}}$.

Nonlinear engineering limits are modeled as $h(x) \leq 0$ and handled by exterior quadratic penalty terms inside the merit model:

$$h_{ij}^{\text{from}} = P_{f,ij}^2 + Q_{f,ij}^2 - (S_{ij}^{\text{max}})^2 \leq 0, \quad (60)$$

$$h_{ij}^{\text{to}} = P_{t,ij}^2 + Q_{t,ij}^2 - (S_{ij}^{\text{max}})^2 \leq 0, \quad (61)$$

$$h_c^{\text{conv}} = (P_c^{\text{ac}})^2 + (Q_c^{\text{ac}})^2 - (S_c^{\text{max}})^2 \leq 0. \quad (62)$$

13.7.5 KKT System and Globalization

At each inner iteration, the solver builds

$$\begin{bmatrix} H + \delta I & J_g^\top \\ J_g & -\delta I \end{bmatrix} \begin{bmatrix} \Delta x \\ \Delta \lambda \end{bmatrix} = - \begin{bmatrix} \nabla_x L \\ g(x) \end{bmatrix}, \quad (63)$$

with dynamic regularization δ , line search, trust/restore logic, and bounded step clipping.

A barrier term is applied to variable bounds; nonlinear branch/converter limits enter the merit model through adaptive exterior penalties.

13.8 Parity Full-Space Formulation

13.8.1 Decision Variables

The parity NLP includes AC, DC, converter, shedding, and enhanced DER variables:

$$x_{\text{par}} = \begin{bmatrix} \theta, v^{\text{ac}}, P_g, Q_g, v^{\text{dc}}, P^{\text{conv,ac}}, Q^{\text{conv,ac}}, P^{\text{conv,dc}}, \\ \Delta P_d, \Delta Q_d, P^{\text{ren}}, Q^{\text{ren}}, P^{\text{stor,ac}}, Q^{\text{stor,ac}}, P^{\text{stor,dc}}, \\ P^{\text{dc,dc}}, P^{\text{flex}} \end{bmatrix}^\top. \quad (64)$$

13.8.2 Objective

$$\min_x f_{\text{par}}(x) = \sum_{g \in \mathcal{G}} (c_{2g} P_g^2 + c_{1g} P_g + c_{0g}) + \text{VOL} L_{\text{eff}} S_{\text{base}} \sum_i (\Delta P_{d,i} + \Delta Q_{d,i}) \quad (65)$$

$$+ \sum_{r \in \mathcal{R}^{\text{curt}}} \max(0, P_r^{\text{rated}} - P_r) c_r^{\text{curt}}. \quad (66)$$

13.8.3 Equality Constraints

AC full-bus balance (scaled). For each AC bus i :

$$g_{P,i} = (P_i^{\text{calc}} - P_i^{\text{gen}} - P_i^{\text{fixed}} - P_i^{\text{ren}} - P_i^{\text{stor}} + P_i^{\text{load}} - \Delta P_{d,i} + P_i^{\text{flex}} - P_i^{\text{conv,ac}}) \alpha_P = 0, \quad (67)$$

$$g_{Q,i} = (Q_i^{\text{calc}} - Q_i^{\text{gen}} - Q_i^{\text{fixed}} - Q_i^{\text{ren}} - Q_i^{\text{stor}} + Q_i^{\text{load}} - \Delta Q_{d,i} - Q_i^{\text{conv,ac}}) \alpha_Q = 0. \quad (68)$$

Here $P_i^{\text{fixed}}, Q_i^{\text{fixed}}$ aggregate non-variable injections (static generators, non-curtailable renewables/PV, VPP, microgrid exchange, mobile storage).

DC balance with DCDC coupling. For each DC bus k :

$$g_k^{\text{dc}} = P_{d,k}^{\text{dc}} + \sum_{m \neq k} g_{km} \left((V_k^{\text{dc}})^2 - V_k^{\text{dc}} V_m^{\text{dc}} \right) - P_k^{\text{conv,dc}} + P_k^{\text{dcdc,in}} - P_k^{\text{dcdc,out}} = 0, \quad (69)$$

where the OPF decision variable is P^{in} (*input-side referenced*, i.e. the power absorbed from **bus_in**). The output power is a deterministic function of P^{in} including both efficiency and I^2R conduction loss:

$$P^{\text{out}} = \begin{cases} \eta P^{\text{in}} - r_{eq}(P^{\text{in}})^2/(V^{\text{dc}})^2, & P^{\text{in}} \geq 0, \\ P^{\text{in}}/\eta - r_{eq}(P^{\text{in}})^2/(V^{\text{dc}})^2, & P^{\text{in}} < 0. \end{cases} \quad (70)$$

The parity **ConstraintIndex** allocates dedicated DCDC balance slots and counts them in the equality total, but the current equality evaluator leaves those dedicated rows unpopulated. The actual DCDC physics is folded directly into the two DC bus balance equations:

$$g_{\text{bus_in}} += P^{\text{in}}, \quad g_{\text{bus_out}} -= P^{\text{out}}. \quad (71)$$

DCDC Jacobian and Hessian. The first-order derivatives of the DCDC coupling terms are:

$$\frac{\partial g_{\text{bus_in}}}{\partial P^{\text{in}}} = 1, \quad \frac{\partial g_{\text{bus_out}}}{\partial P^{\text{in}}} = -\frac{\partial P^{\text{out}}}{\partial P^{\text{in}}}, \quad (72)$$

$$\frac{\partial P^{\text{out}}}{\partial P^{\text{in}}} = \begin{cases} \eta - 2r_{eq}P^{\text{in}}/(V^{\text{dc}})^2, & P^{\text{in}} \geq 0, \\ 1/\eta - 2r_{eq}P^{\text{in}}/(V^{\text{dc}})^2, & P^{\text{in}} < 0. \end{cases} \quad (73)$$

When $r_{eq} > 0$, there is also a cross-derivative with respect to the input-side DC voltage:

$$\frac{\partial g_{\text{bus_out}}}{\partial V_{\text{in}}^{\text{dc}}} = \frac{2r_{eq}(P^{\text{in}})^2}{(V_{\text{in}}^{\text{dc}})^3}. \quad (74)$$

The Hessian contributions from the I^2R loss term are:

$$\frac{\partial^2 g}{\partial (P^{\text{in}})^2} = \frac{2r_{eq}}{(V^{\text{dc}})^2}, \quad \frac{\partial^2 g}{\partial P^{\text{in}} \partial V^{\text{dc}}} = \frac{-4r_{eq}P^{\text{in}}}{(V^{\text{dc}})^3}, \quad \frac{\partial^2 g}{\partial (V^{\text{dc}})^2} = \frac{6r_{eq}(P^{\text{in}})^2}{(V^{\text{dc}})^4}. \quad (75)$$

OPF warm-start convention. Note that the PF uses output-referenced P^{ref} while the OPF uses input-referenced P^{in} . The warm-start path converts between these reference frames when seeding the OPF initial point from a PF result.

Converter balance. For each VSC converter:

$$P_c^{\text{ac}} + P_c^{\text{dc}} + P_c^{\text{loss}} = 0, \quad (76)$$

with the same loss model as in the native formulation.

13.8.4 Inequality Constraints

Nonlinear inequalities:

$$P_{f,ij}^2 + Q_{f,ij}^2 - (S_{ij}^{\text{max}})^2 \leq 0, \quad (77)$$

$$P_{t,ij}^2 + Q_{t,ij}^2 - (S_{ij}^{\text{max}})^2 \leq 0, \quad (78)$$

$$(P_c^{\text{ac}})^2 + (Q_c^{\text{ac}})^2 - (S_c^{\text{max}})^2 \leq 0, \quad (79)$$

$$\left(g_{km} V_k^{\text{dc}} (V_k^{\text{dc}} - V_m^{\text{dc}}) \right)^2 - (P_{km}^{\text{max}})^2 \leq 0. \quad (80)$$

Variable bounds are converted to inequality rows:

$$x^{\text{min}} - x \leq 0, \quad x - x^{\text{max}} \leq 0. \quad (81)$$

13.8.5 Primal-Dual IPM System

The parity solver introduces slack $z > 0$ and multipliers $\mu > 0$:

$$g(x) = 0, \quad (82)$$

$$h(x) + z = 0, \quad (83)$$

$$\nabla f(x) + J_g^\top \lambda + J_h^\top \mu = 0, \quad (84)$$

$$z \circ \mu = \gamma \mathbf{1}. \quad (85)$$

A Mehrotra predictor-corrector method is used, with:

1. affine predictor step,
2. adaptive centering parameter $\sigma = (\mu_{aff}/(\mu_{cur} + 10^{-16}))^3$ after clamping the ratio to $[0, 1]$,
3. corrector step with second-order compensation,
4. iterative refinement (2 steps) for conditioning of the KKT solve,
5. fraction-to-boundary step lengths for primal and dual updates.

Implementation note. The current `parity_ipm.cpp` uses the Mehrotra predictor-corrector scheme and implements up to two Gondzio extra correctors. The KKT system is solved using either Eigen `SparseLU` for sparse or `PartialPivLU` for dense factorizations.

Convergence monitors primal infeasibility, dual stationarity, and average complementarity. A best-iterate restoration is applied before final failure.

13.9 Component Coverage by Solver Path

Component / feature	Native primal-dual	Parity IPM
Generator (P_g, Q_g)	decision variable	decision variable
VSCConverter ($P^{\text{conv,ac}}, Q^{\text{conv,ac}}, P^{\text{conv,dc}}$)	decision variable	decision variable
DCBus voltage	decision variable	decision variable
AC branch MVA limits	nonlinear penalty term	nonlinear inequality + slack
DC branch power limits	not explicit in native path	nonlinear inequality + slack
Load shedding ($\Delta P_d, \Delta Q_d$)	not modeled	decision variable with VOLL penalty
Curtable renewable / controllable PV	not modeled as variable	decision variable
AC storage dispatch	not modeled as variable	decision variable
DC storage dispatch	not modeled as variable	decision variable; packed into <code>ACOPFResult::pstor_mw</code> with <code>st_or_map.source_type</code> identifying AC vs DC storage
DCDC dispatch	not modeled as variable	decision variable + DC coupling

Component / feature	Native primal-dual	Parity IPM
Flexible load dispatch	not modeled as variable	decision variable
StaticGen / fixed DER aggregates	not explicit variable in native objective model	included as fixed injections

13.10 AC OPF Result JSON Contract

`opf_result_to_json` writes the scalar solve summary `converged`, `iterations`, `outer_iterations`, `objective`, `max_constraint_violation`, `max_stationarity`, `status`, and `solver_path`. The `solver_path` token is `NativeAC`, `ParityIPM`, or `Unknown`.

The core vectors are `vm`, `va`, `vdc`, `pg_mw`, `qg_mvar`, `dpd_mw`, `dqd_mvar`, `pac_mw`, and `qac_mvar`. Enhanced dispatch is serialized both as structured objects and as legacy bare arrays:

- `renewable_dispatch`: `pren_mw`, `qren_mvar`, and a map array of `original_index/source_type` records;
- `storage_dispatch`: `pstor_mw`, `qstor_mvar`, and a map array; this packed storage array includes AC and DC storage;
- `dc_dc_dispatch`: `pdc_dc_mw` and a map array;
- `flex_dispatch`: `pflex_mw` and a map array;
- legacy top-level `pren_mw`, `qren_mvar`, `pstor_mw`, `qstor_mvar`, `pdc_dc_mw`, and `pflex_mw` arrays.

The profiling object contains `linear_solver_backend`, `analyze_calls`, `factorization_calls`, `linear_solve_calls`, `total_iterations`, `accepted_steps`, `rejected_steps`, and `final_barrier_mu`.

13.11 Fallback Behavior

1. If parity IPM is selected and fails, and `allow_fallback=true`, the solver retries with `use_parity_ipm=false`.
2. If native primal-dual fails and fallback is allowed, it attempts the fast dispatch + AC PF path.
3. Status strings in `ACOPFResult::status` record which fallback path was taken.

13.12 DC Optimal Power Flow (`solve_dc_opf`)

The DC OPF model solves a linearized economic dispatch problem using the DC power flow approximation. It is independent of the AC OPF paths above and is invoked through `hacdcpf::opf::solve_dc_opf`.

13.12.1 Decision Variables

$$x_{dc} = \left[\theta_{N \setminus \{sl\}} \quad P_g \quad P_f \quad \Delta P_d \right]^\top, \quad (86)$$

where $P_{f,ij}$ are branch flow variables (optional, depending on formulation mode) and $\Delta P_{d,i}$ are per-bus load-shedding variables.

13.12.2 Network Model

The DC power flow relationship is:

$$P_{f,ij} = \frac{\theta_i - \theta_j}{x_{ij}}, \quad (87)$$

with the bus susceptance matrix B assembled from branch reactances x_{ij} . The slack bus angle is fixed at $\theta_{sl} = 0$.

13.12.3 Objective Function

The DC OPF builder constructs both an LP model and a QP model. The QP model keeps true quadratic generator costs for QP-capable backends; LP backends use the linearized model.

LP linearized cost.

$$\min \sum_{g \in \mathcal{G}} c_g^{\text{lin}} P_g + \sum_i \text{VOLL}_{\text{eff}} \cdot \Delta P_{d,i} \cdot S_{\text{base}}, \quad (88)$$

where the linearized coefficient is evaluated at the generator midpoint:

$$c_g^{\text{lin}} = c_{1g} + 2c_{2g} \frac{P_g^{\text{min}} + P_g^{\text{max}}}{2}. \quad (89)$$

QP quadratic cost.

$$\min \frac{1}{2} x^\top Q x + c^\top x, \quad (90)$$

where $Q_{gg} = 2c_{2g}S_{\text{base}}^2$ and $c_g = c_{1g}S_{\text{base}}$. This mode is used by `NativeQP` and `Gurobi`. The `HiGHS` path currently calls the LP adapter; QP support there is marked `TODO` in the source.

VOLL auto-tuning. The load-shedding penalty is auto-tuned as $1.1 \times$ the maximum generator marginal cost to guarantee load serving priority.

13.12.4 Constraints

Power balance (per bus).

$$\sum_{g \in \mathcal{G}_i} P_g - P_{d,i} + \Delta P_{d,i} = \sum_{j \in \mathcal{N}_i} P_{f,ij}, \quad \forall i. \quad (91)$$

Flow definition.

$$P_{f,ij} - b_{ij}(\theta_i - \theta_j) = 0, \quad \forall (i, j) \in \mathcal{E}. \quad (92)$$

Variable bounds.

$$\theta_{sl} = 0, \quad -\pi \leq \theta_i \leq \pi, \quad i \neq sl, \quad (93)$$

$$P_g^{\text{min}} \leq P_g \leq P_g^{\text{max}}, \quad (94)$$

$$-r_a^{\text{max}} \leq P_{f,ij} \leq r_a^{\text{max}}, \quad (95)$$

$$0 \leq \Delta P_{d,i} \leq \max(P_{d,i}, 0.01/S_{\text{base}}). \quad (96)$$

13.12.5 Solver Backend Selection

`DCOPFOptions::solver` defaults to `DCOPFSolverBackend::Auto`. The solver always builds the QP form and then dispatches by backend:

1. **NativeQP** (LCQP solver): true quadratic costs via primal-dual IPM.
2. **Gurobi**: commercial QP solver.
3. **HiGHS**: open-source LP solver (linearized costs).
4. **Native Dual Simplex**: via `solve_lp_with_basis()`.
5. **Auto**: tries **NativeQP**, then Gurobi, then HiGHS, then native dual simplex.

13.12.6 Locational Marginal Prices

LMP extraction is not implemented in the current source. `dc_opf.cpp` contains a TODO for dual extraction and fills `lmp`, `branch_mu_lower`, and `branch_mu_upper` with zeros.

13.13 Reactive Power Optimization (solve_rpo)

The reactive power optimization (RPO) module searches over discrete voltage and reactive-power controls (transformer on-load tap changers and switchable shunt steps) with continuous AC OPF evaluations. The current source implements the OA/coordinate-search/ternary/pairwise refinement workflow below rather than a generic branch-and-bound MINLP solve loop.

13.13.1 Problem Structure

Discrete variables.

- Transformer OLTC tap positions: $\text{tap ratio} = 1 + (\text{tap_pos} - \text{tap_neutral}) \times \text{step_pct}/100$.
- Switchable shunt steps: $B_s = \text{step} \times b_{\text{per_step}}$ (susceptance per step).

Continuous variables. Bus voltages and generator reactive outputs, solved via AC OPF at each discrete configuration.

13.13.2 Objective Functions

Selectable objectives:

$$\text{MinVoltageDeviation: } \sum_i w_{\text{vdev}} (V_i - V_{\text{tgt}})^2, \quad (97)$$

$$\text{MinActiveLoss: } \sum_g P_g - \sum_d P_d, \quad (98)$$

$$\text{Combined: } w_{\text{vdev}} \sum_i (V_i - V_{\text{tgt}})^2 + \left(\sum_g P_g - \sum_d P_d \right). \quad (99)$$

13.13.3 Algorithm: Four-Phase Outer Approximation

Phase 0: Sensitivity ranking. Perturb each discrete variable by ± 1 from the baseline (two NLP solves per variable). Compute $|\Delta \text{obj}|$ for each variable and order by descending sensitivity.

Phase 1: Ternary-search sweep. For each variable in sensitivity order, exploit approximate unimodality of the RPO objective using integer ternary search ($O(\log R)$ evaluations per variable instead of $O(R)$). At each evaluation, generate an outer-approximation cutting plane:

$$f(y) \geq f_k + g_k^\top (y - y_k), \quad (100)$$

where g_k is a finite-difference gradient estimate.

Phase 2: Coordinate descent with OA pruning (up to 3 cycles). Sweep each variable and evaluate only candidates where the OA lower bound $<$ incumbent. Add OA cuts after each NLP evaluation. Terminate if no improvement this cycle. The OA lower bound is:

$$\max_k f_k + g_k^\top (y - y_k). \quad (101)$$

Phase 3: Pairwise neighborhood polishing. Check ± 1 perturbations of every pair of discrete variables. OA cuts prune many candidates before expensive NLP evaluation.

13.13.4 Inner NLP Solver

At each discrete configuration, the AC OPF solver (IPM by default, fallback enabled) is called to solve the continuous sub-problem. Solution caching by discrete configuration key avoids redundant NLP evaluations.

13.13.5 Result Structure

The result includes per-device tap/shunt adjustments, the number of NLP solves, OA cuts added, nodes explored, and the final status. Current source status strings include "Optimal(OA)", "Timelimit(OA)", "Nodelimit(OA)", and "Nofeasibleconfigurationfound(OA)".