

SVX Video Remote Speaker Microphone User Guide

MARCH 2026

© 2026 Motorola Solutions, Inc. All Rights Reserved.



MN011250A01-AE

Intellectual Property and Regulatory Notices

Copyrights

The Motorola Solutions products described in this document may include copyrighted Motorola Solutions computer programs. Laws in the United States and other countries preserve for Motorola Solutions certain exclusive rights for copyrighted computer programs. Accordingly, any copyrighted Motorola Solutions computer programs contained in the Motorola Solutions products described in this document may not be copied or reproduced in any manner without the express written permission of Motorola Solutions.

No part of this document may be reproduced, transmitted, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, without the prior written permission of Motorola Solutions, Inc.

Trademarks

MOTOROLA, MOTO, MOTOROLA SOLUTIONS, and the Stylized M Logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC and are used under license. All other trademarks are the property of their respective owners.

License Rights

The purchase of Motorola Solutions products shall not be deemed to grant either directly or by implication, estoppel or otherwise, any license under the copyrights, patents or patent applications of Motorola Solutions, except for the normal nonexclusive, royalty-free license to use that arises by operation of law in the sale of a product.

Open Source Content

This product may contain Open Source software used under license. Refer to the product installation media for full Open Source Legal Notices and Attribution content.

European Union (EU) and United Kingdom (UK) Waste of Electrical and Electronic Equipment (WEEE) Directive



The European Union's WEEE directive and the UK's WEEE regulation require that products sold into EU countries and the UK must have the crossed-out wheeled bin label on the product (or the package in some cases). As defined by the WEEE directive, this crossed-out wheeled bin label means that customers and end users in EU and UK countries should not dispose of electronic and electrical equipment or accessories in household waste.

Customers or end users in EU and UK countries should contact their local equipment supplier representative or service center for information about the waste collection system in their country.

Disclaimer

Please note that certain features, facilities, and capabilities described in this document may not be applicable to or licensed for use on a specific system, or may be dependent upon the characteristics of a specific mobile subscriber unit or configuration of certain parameters. Please refer to your Motorola Solutions contact for further information.

© 2026 Motorola Solutions, Inc. All Rights Reserved

Contact Us

The Centralized Managed Support Operations (CMSO) is the primary contact for technical support included in your organization's service agreement with Motorola Solutions. To enable faster response time to customer issues, Motorola Solutions provides support from multiple countries around the world.

Service agreement customers should be sure to call the CMSO in all situations listed under Customer Responsibilities in their agreement, such as:

- To confirm troubleshooting results and analysis before taking action

Your organization received support phone numbers and other contact information appropriate for your geographic region and service agreement. Use that contact information for the most efficient response. However, if needed, you can also find general support contact information on the Motorola Solutions website, by following these steps:

1. Enter motorolasolutions.com in your browser.
2. Ensure that your organization's country or region is displayed on the page. Clicking or tapping the name of the region provides a way to change it.
3. Select **Support** on the motorolasolutions.com page.

Documentation Portal

The Motorola Solutions (MSI) Documentation Portal is an online platform where you can find all the user documentation in one place, go to <https://motr.la/docs>.

You can provide feedback, questions, or comments for any publication or article by selecting the feedback icon. See [Providing Feedback](#).

Learning Center

To discover the many learning opportunities within the Motorola Solutions (MSI) Learning Center, go to <https://learningcenter.motorolasolutions.com/>.

Document History

Version	Description	Date
MN011250A01-AA	Initial version of the <i>SVX Video Remote Speaker Microphone User Guide</i> .	June 2025
MN011250A01-AB	The following section was updated: • Pairing Your SVX with APX Radios Through Secure NFC on page 45	July 2025
MN011250A01-AC	The following sections were updated: • Related Documents on page 20 • LEDs Overview on page 24 • Replaceable Parts and Accessories on page 29 • Docking and Charging on page 30 • Powering On the SVX on page 33 • SVX Configuration on page 35 • Replacing the Battery on page 36 • Event Upload on page 43 • APX Integration with the SVX on page 44 The following sections were added: • Wi-Fi Upload Through Authorized Access Points on page 44 • Privacy Mode on page 56	October 2025
MN011250A01-AD	The following sections were updated: • Replaceable Parts and Accessories on page 29 • Replacing the Battery on page 36 • Docking and Charging on page 30 • APX Integration with the SVX on page 44 • ViQi on page 49 The following sections were added: • Initiating Real-Time Translation on page 54 • Peer-Assisted Recording on page 58	December 2025
MN011250A01-AE	The following sections were updated: • Battery Information on page 9 • Related Documents on page 20 • LEDs Overview on page 24 • Replaceable Parts and Accessories on page 29 • SVX Configuration on page 35	March 2026

Version	Description	Date
	• Replacing the Battery on page 36 • Recording on page 40 • Covert Mode on page 43 The following sections were added: • Permanent Assignment in VideoManager EX on page 34 • Safety Mode on page 56 • Privacy Mode and Safety Mode Comparison on page 57	

Legal and Compliance Statements

Notice to Users (FCC and ISED)

The device complies with Part 15 of the FCC rules and Innovation, Science and Economic Development Canada's license-exempt RSS(s) per the following conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.
- Changes or modifications made to this device, not expressly approved by Motorola Solutions, could void the authority of the user to operate this equipment.

Supplier's Declaration of Conformity

Per FCC CRF 47 Part 2 Section 2.1077(a)



Responsibility Party

Name: Motorola Solutions, Inc.

Address: 2000 Progress Pkwy, Schaumburg IL, 60196

Phone Number: 1-800-927-2744

Hereby declares that the product:

Model Name: **SVX**

conforms to the following regulations:

FCC Part 15, subpart B, section 15.107(a), 15.107(d), and section 15.09(a)

Class B Digital Device

As a personal computer peripheral, this device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesired operation



NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

For Country Code Selection Usage (WLAN Devices)



NOTE: The country code selection is for the non-US model only and is not available to all US models. Per FCC regulation, all Wi-Fi products marketed in the US must be fixed to US operation channels only.

ISED WLAN Statement



CAUTION:

- i. the device for operation in the band 5150–5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems;
- ii. for devices with detachable antenna(s), the maximum antenna gain permitted for devices in the bands 5250–5350 MHz and 5470–5725 MHz shall be such that the equipment still complies with the e.i.r.p. limit;
- iii. for devices with detachable antenna(s), the maximum antenna gain permitted for devices in the band 5725–5850 MHz shall be such that the equipment still complies with the e.i.r.p. limits as appropriate; and
- iv. where applicable, antenna type(s), antenna model(s), and worst-case tilt angle(s) necessary to remain compliant with the e.i.r.p. elevation mask requirement set forth in section 6.2.2.3 shall be clearly indicated.

Operating Instructions

When engaged in Push-To-Talk (PTT) communications, to transmit (talk), press the PTT button. To receive calls, release the PTT button.

Acoustic Safety

Exposure to loud noises from any source for extended periods of time may temporarily or permanently affect your hearing. The louder the volume of the radio, the sooner your hearing will be affected. Hearing damage from loud noise is sometimes undetectable at first, and can have a cumulative effect. To protect your hearing:

- Use the lowest volume necessary to do your job.
- Turn up the volume only if you are in noisy surroundings.
- Turn down the volume before adding headset or earpiece.
- Limit the amount of time you use headsets or earpieces at high volume.
- When using the radio without a headset or earpiece, do not place the radio's speaker directly against your ear.
- If you experience hearing discomfort, ringing in your ears, or speeches that are muffled, you should stop listening to your radio through your headset or earpiece, and have your hearing checked by your doctor.

Operational Warnings

For Vehicle With Air Bags

The following explains the operational warnings:



WARNING:

- Refer to vehicle manufacturer's manual prior to installation of electronic equipment to avoid interference with air bag wiring.
- Do NOT place a portable radio or Video Remote Speaker Microphone (VRSM) in the area over an air bag or in the air bag deployment area. Air bags inflate with great force. If a portable radio or VRSM is placed in the air bag deployment area and the air bag inflates, the device may be propelled with great force and cause serious injury to occupants of the vehicle.

Batteries



CAUTION: Use only Motorola Solutions approved batteries.

- Risk of explosion if the battery is replaced by an incorrect type.
- Charge your battery using the approved Motorola Solutions charger.
- Connect the charger/power supply to a nearby and easily accessible power outlet.
- Use the battery in accordance with its water and/or dust Ingress Protection (IP) rating.
- Do not discard your battery into a fire.
- Do not replace the battery in any area labeled "Hazardous Atmosphere".
- Do not disassemble, crush, puncture, shred, or otherwise attempt to change the form of your battery.
- Do not dry a wet or damp battery with an appliance or heat source, such as a hair dryer or microwave oven.
- Do not allow conductive material such as jewelry, keys, or beaded chains to touch exposed battery terminals.
- Do not dispose of batteries with household waste.

Do Not Substitute Options or Accessories

The Motorola Solutions communications equipment certified as intrinsically safe by the approving agency (UL, CSA) is tested as a complete system which consists of the listed agency Approved portable, Approved battery, and Approved accessories or options, or both. This Approved portable and battery combination must be strictly observed. There must be no substitution of items, even if the substitute has been previously Approved with a different Motorola Solutions communications equipment unit. Approved configurations are listed by the Approving Agency (UL, CSA).

The Hazardous Location-Approved Label affixed to radio refers to the intrinsically safe classification of that radio product, and the approved batteries that can be used with that system.

The manual part number referenced on the Hazardous Location-Approved Label identifies the approved Accessories and or options that can be used with that portable radio unit.

Using a non-Motorola Solutions-Hazardous Location-Approved battery and/or accessory with the Motorola Solutions approved radio unit will void the Hazardous Location approval of that radio unit.

Important Information



CAUTION:

- Do not charge your accessory in temperature below 0 °C (32 °F) or above 45 °C (113 °F). Do not store your accessory in direct sunlight or where expected temperatures can exceed this range such as inside a parked car.
- Storing your fully charged accessory in high temperature conditions may permanently reduce the life of the battery.
- Battery life may temporarily shorten in low-temperature conditions.
- The Video Remote Speaker Microphone (VRSM) should be stored between 20 °C (68 °F) and 30 °C (86 °F) to minimize battery permanent capacity loss.
- To prevent injury, do not disassemble, puncture, or crush the VRSM because this action can cause the battery to short-circuit.
- Do not expose or throw the VRSM into heat or fire.
- Do not dispose the VRSM into household waste.
- Do not fill the audio jack and USB charging port with water. If water enters the audio jack and/or USB charging port, remove water by shaking the VRSM. Always cover the audio jack with a dust cover when not in use.

Battery Information

The battery is shipped with a nominal charge below 30%. Fully charge the battery before initial use.

The battery features intelligent fuel gauging for accurate performance monitoring. The accuracy of battery's indication progressively improves after the initial use. To achieve better accuracy, complete a couple of full charge cycles.



NOTE:

- To maximize your battery performance and lifespan, avoid depleting your battery completely.
- To minimize permanent capacity loss, store the battery within the temperature range of 20°C (68°F) and 30°C (86°F).

Important Safety Information

This document contains important safety and operating instructions. Please read these instructions carefully and save them for future reference.

Before using the battery charger, read all the instructions and cautionary markings on (1) the Smart Dock (2) the battery, and (3) on the SVX Video Remote Speaker Microphone (VRSM).



WARNING:

1. To reduce risk of injury, charge only the rechargeable Motorola Solutions authorized batteries listed in [Replaceable Parts and Accessories on page 29](#). Other batteries may explode, causing personal injury and damage.
2. Use of accessories not recommended by Motorola Solutions may result in risk of fire, electric shock, or injury.
3. To reduce risk of damage to the electric plug and cord, pull by the plug rather than the cord when disconnecting the charger.
4. An extension cord should not be used unless absolutely necessary. Use of an improper extension cord could result in risk of fire and electric shock. If an extension cord must be used, make sure that the cord size is 18 AWG for lengths of up to 100 ft (30.48 m), and 16 AWG for lengths up to 150 ft (45.72 m).
5. To reduce risk of fire, electric shock, or injury, do not operate the charger if it has been broken or damaged in any way. Take it to a qualified Motorola Solutions service representative.
6. Do not disassemble the charger – it is not repairable and replacement parts are not available. Disassembly of the charger may result in risk of electric shock or fire.
7. To reduce risk of electric shock, unplug the charger from the AC outlet before attempting any maintenance or cleaning.

RF Energy Exposure Training and Product Safety Information for Mission Critical Devices.



CAUTION: This mission critical device is restricted to Occupational use only. Before using the mission critical device, read the RF Energy Exposure Training and Product Safety Information for Mission Critical Devices manual which contains important operating instructions for safe usage and RF energy awareness and control for Compliance with applicable standards and Regulations. This equipment is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. For body worn operation, this device has been tested and meets the FCC RF exposure guideline for use with a Motorola Solutions, Inc. approved accessories sold with this device.

To ensure continued compliance with applicable RF exposure limits, use only Motorola Solutions approved, supplied or replacement batteries, and accessories.

For information on product details, brochures, user manuals, and approved accessories, refer to motorolasolutions.com.

Limited Warranty

MOTOROLA SOLUTIONS COMMUNICATION PRODUCTS

I. WHAT THIS WARRANTY COVERS AND FOR HOW LONG:

MOTOROLA SOLUTIONS, INC. ("MOTOROLA") warrants the MOTOROLA SOLUTIONS manufactured Communication Products listed below ("Product") against defects in material and workmanship under normal use and service for a period of time from the date of purchase as scheduled below:

SVX Video Remote Speaker Microphone	One (1) Year
Product Accessories	One (1) Year

MOTOROLA SOLUTIONS, at its option, will at no charge either repair the Product (with new or reconditioned parts), replace it (with a new or reconditioned Product), or refund the purchase price of the Product during the warranty period provided it is returned in accordance with the terms of this warranty. Replaced parts or boards are warranted for the balance of the original applicable warranty period. All replaced parts of Product shall become the property of MOTOROLA SOLUTIONS.

This express limited warranty is extended by MOTOROLA SOLUTIONS to the original end user purchaser only and is not assignable or transferable to any other party. This is the complete warranty for the Product manufactured by MOTOROLA SOLUTIONS. MOTOROLA SOLUTIONS assumes no obligations or liability for additions or modifications to this warranty unless made in writing and signed by an officer of MOTOROLA SOLUTIONS.

Unless made in a separate agreement between MOTOROLA SOLUTIONS and the original end user purchaser, MOTOROLA SOLUTIONS does not warrant the installation, maintenance or service of the Product.

MOTOROLA SOLUTIONS cannot be responsible in any way for any ancillary equipment not furnished by MOTOROLA SOLUTIONS which is attached to or used in connection with the Product, or for operation of the Product with any ancillary equipment, and all such equipment is expressly excluded from this warranty. Because each system which may use the Product is unique, MOTOROLA SOLUTIONS disclaims liability for range, coverage, or operation of the system as a whole under this warranty.

MOTOROLA SOLUTIONS offers the following optional extended service contracts for purchase.

DEVICE MANAGED SERVICES (DMS) STANDARD HARDWARE

Provides extended hardware normal wear and tear repair coverage beginning AFTER MOTOROLA SOLUTIONS'S standard Commercial Warranty period expires. Service performed under this plan consists of repair of the covered equipment as set forth in the terms and conditions. Repairs will be made only at the designated MOTOROLA SOLUTIONS repair depot. Local services are not included. MOTOROLA SOLUTIONS will pay for outbound shipping via MOTOROLA SOLUTIONS' normal shipping methods.

DEVICE MANAGED SERVICES (DMS) ACCIDENTAL DAMAGE AND ADVANCED REPLACEMENT

Provides for extended hardware coverage INCLUDING CHEMICAL, LIQUID AND OTHER PHYSICAL DAMAGE. Accidental damage coverage replaces the MOTOROLA SOLUTIONS' standard Commercial Warranty and starts from the FIRST DAY the device is placed into use. Service performed under this plan consists of replacement of the covered equipment as set forth in the terms and conditions.

MOTOROLA SOLUTIONS will provide Advanced Replacement for the damaged device. MOTOROLA SOLUTIONS will ship a new or refurbished functionally equivalent replacement device to the Customer within two (2) business days of receiving the Customer replacement request, subject to availability of replacement devices. Business days do not include weekends or holidays.

The Customer must return the defective or damaged device to a MOTOROLA SOLUTIONS Repair Center within 60 days after receiving the replacement device.

MOTOROLA SOLUTIONS will pay the inbound shipping via MOTOROLA SOLUTIONS' normal shipping methods. All returned devices, parts or boards will become the property of Motorola Solutions.

Failure to return the damaged device to MOTOROLA SOLUTIONS will result in an additional Customer charge for the replacement device.

When returning a device for Advanced Replacement, device accessories should not be included. Accessories include batteries, chargers or charging stations, cables, mounts, and clips. MOTOROLA SOLUTIONS is not responsible for any accessories that are shipped with the device.

II. GENERAL PROVISIONS:

This warranty sets forth the full extent of MOTOROLA SOLUTIONS' responsibilities regarding the Product. Repair, replacement, or refund of the purchase price, at MOTOROLA SOLUTIONS's option, is the exclusive remedy. THIS WARRANTY IS GIVEN IN LIEU OF ALL OTHER EXPRESS WARRANTIES. IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION, IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY. IN NO EVENT SHALL MOTOROLA SOLUTIONS BE LIABLE FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT, FOR ANY LOSS OF USE, LOSS OF TIME, INCONVENIENCE, COMMERCIAL LOSS, LOST PROFITS OR SAVINGS OR OTHER INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE SUCH PRODUCT, TO THE FULL EXTENT SUCH MAY BE DISCLAIMED BY LAW.

III. STATE LAW RIGHTS:

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES OR LIMITATION ON DURATION OF IMPLIED WARRANTY, THEREFORE THE ABOVE LIMITATION OR EXCLUSIONS MAY NOT APPLY.

This warranty gives specific legal rights, and there may be other rights, which may vary from state to state.

IV. HOW TO GET WARRANTY SERVICE:

You must provide proof of purchase (bearing the date of purchase and Product item serial number) in order to receive warranty service and, also, deliver or send the Product item, transportation and insurance prepaid, to an authorized warranty service location. Warranty service will be provided by MOTOROLA SOLUTIONS through one of its authorized warranty service locations. If you first contact the company which sold you the Product (e.g., dealer or communication service provider), it can facilitate your obtaining warranty service. You can also call MOTOROLA SOLUTIONS at 1-800-927-2744 US/Canada.

V. WHAT THIS WARRANTY DOES NOT COVER:

1. Defects or damage resulting from use of the Product in other than its normal and customary manner.
2. Defects or damage from misuse, accident, water, or neglect.
3. Defects or damage from improper testing, operation, maintenance, installation, alteration, modification, or adjustment.
4. Breakage or damage to antennas unless caused directly by defects in material workmanship.

5. A Product subjected to unauthorized Product modifications, disassembles, or repairs (including, without limitation, the addition to the Product of non-MOTOROLA SOLUTIONS supplied equipment) which adversely affect performance of the Product or interfere with MOTOROLA SOLUTIONS' normal warranty inspection and testing of the Product to verify any warranty claim.
6. Product which has had the serial number removed or made illegible.
7. Rechargeable batteries if:
 - any of the seals on the battery enclosure of cells are broken or show evidence of tampering.
 - the damage or defect is caused by charging or using the battery in equipment or service other than the Product for which it is specified.
8. Freight costs to the repair depot.
9. A Product which, due to illegal or unauthorized alteration of the software/firmware in the Product, does not function in accordance with MOTOROLA SOLUTIONS's published specifications or the FCC certification labeling in effect for the Product at the time the Product was initially distributed from MOTOROLA SOLUTIONS.
10. Scratches or other cosmetic damage to Product surfaces that does not affect the operation of the Product.
11. Normal and customary wear and tear.

VI. PATENT AND SOFTWARE PROVISIONS:

MOTOROLA SOLUTIONS will defend, at its own expense, any suit brought against the end user purchaser to the extent that it is based on a claim that the Product or parts infringe a United States patent, and MOTOROLA SOLUTIONS will pay those costs and damages finally awarded against the end user purchaser in any such suit, which are attributable to any such claim, but such defense and payments are conditioned on the following:

1. that MOTOROLA SOLUTIONS will be notified promptly in writing by such purchaser of any notice of such claim,
2. that MOTOROLA SOLUTIONS will have sole control of the defense of such suit and all negotiations for its settlement or compromise, and
3. should the Product or parts become, or in MOTOROLA SOLUTIONS' opinion be likely to become, the subject of a claim of infringement of a United States patent, that such purchaser will permit MOTOROLA SOLUTIONS, at its option and expense, either to procure for such purchaser the right to continue using the Product or parts or to replace or modify the same so that it becomes non-infringing or to grant such purchaser a credit for the Product or parts as depreciated and accept its return. The depreciation will be an equal amount per year over the lifetime of the Product or parts as established by MOTOROLA SOLUTIONS.

MOTOROLA SOLUTIONS will have no liability with respect to any claim of patent infringement, which is based upon the combination of the Product or parts furnished hereunder with software, apparatus or devices not furnished by MOTOROLA SOLUTIONS, nor will MOTOROLA SOLUTIONS have any liability for the use of ancillary equipment or software not furnished by MOTOROLA SOLUTIONS, which is attached to or used in connection with the Product. The foregoing states the entire liability of MOTOROLA SOLUTIONS with respect to infringement of patents by the Product or any parts thereof.

Laws in the United States and other countries preserve for MOTOROLA SOLUTIONS certain exclusive rights for copyrighted MOTOROLA SOLUTIONS software such as the exclusive rights to reproduce in copies and distribute copies of such MOTOROLA SOLUTIONS software. MOTOROLA SOLUTIONS software may be used in only the Product in which the software was originally embodied and such software in such Product may not be replaced, copied, distributed, modified in any way, or used to produce any derivative thereof. No other use including, without limitation, alteration, modification, reproduction, distribution, or reverse engineering of such MOTOROLA SOLUTIONS software or exercise of rights in such MOTOROLA SOLUTIONS software is

permitted. No license is granted by implication, estoppel or otherwise under MOTOROLA SOLUTIONS patent rights or copyrights.

VII. GOVERNING LAW:

This Warranty is governed by the laws of the State of Illinois, U.S.A.

VIII. For Australia Only

This provision applies to products and services supplied by Motorola Solutions to consumers within the meaning of the Australian Consumer Law. This warranty is given by Motorola Solutions Australia Pty Limited (ABN16 004 742 312) of Tally Ho Business Park, 10 Wesley Court, Burwood East, Victoria. Our goods come with guarantees that cannot be excluded under the Australia Consumer Law. For major failures with the service, you are entitled:

- To cancel your service contract with us: and
- To a refund for the unused portion, or to compensation for its reduced value.

You are entitled to choose a replacement or refund for a major failure with goods. If a failure with the goods or service does not amount to a major failure, you are entitled to have the failure rectified in a reasonable time. If this is not done, you are entitled to a refund for the goods, and to cancel the contract for the service and obtain a refund of any unused portion. You are also entitled to be compensated for any other reasonably foreseeable loss or damage from a failure in the goods or service. If you have any queries, please call Motorola Solutions Australia at 1800 457 439. You may also visit our website: https://www.motorolasolutions.com/en_xa/support.html for current warranty terms.

Contents

Intellectual Property and Regulatory Notices.....	2
Contact Us.....	3
Document History.....	4
Legal and Compliance Statements.....	6
Notice to Users (FCC and ISSED).....	6
Supplier's Declaration of Conformity.....	6
Class B Digital Device.....	6
For Country Code Selection Usage (WLAN Devices).....	7
ISED WLAN Statement.....	7
Operating Instructions.....	7
Acoustic Safety.....	7
Operational Warnings.....	8
For Vehicle With Air Bags.....	8
Batteries.....	8
Do Not Substitute Options or Accessories.....	8
Important Information.....	9
Battery Information.....	9
Important Safety Information.....	10
Limited Warranty.....	11
MOTOROLA SOLUTIONS COMMUNICATION PRODUCTS.....	11
I. WHAT THIS WARRANTY COVERS AND FOR HOW LONG:.....	11
II. GENERAL PROVISIONS:.....	12
III. STATE LAW RIGHTS:.....	12
IV. HOW TO GET WARRANTY SERVICE:.....	12
V. WHAT THIS WARRANTY DOES NOT COVER:.....	12
VI. PATENT AND SOFTWARE PROVISIONS:.....	13
VII. GOVERNING LAW:.....	14
VIII. For Australia Only.....	14
List of Figures.....	18
List of Tables.....	19
Related Documents.....	20
Chapter 1: SVX Overview.....	21
1.1 LEDs Overview.....	24
1.2 Replaceable Parts and Accessories.....	29
Chapter 2: Getting Your SVX Ready.....	30
2.1 RSM Mode.....	30

2.2 Docking and Charging.....	30
2.3 Powering On the SVX.....	33
Powering On.....	34
Powering Off.....	34
2.4 Permanent Assignment in VideoManager EX.....	34
2.5 SVX Configuration.....	35
2.6 Replacing the Battery.....	36
Chapter 3: Device Operation.....	40
3.1 Recording.....	40
Starting a Recorded Event.....	41
Stopping a Recorded Event.....	41
3.2 Setting the Volume.....	41
3.2.1 Audio Mute.....	42
3.3 Sign of Life.....	42
3.4 Errors and Warnings.....	43
3.5 Covert Mode.....	43
3.6 Event Upload.....	43
3.6.1 Wi-Fi Upload Through Authorized Access Points.....	44
3.7 APX Integration with the SVX.....	44
3.7.1 Pairing Your SVX with APX Radios Through Secure NFC.....	45
3.7.1.1 Unpairing Your SVX.....	46
3.7.2 Emergency Recording Trigger.....	47
3.7.3 SVX and APX Radio Pairing Flow.....	48
3.8 ViQi.....	49
3.8.1 Activating Voice Control.....	53
3.8.2 Initiating Real-Time Translation.....	54
3.9 Privacy Mode.....	56
3.10 Safety Mode.....	56
3.11 Privacy Mode and Safety Mode Comparison.....	57
3.12 Peer-Assisted Recording.....	58
Chapter 4: Mounting Options.....	59
4.1 Mounting the Shirt Magnetic Mount.....	60
4.2 Mounting the Locking Molle Mount.....	61
4.3 Mounting the Shirt Clip.....	63
4.4 Mounting the Heavy Jacket Clip.....	64
4.5 Mounting the Heavy Jacket Magnetic Mount.....	65
4.6 Mounting the Tek-Lok Mount.....	66
4.7 Mounting the Tether Hook.....	68
4.8 Attaching the Earpiece and Microphone.....	68
4.9 Recommended Wearing Positions.....	70

Chapter 5: Maintenance and Upgrade..... 71

5.1 Cleaning Your SVX..... 71

5.2 Cleaning the Recommended USB-C Connector (Receptacle).....71

5.3 Cleaning the Magnetic Charging Contacts..... 72

5.4 Cleaning the Recommended USB-C Connector (Plug)..... 72

5.5 Configuration and Firmware Upgrades.....72

List of Figures

Figure 1: SVX Front Facing.....	21
Figure 2: SVX Top Facing.....	22
Figure 3: SVX Bottom Facing.....	22
Figure 4: SVX Left Facing.....	23
Figure 5: SVX Right Facing.....	24
Figure 6: SVX Smart Dock.....	31
Figure 7: Magnetic Charger Attached to the SVX.....	32
Figure 8: Battery Charger.....	33
Figure 9: Power Button Located on the Top of the Device.....	34
Figure 10: Presenting Your RFID Card to the Card Reader.....	35
Figure 11: Removable Battery.....	37
Figure 12: Pinching the Battery Clip Latches.....	38
Figure 13: Pulling Out the Battery Clip.....	38
Figure 14: Slotting In the Battery Clip.....	39
Figure 15: Locking In the Battery Clip.....	39
Figure 16: Record Button.....	40
Figure 17: Volume Toggle Located on the Left Side of the Device.....	42
Figure 18: Emergency Button Located on the Top of the Device.....	48
Figure 19: ViQi/Programmable Button.....	53
Figure 20: Shirt Magnetic Mount.....	60
Figure 21: Locking Molle Mount Front Facing.....	61
Figure 22: Locking Molle Mount Back Facing.....	62
Figure 23: Locking Molle Mount Open.....	62
Figure 24: Shirt Clip Overview.....	63
Figure 25: Heavy Jacket Clip.....	64
Figure 26: Heavy Jacket Magnetic Mount Front Facing.....	65
Figure 27: Heavy Jacket Magnetic Mount Back Facing.....	65
Figure 28: Heavy Jacket Magnetic Mount Open.....	66
Figure 29: Tek-Lok Mount.....	67
Figure 30: Tether Hook.....	68
Figure 31: Earpiece and the Microphone.....	69
Figure 32: SVX Recommended Wearing Positions.....	70

List of Tables

Table 1: Power Indication..... 24

Table 2: Battery Indication..... 25

Table 3: Charging Indication..... 26

Table 4: LEDs in Use..... 26

Table 5: Replaceable Parts and Accessories..... 29

Table 6: Start/Stop Recorded Event Options..... 40

Table 7: ViQi Voice Control Commands..... 49

Table 8: ViQi Virtual Partner Queries..... 52

Table 9: Privacy Mode and Safety Mode Comparison..... 57

Related Documents

The following list contains titles of related documents. To find and download the documents, visit <https://docs.motorolasolutions.com/>.

Title	Description
<i>VideoManager EL Online Help</i>	This document covers some of the basic uses of VideoManager EL.
<i>CommandCentral DEMS User Guide</i>	This guide provides information on CommandCentral DEMS and is designed for users.
<i>SmartControl User Guide</i>	This guide is designed to walk you through the basics of using the SmartControl mobile application.
<i>VideoManager Admin Guide</i>	This guide covers some of the basic uses of VideoManager EX and serves as a reference guide for system administrators when utilizing advanced VideoManager EX features.

Chapter 1

SVX Overview

Familiarize yourself with the buttons and functions on your SVX.

 **NOTE:** If you press a programmable button that is not assigned to any function, the device gives a bad bonk tone.

Figure 1: SVX Front Facing



Callout	Description
1	Camera lens
2	Front record LED
3	Microphone
4	ViQi/Programmable button 3
5	Speaker
6	Record button

Figure 2: SVX Top Facing



Callout	Description
1	Power/Pairing/Sign of life button
2	Top status LED
3	Top record LED
4	Emergency button (programmable)

Figure 3: SVX Bottom Facing



Callout	Description
1	USB-C cable port

Figure 4: SVX Left Facing



Callout	Description
1	Volume toggle
2	Push-to-Talk (PTT) button
3	Programmable button 1
4	Programmable button 2

Figure 5: SVX Right Facing



Callout	Description
1	NFC tag
2	3.5 mm audio jack
3	Recess for the dust cover

1.1
LEDs Overview

Table 1: Power Indication

Top Status LED	Top Record LED	Description
Blinking green for one second 	Continuously fading green until the device is powered on When the device is ready for use, the top record LED turns solid green for one second until it completely turns off. 	Powering on
Blinking green twice → Continuously fading green until the 	Continuously fading green until the device is powered off 	Powering off

Top Status LED		Top Record LED	Description
device is powered off When the device is powered off, the top status LED flashes green twice until it completely turns off.			
Blinking red twice		N/A	Powering on error Errors can cause the device to be non-operational for evidentiary purposes.
Solid white		N/A	The device is powered on but idle (can be connected to a radio). By default, this option is turned off. It can be configured in your agency's evidence management system. For more information, see Related Documents on page 20 . The LED immediately turns off when: • A higher priority LED becomes active • The device enters covert mode • The LED Brightness configuration is disabled in SmartControl

Table 2: Battery Indication

You can press the **Power** button once to check the battery level.

Top Status LED		Description
Blinking green twice		Battery at high level (70 – 100%)
Blinking amber twice		Battery at medium level (15 – 69%)

Top Status LED		Description
Continuous blinking red		Battery at low level (6 – 14%) NOTE: When the battery level reaches 10%, depending on the configuration, the voice prompt or tone notification is announced. You can dismiss the low battery warning by pressing the Power button once but the announcement will be repeated every 10 minutes until you put the SVX into charging.
Continuous rapid blinking red		Battery at critical level (at 5% or below) Video-related functions stop and the device shuts down at 0%. To prevent flat battery, charge the device immediately. NOTE: Voice prompt or tone notification is announced every five minutes until the device starts charging. The low battery warning is cleared when the device is put into charging.

Table 3: Charging Indication

Top Status LED		Description
Solid red		Battery charging (0 – 89%)
Continuous fading green		Battery charging (90 – 99%)
Solid green		Battery fully charged: 100%
Continuous blinking amber		Battery is pending charging due to one of the following: - Battery temperature is too low. - Battery temperature is too high. Charging will start automatically when the battery is not in any of the stated conditions.
Continuous blinking red		Charging error

Table 4: LEDs in Use

Top Status LED	Top Record LED		Front Record LED		Description
N/A	Solid red		Solid red		The device is unmuted and is recording.

Top Status LED	Top Record LED	Front Record LED	Description
N/A	Continuous blinking white/red 	Solid red 	The device is muted and is recording.
N/A	Solid white 	Off	The device is muted but is not recording.
N/A	Continuous blinking amber 	Off	Recording warning. For example, due to time management error. Warnings can interfere with normal device operation but the device can still be used for evidentiary purposes. You can press the Power button once to hear sign of life and turn off the LED.
N/A	Continuous blinking red 	Off	Recording error. For example, due to full storage. Error is cleared after resolving it. For example, when the storage is released. If you try to record, the device gives a bad bonk tone and does not start recording.
Continuous blinking blue 	N/A	N/A	Pairing mode
Blinking blue twice 	N/A	N/A	Connected to the new device
Off	N/A	N/A	Connected to the last paired device
Solid blue 	N/A	N/A	- Disconnected or reconnecting - The device has not been paired with a radio and is not in pairing mode.

Top Status LED	Top Record LED	Front Record LED	Description
Blinking blue three times 	N/A	N/A	All device pairings have been removed.
Blinking green until pickup 	Blinking green until pickup 	Off	The device is assigned and checked out.
N/A	Solid purple 	Solid red 	Live streaming while recording
N/A	Solid purple 	Off	Live streaming but not recording
N/A	N/A	N/A	- Uploading wirelessly in the field - Wireless uploading in the field complete
N/A	Continuous fading green 	N/A	Uploading via Smart Dock or USB cable
N/A	Off	N/A	Uploading via Smart Dock or USB cable complete
Continuous fading amber 	Continuous fading amber 	Off	Upgrading  NOTE: The device cannot be checked out while upgrading.
N/A	Fading white with a gap 	N/A	The device enters privacy mode or safety mode. For more information, see Privacy Mode on page 56 or Safety Mode on page 56 .

1.2

Replaceable Parts and Accessories

The following replacement parts and accessories are available for order from Motorola Solutions.

Table 5: Replaceable Parts and Accessories

Part Number	Description
PMMN8199A	SVX VIDEO REMOTE SPEAKER MIC  NOTE: This model is compatible with the battery PMNN4893A.
PMMN8199B	SVX VIDEO REMOTE SPEAKER MIC UL  NOTE: This model is compatible with the battery PMNN4905A.
PMMN8199BT	SVX VIDEO REMOTE SPEAKER MIC TAA  NOTE: This model is compatible with the battery PMNN4913A.
PMMN8199AR	SVX VIDEO REMOTE SPEAKER MIC  NOTE: This model is compatible with the battery PMNN4913A.
PMNN4893A	BATT LIION IP68 4300T
PMNN4905A	BATT LIION UL DIV2 IP68 4300T
PMNN4913A	BATT LIION IP68 4300T
PMPN5022	SVX SMARTDOCK 10 SLOT CHARGE AND UPLOAD US/NA
PMPN5026	SVX BATTERY ONLY CHARGER 12 SLOT US/NA
WGP02798C	SHIRT MAGNETIC MOUNT, V300/V700 BWC, BLACK
WGP02697B	SHIRT CLIP MOUNT, V300/V700 BWC, BLACK
WGP03085B	JACKET MAGNETIC MOUNT, V300/V700 BWC, BLACK
WGP03088	JACKET CLIP MOUNT, V300/V700 BWC, BLACK
WGA00668	LOCKING MOLLE MOUNT, V300/V700 BWC, BLACK
PMLN8708B	EARPIECE, SVX, RECEIVE ONLY TRANS TUBE, UL, 3.5 MM
PMLN8709B	EARPIECE, SVX, 2 WIRES, WITH PTT & MIC, UL, 3.5 MM
PMLN8688	TETHER HOOK BRACKET (PACK OF FIVE)
PMLN8682	COILED LANYARD (PACK OF FIVE)
WGA00669	TEK-LOK BELT MOUNT, V300/V700 BWC, BLACK
PMPN5064A	MAGNETIC CHARGER AND VEHICLE POWER ADAPTOR KIT
PMPN5038A	MAGNETIC QUICK CONNECT CHARGER CABLE
PMPN5063A	VEHICULAR POWER SUPPLY 5V/2A USB-A
PMLN8709A	SVX 2-WIRE SURVEILLANCE EARPIECE

Chapter 2

Getting Your SVX Ready

Before you can use the SVX for video recording, your device must be configured and assigned to you. For more information, see your agency's evidence management system documentation listed in [Related Documents on page 20](#).

2.1

RSM Mode

Out of the box, the SVX is set up to work as a Remote Speaker Microphone (RSM) only.

All programmable buttons are set to execute radio functions that are set up in the radio codeplug configuration.

The **Record** button does not perform any action. If pressed, it sounds a bad bonk tone to indicate that the button is working, but not set to execute any operation, because video recording is not enabled.

To enable video operation, you must configure the SVX in your agency's evidence management system. For more information, see the relevant user guide listed in [Related Documents on page 20](#).

Once the mode change is selected, all video-related settings can be selected such as GPS, video resolution, Record-After-The-Fact (RATF), pre-event, network connection for location reporting and video streaming, and more.



NOTE: After a mode is changed, the SVX goes through the reboot. After the reboot, depending on the configuration, the voice prompt or tone notification indicates that the camera is ready for use. If there is no voice prompt or tone notification, the camera is not available.

2.2

Docking and Charging

Prerequisites:



IMPORTANT: To ensure the best charging performance and connectivity to your agency's evidence management system, carefully read the following instructions:

- Motorola Solutions recommends the use of an SVX Smart Dock.
- You must fully charge the battery before first usage.
- To ensure optimal battery health, you should charge the device in an ambient temperature between 0°C and 25°C (32°F and 77°F). If the temperature is too hot or too cold, battery charging may be stopped to protect the battery.
- You must use only Motorola Solutions approved batteries. There is a risk of explosion if the battery is replaced by an incorrect type.
- The SVX can also be charged using a standard USB-C cable and a 5VDC charger or a PC. For optimal charging, it is recommended that the charger has a minimum wattage of 10W.
- You must only charge the SVX using a USB-IF certified adapter. The device may be damaged if an incompatible charger is used.
- By default, if the device is powered off, it will automatically power on when it is docked and has sufficient charge.

This function can be configured in your agency's evidence management system.

Procedure:

Perform one of the following actions:

Option	Actions
Charging your device using an SVX Smart Dock	a. Align the device to face the front of the SVX Smart Dock. b. Place the device into the slot ensuring that the device is fully inserted. Figure 6: SVX Smart Dock  NOTE: When docked, the alert tone volume is lowered to 30% and LED brightness turns low. You can still manually set the volume using the volume toggle. When the SVX is removed from the Smart Dock, the volume level and LED brightness return to the original settings.
Charging your device using the USB-C cable and a 5VDC charger or a PC	a. Connect the SVX to a USB charger or a PC by plugging the USB-C cable into the USB-C port. b. Connect the cable to a compatible 5VDC USB charger or a PC.

Option	Actions
Charging your device in-vehicle using the magnetic charger	a. Connect the magnetic charger to the USB-A socket. NOTE: The USB port must provide a minimum voltage of 5 V and a charging current of 1.5 A. If you are using the VPA (Vehicle Power Adapter), plug the VPA into the cigarette lighter socket of the vehicle and then, connect the magnetic charger to the USB-A socket of the VPA. Ensure that you are using the Motorola Solutions authorized VPA. b. Attach the magnetic charger to the bottom of the SVX. Figure 7: Magnetic Charger Attached to the SVX 

Option	Actions
Charging the battery using the battery charger	- Align the battery into the slot. - Place the battery into the slot ensuring that the battery is fully inserted. - Ensure that the battery charger is plugged in to a power source. Figure 8: Battery Charger 

The top status LED shows the current charging status. For more information, see [Table 3: Charging Indication on page 26](#).

Depending on the configuration, either the voice or tone prompt sounds to indicate charging.

2.3

Powering On the SVX



IMPORTANT: A minimum battery level required for the SVX to power on is 10%.

Figure 9: Power Button Located on the Top of the Device



Powering On

Procedure:

Press and hold the **Power** button on the top of the device for two seconds.

The device vibrates briefly and goes through the booting and information sequences.

The top status LED blinks green for one second. Then, it changes the color reflecting the battery level. If the device has not been paired with a radio, it automatically enters pairing mode and the top status LED starts blinking blue. If the device has already been paired with the radio, it automatically attempts to reconnect and the top status LED turns solid blue.

The remote speaker microphone is ready for use in five seconds after the top status LED flashes green once. The top record LED is continuously fading green until the camera functions are ready for use and the LED turns off. It can take up to 50 seconds for the device to fully boot up.

Depending on the configuration, either the voice or tone prompt sounds to indicate powering on.

 **NOTE:** By default, the device is automatically powered on when it is placed in a charger such as a Smart Dock. This function can be configured in your agency's evidence management system.

Powering Off

Procedure:

Press and hold the **Power** button on the top of the device for two seconds.

The top status LED flashes green twice and the device mildly vibrates.

The top status and record LEDs are continuously fading green until the device powers off. When the device is powered off, the top status LED flashes green twice until it completely turns off.

Depending on the configuration, either the voice or tone prompt sounds to indicate shutting down.

2.4


Permanent Assignment in VideoManager EX

Before a device can be used, it must be permanently assigned to an already created user in VideoManager EX. The assignment ensures that all media can be traced back to the user who recorded it. If a device is undocked without being first assigned to a user, it will work as a Remote Speaker Microphone (RSM) only.

When your device is configured, your system administrator may want device users to utilize an RFID system for device assignment. For further information on configuring RFID reader assignment and other ways to assign devices, see the *VideoManager Admin Guide*.

After presenting your RFID card to the card reader, your docked and assigned SVX identifies itself with blinking green LEDs.

Figure 10: Presenting Your RFID Card to the Card Reader

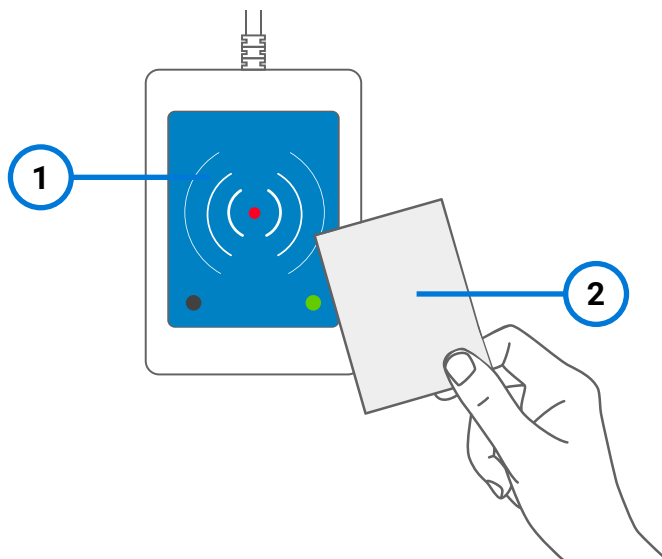

Callout	Description
1	RFID reader
2	RFID card

2.5 SVX Configuration

You can configure your SVX in your agency's evidence management system.

Some of the configuration properties that you can set up for the SVX include the following:

- Buttons functions
- Agency or department name
- Time zone
- Officer name and badge ID
- Device ID
- Network preferences
- Officer preferences for indicators
- Recording preferences
- Power and storage-saving preferences
- Event tags
- Audio indicator preferences (voice prompt or tone)

- Operating mode

You can select between three modes: **Video Remote Speaker Microphone**, **Video Camera only** or **Remote Speaker Microphone only**.



NOTE: The naming convention can differ between management systems.

- Regional WiFi configuration

Each country has its WiFi regulations, such as WiFi channels allowed for transmission and maximum TX (transmit) power on each channel. You can set a correct WiFi regulation country code corresponding to a country the SVX operates in.



NOTE: The United States is the default country code.

You can also request a remote state capture to diagnose field issues. State capture gives you information about the current status of your device.

For more information, see your agency's evidence management system documentation listed in [Related Documents on page 20](#).

2.6

Replacing the Battery

The power source of the SVX is a removable battery that is easy to replace and allows continuous operation with minimal disruption. You can remove the battery and charge it separately from the device. A charged spare battery ensures that you always have a source of power ready to use without requiring the device to remain in a charging dock or Smart Dock while the battery is charging.

For more information, see [Docking and Charging on page 30](#).



IMPORTANT: If you attach a battery that is not compatible with your model of the SVX, depending on the configuration, the voice prompt or tone notification sounds upon powering up the device. The top status LED keeps blinking red until the correct battery is attached. The device functionality is not affected.

Additionally, you can configure a notification in your agency's evidence management system to monitor if a Haz-Loc-approved battery is required. If the notification is enabled, an alert reminding you about the battery mismatch sounds every 10 minutes. The feature is currently not supported in VideoManager EX.

For more information about the battery compatibility, see [Replaceable Parts and Accessories on page 29](#).

Figure 11: Removable Battery



Procedure:

1. Perform one of the following actions:

- Power off the device.



IMPORTANT: Ensure that the device fully powers off. If you remove the battery while the device is still on, the device will take longer to power on completely.

For more information, see [Powering Off on page 34](#).

- If you do not want to power off the device, connect the SVX to a USB charger or a PC by using the USB-C cable.



NOTE:

UL (Rev. B) hardware is required.

Minimum 1.5 A power supply through USB-C is required.

Once you remove the battery, you have 60 seconds to attach the new battery before the device shuts down.

Removing the charger before a battery is reattached causes an immediate shutdown. The reboot can take longer than usual.

2. To remove the old battery, perform the following actions:
 - a. Pinch the left and right latches simultaneously.

Figure 12: Pinching the Battery Clip Latches



- b. To remove the battery, pull out the clip.

Figure 13: Pulling Out the Battery Clip



- 3. To attach the new battery, perform the following actions:
 - a. Slot in the bottom side of the battery to the SVX.

Figure 14: Slotting In the Battery Clip



- b. Press firmly in the middle to ensure both latches snap in place and are fully locked.

Figure 15: Locking In the Battery Clip



4. Power on the device.

The RSM functionality is available in five seconds while the camera functionality may take up to 30 seconds to fully load.

Chapter 3

Device Operation

The following section describes how to operate your SVX.

 **NOTE:** Device button functions are configurable in your agency's evidence management system. The button functions can differ in your device configuration. You should consult your administrator for guidance on button configurations. For more information, see [Related Documents on page 20](#).

3.1 Recording

You can use the **Record** button on the front of the device to start or stop a recorded event. See the following table for the different configurations your agency can set to start or stop a recorded event on the SVX.

 **NOTE:** You can configure the SVX so that it captures audio only. Live streaming is not possible when the device is configured for audio-only recording.
VideoManager EX currently does not support this feature.

Figure 16: Record Button



Table 6: Start/Stop Recorded Event Options

Action	Description
Press once to start/stop an event	Press and release the Record button to start or stop a recorded event.
Start/stop recorded event confirmation	Double-press the Record button to start or stop a recorded event.

Action	Description
Press and hold to start/stop an event	Press and hold the Record button for 1 to 5 seconds, depending on your agency configuration, to start or stop a recorded event.

 **TIP:** You can start or stop an event from the SmartControl application.

Starting a Recorded Event

Procedure:

Press the **Record** button.

Result: The device vibrates and, depending on the configuration, the voice prompt or tone notification sounds. The top and front record LEDs turn solid red to indicate that the device is actively recording.

 **NOTE:** To conceal that the camera is recording, and to prevent officers from becoming visible targets, the front LED can be turned off. This option can be configured in your agency's evidence management system. For more information, see [Related Documents on page 20](#).

Stopping a Recorded Event

Procedure:

Press the **Record** button.

Result:

The top and front record LEDs turn off.

After a recorded event stops, you can start the event categorization sequence via SmartControl or ViQi.

3.2

Setting the Volume

You can change the SVX's volume levels by up to 16 levels. When using the device for the first time, the volume is set to the default level upon powering up. The device retains the previously set volume level for subsequent uses.

 **NOTE:** When the SVX is paired and connected to the radio, you can configure the volume of the SVX through configuration tools.

Figure 17: Volume Toggle Located on the Left Side of the Device



Procedure:

- To increase the volume, move the side toggle up.
- To decrease the volume, move the side toggle down.

3.2.1

Audio Mute

You can mute audio while recording or, for example, during pre-event or Record-After-The-Fact (RATF) when the device is not recording.

Momentary mute allows you to mute audio only while you hold down the configured button while the continuous mute duration can be configured up to 480 minutes.

You can configure button functionality and the continuous mute duration in your agency's evidence management system. For more information, see [Related Documents on page 20](#).

3.3

Sign of Life

When the device is on, you can press the **Power** button once to hear a sign of life message, which includes the battery level, upload status, and connection status among other information.

To cut off sign of life playing, press the **Power** button once.

Sign of life audio prompts are split into two categories:

- **Always** – Prompts always play irrespective of whether the device is configured for tone or speech. For more information on the status LED behavior, see [LEDs Overview on page 24](#).
- **Contextual** – Prompts only play if the device is configured for speech and the feature is currently active. For example, "Recording" prompt plays only if the device is recording.

When contextual voice prompt is playing, the top status LED is turned off.

Taking another action immediately cuts off the sign of life playback and sign of life plays the corresponding audio and gives indications for the action.

3.4

Errors and Warnings

If a warning or error related to the camera/video functions occurs, the top record LED starts blinking. If a warning or error is related to the device functions, the top status LED blinks.

If a warning occurs, the LED starts blinking amber. Depending on the configuration, the voice prompt or tone notification sounds along with haptics. You can dismiss the warning by pressing the **Power** button once. The device will repeat the warning, and then dismiss it.

If an error occurs, the LED starts rapidly blinking red. Depending on the configuration, the voice prompt or tone notification sounds along with haptics. Errors cannot be dismissed and must be addressed immediately.

3.5

Covert Mode

In covert mode, the SVX makes no sound and all LED lights are turned off. Alternatively, if configured by your administrator, the top record LED can turn on while recording an event, live streaming or in mute, even when your device is in covert mode. Your administrator can also configure the SVX to keep the front speaker active, ensuring officers receive audio transmissions even in covert mode. Additionally, depending on the configured alert notifications, the device can vibrate in covert mode. If an earpiece is connected, the audio is routed to the earpiece. All SVX functions operate the same way in covert mode as they do in normal mode.



NOTE: Covert mode is configurable by your administrator. For more information, see [Related Documents on page 20](#).

When connected to a radio, covert mode can be sent to the radio depending on how the SVX has been configured. The administrator can configure a button to toggle covert mode on/off.



NOTE: You can put the SVX in covert mode even if the connected radio is on a channel with a strapped, that is preset, audio profile.

If the device is recording in covert mode, when the device exits covert mode, the top status and record LEDs blink green twice before they turn solid red.

If the device is not recording in covert mode, when the device exits covert mode, the top status and record LEDs blink green twice before they turn off.

3.6

Event Upload

The SVX can upload directly to your agency's evidence management system.

You can upload recorded events from your SVX via:

- Smart Dock
Events upload automatically from the SVX in a Smart Dock.
- USB cable
Connect your device to a PC by using the USB cable. The PC must run the SmartControl application and the **Upload** option must be selected from the menu.
- Authorized access points

For more information, see [Wi-Fi Upload Through Authorized Access Points on page 44](#).



NOTE: Events that you have categorized as critical events are always uploaded first.

If the device is currently uploading via Smart Dock or USB cable, the top record LED continuously fades in and out, from green to off. There are no LED indications for wireless upload in the field. You can monitor the upload progress in your agency's evidence management system.

When the device is uploading via Smart Dock or USB cable, if configured for voice, Sign of Life announces the upload percentage.

When the device is uploading wirelessly in the field, and is neither recording, live streaming nor connected to SmartControl, if configured for voice and if pressed, Sign of Life announces that the device is uploading but does not announce the upload percentage.

If the device has completed uploading via Smart Dock or USB cable, the top record LED turns off. There are no LED indications for completing the wireless upload in the field.

If the device was uploading via Smart Dock or USB cable, if configured for voice, Sign of Life continues to announce that the upload is complete until the device is undocked or disconnected, or new events are set for uploading.

If the device was uploading wirelessly in the field, and is neither recording, live streaming nor connected to SmartControl, if configured for voice and if pressed, Sign of Life announces that the upload is complete once.

If the upload is interrupted, if configured for voice, Sign of Life announces that the upload is paused. When the upload is resumed, depending on the upload type, LED and Sign of Life can indicate that the upload is resumed.

3.6.1

Wi-Fi Upload Through Authorized Access Points

Wi-Fi access points are authorized Wi-Fi hotspots. Your agency can configure external access points in your agency's evidence management system. This action allows the SVX to connect to the authorized external hotspot, share your location, and stream to your agency's evidence management system.

After a trusted access point is set up, when a trusted access point is in the vicinity of the agency's evidence management system, it connects to the agency's evidence management system and automatically uploads events, depending on the configuration.

Your agency can configure a hidden network and enable the SVX to connect to a hidden access point.



NOTE: The SVX devices only support connections to 5 GHz Wi-Fi networks.

3.7

APX Integration with the SVX

The SVX can be used with the following radios:

- APX NEXT, APX NEXT XE, APX NEXT XN (Require 2025.2 release)
- APX N70, APX N70 XE



IMPORTANT: IP address 192.168.97.x is reserved for APX or SVX integration.

To ensure proper operation of features such as voice control or video streaming, the APX NEXT and N70 radios must have the minimum firmware version. For the radio to recognize the SVX as a new type of Bluetooth device, the APX NEXT radio requires firmware version R09.50.00 or newer, and the N70 radio requires firmware version R06.50.01 or newer.

If the APX NEXT or APX N70 firmware version is R38.03.00 or newer, you can view the SVX firmware version and battery level from the **Bluetooth Info** menu of the APX NEXT or N70 radio.

Additionally, if the APX NEXT or APX N70 firmware version is R38.03.00 or newer, you can share location, video stream, send recording status or upload critical events using the LTE or WiFi service of an APX NEXT or N70 radio that the SVX is connected to. Sharing location and video streaming is available only during recording.



NOTE: SmartVideo service subscription is required.

For more information, see the relevant documentation in [Related Documents on page 20](#).

3.7.1

Pairing Your SVX with APX Radios Through Secure NFC

The SVX is ready to pair with an APX NEXT or N70 radio out of the box.

Prerequisites: Set up the radio configuration settings via CPS or Radio Central as follows:

Required:

1. In the **Radio Wide** features, set **Power Down Standby Mode (hrs)** to two hours or longer.
2. In **Radio Wide**, under the **Bluetooth** section, select the following check boxes: **Bluetooth Enable** and **Secure NFC Touch Pairing**.
3. In **Radio Wide**, under the **Bluetooth** section, set **Bluetooth Re-Pair Timer** to **Infinite** so that the SVX reconnects to the radio after power cycling.
4. In the **Radio Ergonomics Wide** advanced features, set **Active Mic for Indirect PTT** and **Active Mic for RSM ViQi** to **Wireless Mic** to make all audio come from the SVX when the device is connected to the radio.
5. In the **Radio Ergonomics Wide** advanced features, set **Bluetooth Receive Audio** to **Bluetooth Speaker** to make all RX audio automatically route to the SVX when the device is connected to the radio.

Recommended:

1. In the **Radio Ergonomics Wide** advanced features, set **Active Mic for Radio PTT** and **Active Mic for Radio ViQi** to **Radio Mic**. If the SVX is out of reach but is still connected via Bluetooth to the radio, pressing the radio PTT will pick up audio from the radio microphone.
2. In **Radio Ergonomics Configuration** → **Controls** → **Buttons**, assign a radio button to **Bluetooth Audio Reroute** so that TX/RX audio can be quickly toggled from the SVX to Radio if the SVX is forced off the uniform of an officer.

When the SVX is first turned on, it automatically enters pairing mode if there are no radios paired.

Procedure:

1. Power on the SVX.
For more information, see [Powering On the SVX on page 33](#).
2. To enter pairing mode, double-press the **Power** button.
The top status LED continuously blinks blue.
If configured, the voice prompt indicates that the SVX is searching for the device.
3. On the APX radio, open the Bluetooth menu and select **NFC Touch Pairing**.
4. Align the NFC tag located on the right side of the SVX and the M logo at the back of the radio together, and hold both devices together.
If pairing is successful:

- If configured, you hear the voice prompt or tone notification announcing that the devices are connected.
- The top status LED blinks blue twice and then turns off.

After successful pairing, when the SVX is first turned on, it attempts to reconnect to the last paired radio.



NOTE: SVX pairing mode times out after two minutes.

Postrequisites: Upon successful pairing, the SVX automatically exits pairing mode. To manually exit pairing mode, without pairing a device, press the **Power** button once.

If configured, the tone notification indicates that the device has exited pairing mode, and the SVX reverts to the previous state from before entering pairing mode.

3.7.1.1

Unpairing Your SVX

Procedure:

Perform one of the following actions:

Option	Actions
Unpairing all devices	a. Power off the SVX. For more information, see Powering On the SVX on page 33. b. Press and hold simultaneously the Power button and the PTT button for five seconds. For more information, see SVX Overview on page 21. After two seconds, the SVX powers on and after another three seconds, the pairings for both SmartControl and radios are removed. Depending on the configuration, the voice prompt or tone notification indicates that the device pairings have been cleared.

Option	Actions
Removing the SVX from the radio/SmartControl paired device list	Perform the following procedure if you want to unpair a single device. From the menu on either the radio or SmartControl application, disconnect or forget the SVX. For more information on the APX radios, see the relevant user guide. For more information on the SmartControl application, see <i>SmartControl User Guide</i>. For the radio, if you manually disconnect the SVX, the SVX keeps the pairing history but does not attempt to reconnect unless the SVX is rebooted in which case the SVX will attempt to reconnect. If you forget the SVX from the radio menu, the SVX forgets the connection and does not attempt to reconnect.  NOTE: If the SVX is rebooted, the SVX powers on in reconnecting state. For SmartControl, if you manually disconnect the SVX, SmartControl forgets the device and the SVX does not attempt to reconnect.

The top status LED blinks blue three times.

 **NOTE:** Depending on the radio codeplug configuration and ways to pair the devices, the SVX paired device list may be cleared when the SVX is turned off.

Postrequisites: To replace a connected radio with a different radio, you must first remove the connected radio. If you unpair the SVX from the Bluetooth host, you should ensure that the paired device is removed from the paired device list before starting another pairing process with a new device.

Refer to the radio user manual for more details on the pairing programmable options.

3.7.2

Emergency Recording Trigger

APX radios and SVXs can work together to capture video evidence. The SVX connects through Bluetooth to an APX radio, and is triggered to start recording whenever the radio enters emergency mode. Dispatch can also trigger emergency mode remotely.

The radio can be configured to open the microphone automatically when an emergency is initiated either from the radio or SVX. When **Active Mic for Indirect PTT** is set to **Wireless Mic** on the radio via CPS or Radio Central, when an emergency is initiated, audio will come from the SVX.

SVX and APX emergency pairing is configured in your agency's evidence management system for the SVX.

Figure 18: Emergency Button Located on the Top of the Device



The emergency trigger is sent whenever the radio enters an emergency and the SVX automatically starts recording. The SVX continues to record until the **Record** button on the device is pressed.

A secure Bluetooth link connects the device and the radio. An officer can disconnect from the radio through the radio Bluetooth menu.

If a device is connecting to a radio that it was previously paired to, the connection happens automatically. If the device is already paired to a radio and the officer wants to pair it to a different radio, the officer has to restart the discovery process.

If either the SVX or radio is rebooted, the rebooted device has to re-establish the connection. If the other device is out-of-range, the user must connect them manually using the radio screen.

When the radio triggers emergency mode, the SVX logs it in metadata. It includes the reason reported from the radio for entering emergency mode. The device does this even if an event is already in progress.

When the radio exits emergency mode, video recording does not stop automatically. The event recording must be stopped manually by pressing the **Record** button.



NOTE: Do not interrupt the pairing process once it starts because it can cause issues with pairing in the future.

3.7.3

SVX and APX Radio Pairing Flow

The SVX and the APX Radio have to connect to use the emergency record trigger.

You should perform the connection when first checking out the device at the beginning of your shift. Pairing is only required once to enable the emergency recording trigger. The radio user has to perform the pairing process to ensure that the start of the recording on emergency trigger occurs without delay.

The SVX can pair with the radio and the smart phone app. The pairing cannot be done in parallel. You must first pair with one device, then the other devices.

For more information, see [Pairing Your SVX with APX Radios Through Secure NFC on page 45](#).

If the SVX moves out of range from the radio, the radio tries to reconnect for approximately eight minutes. If the device stays out of range for longer than eight minutes, you have to reconnect the two manually by using the radio screen.

If a radio triggers an emergency and the SVX is not paired with the radio, you need to go through the pairing process to connect them. For more information, see [Pairing Your SVX with APX Radios Through Secure NFC on page 45](#).

Once the SVX is paired with an APX Radio, when either the radio or the device reboots, the rebooted device tries to re-establish the connection. If the device is not in range at the time of this re-connection attempt, you need to go into the APX Radio menu and manually start the connection from there.

3.8 ViQi

ViQi is a virtual assistant that helps you manage your SVX and perform information look-ups using voice commands. This feature is purpose-built for public safety and is active when you press and hold the assigned **ViQi** button on the SVX.

ViQi Voice Control

ViQi Voice Control allows you to operate the SVX with your voice, for example, to change zones, channels, or volume.

 **NOTE:** Voice Control follows the language that you set in the device. If you changed the device language, your device automatically downloads the new language files for this feature through LTE or WiFi. This feature is disabled until the languages files are downloaded successfully. Therefore, retry if your download fails.

Table 7: ViQi Voice Control Commands

The following table shows the functions supported by the ViQi Voice Control feature and their respective commands.

Feature	Examples
ViQi access	To activate ViQi, say: • “Hey, ViQi!” • ViQi!  NOTE: These commands are used to initiate Virtual Partner when both Voice Control and Virtual Partner are programmed on the same ViQi button.
Zone and channel	To identify your current zone and channel, say: • “What is my zone and channel?” • “Current zone and channel.” • “Zone and channel.” To change to a new zone and channel, say: • “Zone <zone name>, channel <channel name>.” • “Change zone to <zone name>, channel to <channel name>.” • “Switch zone to <zone name>, channel to <channel name>.”
Zone	To identify your current zone, say: • “What is my zone?” • “Current zone.” • “Zone.” To change to a new zone, say:

Feature	Examples
	• "Zone <i><zone name></i>." • "Change zone to <i><zone name></i>." • "Switch zone to <i><zone name></i>."
Channel	To identify your current channel, say: • "What is my channel?" • "Current channel." • "Channel." To change to a new channel, say: • "Channel <i><channel name></i>." • "Change channel to <i><channel name></i>." • "Switch channel to <i><channel name></i>."
Home channel	To change to your home channel, say: • "Home channel." • "Change to home channel." • "Switch to home channel."
Volume	To identify the volume level of your SVX, say: • "What is my volume?" • "Current volume." • "Volume." To change the volume level of your SVX, say "Volume <i><volume level></i>". The available commands and their respective volume levels are as follows: • "<i><low></i> – 10%" • "<i><medium></i> – 50%" • "<i><high></i> – 100%" • "<i><1></i> to <i><10></i> – 10% to 100%"
Cancel last command	To cancel your previous command, say "Cancel."  NOTE: Cancel command works within a five-second window after the last command.
Profile	To change to a new profile, say: • "<i><profile name></i> profile." • "Change to <i><profile name></i>." • "Switch to <i><profile name></i> profile."
Scan	To start or stop scanning, say: • "Start scan." • "Stop scan." • "Start scanning."

Feature	Examples
	• “Stop scanning.”
Battery	To identify your battery level, say: • “What is my battery level?” • “Battery level.” • “Battery.”
Time	To identify current time, say: • “What is the time?” • “What time is it?” • “Current time.” • “Time check.” • “Time.”
Voice command help	To identify what commands you can give, say: • “Voice command help.” • “Command list.” • “Command help.” • “Show command list.” • “Voice command list.” • “What can I say?” • “What commands can I say?” • “Go to help.”
Event tagging	To tag an event, say: • “Tag event as <i><tag></i>.” • “Tag video as <i><tag></i>.” • “Tag last video as <i><tag></i>.” • “Tag recording as <i><tag></i>.” • “Tag last recording as <i><tag></i>.” To change the tag, say: • “Change tag to <i><tag></i>.” • “Change last tag to <i><tag></i>.” • “Update tag to <i><tag></i>.” • “Update last tag to <i><tag></i>.” To ask about the tag, say: • “What was my last tag?” • “What was my tag?” • “Check last tag.”

Feature	Examples
	• "Check tag."  NOTE: Tags can be configured in your agency's evidence management system.
Translation	To initiate translation, say: • "Translate to <i><specific language></i>." • "Start translation." To end translation, say: • "End translation." For more information, see Initiating Real-Time Translation on page 54.

ViQi Virtual Partner

ViQi Virtual Partner is a subscription-based feature.

ViQi Virtual Partner helps you to look up information such as license plate, driver's license, Vehicle ID Number (VIN), and location queries, and responds with a result to your query.

ViQi Virtual Partner requires connectivity to the Internet (via the connected radio).

Table 8: ViQi Virtual Partner Queries

The following table shows the queries supported by the ViQi Virtual Partner feature and their respective commands. Use the following commands followed by the supported query instructions to initiate ViQi Virtual Partner:

- "Look up..."
- "Check..."
- "Run a..."

Query	Examples
License plate	"Run a <i><state></i> license plate <i><alphanumeric string></i>." "Check a <i><state></i> license plate." "Look up <i><state></i> license plate <i><alphanumeric string></i>."
Driver's license	"Run a <i><state></i> driver's license <i><alphanumeric string></i>." "Check the state of <i><state></i> driver's license <i><alphanumeric string></i>." "Look up <i><state></i> driver's license <i><alphanumeric string></i>."
Vehicle Identification Number (VIN)	"Check Vehicle Identification Number <i><alphanumeric string></i>." "VIN check <i><alphanumeric string></i>." "Run a VIN."  NOTE: You can use variations such as <i><vehicle identification number></i> , <i><VIN></i> , and <i><vehicle number></i> .
Own location	"Where am I?" "Can I get my exact location?"

Query	Examples
	"Am I still at the <location>?"  NOTE: ViQi will ask for more information to complete the query.
Target location	"Where is <unit name>?" "Tell me where <unit name> is."  NOTE: ViQi will ask for more information to complete the query.

You are also able to receive and listen to LMR and Virtual Partner over broadband audio simultaneously. These audio mixing is configurable and must be programmed by a qualified technician. Check with your dealer or system administrator for more information.

3.8.1

Activating Voice Control

Prerequisites: Ensure that your SVX is turned on and connected to a radio supporting voice assistance (ViQi) feature.

Figure 19: ViQi/Programmable Button



Procedure:

1. Press and hold the assigned **ViQi** button.
"VC Ready" tone plays on the SVX speaker.
2. Speak voice command into the microphone.

3. Release the **ViQi** button.

You hear the voice control feedback based on your command.

4. Throughout your session, repeat [step 1](#) through [step 3](#) when responding to ViQi. Depending on your query, you can also say the following requests:

- To display a list of preferred voice commands in any supported languages, say “What can I say?”
- To play the available results, say “Play results”.
- To request for more details, say “More details”.
- To complete the Virtual Partner session, say “Complete”.

For more information, see [ViQi on page 49](#).

3.8.2

Initiating Real-Time Translation

When an APX NEXT or N70 radio is connected to the SVX, you can initiate real-time translation between English and other languages by operating voice control. For more information, see [Activating Voice Control on page 53](#).

The list of supported languages is as follows: Afrikaans, Arabic, Basque, Catalan, Czech, Danish, Dutch, French, Galician, German, Greek, Hebrew, Hindi, Indonesian, Italian, Japanese, Korean, Latvian, Malay, Mandarin, Norwegian, Polish, Portuguese, Romanian, Russian, Serbian, Slovak, Spanish, Swedish, Tagalog, Thai, Ukrainian, and Vietnamese.

Prerequisites:

- Via CPS or Radio Central, in the **Radio Wide** features, set **ViQi: Virtual Partner Mode** to **Broadband**.
- Via CPS or Radio Central, in the **Radio Wide** features, from the **ViQi: Virtual Partner Audio Priority** drop-down list, select how LMR RX audio should be managed while the **ViQi** button is held down.
 - If set to **ViQi Only**, LMR RX calls are muted.
 - If set to **ViQi Priority**, LMR RX calls are heard at a lower volume.**NOTE:** This setting can interfere with translation accuracy.
 - If set to **ViQi Equal**, LMR RX calls are heard at a normal volume.**NOTE:** This setting interferes with translation accuracy.
 - If set to **LMR Priority**, the ViQi audio level is attenuated below the LMR RX audio level.**NOTE:** This setting interferes with translation accuracy and can interrupt translation.
- Via CPS or Radio Central, in the **Radio Wide** features, in the **ViQi: Virtual Partner Inactivity Timer (sec)** field, enter the number of seconds after which the translation session ends due to inactivity. Recommended time is from 90 to 120 seconds.

Once the timer expires, you can start a new translation session by using a voice command.
- Ensure that the SVX and a radio are connected to LTE or WiFi.
- If you use an earpiece when initiating translation, audio automatically reroutes to the speaker.
- Incoming radio calls do not interrupt your translation session, but transmitting the call automatically ends the session.
- Translation phrases should not be longer than one minute. If you go over this time limit, the SVX emits a bonk sound and you must press and hold the **ViQi** button to restart translation.

- Keep each turn brief and direct.
- Try to capture one or two sentences, and keep each recording under 15 seconds.
- If you experience issues, move to a quieter location.

Procedure:

1. To initiate real-time translation, perform one of the following actions:

Option	Actions
Initiating manual translation	a. Press and hold the assigned ViQi button. "VC Ready" tone plays on the SVX speaker. b. Say "Translate to <i><specific language></i>" and release the ViQi button. ViQi confirms in a requested language. When you speak English, ViQi now translates the phrases to a target language and vice versa. First translation command can take up to eight seconds to translate.
Initiating automatic translation	a. Press and hold the assigned ViQi button. "VC Ready" tone plays on the SVX speaker. b. Say "Start translation" and release the ViQi button. To identify the language, ViQi asks to start speaking. For higher accuracy in language identification, let the person speak for around five seconds and speak only one language at a time. NOTE: It can take up to eight seconds for ViQi to identify the language. When ViQi identifies the language, it asks for confirmation. c. If the detected language is correct, say "Yes" in English. To retry detecting the language, say "No" in English.



NOTE: During the translation session, radio control commands are not understood.

2. Throughout the session, press and hold the **ViQi** button to talk, and release the button when you stop talking.
3. To end translation, perform one of the following actions:
 - Say "End translation."
 - On the ViQi screen on the radio front display, press **Exit**.
 - On the radio, press and hold the **Home** button.
 - Press the **PTT** button.

- Press the **Emergency** button.



NOTE: If the SVX is idle for the amount of time set in the **ViQi: Virtual Partner Inactivity Timer (sec)** field, ViQi automatically ends the translation session.

3.9

Privacy Mode

The privacy mode setting allows you to temporarily disable background recording by suspending the pre-event, Record-After-The-Fact (RATF), and Peer-Assisted Recording (PAR) features. In privacy mode, remote recording through WiFi and initiating an external recording such as based on triggers, for example, radio emergency, are blocked.

You can enter privacy mode by performing the gesture configured in your agency's evidence management system. For more information, see the relevant documentation listed in [Related Documents on page 20](#).

When the SVX enters privacy mode, the device vibrates and, depending on the configuration, the voice prompt or tone notification is announced. The top record LED is continuously fading white with a gap until the device exits privacy mode.

You can exit privacy mode if:

- You perform the configured gesture.
- Privacy mode times out.

You can configure the duration of privacy mode in your agency's evidence management system.

- You initiate recording.

After exiting privacy mode, the device vibrates and, depending on the configuration, the voice prompt or tone notification is played. The top record LED turns off.

Additionally, you can configure the alert and the frequency reminding you of privacy mode in your agency's evidence management system. When configured, the device will vibrate and the tone notification will be played.

You can activate both privacy mode and continuous mute at the same time but privacy mode takes higher priority. For more information on continuous mute, see [Audio Mute on page 42](#).

3.10

Safety Mode

Safety mode temporarily suspends wireless recording triggers, preventing the camera from automatically starting a recording, or triggering other devices to start recording, via Peer-Assisted Recording (PAR), Bluetooth beacons, or holster sensors.

Safety mode provides officers with a manual override to prevent their cameras and other officers' cameras from activating in sensitive areas such as locker rooms, bathrooms, or courthouses. Emergency radio triggers remain functional to ensure officer safety.

You can enter safety mode by performing the gesture configured in your agency's evidence management system. For more information, see the relevant documentation listed in [Related Documents on page 20](#).

When the SVX enters safety mode, the device vibrates, the top record LED blinks white two times, and, depending on the configuration, the voice prompt or tone notification is announced. The top record LED is continuously fading white with a gap until the device exits safety mode.

You can exit safety mode by performing the configured gesture.

Safety mode automatically resets after a power cycle or docking.

After exiting safety mode, the device vibrates and, depending on the configuration, the voice prompt or tone notification is played. The top record LED turns off.

 **NOTE:** Initiating recording does not turn off safety mode. If you initiate recording while the device is in safety mode, the top record LED turns solid red to indicate active recording. When you stop recording, the top record LED is continuously fading white with a gap to indicate safety mode.

3.11

Privacy Mode and Safety Mode Comparison

Privacy mode and safety mode cannot be enabled at the same time.

If the device is in safety mode, you can enter privacy mode by performing a configured gesture for privacy mode. Entering privacy mode causes the SVX to automatically exit safety mode.

 **NOTE:** You cannot enter privacy mode if the device is recording in safety mode.

If the device is in privacy mode and you attempt to enter safety mode by performing a configured gesture for safety mode, the device gives a bad bonk tone. You must first exit privacy mode and then enter safety mode.

Table 9: Privacy Mode and Safety Mode Comparison

Action	Privacy Mode	Safety Mode
Peer-Assisted Recording (PAR) received	Ignored	Ignored
PAR sent	Disabled	Disabled
Holster sensor trigger	Ignored	Ignored
Radio emergency trigger	Ignored	The device starts recording.
Initiating streaming via aware remote	Ignored	The device starts streaming.
Initiating a recording via aware remote	Ignored	The device starts recording.
Initiating or stopping a recording in SmartControl	Ignored	The device starts or stops recording.
Pre-event	Suspended	The device is recording.
Record-After-The-Fact (RATF)	Suspended	The device is recording.
Initiating a recording by pressing a record button	The device exits privacy mode and then starts recording.	The device is recording in safety mode.
Pressing a programmable button	The device enters or exits privacy mode.	The device enters or exits safety mode.
Docking in a Smart Dock	The device exits privacy mode.	The device exits safety mode.
Connected to the SmartControl PC application	The device exits privacy mode.	The device exits safety mode.
Power cycle	The device exits privacy mode.	The device exits safety mode.

3.12

Peer-Assisted Recording

SVX can be used with Peer-Assisted Recording (PAR). In this configuration, when an SVX starts recording, any nearby PAR-enabled body cameras or in-car video systems also start recording.



NOTE: The agency evidence management system administrator must enable PAR for the SVX. PAR broadcast duration and proximity can also be configured.

PAR allows devices to send or receive notifications when they are within range of each other, based on your agency configuration.

If the SVX is configured to send notifications and starts a recorded event, it transmits a notification through Bluetooth to nearby peer devices configured to receive them. Any enabled body camera or in-car video system, which receives the notification, automatically starts its own recorded event.

If the SVX is configured to receive notifications and detects an in-range peer device starting a recorded event, the SVX automatically starts its own recorded event. PAR broadcast can also be initiated by an M500 in-car system when siren or emergency lights are turned on, to trigger SVX in near proximity to start recording.

While the SVX triggers an event on a peer device, it cannot stop the recording on a peer device. Each device must stop its own recorded event.

Chapter 4

Mounting Options

The SVX can be mounted to your uniform using the following types of accessories:

- Shirt magnetic mount
- Locking Molle mount
- Shirt clip
- Heavy jacket clip
- Heavy jacket magnetic mount
- Tek-Lok mount
- Tether hook and coiled lanyard



WARNING: Potential Medical Device Interference.

The Shirt Magnetic Mount and the Heavy Jacket Magnetic Mount incorporate very strong magnets. If you are using a personal medical device, such as a pacemaker or other programmable medical devices, talk to your health care provider, or consult the manufacturer of your device before using these mounts. Determine if your personal medical device can be used in close proximity to magnets. If in doubt, do not use the Shirt Magnetic Mount or the Heavy Jacket Magnetic Mount.

Talk to your health care provider if you are experiencing any symptoms or have questions regarding magnets.

Also, be aware that magnets can damage other products, including cell phones, computers, hard drives, and other electronic devices, as well as credit cards and magnetic media. Keep these mounts away from any devices that can be affected by a magnetic field.


You should wear the SVX on your clothing and vest where it is most comfortable, convenient, and secure. Ensure that the lens is not obstructed and that it is aimed at the horizon.

4.1

Mounting the Shirt Magnetic Mount

The shirt magnetic mount is made to fit over the buttons or zipper in the center of your chest. You can also wear it over your pocket or on the protective vest or jacket. The magnets are strong with 65 pounds of pressure when snapped together.

Figure 20: Shirt Magnetic Mount

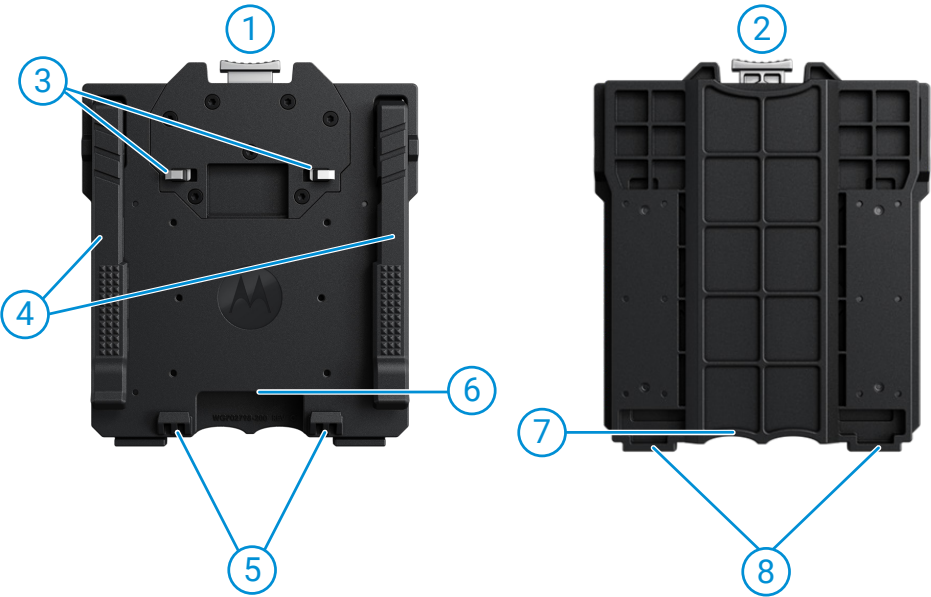

Callout	Description
1	Back
2	Front
3	Brackets
4	Levers on both sides
5	Anchor tabs
6	Over-shirt bracket
7	Under-shirt bracket
8	Device slots

Prerequisites: Install the mount on the vest before you connect the device to it.

Procedure:

1. To separate the under-shirt bracket from the over-shirt bracket, perform the following actions:
 - a. Hold the under-shirt bracket in one hand with the thumb on top and the two middle fingers on the bottom.
 - b. Raise the levers on both sides.
 - c. While holding the levers up, pull the brackets apart.
2. Match the anchor tabs and device slots on the over-shirt bracket with the back of the device while keeping the magnets apart.

You can attach the device before or after the mount is in place.

3. Place the under-shirt bracket under your shirt where you want to wear your device.
4. Line up the anchor slots and place the over-shirt against the under-shirt bracket, with your shirt between them.

 **CAUTION:** The magnets snap together forcefully.

Result: The magnets on both brackets line up automatically, securing the mount to your shirt.

 **CAUTION: WATCH YOUR FINGERS!** Because of the strength of the magnets, separating the brackets requires some effort. Realignment of the brackets causes them to snap together forcefully. Keep your hand flat and keep your fingers away from the snap-to area.

4.2

Mounting the Locking Molle Mount

The locking Molle mount, when locked, is secure and cannot detach from the vest unless you slide the locking pins in a downward motion.

Figure 21: Locking Molle Mount Front Facing



Figure 22: Locking Molle Mount Back Facing



Figure 23: Locking Molle Mount Open




Prerequisites: Install the mount on the vest before you connect the device to the mount.

Procedure:

1. Determine which two sewn seams on the Molle vest you want to mount the device to.
2. On the back of the mount, find the tabs on the side of the spring-loaded pin Molle-Lok™ attachments.
3. On each Molle-Lok attachment, grab and squeeze the tabs at the bottom of the attachment until the spring-loaded pin latch releases.
4. Slide the two Molle-Lok attachments connected to the mount over and through the sewn seams on the vest.
5. Align the Molle-Lok attachments and connect them to the spring-loaded pin.
6. Align the device with the two tabs on the bottom of the mount and snap the device in to the mount.
7. To remove the device, press the silver bar and pull straight up on the device and battery.
8. Remove the device and battery.

4.3
Mounting the Shirt Clip

Figure 24: Shirt Clip Overview

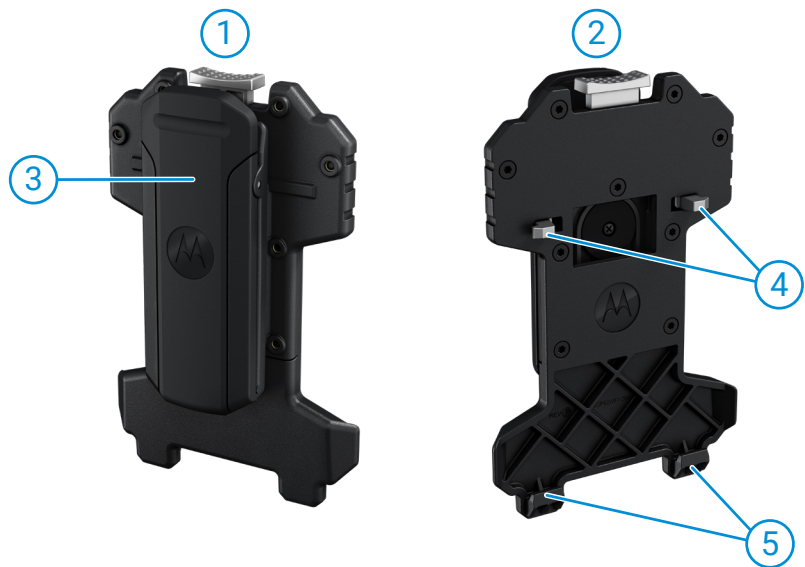

Callout	Description
1	Front
2	Back
3	Clip
4	Brackets
5	Device anchor tabs

Prerequisites: Install the mount on the vest before you connect the device to it.

Procedure:


1. To attach the device to the front of the mount before clipping on the shirt, perform the following actions.
 - a. Set the device in the anchor tabs.
 - b. Press it into the brackets at the top of the mount.
2. Rotate the clip so that the device is in the vertical position.
3. Press the clip to open it and clip it to your shirt.
4. Press the silver bar on top to release the device.

4.4

Mounting the Heavy Jacket Clip

The heavy jacket clip is one piece with a clip on the back that rotates so that the device remains upright in a vertical position. The jacket clip is the same as the shirt clip, just a heavier version, with a stronger, larger clip, that clips on jackets, vests, coats, and over zippers.

Figure 25: Heavy Jacket Clip

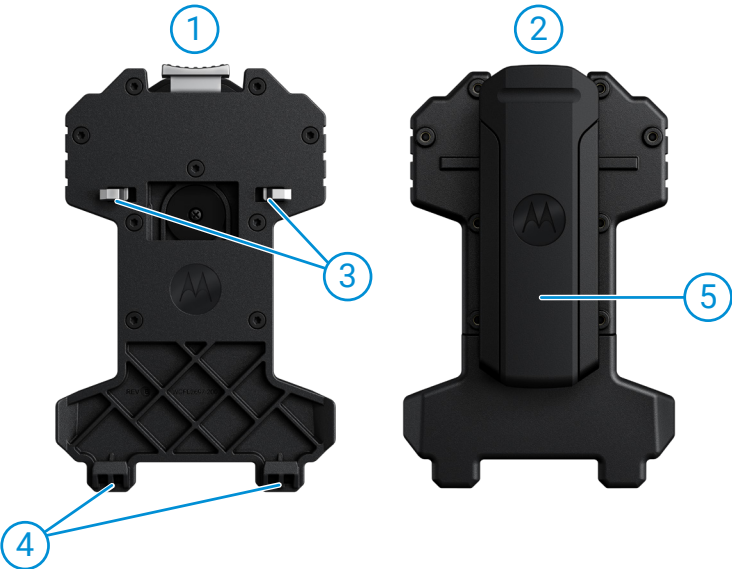

Callout	Description
1	Back
2	Front
3	Brackets
4	Device anchor tabs
5	Clip on back of mount

Prerequisites: Install the mount on the vest before you connect the device to it.

Procedure:

1. Attach the device to the front of the mount before clipping on the jacket.
2. Set the device in the anchor tabs.
3. Press the device into the brackets at the top of the mount.
4. Rotate the clip so that the device is in the vertical position.
5. Press the clip to open it.
6. Clip the mount to your jacket.
7. Press the silver bar on top to release the device.

4.5

Mounting the Heavy Jacket Magnetic Mount

The heavy jacket magnetic mount provides an option to wear the device on heavier materials, such as a jacket or other outerwear.

Figure 26: Heavy Jacket Magnetic Mount Front Facing



Figure 27: Heavy Jacket Magnetic Mount Back Facing



Figure 28: Heavy Jacket Magnetic Mount Open



Prerequisites: Install the mount on the vest before you connect the device to it.

Procedure:

1. Perform the following actions to separate the under-shirt bracket from the over-shirt bracket:
 - a. Hold the under-shirt bracket in one hand with the thumb on top and the two middle fingers on the bottom.
 - b. Raise the levers on both sides.
 - c. While holding the levers up, pull the brackets apart.
2. Match the anchor tabs and device slots on the over-shirt bracket with the back of the device while keeping the magnets apart.



NOTE: You can attach the device before or after the mount is in place.

3. Place the under-shirt bracket under your shirt where you want to wear your device.
4. Line up the anchor slots and place the over-shirt against the under-shirt bracket, with your shirt between them.

The anchor slots snap together forcefully.



CAUTION: WATCH YOUR FINGERS! Because of the strength of the magnets, separating the brackets requires some effort. Realigning the brackets causes them to snap together forcefully. Keep your hand flat and keep your fingers away from the snap-to area.

4.6

Mounting the Tek-Lok Mount

The Tek-Lok mount allows you to mount the SVX to a belt or strap on your uniform.

Prerequisites: Install the mount before you connect the device to the mount.

Figure 29: Tek-Lok Mount



Procedure:

1. Determine the belt or strap you want to mount the device to.



TIP: The Tek-Lok mount can be adjusted to fit the width of your belt or strap.

2. On the top of the Tek-Lok mount, throw over the secondary lock tab.
3. Press both release tabs toward each other and open the Tek-Lok mount.
4. Place the Tek-Lok mount over the top of your belt.
5. Press and squeeze the Tek-Lok mount closed.



NOTE: The Tek-Lok mount clicks into place when it is secure.

6. Throw over the secondary lock tab.
7. Align the device with the two tabs on the bottom of the mount and snap the device in to the mount.

Postrequisites: To remove the device, press the silver bar and pull straight up on the device and battery. Remove the device and battery.

4.7

Mounting the Tether Hook

The tether hook can be seamlessly integrated with other mounting solutions, offering a secondary layer of securement. Paired with a coiled lanyard, it enhances the law enforcement gear by safeguarding the SVX against accidental drops, loss or theft.

Figure 30: Tether Hook



Procedure:

1. Align the tether hook to the battery rails and slide up.
2. Attach the loop end of the coiled lanyard securely to the tether hook mounted on the back of the SVX.
3. Clip the opposite end of the lanyard to the anchor point.
For example, belt loop, holster or shoulder harness.
4. Ensure that the coiled lanyard stretches comfortably and does not dangle excessively.

Postrequisites: To remove the tether hook, lift the lever at the bottom and slide it down from the battery rails.

4.8

Attaching the Earpiece and Microphone

There are two types of earpieces:

- Receive-only earpiece
- Two-wire surveillance style earpiece with the microphone

Figure 31: Earpiece and the Microphone



Procedure:

1. Perform one of the following actions:


Option	Actions
Attaching the receive-only earpiece to the SVX	a. Lift up the dust cover and rotate it 90° to the left. b. Insert the audio jack connector into the audio jack of the SVX.
Attaching the earpiece and microphone	a. Insert the audio jack connector into the audio jack of the microphone. b. Attach the microphone clip to the collar or lapel.

2. Insert the rubber eartip into the ear until snug to minimize interference and optimize earpiece performance.
3. To provide a more secure fit, loop the curved part of the translucent tube over the ear so that the coiled part of the tube hangs behind the ear.

4.9

Recommended Wearing Positions

Figure 32: SVX Recommended Wearing Positions

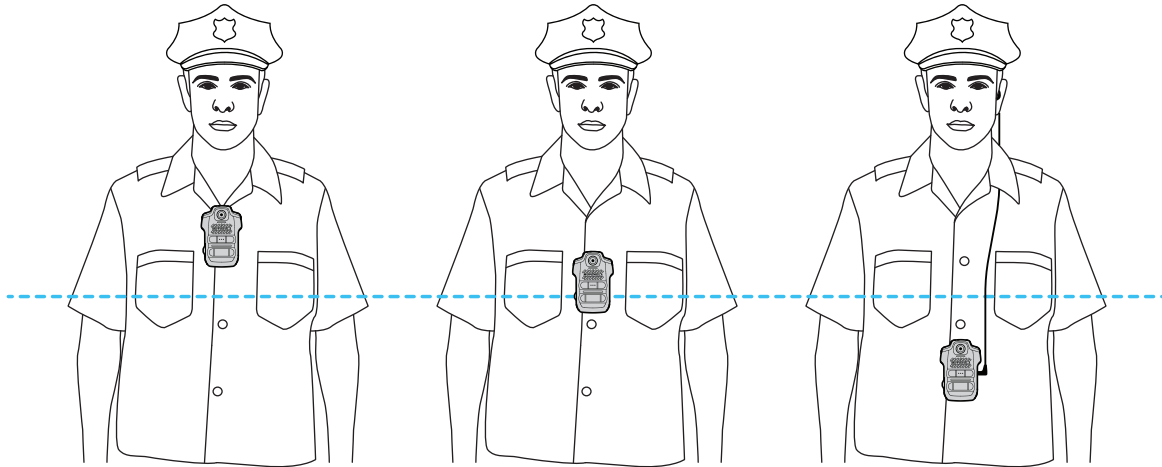

NOTE: When the SVX is worn below the line, the earpiece accessory is required.

Chapter 5

Maintenance and Upgrade

Proper usage and care ensure efficient operation and long-life of the product.

5.1

Cleaning Your SVX

The following procedure describes the recommended cleaning agents and the methods to be used when cleaning the external surfaces of your SVX. External surfaces include the housing assembly and battery case. These surfaces should be cleaned whenever a periodic visual inspection reveals the presence of smudges, grease, and/or grime.



CAUTION: The only recommended agent for cleaning is a 0.5% solution of a mild dishwashing detergent in water. Other cleaning solutions may permanently damage the SVX housing and voids the warranty. Do not soak the SVX in the detergent water.

Procedure:

1. Mix one teaspoon of mild dishwashing detergent to one gallon of water (0.5% solution) to clean the external surfaces of the SVX with soft lint-free cloth.
2. Fully rinse the SVX with fresh water and dry thoroughly with soft lint-free cloth.

If the SVX battery contact area has been exposed to water, dry and clean the battery contacts before attaching a battery to the SVX.



NOTE: Do not over-press the battery contact.

3. Hold the SVX with the front surface down, and lightly shake it a few times, to clear out water that may be underneath the speaker grill openings or microphone ports.

5.2

Cleaning the Recommended USB-C Connector (Receptacle)



IMPORTANT: Usage of compressed air is not encouraged during the cleaning process.

Procedure:

1. Clean the external surface of the USB-C port with a clean cloth.
2. Check the USB-C port for any foreign material.



TIP: You can use a magnifying glass.

3. Gently remove any particles, dust or dirt from the USB-C port by using a thin cleaning brush.
4. Tap the device gently on a flat surface to clear any particles or dust from the USB-C port.
5. Check the USB-C port again to ensure that foreign materials are removed.
6. By applying isopropyl alcohol on the brush, clean the USB-C port.

You should remove any dust or debris from the cleaning brush with a clean cloth and continue to clean the USB-C port until all foreign materials are removed.

7. Leave the device to dry for 60 minutes before plugging in the USB-C connector.

5.3

Cleaning the Magnetic Charging Contacts

Procedure:

1. Clean the external surface of the magnetic charging contacts with a clean cloth in the direction away from the USB-C port.
2. Check the magnetic charging contacts for any foreign material or metal dust.
3. Gently remove any particles, dust or dirt from the magnetic charging contacts by using a thin cleaning brush.
4. Ensure that no foreign particles are in the charging contacts.
5. By applying isopropyl alcohol on the brush, clean the charging contacts.
6. Leave the device to dry for 60 seconds before use.
7. For any metal dust left, use the compressed air to blow it away.



CAUTION: Do **not** blow on the USB-C port.

5.4

Cleaning the Recommended USB-C Connector (Plug)

Procedure:

1. Disconnect the power supply from the power source.
 2. Unplug the USB-C plug from a Smart Dock.
 3. Clean the external surface of the USB-C port with a clean cloth.
 4. Check the USB-C port for any foreign material.
-  **TIP:** You can use a magnifying glass.
5. Clear any particles and dust from the USB-C port by using a lens blower.
 6. Check the USB-C port again to ensure that foreign materials are removed.

5.5

Configuration and Firmware Upgrades

When the SVX is docked in a Smart Dock, the following occurs:

- The SVX communicates with your agency's evidence management system that it has recorded events ready to upload.
The Smart Dock can upload from ten devices simultaneously.
- The SVX marks any imported recorded events as confirmed and set to unprotected.
This makes the storage space available to be reused.
- The time and date of the SVX synchronizes with your agency's evidence management system.

- The SVX updates the configuration.
- The SVX checks every 30 minutes for a firmware upgrade. If new firmware is found, it is downloaded and staged. After staging, the upgrade is immediately applied to the SVX.



WARNING: The SVX may reboot during the upgrade process. Do not remove the SVX from the dock while new firmware is applied. Removing the SVX from the dock during the upgrade can cause the SVX to malfunction.

The SVX cannot perform any other functions while upgrading its firmware, including uploading a video.

Result:

When the upgrade is finished, depending on your alert notification selections, the SVX sounds a voice or tone prompt notification. You can now safely undock the SVX.