

SVX Smart Dock PMPN5021_ Safety Leaflet



MN010850A01-AB



Scan the QR code or go to <http://motr.la/MN011006A01>

MOTOROLA, MOTO, MOTOROLA SOLUTIONS and the Stylized M logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC and are used under license. All other trademarks are the property of their respective owners.

© 2025 Motorola Solutions, Inc. All rights reserved.

EU Contact:

Motorola Solutions,
Czerwone Maki 82, 30-392 Krakow, Poland


UK Contact:

Motorola Solutions UK Ltd.
Nova South, 160 Victoria Street,
London, SW1E 5LB,
United Kingdom

Printed In



Figure 1: SVX Smart Dock

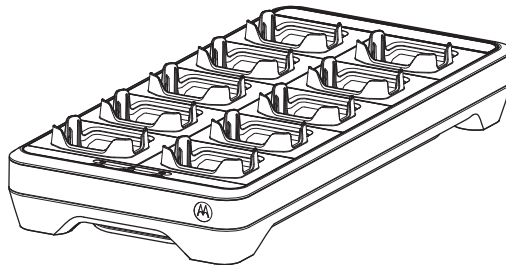

en-US

IMPORTANT SAFETY INSTRUCTIONS

This document contains important safety and operating instructions. Please read these instructions carefully and save them for future reference.



1. To reduce risk of damage to the power supply electric plugs and cords, pull the plug rather than the cord when disconnecting from the AC outlet or the charger.
 2. An extension cord should not be used unless absolutely necessary. Use of an improper extension cord could result in risk of fire and electric shock. If an extension cord must be used, make sure that the cord size is 18 AWG for lengths of up to 6.5 feet (2.0 m), and 16 AWG for lengths up to 9.8 feet (3.0 m).
 3. To reduce risk of fire, electric shock, or injury, do not operate the charger if it has been broken or damaged in any way. Take it to a qualified Motorola Solutions service representative.
 4. Do not disassemble the charger. It is not repairable and replacement parts are not available. Disassembly of the charger may result in risk of electric shock or fire.
 5. To reduce risk of electric shock, unplug the charger power supply from the AC outlet before attempting any maintenance or cleaning.
 6. To reduce risk of injury, charge only rechargeable Motorola Solutions Authorized devices listed in the Online User Guide, MN011006A01. Other devices may explode, causing personal injury and damage.
- Use of accessories not recommended by Motorola Solutions may result in risk of fire, electric shock, or injury.

OPERATIONAL SAFETY GUIDELINES

- This equipment is not suitable for outdoor use. Use only in dry locations and conditions.
- Maximum ambient temperature should be kept below 25 °C (77 °F) to ensure battery charging is enabled. In any case, the maximum ambient temperature around the charger must not exceed 40 °C (104 °F).
- Connect the charger only to an appropriate power supply with an appropriate power cord as listed in the Online User Guide, MN011006A01.
- The AC outlet to which the power supply is connected should be close and easily accessible.
- Make sure the power supply cord to the charger is located where it will not be stepped on, tripped over, or subjected to water, damage, or stress.
- Connect the power cord only to an appropriately fused and wired AC outlet with the correct voltage, as specified on the product.
- Disconnect from line voltage by removing the power cord from the AC outlet.

NOTICE TO USERS (FCC)

This device complies with Part 15 of the FCC rules. Operation is subject to the following:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

CLASS B DIGITAL DEVICE

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference

will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

ADDITIONAL INFORMATION

The complete Online User Guide is available at <https://motr.la/docs> through publication part number:

- MN011006A01 (Online User Guide)

fr-CA

INSTRUCTIONS IMPORTANTES SUR LA SÉCURITÉ

Ce document contient des instructions d'utilisation et de sécurité importantes. Veuillez lire attentivement ces instructions et les conserver pour vous y reporter.



1. Pour réduire le risque d'endommagement des fiches électriques et des cordons d'alimentation lorsque vous débranchez le bloc d'alimentation de la prise c.a. ou du chargeur, ne tirez pas sur les cordons, mais plutôt sur les fiches.
 2. Une rallonge ne doit pas être utilisée sauf en cas d'absolue nécessité. L'utilisation d'une rallonge inappropriée peut entraîner un risque d'incendie et de décharge électrique. Si une rallonge doit être utilisée, assurez-vous que le cordon est de calibre 18 AWG lorsque sa longueur est de 2,0 m (6,5 pieds) ou moins, et de calibre 16 AWG lorsque sa longueur est de 3,0 m (9,8 pieds) ou moins.
 3. Pour réduire les risques d'incendie, de décharge électrique ou de blessure, n'utilisez pas le chargeur s'il est brisé ou endommagé de quelque manière que ce soit. Apportez-le à un représentant de service qualifié de Motorola Solutions.
 4. Ne démontez pas le chargeur. Il ne peut pas être réparé et aucune pièce de rechange n'est disponible. Le démontage du chargeur peut entraîner un risque de décharge électrique ou d'incendie.
 5. Pour réduire les risques de décharge électrique, débranchez l'alimentation du chargeur de la prise c.a. avant de procéder à un entretien ou à un nettoyage.
 6. Pour réduire les risques de blessure, ne chargez que les appareils rechargeables agréés Motorola Solutions indiqués dans le Guide d'utilisation en ligne MN011006A01. D'autres appareils peuvent exploser, ce qui peut causer des blessures et des dommages.
- L'utilisation d'accessoires non recommandés par Motorola Solutions pourrait entraîner des risques d'incendie, de décharge électrique ou de blessure.

DIRECTIVES D'UTILISATION SÉCURITAIRE

- Cet appareil n'est pas adapté à une utilisation à l'extérieur. Ne l'utilisez que dans des endroits/conditions secs.
- La température ambiante maximale doit être maintenue en dessous de 25 °C (77 °F) pour s'assurer que la recharge de la batterie est activée. Dans tous les cas, la température ambiante maximale autour du chargeur ne doit pas dépasser 40 °C (104 °F).
- Branchez le chargeur uniquement à un bloc d'alimentation approprié avec un câble approprié, conformément au Guide d'utilisation en ligne MN011006A01.
- La prise de courant à laquelle le bloc d'alimentation est branché doit se trouver à proximité et être facilement accessible.
- Assurez-vous que le cordon du bloc d'alimentation est placé à un endroit où il ne sera pas écrasé ou endommagé, ne générera pas le passage, ne sera pas trop tendu et ne sera pas exposé à une source d'humidité.
- Connectez le cordon d'alimentation uniquement à une prise secteur correctement câblée, protégée par un fusible et dont la tension est correcte, comme indiqué sur le produit.
- Débranchez le chargeur de la tension de secteur en retirant le cordon d'alimentation de la prise de courant.

AVIS AUX UTILISATEURS (FCC)

Cet appareil est conforme aux dispositions de la Partie 15 des règlements de la FCC. Son utilisation est assujettie aux deux conditions suivantes :

1. Cet appareil ne doit pas causer d'interférence nuisible; et
2. Cet appareil doit accepter toute interférence reçue, y compris les interférences pouvant entraîner un fonctionnement indésirable.

APPAREIL NUMÉRIQUE DE CLASSE B

REMARQUE : Cet équipement a fait l'objet de tests et a été déclaré conforme aux limites établies pour un appareil numérique de classe B, conformément à la section 15 des règlements de la FCC. Ces limites sont fixées afin d'offrir une protection suffisante contre

des interférences nuisibles dans une installation résidentielle. Cet équipement génère, utilise et peut émettre de l'énergie de radiofréquence et, s'il n'est pas installé ou utilisé conformément aux instructions, il peut provoquer des interférences nuisibles aux communications radio. Cependant, il est impossible de garantir qu'il n'y aura aucune interférence dans une installation particulière. Si cet équipement cause une interférence nuisible à la réception de la radio ou de la télévision, ce qu'on peut déterminer en éteignant et en allumant l'équipement, l'utilisateur est encouragé à remédier à la situation en prenant une ou plusieurs des mesures suivantes :

- Réorienter ou déplacer l'antenne réceptrice.
- Augmenter la distance entre l'équipement et le récepteur.
- Brancher l'appareil dans une autre prise sur un circuit différent de celui du récepteur.
- Consulter un revendeur ou un technicien radio/télévision chevronné pour obtenir de l'aide.

RENSEIGNEMENTS COMPLÉMENTAIRES

Le Guide d'utilisation en ligne complet est disponible à l'adresse <https://motr.la/docs> sous le numéro de publication :

- MN011006A01 (Guide d'utilisation en ligne)