## EECS 388 Lab #3

# Universal Asynchronous Receiver/Transmitter (UART)


In this lab, we first take a deeper look at our hardware platform (HiFive1), including its CPU architecture, memory map, external gpio pin map, and other relevant information. Then, you will implement the ser\_read() function, which reads data from the terminal via the UART connection.

#### Part 0: Setup the project

Download the project skeleton and add the folder into the **VSCode** workspace.

Sign in to the Canvas account and go to the EEC 388 Embedded Systems section. Inside the "Files" section, go to the "Lab Materials" -> "Source Codes" folder. Click on the **lab03.tar.gz** file to download the source code for lab 3. Extract the file inside a folder of your PC. Add the folder into **VSCode** workspace.

### Part 1: Understanding the Hardware Platform

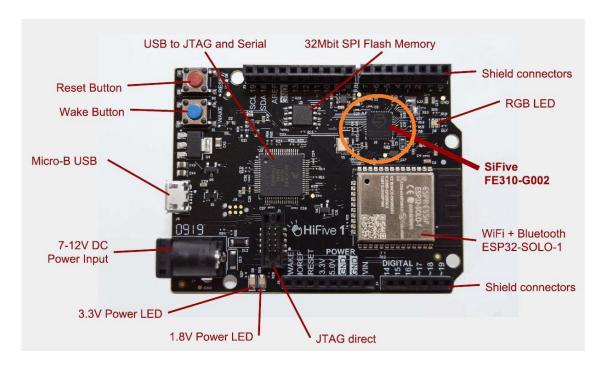

To complete this project, you need to understand a bit more about the hardware. Let's first open the "SiFive HiFive1 Rev B Getting Started Guide' (I2-uart/docs/hifive1b-getting-started-guide\_v1.1.pdf). This document includes lots of board specific information.

Go to Section 3.3 "USB to JTAG and Serial Ports" and find Figure 2: J-Link OB connectivity. As you can see in the figure, the platform uses a specialized chip (Segger J-Link OB) to provide two serial connections via USB. For this project, we will only use UART0, which is connected to the main CPU (SiFive FE310-G002 CPU) of the platform.

To use the UART0, you need to program the CPU. For that, you need to read the datasheet of the CPU (docs/FE310-G002.pdf). Open the CPU datasheet and find Figure 1, shown below (page 11), which shows the top-level block diagram of the CPU.

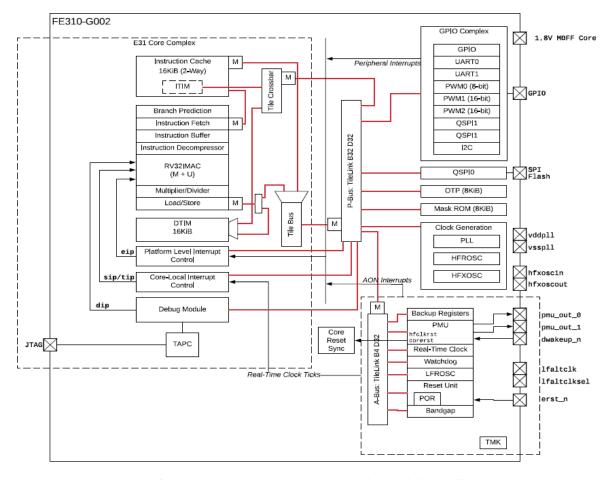


Figure 1: FE310-G002 top-level block diagram.

The block diagram shows what hardware blocks are integrated in the CPU along with other useful information such as data ram size (16KB DTIM), which is the maximum amount of memory you can use within your program. (This sounds very small, but don't worry as it is certainly big enough to complete your assignment). Note that there are two UART blocks (UART0 and UART1), of which we will use UART0 for this lab.

To program the UART0 block, you first need to know where the hardware block is mapped in the CPU's address space. For this, let's go to Chapter 4 and find Table 4, shown below.

Base	Тор	Attr.	Description	Notes
0x0000_0000	0x0000_0FFF	RWX A	Debug	Debug Address Space
0x0000_1000	0x0000_1FFF	R XC	Mode Select	
0x0000_2000	0x0000_2FFF		Reserved	]
0x0000_3000	0x0000_3FFF	RWX A	Error Device	
0x0000_4000	0x0000_FFFF		Reserved	On-Chip Non Volatile Mem-
0x0001_0000	0x0001_1FFF	R XC	Mask ROM (8 KiB)	ory
0x0001_2000	0x0001_FFFF		Reserved	
0x0002_0000	0x0002_1FFF	R XC	OTP Memory Region	]
0x0002_2000	0x001F_FFFF		Reserved	
0x0200_0000	0x0200_FFFF	RW A	CLINT	
0x0201_0000	0x07FF_FFFF		Reserved	
0x0800_0000	0x0800_1FFF	RWX A	E31 ITIM (8 KiB)	
0x0800_2000	0x0BFF_FFFF		Reserved	
0x0C00_0000	0x0FFF_FFFF	RW A	PLIC	
0x1000_0000	0x1000_0FFF	RW A	AON	
0x1000_1000	0x1000_7FFF		Reserved	]
0x1000_8000	0x1000_8FFF	RW A	PRCI	
0x1000_9000	0x1000_FFFF		Reserved	1
0x1001_0000	0x1001_0FFF	RW A	OTP Control	
0x1001_1000	0x1001_1FFF		Reserved	
0v1001 2000	0v1001 2EEE	DI./ A	GPIO	On Chin Porinhorals
0x1001_3000	0x1001_3FFF	RW A	UART 0	On-Chip Peripherals
0X1001_4000	0X1001_4FFF	rw A	QSI TU	
0x1001_5000	0x1001_5FFF	RW A	PWM 0	
0x1001_6000	0x1001_6FFF	RW A	I2C 0	
0x1001_7000	0x1002_2FFF		Reserved	
0x1002_3000	0x1002_3FFF	RW A	UART 1	
0x1002_4000	0x1002_4FFF	RW A	SPI 1	
0x1002_5000	0x1002_5FFF	RW A	PWM 1	
0x1002_6000	0x1003_3FFF		Reserved	
0x1003_4000	0x1003_4FFF	RW A	SPI 2	
0x1003_5000	0x1003_5FFF	RW A	PWM 2	
0x1003_6000	0x1FFF_FFFF		Reserved	
0x2000_0000	0x3FFF_FFFF	R XC	QSPI 0 Flash	Off-Chip Non-Volatile Mem-
			(512 MiB)	Ory
0x4000_0000	0x7FFF_FFFF		Reserved	,
0x8000_0000	0x8000_3FFF	RWX A	E31 DTIM (16 KiB)	On Object of the Manager
			Reserved	On-Chip Volatile Memory

**Table 4:** FE310-G002 Memory Map. Memory Attributes: **R** - Read, **W** - Write, **X** - Execute, **C** - Cacheable, **A** - Atomics

This table shows memory mapping information of the hardware blocks of the CPU. As you can see above, the UART0 block is mapped between 0x10013000 - 0x10013FFF (4KB space).

Next, we need to know how to actually program the UART hardware block, which is described in Chapter 18. Note that each UART block has 8 entry TX and RX FIFO queues to temporarily hold data to be sent and received. The following table (Table 55) shows the control registers that you need to know to interact with a UART hardware block.

Offset	Name	Description	
0×00	txdata	Transmit data register	
0x04	rxdata	Receive data register	
0x08	txctrl	Transmit control register	
0×0C	rxctrl	Receive control register	
0×10	ie	UART interrupt enable	
0×14	ip	UART interrupt pending	
0x18	di∨	Baud rate divisor	

Table 55: Register offsets within UART memory map

The rest of the chapter describes what these control registers are about and how they can be read/written in order to communicate between the UART block hardware and your software code. You will need to refer to this chapter to understand the code we provided and to complete the assignment.

## Part 2: UART read/write functions

#### Task 2.1. Review the updated EECS388 library

We already provided the UART initialization and transmit related code as part of the EECS388 library (src/eecs388\_lib.[ch]). So, let's first look at the provided code to better understand how to program the UART block.

The code below shows the implementation of ser\_setup(), which initializes the UART block. What it does is simply set the bit 0 of the txctrl and rxctrl register values as 1.

```
void ser_setup()
{
   /* initialize UARTO TX/RX */
   *(volatile uint32_t *)(UARTO_CTRL_ADDR + UART_TXCTRL) |= 0x1;
   *(volatile uint32_t *)(UARTO_CTRL_ADDR + UART_RXCTRL) |= 0x1;
}
```

If you look at Section 18.6, writing one to bit 0 of the txctrl register enables the transmit capability of the UART block. Likewise, in Section 18.7, you can find that receive capability can be enabled by writing one to bit 0 of the rxctrl register. Thus, the ser\_setup() function enables both the transmit and receive capabilities of the UART block.

```
void ser_write(char c)
{
  uint32_t regval;
  /* busy-wait if tx FIFO is full */
  do {
    regval = *(volatile uint32_t *)(UARTO_CTRL_ADDR + UART_TXDATA);
  } while (regval & 0x80000000);

  /* write the character */
  *(volatile uint32_t *)(UARTO_CTRL_ADDR + UART_TXDATA) = c;
}
```

Now, let's look at the ser\_write() function shown above. What this code does is busy-wait while bit 31 of the txdata register is 1, which---according to Section 18.4, Table 56---indicates that the transmit FIFO queue is full. If it is not---i.e., the queue is not full---then the single character 'c' (8 bit) is written to the [7:0] bits of the txdata register.

#### Task 2.2. Implement ser read() - 100 points

Reading from the UART block can be performed similarly, but by using the rxdata register instead. Consult the datasheet (Section 18.5) and implement the ser\_read() function in the eecs388\_lib.c file.

Once you correctly implement the ser\_read() function, you can type 'r' or 'g' or 'b' characters over the serial terminal in your PC to enable red, green, blue LEDs, respectively.

Note that to open the serial terminal in your PC, click the PlatformIO: Serial Monitor icon, which is the 2nd to last in the toolbar at the bottom left.


#### Submission

Go to the "Assignments" section of the Canvas and submit your modified eecs388\_lib.c file to the Lab03 submission link. Also, make sure that you have shown your completed work to your respective GTA for a demo.

Screenshots/PDF/Text files will NOT be allowed/graded as submissions. You need to submit the modified **.c** file only.

## **Appendix**

Here is how to understand the code which accesses the register memory. The following example writes a value to the given memory addressed register:

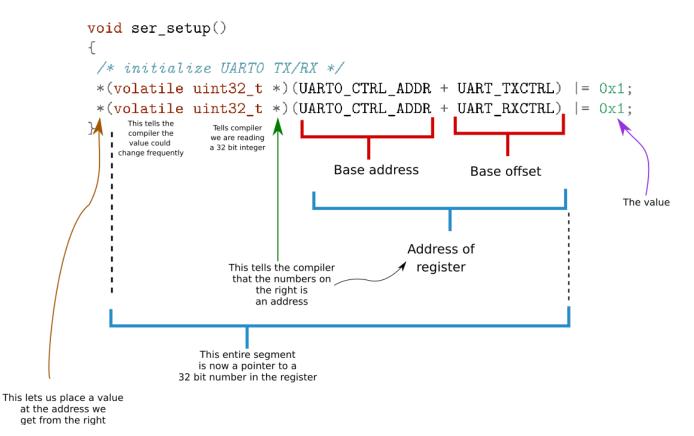

To *read* a value, we place the dereferencing on the left-hand side of the = sign