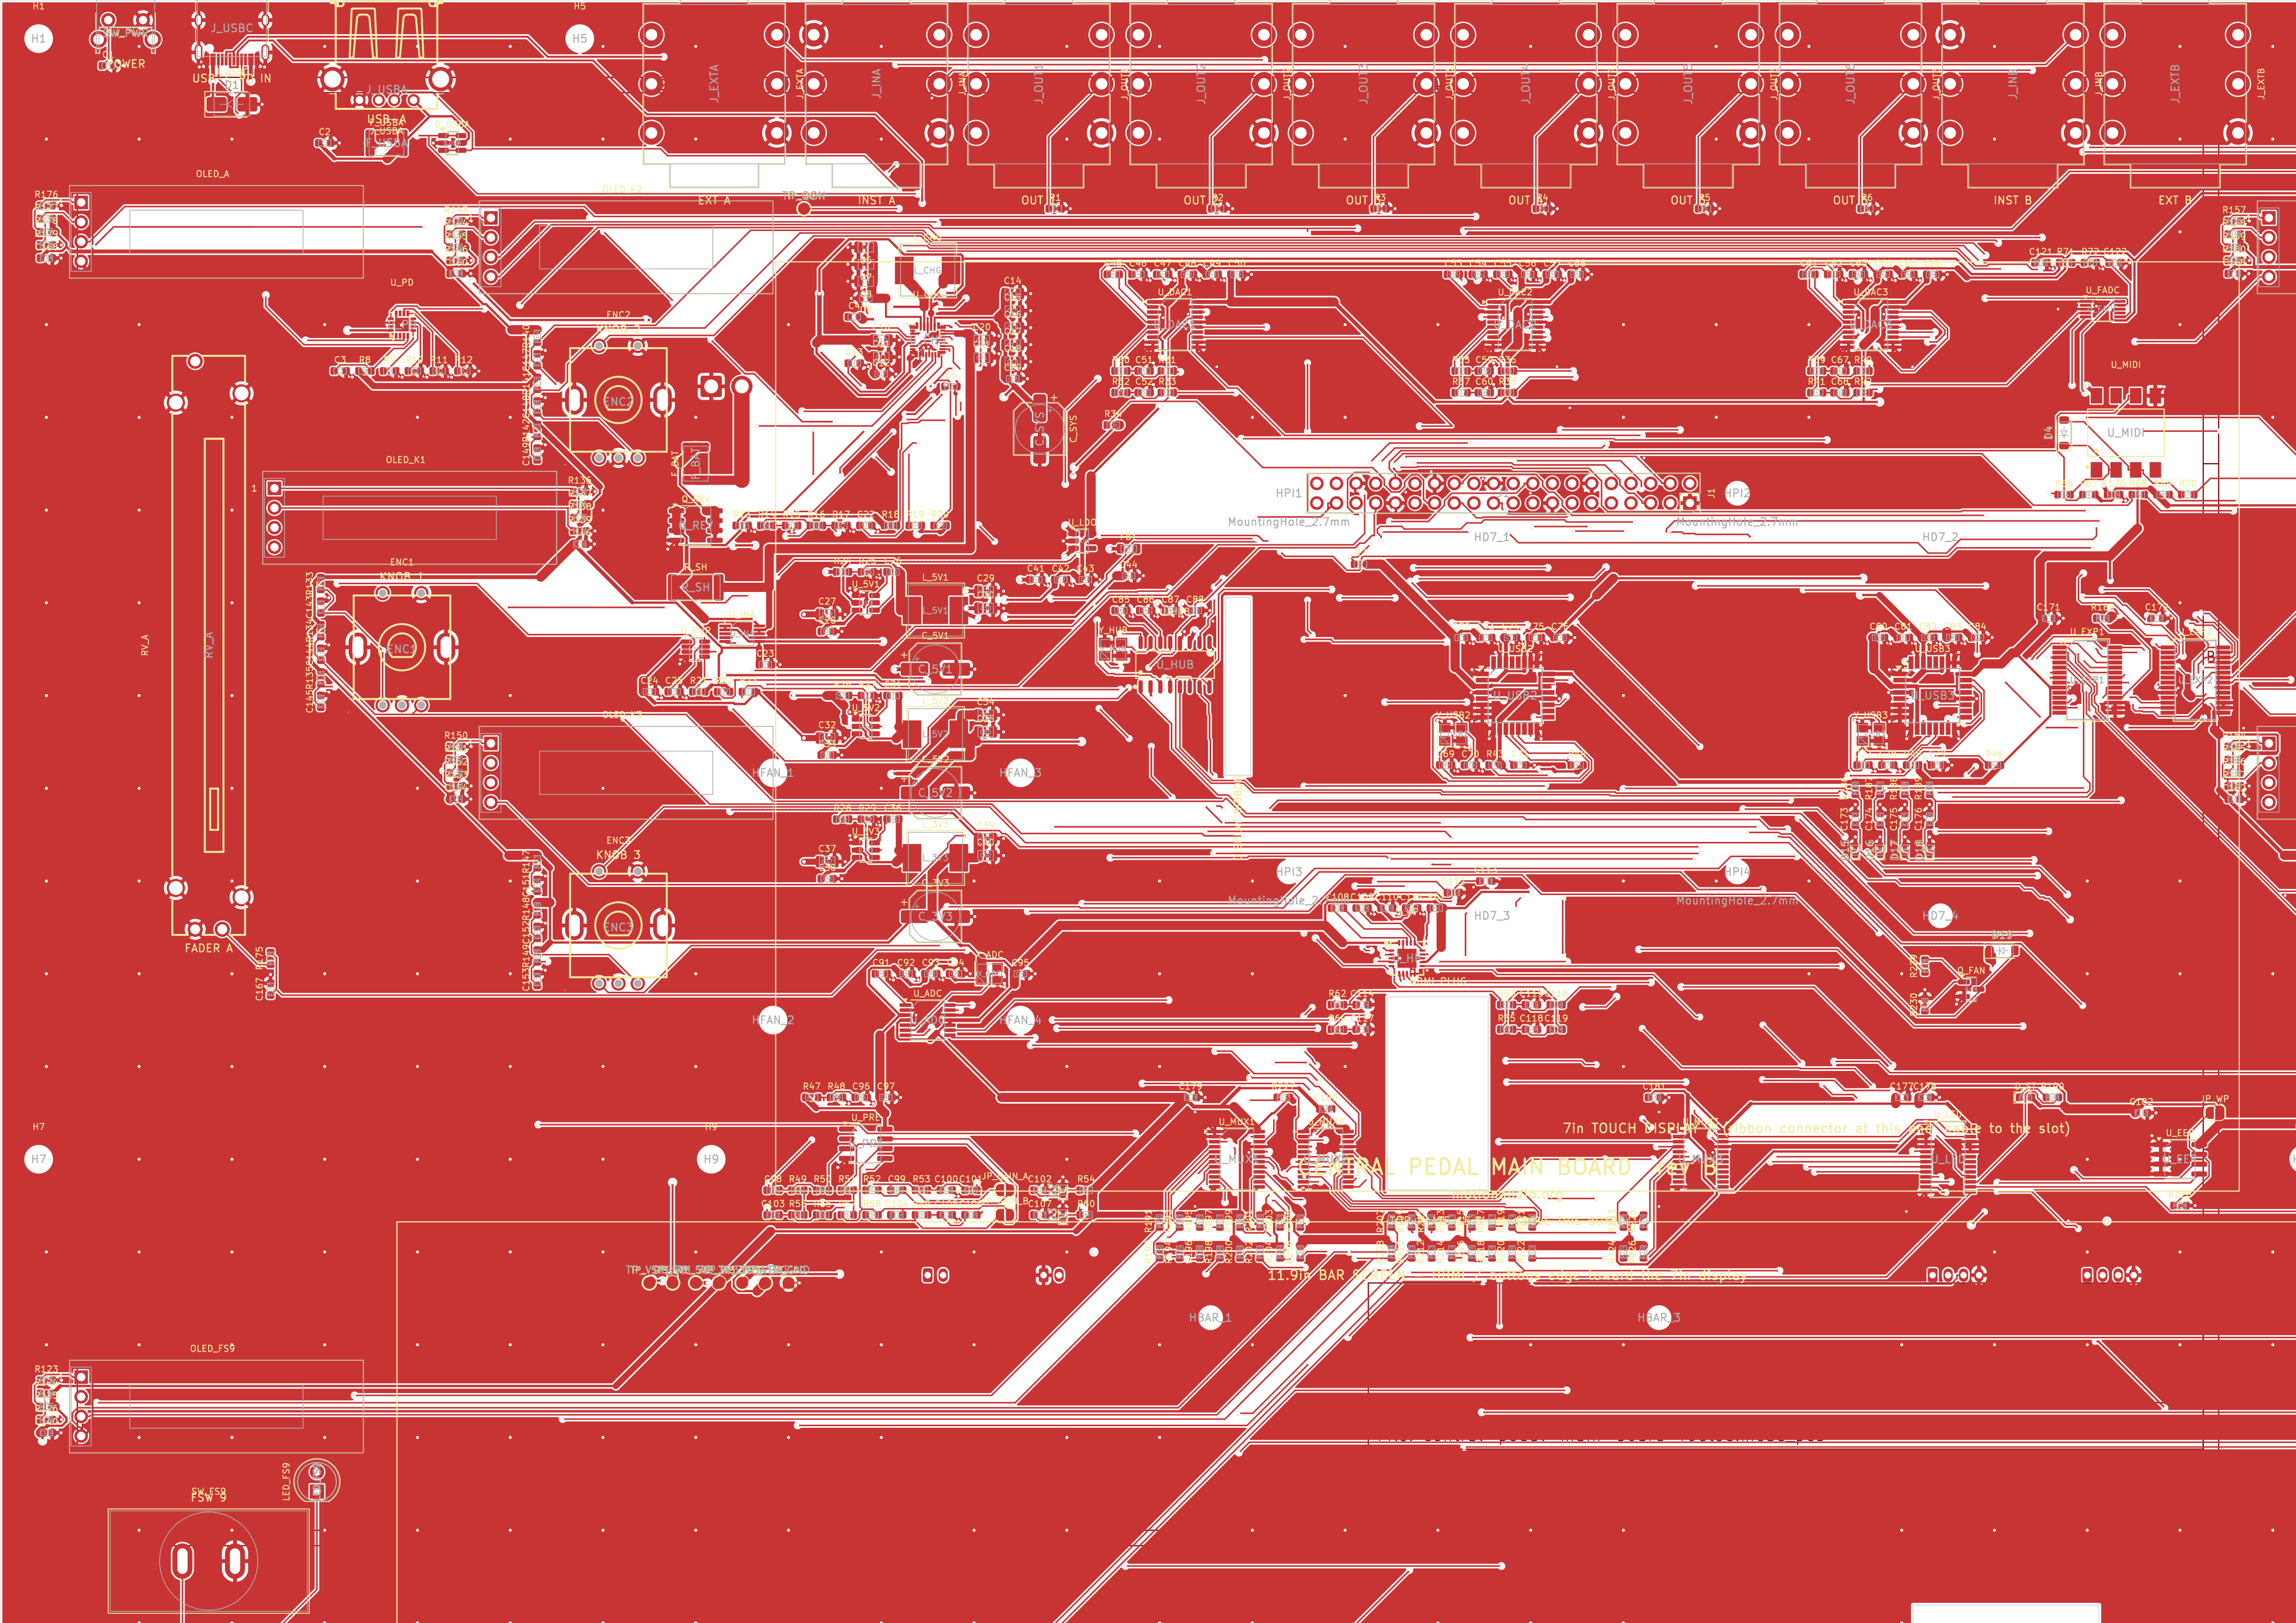
CENTRAL PEDAL MAIN BOARD rev B
motionaudio.org
7in TOUCH DISPLAY (ribbon connector at this end, cable to the slot)
11.9in BAR SCREEN — HDMI / buttons edge toward the 7in display
H1
H5
H7
H9
SW_PWR
POWER
J_USBC
USB-C PD IN
J_USBA
USB A
OLED_A
OLED_K1
OLED_K2
OLED_K3
OLED_FS9
U_PD
ENC1
ENC2
ENC3
KNOB 1
KNOB 2
KNOB 3
RV_A
FADER A
J_EXTA
J_INA
J_OUT1
J_OUT2
J_OUT3
J_OUT4
J_OUT5
J_OUT6
J_INB
J_EXTB
EXT A
INST A
OUT R1
OUT R2
OUT R3
OUT R4
OUT R5
OUT R6
INST B
EXT B
TP_GND
U_CHG
C_SYS
U_DAC1
U_DAC2
U_DAC3
U_FADC
U_MIDI
HPI1
HPI2
HPI3
HPI4
MountingHole_2.7mm
HD7_1
HD7_2
HD7_3
HD7_4
J1
U_LDO
L_5V1
C_5V1
C_5V2
C_3V3
U_HUB
U_USB2
U_USB3
U_EXP1
HFAN_1
HFAN_2
HFAN_3
HFAN_4
U_ADC
U_FAN
U_PRE
U_MUX1
U_MUX2
U_MUX3
U_LED
U_EE
JP_WP
HBAR_1
HBAR_3
SW_FS9
FSW 9
LED_FS9