# MV-22B Osprey

## Flight Manual

for the FlightGear MV-22B with its JSBSim flight model

This manual describes the aircraft as simulated: its flight model, cockpit, displays and automatic flight control system. Much of it has no counterpart in the real aircraft, whose manual is not public, and none of it is the real aircraft's manual or procedures. It is generated with the aircraft: its numbers, tables and charts come from the aircraft's own data, so they follow it as it changes.

Generated from the aircraft's sources (`manual/` in its repository).

# How to use this manual

The manual is in parts, as a military flight manual is: the aircraft and its systems (Part I), its limitations (Part II), normal procedures (Part III), flight characteristics (Part IV), emergency procedures (Part V) and performance data (Part VI). Keys are given as `m` or `Ctrl-T`; words the displays show, as HVR CPLD HOLD.

**Warnings, cautions and notes.** Three kinds of notice stand apart from the text, by how much they matter:

**WARNING**

An operating procedure or technique that, not followed, may lose the aircraft.

**CAUTION**

An operating procedure or technique that, not followed, may damage the aircraft or end the flight's purpose.

**Note**

An operating procedure, technique or fact worth emphasising.

**Wording.** *Shall* is mandatory; *should* is recommended; *may* and *need not* are optional; *will* states what happens, not a requirement.

**Its numbers.** Weights are pounds, speeds knots (KCAS, calibrated, unless stated), heights feet, power shaft horsepower. Performance is the flight model's: the comparisons that support it are in the model's report.

# Contents

**How to use this manual** **i**

**I The aircraft** **1**

**1 General description** **2**
1.1 The aircraft . . . 2
1.2 Weights . . . 2

**2 Systems** **3**
2.1 Engines and drive . . . 3
2.2 Fuel . . . 3
2.3 Flight controls . . . 3
2.4 Flight control augmentation . . . 4
2.5 Landing gear, brakes and the wing . . . 4
2.6 Doors, lights and others . . . 4

**3 Cockpit and displays** **5**
3.1 Layout . . . 5
3.2 Multifunction displays . . . 5
3.3 Control display unit . . . 8
3.4 Standby instruments and lighting . . . 9

**4 Automatic flight control system** **10**
4.1 Description . . . 10
4.2 Controls . . . 10
4.3 Mode annunciation . . . 11
4.4 The modes . . . 11
4.4.1 Heading hold (HDG HOLD, `Ctrl-H`) . . . 11
4.4.2 Altitude hold (ALT HOLD, `Ctrl-A`) . . . 11
4.4.3 Speed hold (SPD HOLD, `Ctrl-S`) . . . 11
4.4.4 Automatic nacelles (AUTO NAC, `U`) . . . 11
4.4.5 Route (WYPT, `Ctrl-W`) . . . 11
4.4.6 VOR/ILS (`Ctrl-N`) . . . 11
4.4.7 Approach (APPR, `Ctrl-G`) . . . 12
4.4.8 Go-around (GA, `Ctrl-U`) . . . 12
4.4.9 Terrain following (TF, `Ctrl-T`) . . . 12
4.4.10 Hover hold (HVR CPLD, `y`) . . . 13
4.4.11 Hover height hold (HVR HOLD, `Y`) . . . 13
4.5 How the modes combine . . . 13

**II Limitations** **14**

**5 Operating limitations** **15**
5.1 Conversion corridor . . . 15
5.2 Airspeed . . . 16
5.3 Rotor speed and power . . . 16
5.4 High sink rate . . . 16
5.5 Weight . . . 16
5.6 AFCS . . . 16

**III Normal procedures** **17**

**6 Normal procedures** **18**
6.1 Starting . . . 18
6.2 Vertical take-off and hover . . . 18
6.3 Conversion to airplane mode . . . 18
6.4 Airplane mode . . . 19
6.5 Conversion to helicopter mode and landing . . . 19
6.6 Coupled approach to a hover and landing . . . 19
6.7 Terrain following . . . 19
6.8 Shutdown . . . 19

**IV Flight characteristics** **20**

**7 Flight characteristics** **21**
7.1 Hover and low speed . . . 21
7.2 The conversion . . . 21
7.3 Airplane mode . . . 21
7.4 Under the AFCS . . . 21

**V Emergency procedures** **23**

**8 Emergency procedures** **24**
8.1 Engine failure . . . 24
8.2 High sink rate . . . 24
8.3 Conversion protection . . . 24
8.4 AFCS . . . 24

**VI Performance data** **25**

**9 Performance** **26**

**A Keys** **27**

# Part I

# The aircraft

# Chapter 1

# General description

## 1.1 The aircraft

The MV-22B is a tiltrotor: two proprotors, 38 ft across, at the tips of a wing, on nacelles that tilt from vertical (90°, helicopter mode) to horizontal (0°, airplane mode) and 97.5−90 = 7.5° aft of vertical. In helicopter mode the rotors lift the aircraft and it hovers and manoeuvres as a helicopter does; in airplane mode the wing lifts it and the rotors are propellers. Between them it *converts*, the nacelles moving at up to 8°/s within a corridor of nacelle angle against airspeed (Part II).

Two engines drive the rotors through gearboxes and an interconnect shaft: either engine turns both rotors. The flight controls mix the pilot's controls into each mode's: the rotors' collective and cyclic in helicopter mode, the elevator, flaperons and rudders in airplane mode, both through the conversion. A fly-by-wire augmentation holds attitude in every mode, and an automatic flight control system (AFCS) flies the aircraft when coupled, down to a hover and a landing.

## 1.2 Weights

| | |
|---|---|
| Empty | 33 140 |
| At the start: three crew, tanks half full, no cargo | 38 730 |
| Reference loading (maximum vertical take-off weight of the 1986 design) | 47 500 |
| Fuel, full (1 448 US gal) | 9 860 |
| Troops and cargo in the cabin, up to | 20 000 |

Fuel and cargo are set from Equipment → Fuel and Payload; the Troops and cargo slider places the load in the cabin. 24 equipped troops weigh about 5800 lb.

# Chapter 2

# Systems

## 2.1 Engines and drive

Each engine is rated at 6 150 shp (maximum rated power; intermediate 5 904, maximum continuous 4 982), falling with altitude and temperature. The thrust control lever sets both engines' power demand from flight idle to the rating. The drive limits the torque: 9 130 hp at 100 % rotor speed, 7 669 hp at 84 %, shared between the running engines, so that near sea level the drive, not the engines, limits the power. A governor holds the rotor speed ($N_R$) with the rotors' collective: 104 % in helicopter mode and through the conversion, 84 % in airplane mode with the nacelles at 0°. A topping governor takes power off above 2 % of overspeed.

The ENG format shows each engine's torque, gas generator speed and fuel flow, the rotor speed and the drive's torque limit. Cautions: TORQUE above 100 % torque, NR with the rotor speed 3 % off its reference, ENG 1 OUT or ENG 2 OUT with one engine stopped.

## 2.2 Fuel

Five tanks, drawn in the transfer sequence's order: the right aft sponson first, then the forward sponsons, the feed tanks last.

| Tank | US gal | lb |
|---|---|---|
| Left feed | 88 | 599 |
| Right feed | 88 | 599 |
| Left forward sponson | 478 | 3255 |
| Right forward sponson | 478 | 3255 |
| Right aft sponson | 316 | 2152 |
| total | 1448 | 9861 |

The FUEL format shows the tanks, the flow and the endurance; the NAV format the endurance and range. FUEL LOW shows below 1000 lb.

## 2.3 Flight controls

**Thrust control lever (TCL).** The throttle axis, or `Page Up`/`Page Down`. Up is more collective in helicopter mode and more power in airplane mode. At the start's weight a hover needs about two thirds of it, at the reference loading nearly all.

**Nacelles.** `m` tilts the nacelle command 10° forward, `M` 10° aft; the NACELLE thumbwheel on either lever does the same (click it, or the mouse wheel over it). The nacelles follow the command at the conversion rate. From 90° `M` tilts them to 97.5°, 7.5° aft of vertical, to stop or back up in the hover.

**Conversion protection.** The command is held within the corridor (Part II): below 35 kt the nacelles go no further forward than 75°, and as the aircraft accelerates they follow the corridor's lower edge, so a command fully forward converts as the speed allows. Slowing below the corridor for the present angle, the protection raises them. CONV PROT shows while it holds the command off the pilot's.

**Stick and pedals.** The elevator and aileron axes and the rudder axis. The flight controls mix them into the rotors' cyclic and differential collective in helicopter mode, phased with the nacelles, and into the elevator, flaperons and rudders in every mode.

**Flaperons.** Scheduled by the flight model: 67° in the hover (least download), 40° through the conversion and in airplane mode below 120 kt, retracted by 200 kt. The flap lever on the console does nothing.

## 2.4 Flight control augmentation

The augmentation holds the aircraft's attitude in all modes. Its response type changes with speed:

- *Below 50 kt with the nacelles above 60°*: attitude command, heading hold. Each 5 % of stick (one arrow-key press) holds about 1° of pitch or 1.25° of bank; each 5 % of pedal turns the aircraft at 1.5°/s (30°/s at full travel), and the heading holds with the pedals centred.
- *Above it*: rate command, attitude hold. The stick commands a rate, and the aircraft holds the attitude it is released at.

It switches at 55 kt accelerating and 45 kt slowing, so that a speed held near 50 kt does not switch back and forth; both share one reference, so the switch is free of transients. A trim schedule keeps the stick's centre trimmed through the conversion: hands off, the aircraft holds its attitude through it.

## 2.5 Landing gear, brakes and the wing

g/G raise and lower the gear; GEAR DOWN shows with the gear down above 150 kt and 50 ft. B sets the parking brake. The rotor brake holds the stopped rotors (ROTOR BRAKE); the start releases it. N folds the blades and swings the wing along the fuselage, n unfolds it; the rotors shall be stopped.

## 2.6 Doors, lights and others

d crew door, D cargo doors, e steps, l landing light. The complete list of keys is in Table A.1.

# Chapter 3

# Cockpit and displays

## 3.1 Layout

Four multifunction displays (MFD 1 to 4 from the left) across the instrument panel; the control display unit (CDU) and its two keypads on the centre console with the standby engine and fuel display (SFD) above it; the electronic standby flight instrument (ESFI); the flight control panel (the AFCS's keys and knobs) and the radio panels on the glareshield; a thrust control lever beside each seat.

## 3.2 Multifunction displays

The keys along each display's top pick its format: FLT, NAV, ENG, FUEL. A format's own keys, down its right side, show their labels for a few seconds after a key is pressed.

**Flight (FLT).** One format for every regime (Figure 3.1). At its centre the flight path marker, where the aircraft is going, with its acceleration chevron; airspeed and altitude tapes with 10 s trend vectors; the heading; a ground grid in perspective. The limits are drawn where the eye already is: the conversion corridor's airspeeds for the present nacelle angle on the airspeed tape, the high sink rate boundary for the airspeed on the vertical speed scale (its bar turning amber, then red, as the descent nears it), and the margin to the first power limit as one bar, with the power to hover in and out of ground effect marked. A small corridor diagram shows where the aircraft is in the conversion and where it is going. The AFCS's mode line runs along its top (Section 4.3).




**1** AFCS mode line: the modes, green when coupled

**2** airspeed tape, KIAS, with its 10 s trend; the red bands: the conversion corridor's limits for the nacelle angle

**3** airspeed

**4** flight path marker

**5** acceleration chevron: above the marker accelerating, below slowing

**6** altitude, with its tape and trend

**7** vertical speed scale; the bar coloured by the high sink rate limit

**8** heading

**9** ground speed

**10** radar altitude

**11** nacelle angle in the conversion corridor: where the aircraft is (circle) and its limits

**12** power: torque against the first limit; OGE and IGE: the power to hover out of and in ground effect

**13** rotor speed

**14** gear, flaperons and the augmentation's response type

Figure 3.1: The flight format in airplane mode, coupled at 230 kt.


Slowing below 30 kt with the nacelles past 75° it turns to its *hover format* (Figure 3.2): the flight path marker gives way to the drift seen from above, a ball on a line from the centre at the ground velocity's opposite 3 s ahead, to fly the stick towards; the hover hold's point, a magenta box filled once it holds it; the radar height. Below 200 ft the height tape gives way to a green bar under the readout that drains to its foot as the height goes, at the rate the aircraft closes on the ground. Past 60° of bank or 25° of pitch the clutter goes and an arrow shows the way to roll level. R7 (HVR MARK) marks the present position as a hover point.




1. AFCS mode line: the hover hold's state (DECEL, HOLD, TRC) and height hold
2. the hover point: the hold's stop, filled once it holds it; its distance
3. the drift ball, where the aircraft is drifting 3 s on, to fly the stick towards
4. the ring at 10 kt of drift
5. radar height
6. below 200 ft: the ground closing, a bar that drains as the height goes
7. barometric altitude
8. the high sink rate limit for the airspeed
9. ground speed
10. nacelle angle in the conversion corridor
11. power, with the power to hover out of and in ground effect
12. the augmentation's response type: attitude command

Figure 3.2: The flight format's hover format, the hover hold holding 150 ft over the sea.


**Navigation (NAV).** A moving map, track up (R3: north up; Figure 3.3). The terrain is coloured by its clearance below the height the aircraft will have when it gets there (60 s ahead at most; below 90 kt in the helicopter's tighter bands); where the scenery has no elevation yet it is dim magenta, and below 100 ft above the ground it is measured from 100 ft up, so that flat ground around a hover stays quiet. On it: the route and its waypoints; the landing zone, the route's last point, with its approach into the wind; the conversion planner's points, where to begin slowing down (DECEL) and converting (CONV) to arrive in a hover; the path 30 and 60 s ahead in the turn; an approach line; traffic; the fuel's endurance and range. Below it the profile along the track: the terrain, the aircraft's path, the selected altitude. R1/R2 change the range, R4 the terrain.

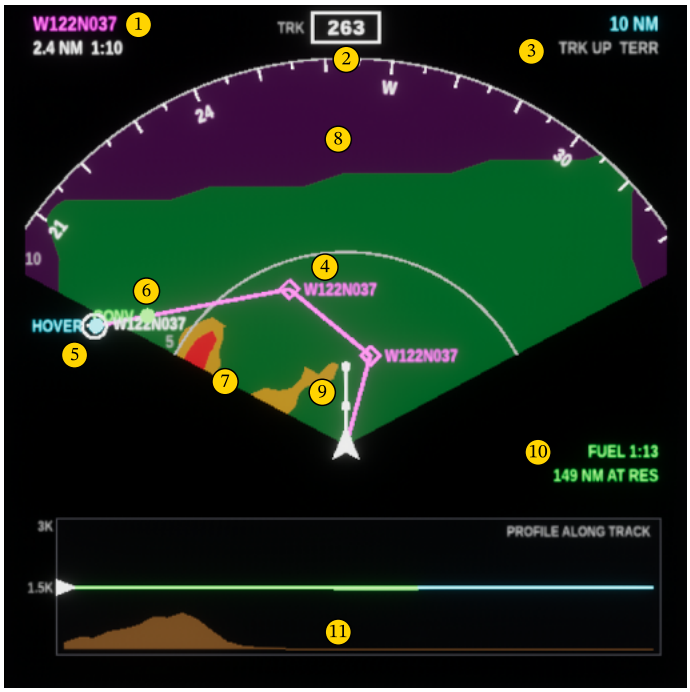


1. next waypoint: distance and time to it
2. track
3. range; track or north up; terrain shown
4. the route
5. the landing zone, the route's last point, with its approach into the wind
6. the conversion planner: where to begin converting (CONV) and slowing (DECEL)
7. terrain coloured by its clearance below the aircraft's height when it gets there
8. no elevation yet from the scenery
9. the path 30 and 60 s ahead
10. fuel: endurance and range at the reserve
11. the profile along the track: terrain, the path, the selected altitude


Figure 3.3: The navigation format with a route over the peninsula's ridge to a landing zone on the coast, at 120 kt: the terrain beyond the coast not yet loaded by the scenery.

**Engines (ENG)** and **fuel (FUEL)**: the engines and drive, the tanks and the flow (Figures 3.4 and 3.5).

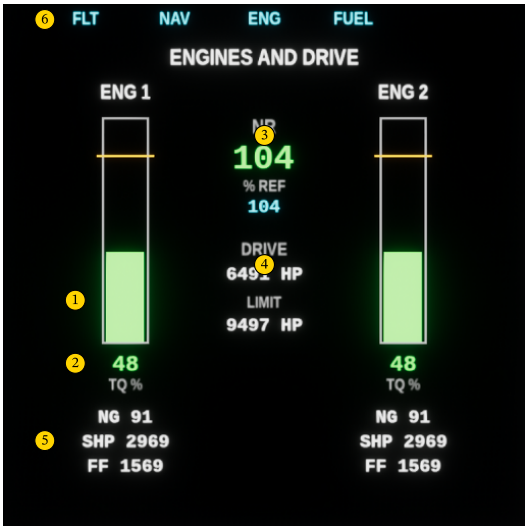


**1** each engine's torque against its limit (the line)
**2** torque, %
**3** rotor speed and its reference
**4** the drive's power and its limit
**5** gas generator speed, shaft power, fuel flow
**6** the formats' keys

Figure 3.4: The engines and drive format.

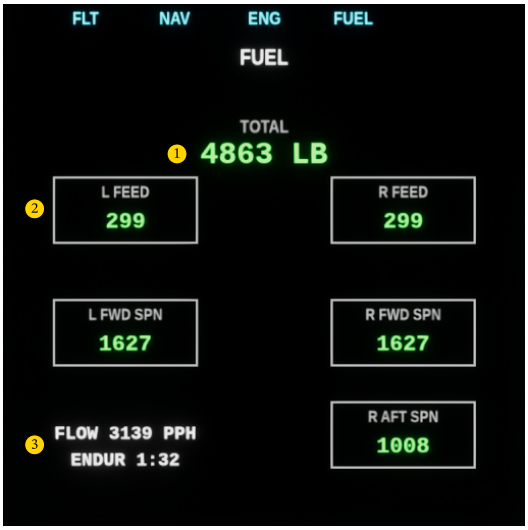



**1** total fuel
**2** the five tanks
**3** fuel flow and endurance

Figure 3.5: The fuel format.

## 3.3 Control display unit

Its keys B4, B3 and B1 show the EICAS page (cautions), the STAT page (weights) and the scratchpad's page. The keypads type into the scratchpad; CLR clears it, DEL deletes a character, ENTER enters it:

| Entry | Sets |
|---|---|
| `H270` | the heading bug |
| `C090` | NAV 1's course |
| `B2992` | the altimeter (inches of mercury × 100) |
| `T300` | TF's clearance, 100–1000 ft |
| `R1`, `R2`, `R3` | TF's ride: soft, medium, hard |

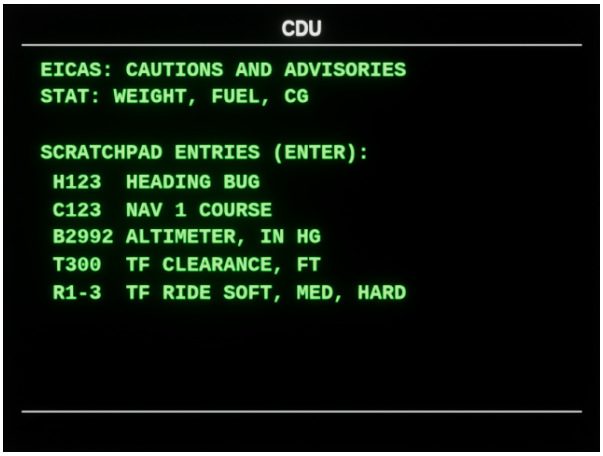


(a) the scratchpad's page, with its entries





(b) the status page

Figure 3.6: The control display unit.

**Cautions** (EICAS): ENG 1 OUT/ENG 2 OUT (red), FUEL LOW, NR, TORQUE, CONV PROT, GEAR DOWN (amber), ROTOR BRAKE, BATTERY OFF (green).

## 3.4 Standby instruments and lighting

The ESFI shows attitude, airspeed and altitude, the SFD the engines and fuel (Figure 3.7). The displays need power, the battery or an engine running. They follow the light outside as their photocells do: DAY is bright enough for full sun and dims at dusk, NIGHT stays at a night vision goggle level. The standby instrument, the flight control panel's windows and the radio panels have no NIGHT/DAY knob and follow the light over both. The BRT rockers and knobs scale each.

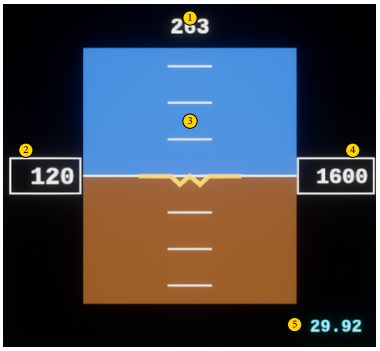


(a)

**1** heading
**2** airspeed
**3** attitude
**4** altitude
**5** altimeter setting




(b)

Figure 3.7: The standby instruments: (a) the electronic standby flight instrument, (b) the standby engine and fuel display.

# Chapter 4

# Automatic flight control system

## 4.1 Description

The AFCS is a flight director that the augmentation flies when *coupled*. Its modes compute attitudes, the lever and the nacelles; with CPLD on, the augmentation flies them, and with it off they remain cues. Moving the stick out of its centre uncouples it (CPLD OFF); CPLD couples it again. The coupled AFCS drives the lever while a speed mode is on: moving the lever flies through it, and left alone for 1.5 s the AFCS takes it again.

Speed and the flight path share the lever and the pitch as total energy control does: in airplane mode the lever flies the total energy's rate (climb and acceleration together) and the pitch shares it between climb and speed. Blended by the nacelle angle from 50 to 80°, on the back side of the power curve the lever flies the climb and the pitch the speed, as a powered-lift aircraft is flown there.

## 4.2 Controls

The flight control panel's keys and knobs (Table 4.1), or the keys (Table A.1). A hold key takes the present heading, speed or altitude onto its knob when pressed; the knob then changes it. The knobs' values show in the panel's windows.

Table 4.1: The flight control panel.

| Key or knob | Function |
|---|---|
| CPLD | Couples the flight director to the augmentation (either key) |
| ENAV | Not installed |
| VOR/ILS | VOR/ILS: NAV 1's localizer and glide slope, or its VOR |
| TACAN | Not installed |
| SRCH PAT | Not installed |
| APPR | Approach to a hover; again: land; again: off |
| WYPT | The route manager's route |
| HDG HOLD | Heading hold (HDG knob) |
| SPD HOLD | Speed hold (SPEED knob) |
| ALT HOLD | Altitude hold (ALT knob) |
| HVR HOLD | Hover height hold, HVR ALT HOLD (HVR ALT knob) |
| AUTO NAC | Automatic nacelles |
| TF | Terrain following |
| HVR CPLD | Hover hold |
| REM HVR | Remote hover: the stick's translation slowed to 2 kt |
| CRS knob | NAV 1's course |
| HDG knob | Heading bug |
| SPEED knob | Speed, KIAS |
| ALT knob | Altitude, ft |
| HVR ALT knob | Hover and TF height above the ground, ft |
| BRT knob | Panel brightness |

## 4.3 Mode annunciation

The mode line along the top of the flight format shows the modes, green when coupled, white as cues: CPLD; the lateral mode (HDG 270, WYPT and the next waypoint, the approach line's name and ARM until it captures); the vertical (ALT 2000, GP ARM, GP 3.0, TF 300 MED); the speed (SPD 120); AUTO NAC; the approach's phase (APPR 4.2, APPR HOVER, APPR LAND, APPR DOWN); the hover hold (HVR CPLD DECEL, HOLD, TRC, REM; RAD ALT 50). Alerts show for 5 s: CPLD OFF, HVR CPLD OFF (let go), HVR CPLD UNAVAIL (refused), AUTO NAC OFF, APPR UNAVAIL, VOR/ILS UNAVAIL, TF UNAVAIL.

## 4.4 The modes

### 4.4.1 Heading hold (HDG HOLD, `Ctrl-H`)

Turns to the heading bug (magnetic) and holds it, banking at most 15° at 40 kt, 20° at 80 kt and 25° from 150 kt.

### 4.4.2 Altitude hold (ALT HOLD, `Ctrl-A`)

Climbs or descends to the ALT knob's altitude, at up to 1500 ft/min, and holds it. Engaged in a climb or a descent, it takes the vertical speed there is and changes it at no more than 0.1 *g*.

### 4.4.3 Speed hold (SPD HOLD, `Ctrl-S`)

Flies the SPEED knob's airspeed, the reference moving to it at 2 kt/s accelerating and 1.5 kt/s slowing, and drives the lever. The reference starts from the aircraft's own airspeed and acceleration and eases into and out of its rate, at no more than the pitch's 0.1 *g* in the exchange of speed for climb (a change of rate of 0.3 kt/s each second at 120 kt, 0.15 at 250 kt), so engaging it slow, or turning the knob, does not pitch the nose. With SPD HOLD on and no vertical mode it holds the vertical speed it had when engaged.

### 4.4.4 Automatic nacelles (AUTO NAC, `U`)

Sets the nacelles for the speed reference from the aircraft's own level-flight trims: at each speed the most converted angle whose trim pitches the nose up by at most 4° (7° at 180 kt), within the corridor (Figure 5.1). It needs SPD HOLD (AUTO NAC (SPD) without it). Moving the nacelles turns it off (AUTO NAC OFF). With SPD HOLD and AUTO NAC, the SPEED knob alone converts the aircraft either way.

### 4.4.5 Route (WYPT, `Ctrl-W`)

Flies the route manager's active route: straight to its first waypoint, then between the legs on its own arcs, started where an arc at 80 % of the bank limit joins them (turns of up to 150°). It flies the plan the NAV format draws: APPR arms with the route, so that from the DECEL point it slows down along the route, descends on the approach path and comes to a hover over the route's last point; APPR again lands there (Section 4.4.7). WYPT (NO ROUTE) shows without an active route.

### 4.4.6 VOR/ILS (`Ctrl-N`)

Flies NAV 1's localizer and glide slope, or its VOR on the CRS knob's course, as a line through the station. The line arms (ILS 28R ARM) until the aircraft is within 20 s of flight of it, the heading or the route flying meanwhile; with neither on it captures at once. It intercepts at up to 45°. The glide path arms (GP ARM) and is joined from below, or from above once past where its descent begins.

### 4.4.7 Approach (APPR, `Ctrl-G`)

An approach to a hover 50 ft over a point, and a landing there:

- an ILS's threshold, NAV 1 tuned to it;
- the route's destination runway;
- the route's last waypoint, a landing zone, approached into the wind at 6°.

Along the line it slows down at 1.5 kt/s, as late as it can, and converts with AUTO NAC. Below 35 kt over the ground within 2000 ft of the point it hands over to the hover hold, which holds the hover (APPR HOVER). The key again lands (APPR LAND): the height comes down at 2 ft/s and on the ground the modes go off and the lever comes down (APPR DOWN); pressed before the hover it lands without stopping (LAND ARM). A third press turns it off. Without a line to fly it shows APPR UNAVAIL.


### 4.4.8 Go-around (GA, `Ctrl-U`)

Ends the approach and the hover hold and flies away: the present heading, the ALT knob's altitude (or 1000 ft up if it is not at least 200 ft above), at the SPEED knob's speed or 80 kt, with AUTO NAC. GA shows until within 100 ft of the altitude.

### 4.4.9 Terrain following (TF, `Ctrl-T`)

Holds a set clearance over the terrain: the HVR ALT knob's height (200 ft if it is below 100), or the CDU's `T300` (100–1000 ft). It engages from 40 kt over the ground in the air, and turns APPR off; an approach armed later takes the vertical over from it once its glide path is captured.

It plans a path 45 s ahead along the track, the lowest that clears the terrain by the clearance, on the track and 150 ft either side, descending into valleys and pulling up as late as its ride allows, within the climb the engines can make and 2000 ft/min of descent. The ride sets its vertical acceleration (`R1`, `R2`, `R3` on the CDU: soft, medium, hard, 0.1, 0.2 and 0.3 *g*; medium at the start). It flies the vertical: with SPD HOLD the speed is free within 20 kt of the SPEED knob's, so that climbs and descents trade it against height, and held at the band's edges. The mode line shows TF 300 MED.

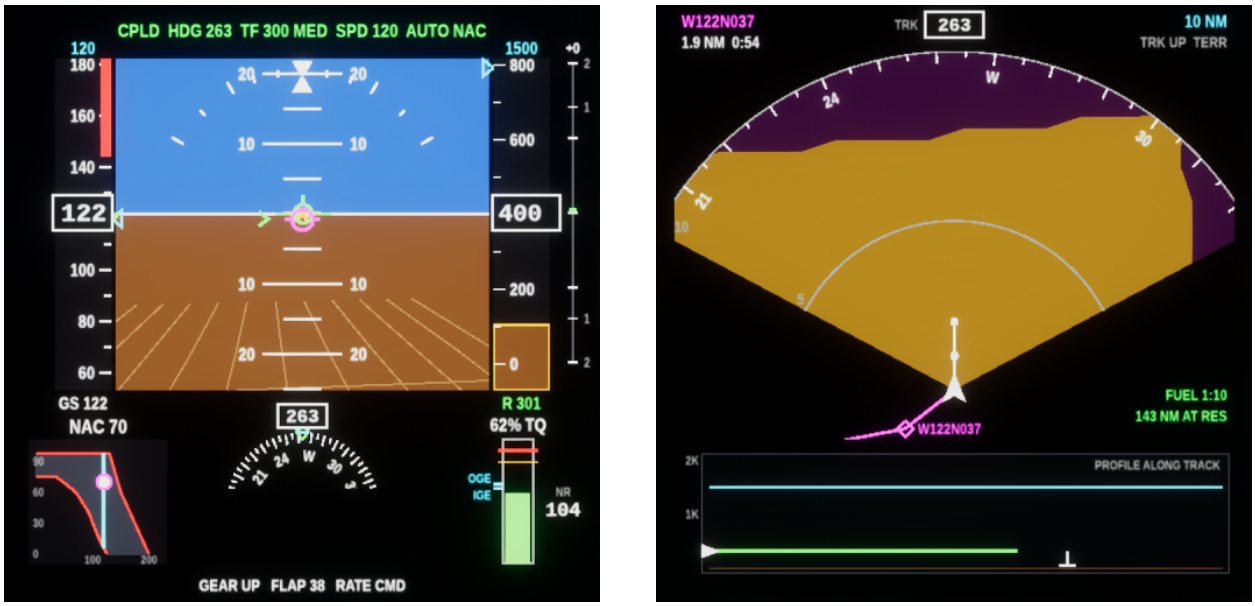


(a) the flight format

(b) the navigation format, the terrain's profile below

Figure 4.1: Terrain following at 300 ft over the peninsula's ridge, at 120 kt.

Below half the clearance it climbs at full power at 0.5 *g* (FLY UP); with no terrain data ahead it climbs too (TF FAIL). Pressed again TF ends and the ALT knob takes the present altitude.

**WARNING**

TF sees terrain 45 s ahead along the track: enough to climb 930 ft at the aircraft's weakest climb, 1 340 ft/min at 250 kt. Higher or nearer terrain, terrain coming into view round a turn, and obstacles the scenery's terrain does not have can be cleared only as the fly-up allows.

### 4.4.10 Hover hold (HVR CPLD, y)

Engaged at up to 40 kt over the ground with the nacelles past 70°, it shows where the aircraft will stop (the magenta box), stops there at 0.08 *g* (DECEL) and holds the spot, the heading and the height (HOLD): the radar height below 500 ft, the barometric above. It moves the lever and the nacelles itself, translating on the nacelles with the fuselage level.

- The stick out of its centre flies it over the ground (TRC): 10 kt at half travel, 2 kt with REM HVR. On release it stops and holds again.
- The lever flies through the height hold; left alone for 1.5 s, the hold takes the new height.
- Past half the stick's travel, above 45 kt, below 65° of nacelle or on landing it lets go (HVR CPLD OFF); refused, it shows HVR CPLD UNAVAIL.

### 4.4.11 Hover height hold (HVR HOLD, Y)

Holds the HVR ALT knob's radar height, taking the present one when pressed (RAD ALT 50).

## 4.5 How the modes combine

- *Lateral*: an approach line once captured, else the route (WYPT), else the heading (HDG HOLD). With none the augmentation holds the bank.
- *Vertical*: the glide path once captured, else TF, else ALT HOLD, else the vertical speed held by SPD HOLD.
- *Speed*: SPD HOLD, or the approach's own speed along its path.
- *The hover hold* takes over all of them while it is on; the approach hands over to it.

# Part II

# Limitations

# Chapter 5

# Operating limitations

## 5.1 Conversion corridor

The nacelle angle shall be kept within the corridor (Figure 5.1, Table 5.1); the conversion protection holds the command within it.

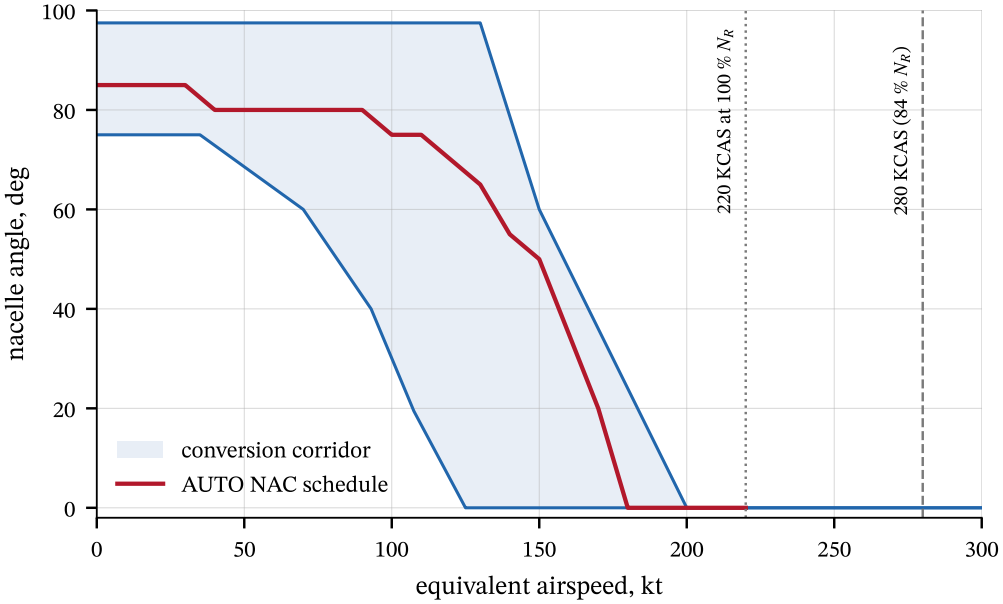



Figure 5.1: The conversion corridor, equivalent airspeed against nacelle angle, with AUTO NAC's schedule and airplane mode's airspeed limits.

Table 5.1: The conversion corridor.

| KEAS | least nacelle, deg | most nacelle, deg |
|---|---|---|
| 0 | 75 | 97.5 |
| 35 | 75 | 97.5 |
| 70 | 60 | 97.5 |
| 93 | 40 | 97.5 |
| 107 | 20 | 97.5 |
| 125 | 0 | 97.5 |
| 130 | 0 | 97.5 |
| 150 | 0 | 60.0 |
| 175 | 0 | 30.0 |
| 200 | 0 | 0.0 |

## 5.2 Airspeed

- Airplane mode, 84 % $N_R$: 280 KCAS or Mach 0.48, whichever is less.
- Airplane mode at 100 % $N_R$: 220 KCAS.
- Gear down: 150 KCAS.

## 5.3 Rotor speed and power

- Rotor speed: 104 % in helicopter mode and through the conversion, 84 % in airplane mode; NR beyond 3 %.
- Torque: 100 % (TORQUE). The drive: 9 130 hp at 100 % $N_R$.

## 5.4 High sink rate

**WARNING**

At low airspeed the rotors can enter their own wake, the vortex ring state, and the aircraft sink fast and roll. The rate of descent shall stay below 800 ft/min up to 30 KCAS, rising to 1 600 ft/min at 60 KCAS (Figure 9.1c). The flight format's vertical speed bar turns amber and red as the descent nears the limit.

## 5.5 Weight

- Maximum vertical take-off: 47 500 lb (the reference loading). The hover ceiling (Part VI) limits it further at altitude.
- Cabin load: 20 000 lb.

## 5.6 AFCS

- Hover hold: engage below 40 kt over the ground with the nacelles past 70°.
- TF: from 40 kt over the ground; clearance 100–1000 ft.
- Wing stow: rotors stopped.

# Part III

# Normal procedures

# Chapter 6

# Normal procedures

## 6.1 Starting

On the ground the aircraft starts cold and dark. In the air it starts running and trimmed in level flight at the start's airspeed, the nacelles at AUTO NAC's angle for it. For the first 5.5 s it holds still while it trims: the rotors come up to the aircraft's level-flight trim for the airspeed, its weight, the density altitude and the gear (down unless raised, FlightGear's default), the nose turns to the trim's pitch, and the collective, the lever and the stick settle. Then it flies on level, hands off. Slow, heavy and high, past the hover ceiling, the lever is at its stop and the aircraft sinks.

1. Thrust control lever: down.
2. AutoStart: `}` (or the V22 Osprey menu). The engines start one after the other; the rotor brake releases.
3. Rotor speed: governed (104 %), about 75 s after the first engine lights.

## 6.2 Vertical take-off and hover

1. Nacelles: 90°. Gear down.
2. Lever: up smoothly until the aircraft lifts (about two thirds at the start's weight).
3. Hover: hold the attitude with the stick; the heading holds with the pedals centred.
4. To hold the hover: HVR CPLD (`y`); HVR HOLD (`Y`) holds the radar height.

**Note**

The flight format's power bar marks the power to hover in and out of ground effect: with the lever's power past the out-of-ground-effect mark the aircraft cannot hover clear of the ground.

## 6.3 Conversion to airplane mode

1. Accelerate with forward stick, nacelles at 75–80°.
2. Nacelles: forward (`m`); the protection holds them to the corridor as the speed builds, so the command may be set fully forward.
3. Gear up above 50 ft.
4. At 0° the rotor speed comes down to 84 %.

Coupled: SPD HOLD and AUTO NAC, then the SPEED knob to the speed wanted; the AFCS converts at constant altitude with ALT HOLD.

## 6.4 Airplane mode

Cruise 240–270 KCAS. At the slow end of airplane mode the nose is high (6° at 200 KCAS against 3° at 250, Table 7.1): the wing lifts the aircraft alone there.

## 6.5 Conversion to helicopter mode and landing

1. Slow down below 200 KCAS; nacelles up (`M`) as the corridor allows; gear down below 150 KCAS.
2. Approach with the nacelles at 75–85°, below the high sink rate limit.
3. Come to a hover over the point, then lower the lever to land.
4. After landing: lever down.

## 6.6 Coupled approach to a hover and landing

1. An ILS: NAV 1 tuned to it; or a route whose last point is the landing zone (WYPT).
2. CPLD; HDG HOLD or WYPT, ALT HOLD, SPD HOLD, AUTO NAC.
3. APPR (`Ctrl-G`): the line arms and is drawn on the NAV format; it captures within 20 s of flight of it.
4. The AFCS descends on the path, slows down and hands over to the hover hold 50 ft over the point.
5. APPR again: it lands, and the lever comes down on the ground.

With a route flown by WYPT, APPR arms itself.

## 6.7 Terrain following

1. CPLD; HDG HOLD or WYPT; SPD HOLD, AUTO NAC.
2. Clearance: the HVR ALT knob, or `T300` on the CDU. Ride: `R1`–`R3`.
3. TF (`Ctrl-T`). Check TF 300 MED on the mode line.
4. To end it: TF again; the ALT knob takes the present altitude, and ALT HOLD holds it.

## 6.8 Shutdown

1. Lever down; AutoStop: `}`.
2. To stow: wing (`N`) once the rotors have stopped.

# Part IV

# Flight characteristics

# Chapter 7

# Flight characteristics

## 7.1 Hover and low speed

With attitude command the aircraft holds the attitude the stick sets, so it stays where it is put; the drift is flown with small attitude changes. In ground effect it needs less power: the power bar shows both. Descending slowly at low speed, mind the high sink rate boundary.

## 7.2 The conversion

Hands off, the trim schedule holds the attitude through the conversion; the nacelles move at up to 8°/s. Converting, the aircraft accelerates on the nacelles' tilt rather than on its pitch; the pitch attitude changes a few degrees at each angle (Table 7.1).

## 7.3 Airplane mode

The wing carries the aircraft above about 180 KCAS; at its slow end the nose is 6° up, at cruise 2–3°.

Table 7.1: Level flight along AUTO NAC's schedule at 47 500 lb, 1000 ft: the power required, the pitch attitude, and whether one engine (5 950 hp there) holds it.

| KCAS | nacelle, deg | power, hp | pitch, deg | one engine |
|---|---|---|---|---|
| 40 | 80 | 6 933 | 3.5 | not enough |
| 60 | 80 | 6 199 | 2.2 | not enough |
| 80 | 80 | 5 486 | 2.0 | enough |
| 100 | 75 | 5 435 | 3.9 | enough |
| 120 | 70 | 6 409 | 2.8 | not enough |
| 135 | 60 | 7 087 | 3.3 | not enough |
| 150 | 50 | 7 560 | 3.7 | not enough |
| 160 | 35 | 6 590 | 4.8 | not enough |
| 170 | 20 | 5 498 | 5.6 | enough |
| 180 | 0 | 3 791 | 6.9 | enough |
| 200 | 0 | 3 739 | 6.2 | enough |
| 220 | 0 | 4 378 | 4.6 | enough |
| 250 | 0 | 5 656 | 2.9 | enough |
| 270 | 0 | 6 711 | 2.1 | not enough |

## 7.4 Under the AFCS

Coupled, the AFCS flies the augmentation's attitudes and their rates, the stick for those rates fed forward from the aircraft's own response, so it turns and pulls up without lag or overshoot. In TF the climbs and descents

trade the speed within its band; over hills higher than the ride lets it follow at high speed it stays above the valleys.

# Part V

# Emergency procedures

# Chapter 8

# Emergency procedures

## 8.1 Engine failure

ENG 1 OUT or ENG 2 OUT. The interconnect shaft drives both rotors from the remaining engine, which gives up to its own rating, 6 150 shp at sea level, against the 9 130 hp the drive passes with both. At the reference loading one engine holds level flight from 80 KCAS in the conversion and in airplane mode up to 250 KCAS, not in the hover (6 933 hp at 40 kt) nor at 120–160 KCAS (Table 7.1).

1. In the hover or at low speed: land, or accelerate to 80–100 KCAS with the nacelles at 75–80° if clear of the ground.
2. In the conversion: continue to airplane mode, or back to 80–100 KCAS.
3. In airplane mode: 180–250 KCAS; land as soon as practicable, converting as the speed allows.

**WARNING**

Below 80 KCAS and at 120–160 KCAS, at the reference loading, one engine cannot hold level flight.

## 8.2 High sink rate

Nacelles forward and the nose down to gain airspeed; do not pull the lever up alone, which deepens the vortex ring state.

## 8.3 Conversion protection

CONV PROT: the nacelles held off the command by the corridor. Fly the speed into the corridor for the angle commanded, or bring the command to the nacelles.

## 8.4 AFCS

- CPLD OFF: uncoupled by the stick. Fly the aircraft; CPLD to couple again.
- HVR CPLD OFF: the hover hold let go. Fly the hover; HVR CPLD again once within its limits.
- FLY UP: TF below half its clearance, climbing at full power. Let it climb; if it persists, climb to a safe altitude and end TF.
- TF FAIL: no terrain data ahead; TF climbs. End TF and fly at a safe altitude.

# Part VI

# Performance data

# Chapter 9

# Performance

The flight model's own; its report compares it with the published data.

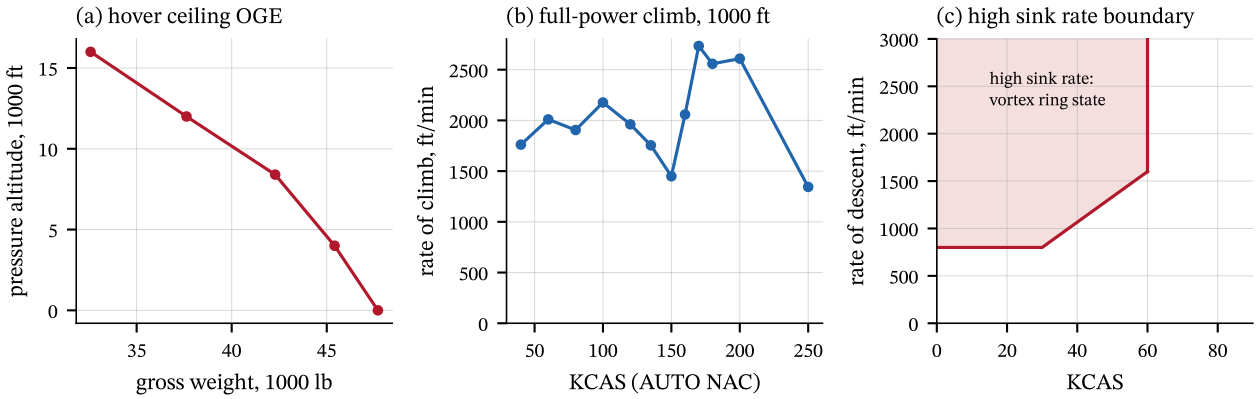



Figure 9.1: (a) The hover ceiling out of ground effect, standard day, 100 % $N_R$; (b) the climb at full power along AUTO NAC's schedule at 47 500 lb, 1000 ft; (c) the high sink rate boundary.

Table 9.1: Hover ceiling OGE, standard day.

| Pressure altitude, ft | Gross weight, lb |
|---:|---:|
| 0 | 47 690 |
| 4 000 | 45 410 |
| 8 400 | 42 290 |
| 12 000 | 37 620 |
| 16 000 | 32 580 |

Table 9.2: Maximum level speed, airplane mode.

| Gross weight, lb | Altitude, ft | KTAS |
|---:|---:|---:|
| 42 000 | 0 | 289 |
| 47 500 | 0 | 286 |
| 42 000 | 17 000 | 316 |

# Appendix A

# Keys

Table A.1: Keys.

| Key | Function |
|---|---|
| D | Cargo doors |
| d | Crew door |
| e | Steps door |
| l | Landing light |
| N | Fold wing back |
| n | Unfold wing |
| m | Tilt Rotors fwd |
| M | Tilt Rotors aft |
| j | Jump signal |
| f | Trigger flare release |
| q | Refuelling Probe |
| w | PA On/Off |
| Q | Reset view |
| } | Autostart/AutoStop |
| y | Hover hold (HVR CPLD) on / off |
| Y | Hover height hold (HVR ALT HOLD) on / off |
| Ctrl-H | Autopilot heading hold (HDG HOLD) |
| Ctrl-A | Autopilot altitude hold (ALT HOLD) |
| Ctrl-S | Autopilot speed hold (SPD HOLD) |
| Ctrl-W | Autopilot route (WYPT) |
| Ctrl-N | Autopilot NAV 1's ILS or VOR (VOR/ILS) |
| Ctrl-G | Autopilot approach to a hover (APPR); again: and land; again: off |
| Ctrl-T | Autopilot terrain following (TF), at the HVR ALT knob's clearance |
| Ctrl-U | Autopilot go-around (GA) |
| u | Couple the autopilot (CPLD) |
| U | Automatic nacelles (AUTO NAC) |
| Page Up / Page Down | Thrust control lever up / down (or the throttle axis) |
| arrow keys, keypad | Stick (elevator and aileron axes) |
| keypad 0 / Enter | Pedals (rudder axis) |
| g / G | Landing gear up / down |
| B | Parking brake |