

# **Managing storage for ONTAP clusters**

**Cloud Manager** 

Ben Cammett, Tom Onacki July 19, 2021

This PDF was generated from https://docs.netapp.com/us-en/occm/task\_provisioning\_ontap.html on October 11, 2021. Always check docs.netapp.com for the latest.

# **Table of Contents**

Managing storage for ONTAP clusters	 	 	
Creating volumes for ONTAP clusters	 	 	
Creating volumes from templates	 	 	
Replicating data	 	 	
Backing up data	 	 	
Tiering data to the cloud	 	 	

# Managing storage for ONTAP clusters

After you discover your ONTAP cluster from Cloud Manager, you can open the working environment to provision and manage storage.

## **Creating volumes for ONTAP clusters**

Cloud Manager enables you to provision NFS, CIFS, and iSCSI volumes on ONTAP clusters.

A Cloud Manager feature called "templates" enables you to create volumes that are optimized for the workload requirements for certain applications; such as databases or streaming services. If your organization has created volume templates that you should use, follow these steps.

#### Before you begin

The data protocols must be set up on the cluster using System Manager or the CLI.

#### About this task

You can create volumes on existing aggregates. You can't create new aggregates from Cloud Manager.

#### **Steps**

- 1. On the Canvas page, double-click the name of the ONTAP cluster on which you want to provision volumes.
- 2. Click Add New Volume.
- 3. On the Create New Volume page, enter details for the volume, and then click **Create**.

Some of the fields in this page are self-explanatory. The following table describes fields for which you might need guidance:

Field	Description
Size	The maximum size that you can enter largely depends on whether you enable thin provisioning, which enables you to create a volume that is bigger than the physical storage currently available to it.
Snapshot Policy	A Snapshot copy policy specifies the frequency and number of automatically created NetApp Snapshot copies. A NetApp Snapshot copy is a point-in-time file system image that has no performance impact and requires minimal storage. You can choose the default policy or none. You might choose none for transient data: for example, tempdb for Microsoft SQL Server.
Access control (for NFS only)	An export policy defines the clients in the subnet that can access the volume. By default, Cloud Manager enters a value that provides access to all instances in the subnet.
Permissions and Users / Groups (for CIFS only)	These fields enable you to control the level of access to a share for users and groups (also called access control lists or ACLs). You can specify local or domain Windows users or groups, or UNIX users or groups. If you specify a domain Windows user name, you must include the user's domain using the format domain\username.

Field	Description
Initiator group and IQN (for iSCSI only)	iSCSI storage targets are called LUNs (logical units) and are presented to hosts as standard block devices.
	Initiator groups are tables of iSCSI host node names and control which initiators have access to which LUNs.
	iSCSI targets connect to the network through standard Ethernet network adapters (NICs), TCP offload engine (TOE) cards with software initiators, converged network adapters (CNAs) or dedicated host bust adapters (HBAs) and are identified by iSCSI qualified names (IQNs).
	When you create an iSCSI volume, Cloud Manager automatically creates a LUN for you. We've made it simple by creating just one LUN per volume, so there's no management involved. After you create the volume, select it, click Target IQN, and then use the IQN to connect to the LUN from your hosts.
Usage Profile	Usage profiles define the NetApp storage efficiency features that are enabled for a volume.

# **Creating volumes from templates**

If your organization has created on-premises ONTAP volume templates so you can deploy volumes that are optimized for the workload requirements for certain applications, follow the steps in this section.


The template should make your job easier because certain volume parameters will already be defined in the template, such as disk type, size, protocol, snapshot policy, and more. When a parameter is already predefined, you can just skip to the next volume parameter.




You can only create NFS or CIFS volumes when using templates.

#### **Steps**


- 1. On the Canvas page, click the name of the on-premises ONTAP system on which you want to provision a volume.
- 2. Click > Add Volume From Template.

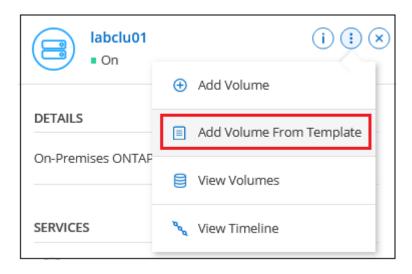

3. In the Select Template page, select the template that you want to use to create the volume and click **Next**.

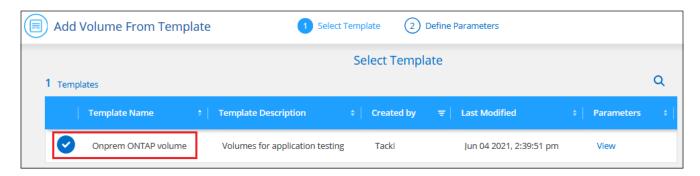

The Define Parameters page is displayed.

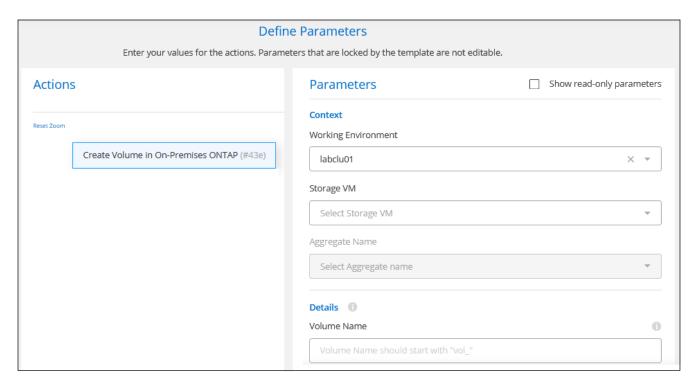


**Note:** You can click the checkbox **Show read-only parameters** to show all the fields that have been locked by the template if you want to see the values for those parameters. By default these predefined fields are hidden and only the fields you need to complete are shown.

- 4. In the *Context* area, the Working Environment is filled in with the name of the working environment you started with. You need to select the **Storage VM** and **Aggregate** where the volume will be created.
- 5. Add values for all of the parameters that are not hard-coded from the template. See creating volumes for details about all the parameters you need to complete to deploy an on-prem ONTAP volume.
- 6. Click **Run Template** after you have defined all the parameters needed for this volume.

#### Result

Cloud Manager provisions the volume and displays a page so that you can see the progress.

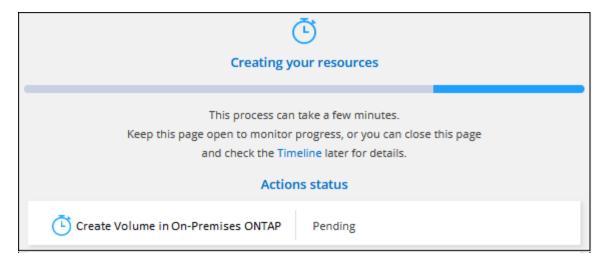

Then the new volume is added to the working environment.

Additionally, if any secondary action is implemented in the template, for example, enabling Cloud Backup on the volume, that action is also performed.

#### After you finish

If you provisioned a CIFS share, give users or groups permissions to the files and folders and verify that those users can access the share and create a file.

### Replicating data

You can replicate data between Cloud Volumes ONTAP systems and ONTAP clusters by choosing a one-time data replication, which can help you move data to and from the cloud, or a recurring schedule, which can help with disaster recovery or long-term retention.

Click here for more details.

## Backing up data

You can back up data from your on-premises ONTAP system to low-cost object storage in the cloud by using the Cloud Manager Cloud Backup service. This service provides backup and restore capabilities for protection and long-term archive of your cloud data.

Click here for more details.

## Tiering data to the cloud

Extend your data center to the cloud by automatically tiering inactive data from ONTAP clusters to object storage.

Click here for more details.

#### **Copyright Information**

Copyright © 2021 NetApp, Inc. All rights reserved. Printed in the U.S. No part of this document covered by copyright may be reproduced in any form or by any means-graphic, electronic, or mechanical, including photocopying, recording, taping, or storage in an electronic retrieval system-without prior written permission of the copyright owner.

Software derived from copyrighted NetApp material is subject to the following license and disclaimer:

THIS SOFTWARE IS PROVIDED BY NETAPP "AS IS" AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, WHICH ARE HEREBY DISCLAIMED. IN NO EVENT SHALL NETAPP BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

NetApp reserves the right to change any products described herein at any time, and without notice. NetApp assumes no responsibility or liability arising from the use of products described herein, except as expressly agreed to in writing by NetApp. The use or purchase of this product does not convey a license under any patent rights, trademark rights, or any other intellectual property rights of NetApp.

The product described in this manual may be protected by one or more U.S. patents, foreign patents, or pending applications.

RESTRICTED RIGHTS LEGEND: Use, duplication, or disclosure by the government is subject to restrictions as set forth in subparagraph (c)(1)(ii) of the Rights in Technical Data and Computer Software clause at DFARS 252.277-7103 (October 1988) and FAR 52-227-19 (June 1987).

#### **Trademark Information**

NETAPP, the NETAPP logo, and the marks listed at <a href="http://www.netapp.com/TM">http://www.netapp.com/TM</a> are trademarks of NetApp, Inc. Other company and product names may be trademarks of their respective owners.