
HYDROWORX

YOUR POTENTIAL ◆ ACHIEVED

THRIVE

TRANSPORTABLE PLUNGE

Owner's Manual

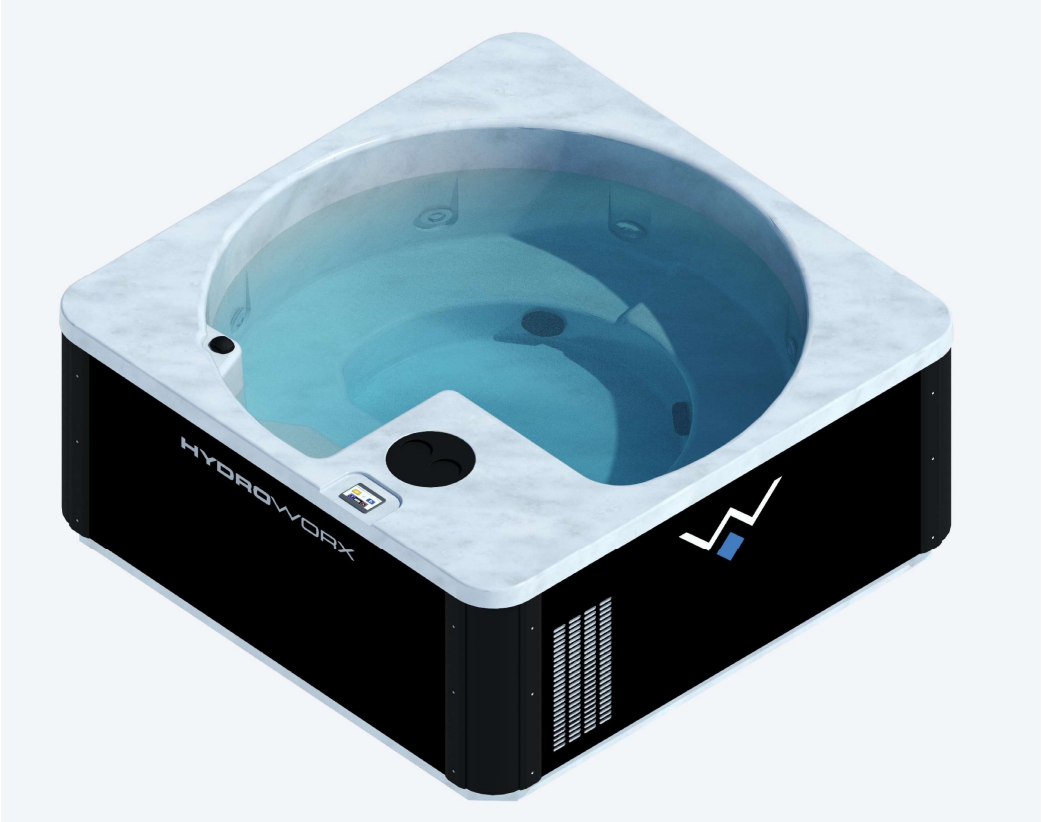

HYDROWORX
1420 Stone Ridge Drive, Suite C, Middletown PA 17057
717-902-1923
HydroWorx.com

Contents

1.0 Disclaimer and Confidentiality Notice 3

2.0 Product Description 3

3.0 Limited Warranty 4

4.0 Safety 6

5.0 Operating Instructions 9

5.1 Placing the Unit 9

5.2 Fill and Start-up 9

5.2.1 Filling the Unit 9

5.2.2 System start-up 10

5.3 Spa Jets 10

5.4 LED Light 10

5.5 Heater 10

5.6 Chiller 11

5.7 HMI Controls 12

6.0 Maintenance Instructions 15

6.1 Maintenance quick reference schedule 15

6.2 Water Maintenance 15

6.2.1 Chemicals needed to maintain the water: 15

6.2.2 Potential Issues with Imbalanced Water 15

6.2.3 Alkalinity 16

6.2.4 Calcium Hardness 16

6.2.5 pH 16

6.2.6 Bromine 16

6.2.7 Filter 17

6.3 Cleaning 18

6.3.1 What to use: 18

6.3.2 What not to use: 18

6.3.3 Weekly cleaning 18

6.3.4 Monthly Cleaning 18

6.4 GFCI 19

Appendix A – Drawings and Illustrations 20

1.0 Disclaimer and Confidentiality Notice

This confidential Owner's Manual (the "Manual") is delivered to parties (the "Recipient") who have purchased a HydroWorx System from HydroWorx International, Inc. This Manual is highly confidential and proprietary. Receipt of the Manual is solely in connection with the Recipient's consideration of the enclosed information. Use of this Manual for any other purpose is not authorized.

By accepting this Manual, the Recipient agrees to keep confidential the information contained herein or made available by the Company in connection with any service, maintenance, or repair of the HydroWorx System. By accepting this Manual, the Recipient also agrees to make no copies of the Manual in whole, in part, or in any form and to use this Manual solely for the purposes of understanding the proper use of the HydroWorx System.

2.0 Product Description

The HydroWorx THRIVE is a cord-convertible, self-contained, hydrotherapy system constructed of an acrylic tub, wooden structure, and plastic siding. It incorporates controls, spa jets, a water recirculation system (pump, filter, sanitizer), chiller and/or heater, 3-way valve, and luminaire. The THRIVE is available in several configurations: cold only, hot only, or hot/cold combination. It is also available for indoor use only or for indoor/outdoor use.

Note: The 240V model is hardwired.

The HydroWorx THRIVE is designed to accommodate multiple persons during treatment sessions with a therapist in the room for supervision.

Specifications	
Weight (empty)	500 lb
Weight (full) without bathers	2600 lb
Length	78.5"
Width	78.5"
Height	34"
Volume of water	250 gal
Water depth	25"
Recirculation flow rate	15-20 gpm
Jets flow rate	35-40 gpm
Water Temperature	42^0 – 104^0 F

3.0 Limited Warranty

HydroWorx International, Inc. (HydroWorx) warrants solely to the original Buyer that this product, consisting of the pool shell, mechanical systems, jet system(s), and electronic controls, will be free from defects in materials and workmanship, when given normal, proper, and intended installation and usage, for the period set forth within the enclosed Operations and Maintenance Manual.

Warranty expires the sooner of 12 months from receipt of delivery. Warranty is void if technical start-up checklist and equipment warranty activation forms are not received by HydroWorx upon completion of installation.

LIMITED WARRANTY PERIOD	COMPONENTS COVERED
One (1) Year	▪ Water Circulation Equipment* (heater, chiller, filter housing, and pump) ▪ Spa Jet system ▪ Control System ▪ LED Light
Five (5) Year	▪ Acrylic tub and frame

*Proper maintenance schedules must be followed to keep the warranty intact.

During the limited warranty period, HydroWorx will repair or replace, at its option and without cost to the Buyer, any portion of the product which is confirmed by HydroWorx to be defective.

This warranty shall not apply to any expendable component, such as, but not limited to chemicals, fuses, filters, and lubricants. HydroWorx shall have no obligations to make repairs or replacements which result, in whole or in part, from (I) catastrophe, fault or negligence of Buyer, (II) improper or unauthorized use of product, (III) maintenance or installation of the product which is not in full compliance with the requirements of the HydroWorx Owner's Manual and Design and Installation Guide, (IV) the presence of debris or silt in the product, (V) the failure to maintain water cleanliness and chemistry, accordance with the recommendations of recirculation equipment suppliers, (VI) any modification of the product (including, but not limited to, removal or affixing any object to the equipment or removing any component part of the product without prior specific written instruction from HydroWorx), or (VII) causes external to the product such as, but not limited to, power failure.

In the event after inspection by HydroWorx the product proves not to be defective or is not subject to the warranty protection because of normal use, wear and tear, misuse, lapse of time, accident, modification, or any other exclusion specified above, the Buyer will be charged for repair or replacement services at HydroWorx's standard rates then in effect together with the "portal to portal" expenses incurred by HydroWorx in providing the service.

The provisions of the foregoing warranty are in lieu of any other warranty, whether express or implied, written or oral, including any warranty of merchantability or fitness for a particular purpose. HydroWorx's liability arising out of the manufacture, sale or supplying of the products or its use or disposition whether based upon warranty, contract, tort or otherwise, shall not exceed the actual purchase price paid by the buyer for the product. In no event shall HydroWorx be liable to buyer or any other person or entity including, but not limited to, loss of profits or loss of use of damages arising out of the manufacture, sale or supplying of the product the foregoing warranty applies to the buyer only and shall not extend to any other person or entity, including, without limitation, customers of the buyer.

Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to some buyers. This warranty gives the buyer specific legal rights, and the buyer may also have other rights which vary from state to state.

Warning: users should not use this equipment without constant adult supervision from a qualified practitioner who has been trained on the use of the HydroWorx system. Users should consult his/her physician before using this equipment. At all times HydroWorx disclaims and shall not be liable for any personal injury sustained by any user whether authorized or unauthorized, of the product.

Any modification to the as-delivered and installed unit that is not made by the factory or factory authorized personnel shall be interpreted as an unauthorized modification. Any unauthorized modification that is not reviewed and approved by HydroWorx prior to making such modification of the unit or any other device sold by or through HydroWorx shall release HydroWorx of any and all liability for personal injury or property damage relating to or arising from use with the modified product. Any modification to a HydroWorx product not approved by HydroWorx shall void any and all warranty of the product.

The unit must be installed in accordance with the THRIVE Design & Installation Guide. Any variance not approved by HydroWorx may result in a voided warranty.

4.0 Safety

IMPORTANT SAFETY INSTRUCTIONS.

READ AND FOLLOW ALL INSTRUCTIONS.

SAVE THESE INSTRUCTIONS.

READ THIS MANUAL ENTIRELY BEFORE OPERATING THE UNIT.

⚠ DANGER

- **Risk of Injury**
  - Replace damaged power cord immediately.
  - Do not bury power cord.
  - Connect to a grounded, grounding type receptacle only.
- **Risk of Accidental Drowning** . Extreme caution must be exercised to prevent unauthorized access by children. To avoid accidents, ensure that children cannot use this spa unless they are supervised at all times.
- **Risk of Injury.** The suction fittings in this unit are sized to match the specific water flow created by the pump. Should the need arise to replace the suction fittings or the pump, be sure that the flow rates are compatible.
  Never operate the unit if the suction fittings are broken or missing. Never replace a suction fitting with one rated less than the flow rate marked on the original suction fitting.
- **Risk of Electric Shock.** Install at least 5 feet from all metal surfaces. As an alternative, the unit may be installed within 5 feet of metal surfaces if each metal surface is permanently connected by a minimum 8AWG solid copper conductor to the wire connector on the terminal box that is provided for this purpose.
- **Risk of Electric Shock.** Do not permit any electrical appliance, such as a light, telephone, radio, or television, within 5 feet of the unit.

⚠ WARNING

- To reduce the risk of injury
  - The water in the unit should never exceed 104°F. Water temperatures between 100°F and 104°F are considered safe for a healthy adult. Lower water temperatures are recommended for young children and when use exceeds 10 minutes.

- Since excessive water temperatures have a high potential for causing fetal damage during the early months of pregnancy, pregnant or possibly pregnant women should limit the water temperature to 100°F.
- Before entering the unit, the user should measure the water temperature since the tolerance of water temperature-regulating devices varies.
- The use of alcohol, drugs, or medication before or during use of the unit may lead to unconsciousness with the possibility of drowning.
- Obese persons and persons with a history of heart disease, low or high blood pressure, circulatory system problems, or diabetes should consult a physician before entering the unit.
- Persons using medication should consult a physician before using the unit since some medication may induce drowsiness while other medication may affect heart rate, blood pressure, and circulation.

- **REDUCE THE RISK OF ELECTROCUTION**
  - Be sure spa is protected by a ground fault interrupter breaker and test prior to each use.
- **REDUCE THE RISK OF CHILD DROWNING**
  - To reduce the risk of injury, do not permit children to use this product unless they are closely supervised at all times.
  - Attach spa cover after each use.
- **REDUCE THE RISK OF HYPOTHERMIA**
  - Caution should be used with cold water temperatures due to the potential of hypothermia (body temperature below 95^0).
  - Hypothermia can lead to unconsciousness, confusion or memory loss, and impaired motor skills.
  - Check with a doctor before use if pregnant, diabetic, in poor health, or under medical care.
  - Exit immediately if uncomfortable, dizzy, or sleepy.
- User's shall always have supervision from a qualified aquatic therapy practitioner or exercise specialist (therapist).
- If the user begins to feel unwell while using the unit it is important to exit the unit immediately.

⚠ CAUTION

- Unauthorized service, repair, or replacement of parts may void your warranty and may damage the unit or injure the user or therapist.

- Maintain proper water chemistry. Improper water chemistry may cause skin and eye irritation as well as damage to the unit.

SAFETY FEATURES

- The unit shall be connected to a GFCI protected circuit.
- Installation shall comply with this document, the THRIVE Design and Installation Guide, the National Electric Code, and any other local codes.
- A wire connector is provided on this unit to connect a minimum 8AWG solid copper conductor between this unit and any metal equipment, metal enclosures or electrical equipment, metal water pipe, or conduit within 5 feet of the unit.

5.0 Operating Instructions

Install the THRIVE in accordance with the THRIVE Design and Installation Guide.

Refer to Appendix A for diagrams showing the various components of the THRIVE.

5.1 Placing the Unit

Upon receipt of your HydroWorx THRIVE, please perform a careful inspection of the unit to make sure that no cosmetic or structural damage occurred during shipping and handling. Contact HydroWorx immediately if there are questions or issues concerning the status of the unit after delivery.

The THRIVE is designed to be a transportable unit that will fit into existing spaces. The THRIVE will fit through a standard 36" doorway opening by turning it on its side. The unit should be turned onto the side of the stairs. When turned on its side, the dollies must span the full side of the unit. When going through doorways it may be necessary to take the unit off the dollies and slide it on its side. The THRIVE is shipped with a PVC pipe transport cradle to protect it when turned on its side. Use carpet or plywood to protect the facility floor from scratches. Several people will be required to move and stabilize the unit for the duration of the transport process. Once the unit is in its final location there is no need to wait for the chiller to settle, you can start it up when ready.

It is essential that all design requirements in the THRIVE Design & Installation guide are met. Items to consider when locating the unit include proximity to available electrical power, area drainage, such as floor or trench drains, and hose bibb to fill unit. It is also critical to leave adequate clear space around the unit for both air flow and access for routine maintenance.

5.2 Fill and Start-up

5.2.1 Filling the Unit

Prior to filling the unit remove the temporary label located inside the tub. Also prior to filling the unit install the provided permanent hydrotherapy room warning sign within line of sight of the unit. All users should read this sign before using the unit. If the owner needs additional or replacement signs, contact HydroWorx.

NOTICE Do not power up the THRIVE until it is full of water and air has been bled from the piping. To start filling, open the air release valve on the topside of the filter lid by turning the knob counterclockwise. This will allow air to escape from the plumbing system while the unit is filling with water. Trapped air could cause an air lock in the system and lead to poor performance or failure. Check for leaks as the THRIVE fills.

The THRIVE will hold approximately 250 gallons of water and is typically filled with a garden hose. Fill the tub until the water level is approximately 6" below the top of the unit. *NOTE: The water level in the unit will rise when people are using it. The static water level may need to be adjusted depending on the number of simultaneous users.*

5.2.2 System start-up

After the unit has been filled to the appropriate level, plug the THRIVE into a dedicated 120V 20A outlet. Once energized, the recirculation pump will start on low speed. Any excess air in the plumbing lines will be discharged through the air bleed valve on the top of the filter. Once a steady stream of water starts to flow from the valve, close the air bleed by turning the knob in a clockwise direction. If your THRIVE is a hot/cold combo, switch between heat and chill modes to fill both devices with water. Test and balance the water using the supplied water testing kit and start up chemicals.

5.3 Spa Jets

The THRIVE is equipped with five spa jets that are placed in various locations around the unit. The spa jets are used to provide message to individual users as well as to enhance the user experience. Air bubbles can be added to the water to increase the effectiveness of each jet.

To operate the spa jets:

1. Press the spa jet button on the HMI. This will switch the pump to high speed.
2. To introduce air into the spa jet system, turn the air flow knob located on the top of the THRIVE unit in a counterclockwise direction.
3. To reduce or stop the mixture of air, turn the air flow knob clockwise.
4. The intensity of each spa jet can be controlled individually by turning the faceplate of each jet counterclockwise (more flow) or clockwise (less flow or off).
5. The spa jet system is factory set to turn off after 15 minutes of continuous use but may also be turned off manually at any time by pressing the spa jet button again.

5.4 LED Light

The THRIVE is equipped with a LED light installed below the waterline that can be used to illuminate the water below the surface. To turn the light on/off, simply press the light button on the HMI. Pressing the button multiple times quickly will change the color of the light.

5.5 Heater

The THRIVE can be equipped with an electric heater. The water temperature can be adjusted by pressing the up and down arrows on the HMI to the desired temperature. The temperature set point can be locked with a password to prevent bathers from changing the temperature. See the HMI section for more details.

Please note that it can take 1.5 days for the water to heat up when the unit is filled with cold tap water. To assist in bringing the water up to temperature faster, and to help maintain temperature setpoint, please install the provided insulated pool cover when not in use.

The THRIVE is equipped with a built-in thermometer. Check the temperature of the water before each use. The current temperature is displayed at the top of the HMI. If the temperature is higher than 104°F do not enter until the temperature drops below 104°F. If the temperature does not drop below 104°F, turn off the power to the THRIVE and contact HydroWorx.

⚠ WARNING Prolonged immersion in hot water may induce hyperthermia. Hyperthermia occurs when the internal temperature of the body reaches a level several degrees above the normal body temperature of 98.6°F. The symptoms of hyperthermia include an increase in the internal temperature of the body, dizziness, lethargy, drowsiness, and fainting. The effects of hyperthermia include failure to perceive heat; failure to recognize the need to exit the THRIVE; unawareness of impending hazard; fetal damage in pregnant women; physical inability to exit the THRIVE; and unconsciousness resulting in the danger of drowning. The use of alcohol, drugs, or medication can greatly increase the risk of fatal hyperthermia.

5.6 Chiller

The THRIVE can be equipped with an air-cooled chiller. The water temperature can be adjusted by pressing the up and down arrows on the HMI to the desired temperature. The temperature set point can be locked with a password to prevent bathers from changing the temperature. See the HMI section for more details.

Please note that it can take 1.5 days for the water to chill to the lowest setpoints. To assist in bringing the water down to temperature faster, and to help maintain temperature setpoint, please install the provided insulated pool cover when not in use.

The THRIVE is equipped with a built-in thermometer. The current temperature is displayed at the top of the HMI.


The THRIVE chiller has an exhaust fan. The fan has a variable speed control knob located on the top of the main control panel. The fan speed can be increased to increase chilling performance, or it can be reduced to limit fan noise.

⚠ WARNING Prolonged immersion in cold water may induce hypothermia. Hypothermia occurs when the internal temperature of the body reaches a level several degrees below the normal body temperature of 98.6°F. The symptoms of hypothermia include a decrease in the internal temperature of the body, shivering, exhaustion, confusion, memory loss, slurred speech, drowsiness, and impaired motor skills. The effects of hypothermia include low

respiration and heart rate; physical inability to exit the THRIVE; and unconsciousness resulting in the danger of drowning. The use of alcohol, drugs, or medication can greatly increase the risk of hypothermia.


5.7 HMI Controls

The THRIVE is equipped with an HMI screen (Human Machine Interface). This is a touchscreen and works with wet fingers.

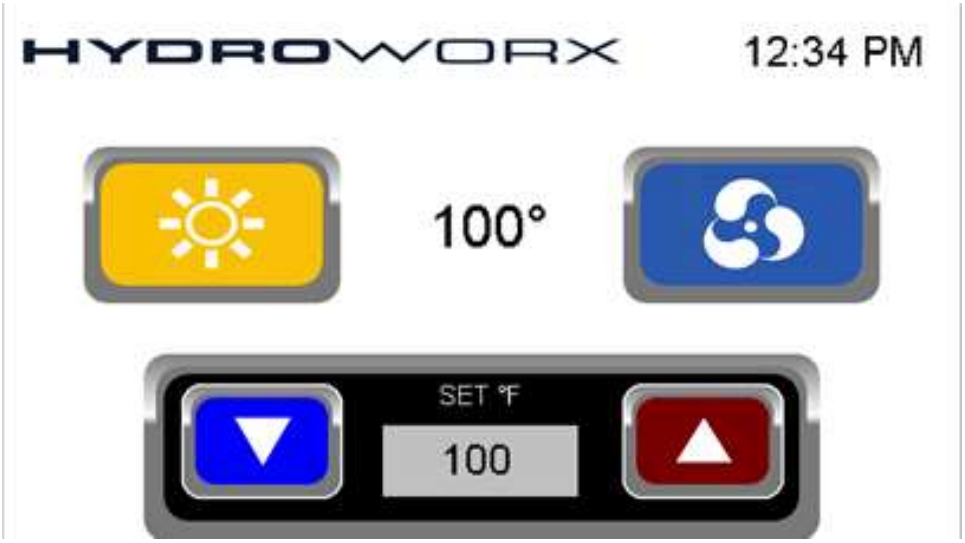

Main Screen

- Light (Yellow Button): When pressed this button will turn the light on and off.
- Jet (Blue Button): When pressed this button will turn the jet on and off.
- Time: This displays the local time.
- Current Water Temperature (located in the center of the screen): This displays the current water temperature.
- Set °F: This displays the temperature the thermostat is currently set to.
- Lower Temp. (blue down arrow button): When pressed this button lowers the set °F one degree. If the button is pressed and held for a few seconds, the set point will change to the min temperature, however it will not change the heat/chill mode unless it is in auto mode. The password set temp button on the secondary screen must be unlocked(green light) to change the temperature.
- Raise Temp. (red up arrow button): When pressed this button raises the set °F one degree. If the button is pressed and held for a few seconds, the set point will change to the max temperature, however it will not change the heat/chill mode unless it is in auto mode. The password set temp button on the secondary screen must be unlocked(green light) to change the temperature.

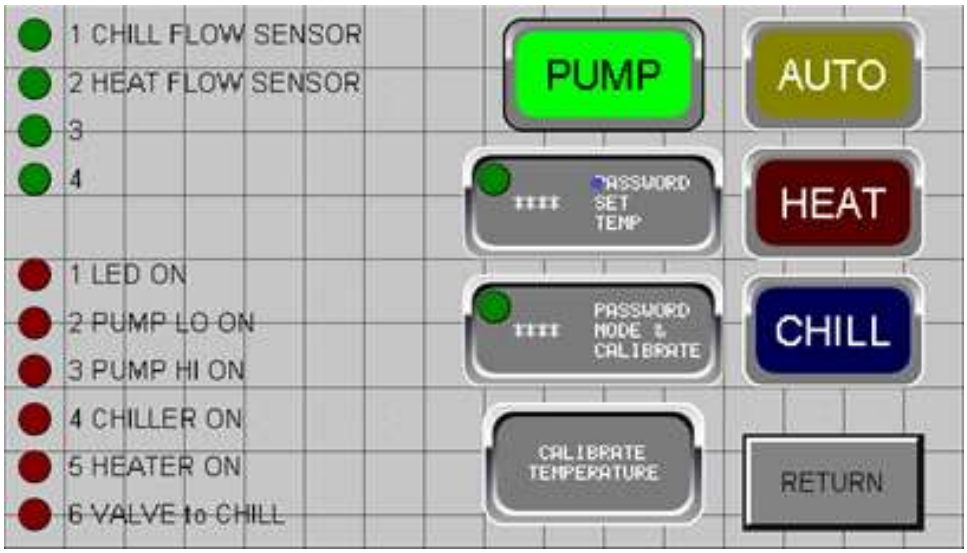

Secondary Screen: to access the screen, press the HydroWorx logo on the main screen.

- Auto: If the THRIVE is a combo hot/cold unit, when pressed this button will switch the heater and chiller to auto mode. This will allow the heater and chiller to switch back and forth as needed to maintain the set temperature. For example, if the unit is placed outdoors, the water temperature set point is 85°F, the day time ambient temperature is 95°F, and the night time ambient temperature is 70°F, the chiller would run during the day and the heater would run at night to maintain the set water temperature. The password mode & calibrate button must be unlocked(green light) to perform this function.
- Heat: If the THRIVE is a combo hot/cold unit, when pressed this button will switch the system to heat only mode. This will allow only the heater to run and will disable the chiller. The password mode & calibrate button must be unlocked(green light) to perform this function.
- Chill: If the THRIVE is a combo hot/cold unit, when pressed this button will switch the system to chill only mode. This will allow only the chiller to run and will disable the heater. The password mode & calibrate button must be unlocked(green light) to perform this function.
- Pump: When pressed this button will turn the pump on and off. This is useful when changing the filter. The password mode & calibrate button must be unlocked(green light) to perform this function.
- Password Set Temp: When pressed this button will allow the water set temperature to be locked or unlocked. When the indicator light on the button is green, the temperature can be changed by going to the main screen and using the up and down arrows. When the indicator light is red, the temperature is locked. To unlock/adjust the temperature, press the password set temp button. When the button is pressed the user will be prompted to enter the password. The password is 1420. To lock the temperature, press the password set temp button and enter 0.
- Password Mode & Calibrate: When pressed this button will allow the heat and chill modes to be changed, the pump to be turned on and off, and the temperature sensor to be calibrated. When the indicator light on the button is green, the functions can be

changed. When the indicator light is red, the functions cannot be changed. To unlock the functions, press the password mode & calibrate button. When the button is pressed the user will be prompted to enter the password. The password is 1923. To lock the functions, press the password mode & calibrate button and enter 0.

- Calibrate Temperature: When pressed this button will allow the temperature sensor to be calibrated. Do not attempt to perform a calibration without HydroWorx assistance.
- Return: When pressed this button will return the HMI back to the main screen.

6.0 Maintenance Instructions

6.1 Maintenance quick reference schedule

Daily:

- ✓ Check bromine and pH levels. Add chemicals directly to water as needed.
- ✓ Refill unit to maintain appropriate water level.
- ✓ Test the GFCI device.

Weekly:

- ✓ Shock water with lithium hypochlorite shock.
- ✓ Check alkalinity and calcium hardness levels.
- ✓ Check filter cartridge cleanliness.
- ✓ Wipe down the unit.

Monthly:

- ✓ Drain and thoroughly clean the unit.

6.2 Water Maintenance

Correct water quality is critical for user health and comfort as well as longevity of the unit. The THRIVE is supplied with a Taylor water chemistry test kit. This test kit will be used to determine chemical levels and recommendations on how to correct those levels if needed.

6.2.1 Chemicals needed to maintain the water:

- Alkalinity Increaser
- Alkalinity Decreaser-Dry Acid most recommended or Muriatic Acid
- Calcium Hardness Increaser
- Lithium Hypochlorite based Shock
- pH Increaser
- pH Decreaser
- Bromine granules or tablets
- Chem-Out Chlorine reducer/neutralizer

6.2.2 Potential Issues with Imbalanced Water

- Low Bromine: Inadequate disinfection. Does not kill contaminants properly.
- High Bromine: Corrodes surfaces and equipment. Irritates/ burns user's skin, eyes and respiratory system.
- Low pH: Corrodes surfaces & equipment. Excess sanitizer use. Irritates bather's skin & eyes. Plugs filter. Decreases your sanitizer effectiveness.
- High pH: Scale deposits on surfaces & equipment. May contribute to cloudy water. Poor sanitizer efficiency. Eye and skin irritation. Stains surfaces.

- Low Alkalinity: pH difficult to maintain. Corrosion tendencies. Stains surfaces. Dissolves metals.
- High Alkalinity: pH difficult to adjust, it remains fixed. Cloudy water. Potential for scaling. High pH and low sanitizer efficiency, sanitizer is pH dependent. Potential to plug filter.
- Low Calcium Hardness: May lead to equipment corrosion.
- High Calcium Hardness: May contribute to cloudy water. Scaling of surface, piping, and equipment. Can cause heater inefficiency. Plugs filters. Forms a white film.

6.2.3 Alkalinity

Alkalinity is your pH buffer. It protects your pH from rapid fluctuations. If any of your water chemistry needs adjusting always adjust your alkalinity first. Total alkalinity is the measure of the ability of water to resist changes in pH. Often, leveling your Alkalinity will balance your pH. Note: You cannot add more than one pound of alkalinity decreaser a day.

Ideal Range (80 to 120 ppm)
Safe Ranges from National Swimming Pool Foundations (60-180 ppm)
Weekly Test Required

6.2.4 Calcium Hardness

Water that contains little to no magnesium is called soft. If you have soft water when you add chemicals into the water, there is nothing for them to hold onto and they won't be effective. There are no chemicals that you can add to decrease your hard water. If your water is too hard you will need to use a water softener when filling the unit.

Recommend Range (250 ppm–350 ppm)
Weekly Test Required

6.2.5 pH

pH is very volatile. Minor issues can greatly change your pH. If your pH is low, then it is acidic. If it is high, then it is basic. Alkalinity and pH work hand in hand with each other. If one is out of range often the other will follow. Having your pH and Alkalinity in safe ranges is going to increase how effective your sanitizer will be.

Ideal Range (7.2 to 7.6)
Safe Ranges from National Swimming Pool Foundations (pH-7.2-7.8)
Daily Test Required

6.2.6 Bromine

Bromine is the primary sanitizer for the THRIVE. To control the Bromine level, add bromine tablets to the tubular erosion feeder inside the filter. The higher the user load, the more bromine will need to be added. It is also possible to utilize a floating erosion feeder (supplied by others) to slowly and continuously add sanitizer to the water.


Ideal Range (3.0 to 5.0 ppm)
Safe Ranges from National Swimming Pool Foundations (2-10 ppm)
Daily Test Required

6.2.7 Filter


The THRIVE is equipped with a cartridge filter and spare cartridge. The filter cartridges are cleanable and reusable. The filter cartridge should be checked weekly and cleaned and/or replaced as part of a routine maintenance schedule.

Filter cleaning process:

1. Follow the steps below to turn off power to the recirculation pump.
    a. Press the HydroWorx logo in the top left corner

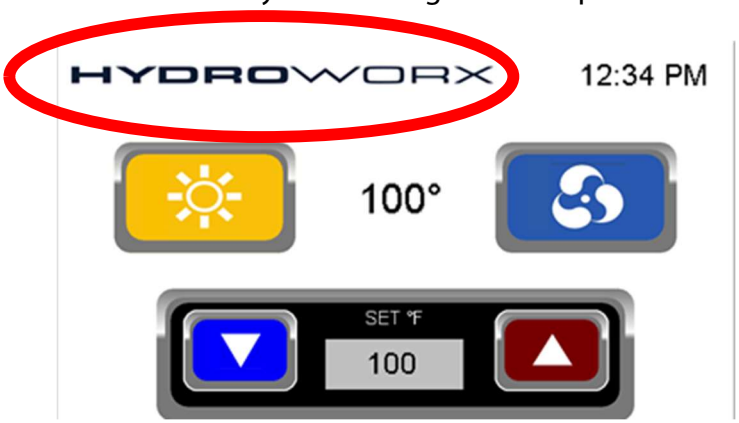

    b. This will take you to the secondary screen.

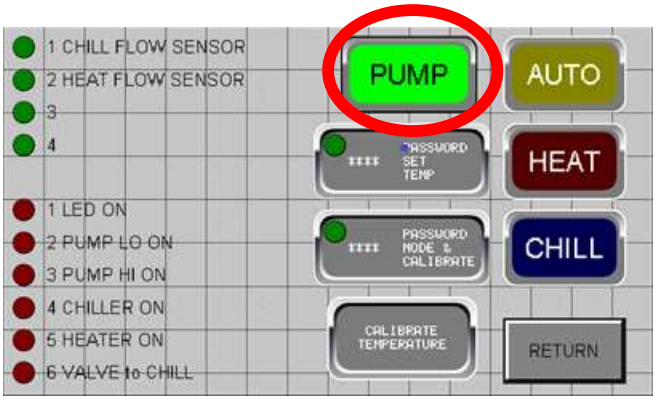

    c. Press the green PUMP button
2. Remove the black plastic filter cover plate.
3. Unscrew the lid on the filter and remove the filter cartridge.
4. Install a clean filter cartridge and screw the lid back on the filter.
5. Press the PUMP button again to restart the recirculation pump and press RETURN to go back to the main screen.
6. Partially unscrew the bleeder on top of the filter. This allows the air out of the system.
7. When a steady flow of water is coming out of the bleeder then the bleeder can be screwed closed.

8. The unit is now operational again.
9. To clean the used filter cartridge, rinse the outside with a hose. If rinsing alone does not fully clean the cartridge then the cartridge can be soaked in a tub with a pool filter cleaning solution such as Filter Cleanse. Follow cleaner manufacturer's directions.

6.3 Cleaning

The THRIVE should be wiped down weekly and thoroughly cleaned monthly. The THRIVE tub is made of acrylic with ABS fittings. These materials are corrosion resistant but proper cleaning is needed to maintain a like new appearance.

6.3.1 What to use:

- Mild detergent such as dish soap
- Plastic cleaner such as Novus #1 or Brillianize
- Clean, soft cotton or microfiber cloth
- 10-20% vinegar solution for scale buildup when needed

6.3.2 What not to use:

- Scour pads, scotch-brite pads, steel wool, sandpaper
- Paper towels
- Ammonia based cleaners like multipurpose kitchen/bathroom cleaners or Windex
- Alcohol based cleaners
- Bleach

6.3.3 Weekly cleaning

Every week the unit should be wiped down both inside and out. Use a plastic cleaner or mild detergent to clean plastics.

6.3.4 Monthly Cleaning

Every month the unit should be drained, thoroughly cleaned, and refilled with fresh water. The frequency of this routine cleaning can be adjusted based on user load.

1. Turn power off to the unit.
2. To drain the unit, use a sump pump and with garden hose attached.
3. Use a wet/dry vac to remove any remaining water from the bottom of the unit.
4. Thoroughly clean the entire inside of the unit with a mild detergent and soft cloth.
5. Rinse out the unit.
6. Pump out or vacuum out any rinse water standing in the unit.
7. Refill the unit with fresh water.
8. Plug the unit back in to restore power.
9. Follow water maintenance instructions to treat the water.

6.4 GFCI

The THRIVE is connected to a GFCI protected circuit. The GFCI device shall be tested before each use to verify it is operating correctly. 

Risk of electric shock or death. If the GFCI is not operating correctly turn off power to the unit and do not operate until it is fixed by a licensed electrician.

Note: The 240V model is hardwired only to a GFCI protected circuit.

Appendix A – Drawings and Illustrations

