

# SPARE PART CATALOG

16V2000G36F/545100133



*Power. Passion. Partnership.*

Printed in Germany

© 2016 Copyright MTU Friedrichshafen GmbH

This Publication is protected by copyright and may not be used in any way whether in whole or in part without the prior written permission of MTU Friedrichshafen GmbH. This restriction also applies to copyright, distribution, translation, microfilming and storage or processing on electronic systems including data bases and online services.

This handbook is provided for use by maintenance and operating personnel in order to avoid malfunctions or damage during operation.

Subject to alterations and amendments. **Business Portal Online Print 09-06-2023**

## Preface

This catalog is the basic reference document for ordering spare parts. Illustrations are provided for extensive assembly operations to assist trained personal in conducting such operations but do not claim to be complete. For better overview, even product components that are not available as spare parts are shown.

The individual components were taken from the assembly list.

### Amendments service

Part No. changes and amendments which occur after publication of the catalog are not published. We therefore recommend that users make a record of amendments in their catalogs. This information is provided, for instance, in order confirmations and on spare parts labels.

### Catalog structure

The catalog is divided into Function Groups (FG) and Function Group Segments (FGS) in ascending order according to the MTN 5153 works standard.

### Catalog pages

Depending on the type of the product, the header of the page contains the following information:

- **EQUIPMENT TYPE** or **EQUI TYPE** = e.g.: Engine, Gas Turbine, Automation, System; ...
- **PRODUCT TYPE** = e.g.: 16V4000M93 for EQUI TYPE "Engine", e.g. LM2500 for EQUI TYPE "Gas Turbine"
- **SERIAL NUMBER** = Serial number of a product type
- **BOM-No.** = Bill of material number
- **FUNCTION GROUP** or **FG** = Classification feature of the product according to works standard MTN 5153
- **FG/FGS** = Function Group/Function Group Segment
- **FG DESIGNATION**= Designation of the Function Group according to works standard MTN5153
- **GROUP NAME** = Designation of the bill of material

**Table columns**

The table contains the following columns depending on the product type.

-  Refers to the catalog page showing a detailed illustration of the part.
- **POS.** (position number): Provides a cross-reference between illustration and text section.
- **PART NO.:** This is the valid number for ordering the part in question (SAP material number).
- **DESIGNATION:** The precise MTU part name (description of the material in SAP).
- **MODEL/TYPE:** Is an additional specification.
- **QTY.** (quantity in unit):  
Indicates the quantity of this part required for the installation position shown in the illustration.  
Quantities not stated are available on request.
- **UNITS:** The unit of the specified quantity.  
PC=Piece, KG= Kilogram, M= Meter, ROL= Roll, PAK= Pack
- **WEIGHT:** Weight of the part in question.
- **FN** (footnote): Provides additional parts information. For clarification of footnote symbols, see next page.
- **MEASUREMENT:**  
The dimensions of the part in question.  
For purchase parts, this column may contain the name of the manufacturer.
- **STANDARD:** The applicable standard for the part in question.

**Key to the footnotes (column "FN")**

|            |                                                                                                                                  |
|------------|----------------------------------------------------------------------------------------------------------------------------------|
| <b>AB</b>  | Only available complete. Repair by manufacturer only.                                                                            |
| <b>AC</b>  | Not scheduled as a spare part. Availability must be checked.                                                                     |
| <b>ACN</b> | Not scheduled as a spare part. Availability must be checked. Component only available complete.                                  |
| <b>EM</b>  | Emission-relevant parts.                                                                                                         |
| <b>EMN</b> | Emission-relevant parts. Component only available complete.                                                                      |
| <b>KD</b>  | Group balancing required.                                                                                                        |
| <b>KE</b>  | Individual part; not scheduled as a spare part.                                                                                  |
| <b>KF</b>  | Calibrated spare part.                                                                                                           |
| <b>KFN</b> | Calibrated spare part. Component only available complete.                                                                        |
| <b>M</b>   | Spares-related components or parts with different repair sizes.<br>Dimensions are listed in the Tolerances and Wear Limits List. |
| <b>MN</b>  | Spares-related components or parts with different repair sizes. Components only available complete.                              |
| <b>MUB</b> | Spares-related components or parts with different repair sizes. Available only as complete set.                                  |
| <b>NN</b>  | Component is not broken down into further sub-components.                                                                        |
| <b>P</b>   | List of bought-in components.                                                                                                    |
| <b>SB</b>  | Group of parts which are welded or brazed together                                                                               |
| <b>UA</b>  | Indicate dimensions when ordering                                                                                                |
| <b>UB</b>  | Only supplied complete or as a complete set.                                                                                     |

## Ordering procedure

The following information is essential for spare-part order processing:

- Product type
- Serial No. (see nameplate)
- FG/FGS
- Item
- Part number
- Designation
- Model/Type
- Quantity
- Page

When ordering spare parts for ancillary equipment such as injection pump, fuel delivery pump, etc., give both model and part number of the part.

**When ordering a calibrated part** (marked by "KF", "KFN" in the "FN" column), type the following additional information in the **Comments** field:

If the calibration No. is known (see part's nameplate):

Add the calibration No., preceded by an oblique stroke, as an extension to the part number ("/xxxxx")

e.g.: 0025362810/E1234. Here, the extension "E1234" would be the part's calibration number on the nameplate.

If the calibration No. is not known:

Give a detailed description of the required part's installation location by quoting the complete Device Description Code (e.g. "= 37.1.1 + A022 - F003") plus the part number extension "/77" (e.g.: "5005362810/77")

In this case, the calibrated spare part will be supplied under a new part number.

The Device Description Code is found on the nameplate at the part's installation location, or in the corresponding wiring diagram.

When ordering a non-calibrated adjustable part (marked by "KF", "KFN" in the "FN" column) which should not be calibrated by the factory:

Add extension "/76" to the part number (e.g.: 5005362810/76)

Phone orders should be confirmed in writing to prevent errors.

## Ordering Example

| Product Type | Serial No.      | FG/FGS | Pos | Part number | Designation         | Qty. | Page |
|--------------|-----------------|--------|-----|-------------|---------------------|------|------|
| 16V4000R41   | 527101836       | 031 88 | 5   | 5270300701  | Crankshaft          | 1    | 33   |
|              |                 | 083 05 | 5   | 0020922801  | Fuel filter spin-on | 1    | 92   |
| Blue Line    | V4000M Waterjet | 517 00 | 75  | 5185301593  | Control console     | 1    | 53   |

## Factory repairs

Parts shipped to MTU for repair must be marked with the relevant engine serial number (tag or label, for example).

## Exchange components (Reman)

Exchange components are parts overhauled by the manufacturer. They have the same service life and quality characteristics as new parts.

Components which are included in the Reman exchange program are marked by the following letters in front of the part number:

For instance: **E 524 010 35 20 = New component in exchange program**  
**R 524 010 35 20 = Reman component in exchange program**

## Exchange procedure

With the introduction of exchange components, the so-called core deposit will also be charged for new parts. The core deposit will be indicated separately on the invoice and the respective value will be credited upon return of reusable components.

Further information upon request.

## Emission regulations and emission labels

### Responsibility for compliance with emission regulations

Modification or removal of any mechanical/electronic components or the installation of additional components including the execution of calibration processes that might affect the emission characteristics of the product are prohibited by emission regulations. Emission control units/systems may only be maintained, exchanged or repaired if the components used for this purpose are approved by the manufacturer. Noncompliance with these regulations will invalidate the design type approval issued by the emissions regulation authorities. The manufacturer does not accept any liability for violations of the emission regulations.

The maintenance schedules of the manufacturer must be observed over the entire life cycle of the product.


### Replacing components with emission labels

Emission labels are attached to all MTU engines. These must remain on the engine throughout its operational life. Engines used exclusively in land-based, military applications other than by US government agencies are excepted from this proviso.

Please note the following when replacing components with emission labels:

- Appropriate emission labels must be affixed on spare parts.
- Emission labels may not be transferred from old components to new ones.
- Emission labels on old components must be removed and destroyed.

### Engine side and cylinder designations

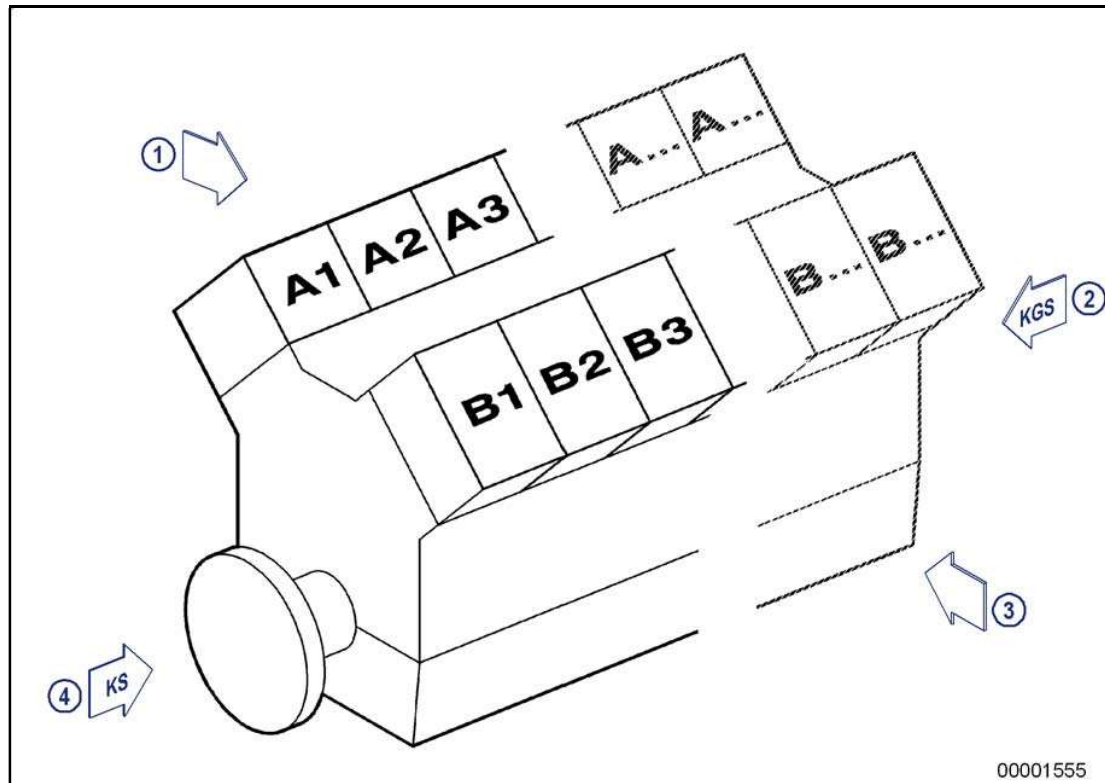

- |                                                                                      |                                                                               |
|--------------------------------------------------------------------------------------|-------------------------------------------------------------------------------|
| 1 Left engine side (A-side)                                                          | 3 Right engine side (B-side)                                                  |
| 2 Engine free end in accordance with<br>DIN ISO 1204<br>(KGS = Kupplungsgegensseite) | 4 Engine driving end in accordance with<br>DIN ISO 1204 (KS = Kupplungsseite) |

Engine sides are always designated (in accordance with DIN ISO 1204) as viewed from driving end (4).

For cylinder designation (in accordance with DIN ISO 1204) the letter "Ax" refers to the cylinders on the left-hand side of the engine (1) and letter "Bx" refers to the cylinders on the right-hand side (3). The cylinders of each bank are numbered consecutively, starting with x=1 at driving end (4).

The numbering of other engine components also starts with 1 at driving end (4).



**FG FG DESIGNATION**

**004 LABELS AND AUXILIARY MATERIALS**

**011 CRANKCASE**

**013 CYLINDER LINER**

**014 OIL PAN**

**015 ENGINE MOUNTING**

**016 END HOUSING, DRIVING END AND FREE END**

**018 CRANKCASE BREATHER**

**024 GEARCASE, AUX PTO END**

**031 CRANKSHAFT WITH BEARINGS**

**032 CRANKSHAFT, PTO ON DRIVING END**

**035 CRANKSHAFT, PTO ON AUX PTO END**

**037 PISTON**

**038 CONNECTING ROD**

**041 CYLINDER HEAD**

**051 CAMSHAFT**

**055 VALVE DRIVE**

**073 INJECTION PUMP / HP PUMP**

**075 FUEL INJECTOR**

**077 INJECTION LINE / HP FUEL LINE**

**081 FUEL PIPEWORK BEFORE DELIVERY PUMP**

**083 FUEL FILTER**

**086 LEAK-OFF FUEL LINE / FUEL RETURN**

**101 EXHAUST TURBOCHARGER, GENERAL OR H.P. TURBOCHARGER**

**121 AIR FILTER**

**123 AIR SYSTEM**

**124 AIR SUPPLY TO CYLINDERS**

**125 AIR ROUTING BETWEEN TURBOCHARGER AND CHARGE-AIR COOLER**

**141 EXHAUST SYSTEM AFTER CYLINDER HEAD**

**145 EXHAUST SYSTEM AFTER TURBOCHARGER**

**146 EXHAUST DUCTING AFTER ENGINE (TO END OF EXH. AFTERTREATMENT)**

**172 ELECTRIC STARTING**

**183 OIL FILTRATION/COOLING**

**184 CRANKCASE-INTERNAL OIL SUPPLY**

**185 TURBOCHARGER OIL SUPPLY**

**202 COOLANT CIRCUIT, GENERAL, HT CIRCUIT**

**205 COOLANT COOLER ATTACHING H/WARE**

**221 MECHANICAL FAN DRIVE**

**231 ENGINE MOUNTING**

**ZZ loose accessories**


GROUP SEGMENT (FGS)  
GROUP NAME  
BOM-No.

05  
PLATE  
000.00899




00400053a

05  
EMI-INFORMATION TAG  
XS524000.00019

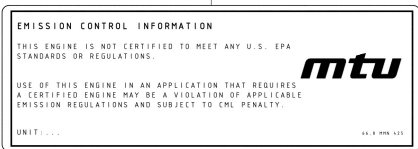

00400105a

05  
NAMEPLATE ENGLISH  
XS524000.00097

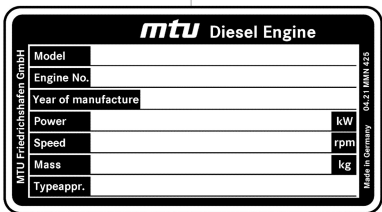

00400160