



Maintenance Schedule

Diesel-electric drilling unit

EPA/CARB

TE12V4000A1N

12V4000T25L

Application group 3B

MSE50816/01E

System designation	Engine model	Hz	kW	rpm	Application group
TE12V4000A1N	12V4000T25L	60 Hz	1364 kW	1800 rpm	3B, continuous service, variable load, ICXN

Table 1: Applicability

© 2021 Copyright Rolls-Royce Solutions America Inc.

This Publication is protected by copyright and may not be used in any way whether in whole or in part without the prior written permission of Rolls-Royce Solutions America Inc. This restriction also applies to copyright, distribution, translation, microfilming, and storage or processing on electronic systems including data bases and online services.

This handbook is provided for use by maintenance and operating personnel in order to avoid malfunctions or damage during operation.

Subject to alterations and amendments.

Table of contents

1	Maintenance Schedule		
1.1	Preface	4	
1.2	Maintenance task tolerances	6	
1.3	Maintenance task tolerances	7	
1.4	Load profile		8
1.5	Noncyclical maintenance tasks		9
1.6	Maintenance Schedule Matrix 30000 HRS		10
1.7	Cyclical maintenance tasks 30000 HRS		15

DocID: 0000000000 - 000

1 Maintenance Schedule

1.1 Preface

This manual provides instructions for your product from the manufacturer Rolls-Royce Solutions.

Maintenance concept

The maintenance schedule is applicable to products certified in accordance with U.S. emissions regulations and operated in the area of applicability of these regulations.

The following instructions must be observed for these products:

The maintenance schedule is an integral part of the emissions certification. Nonobservance of the maintenance instructions can result in violation of the statutory emissions regulations. Modification or removal of mechanical or electronic components or the installation of additional components as well as the execution of calibration processes that might affect the emissions characteristics of the product are prohibited by emissions regulations. Maintenance tasks that are mandatory to comply with the emission regulations are marked accordingly.

Although the warranty obligations are not dependent upon the use of any particular brand of spare parts, it is recommended that emissions-relevant components be serviced, replaced or repaired using only components approved by Rolls-Royce Solutions or their equivalent. Emissions-relevant components include amongst others control units, data records, sensors, injectors, exhaust turbochargers, exhaust flaps and all components of the exhaust aftertreatment systems. The use of spare parts that are not of equivalent quality to components approved by Rolls-Royce Solutions may impair the effectiveness of emissions control systems. Maintenance, replacement, or repair of emission control equipment and systems may be performed by any repair facility or person of the owner's choice.

The maintenance system for Rolls-Royce Solutions products is based on a preventive maintenance concept. Preventive maintenance facilitates advance operational planning and ensures a high level of equipment availability. The maintenance intervals as well as the required scopes of maintenance tasks are based on operational experience.

Adherence to the specified maintenance intervals is essential to maintain product safety. Additional maintenance work and/or changes to the maintenance intervals may be required in the case of difficult operational and ambient conditions.

The intervals according to which the maintenance tasks have to be carried out are specified as operating hours and time limits. Whichever value is reached first shall apply.

The maintenance intervals are determined and verified by the load profile. Load profiles can be evaluated by the Service Partner of Rolls-Royce Solutions. Reading out load profile data is recommended for the first time after between 500 and 1000 operating hours depending on the application concerned, or after changing the duty profile or operating area.

The individual maintenance intervals are assigned to the qualification levels QL1 to QL4.

QL1: Operational monitoring and maintenance work which does not require disassembly of the product.

QL2: Exchange of components and parts in case of repair (corrective only, not part of the maintenance schedule).

QL3: Maintenance work which requires partial disassembly of the product.

QL4: Maintenance work which requires complete disassembly of the product.

Additional notes on maintenance and preservation:

The relevant component manufacturer's instructions apply with respect to the maintenance of any components which do not appear in this maintenance schedule.

For the change intervals of fluids and lubricants, refer to the corresponding Fluids and Lubricants Specifications.

If the product is to remain out of service for a longer time period, Rolls-Royce Solutions recommends to carry out a monthly test run until engine operating temperature is reached. If the engine is scheduled to remain out of service for > 1 month, carry out engine preservation procedures in accordance with the Preservation and Represervation Specifications

The latest version of the specifications is available at <http://www.mtu-solutions.com>.

1.2 Maintenance task tolerances

Maintenance tasks shall be completed within certain tolerances comprising a percentage and a maximum value, whereby the smaller value shall apply. Taking full advantage of such tolerances does not influence the scheduled timing of the ensuing maintenance task.

Interval (HRS)/limit	Limit in %	Limit max.
Operating hours	± 10%	± 500 hrs
Years	± 10%	± 30 days
Example 1	Task every 1000 hrs	Between 900 hrs and 1100 hrs (10% of 1000 hrs)
Example 2	Task every 30000 hrs	Between 29500 hrs and 30500 hrs (10% of 30000 hrs, but max. 500 hrs)

1.3 Maintenance task tolerances

Maintenance tasks shall be completed within certain tolerances comprising a percentage and a maximum value, whereby the smaller value shall apply. Taking full advantage of such tolerances does not influence the scheduled timing of the ensuing maintenance task.

Interval (HRS)/limit	Limit in %	Limit max.
Operating hours	± 10%	± 500 hrs
Years	± 10%	± 30 days
Example 1	Task every 1000 hrs	Between 900 hrs and 1100 hrs (10% of 1000 hrs)
Example 2	Task every 30000 hrs	Between 29500 hrs and 30500 hrs (10% of 30000 hrs, but max. 500 hrs)

1.4 Load profile

Load profile		Load profile					
Load %	Time %	Load factor %	Load indicator %	0 to 125 kW/cyl.			
110 ₍₁₀₀₋₁₁₀₎	—	0 to 42	≤ 3	30,000	—	—	—
100 ₍₉₀₋₁₀₀₎	1						
90 ₍₈₀₋₉₀₎	1						
80 ₍₆₅₋₈₀₎	2						
65 ₍₅₀₋₆₅₎	6						
50 ₍₃₀₋₅₀₎	36						
30 ₍₅₋₃₀₎	54						
Idle Speed ₍₀₋₅₎	—						

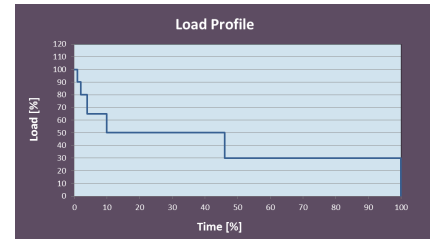


Table 2: Load profile

1.5 Noncyclical maintenance tasks

No.	Qualification	Task	Maintenance tasks	Reference task	Offset	Value	Unit	Option
0010	QL1	WM00094	Check valve clearance, adjust if necessary. ATTENTION! First adjustment after 1,000 operating hours on a new engine and after 1,000 operating hours following each cylinder head overhaul.		0	1000	HRS	
Reference task: Name of the maintenance task the offset refers to Offset: Interval of a maintenance task which depends on another interval Value: Fixed value for binding execution of a maintenance task								

1.6 Maintenance Schedule Matrix 30000 HRS

500 to 15000 Operating hours

Task	Limit	Operating hours [HRS]																			
		500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000	6500	7000	7500	8000	8500	9000	9500	10000
WM00112	1 DAY																				
WM00285	1 DAY																				
WM00286	1 DAY																				
WM00288	1 DAY																				
WM00289	1 DAY																				
WM00174	1 WK																				
WM01698	1 YR																				
WM00067	2 YR																				
WM00063	2 YR	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
WM00085	2 YR		X		X		X		X		X		X		X		X		X		X
WM00086	2 YR		X		X		X		X		X		X		X		X		X		X
WM00170	2 YR		X		X		X		X		X		X		X		X		X		X
WM00664	3 YR					X					X						X				X
WM00776	3 YR					X					X						X				X
WM00094	18 YR		X			X					X						X				X
WM00282	18 YR					X					X						X				X
WM00292	18 YR					X					X						X				X
WM00150	6 YR									X							X				X
WM00151	6 YR									X							X				X
WM00089	18 YR										X								X		
WM00090	18 YR										X								X		
WM00098	18 YR										X								X		
WM00110	18 YR										X								X		
WM00091	18 YR									X								X			X
WM00008	6 YR																				X
WM00054	18 YR																				X
WM00056	18 YR																				X
WM00062	18 YR																				X
WM00093	18 YR																				X
WM00096	18 YR																				X
WM00164	18 YR																				X
WM00921	18 YR																				X
WM00970	18 YR																				X
WM00971	18 YR																				X
WM00973	18 YR																				X
WM00974	18 YR																				X
WM00976	18 YR																				X
WM00981	18 YR																				X
WM00986	18 YR																				X
WM00006	6 YR																				

DAY = Days
 WK = Weeks
 YR = Years
 MON = Months
 HRS = Hours

TIM-ID: 000000000 - 000

Task	Limit	Operating hours [HRS]																													
		500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000	6500	7000	7500	8000	8500	9000	9500	10000	10500	11000	11500	12000	12500	13000	13500	14000	14500	15000
WM00011	18 YR																														
WM00072	18 YR																														
WM00079	18 YR																														
WM00087	18 YR																														
WM00160	18 YR																														
WM00980	18 YR																														
WM00001	18 YR																														
WM00002	18 YR																														
WM00070	18 YR																														
WM00081	18 YR																														
WM00088	18 YR																														
WM00092	18 YR																														
WM00095	18 YR																														
WM00099	18 YR																														
WM00100	18 YR																														
WM00103	18 YR																														
WM00104	18 YR																														
WM00108	18 YR																														
WM00111	18 YR																														
WM00137	18 YR																														
WM00353	18 YR																														
WM00439	18 YR																														
WM00945	18 YR																														
WM01490	3 MON	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
WM00222	1 YR																														
WM00148	3 YR																														
WM00979	18 YR																														
WM01701	1 DAY																														
WM01702	1 DAY																														
WM01703	1 WK																														
WM01704	1 WK																														
WM01705	1 WK																														
WM01706	1 YR												X											X							
WM01707	1 YR												X											X							
WM01708	1 YR												X											X							
WM01709	1 YR												X											X							
WM01710	1 YR												X											X							
WM01711	18 YR																														
WM01699	1 YR												X											X							
WM00258	1 DAY																														
WM00265	-		X		X		X		X		X		X		X		X		X		X		X		X		X		X		X
WM00266	6 MON						X					X					X						X								X
WM00260	-															X															
WM00259	1 YR															X															
DAY = Days																															
WK = Weeks																															
YR = Years																															
MON = Months																															
HRS = Hours																															

TIM-ID: 000000000 - 000

Task	Limit	Operating hours [HRS]																													
		15500	16000	16500	17000	17500	18000	18500	19000	19500	20000	20500	21000	21500	22000	22500	23000	23500	24000	24500	25000	25500	26000	26500	27000	27500	28000	28500	29000	29500	30000
WM00151	6 YR										X									X											X
WM00089	18 YR						X												X												X
WM00090	18 YR						X												X												X
WM00098	18 YR						X												X												X
WM00110	18 YR						X												X												X
WM00091	18 YR										X									X											X
WM00008	6 YR																														X
WM00054	18 YR																														X
WM00056	18 YR																														X
WM00062	18 YR																														X
WM00093	18 YR																														X
WM00096	18 YR																														X
WM00164	18 YR																														X
WM00921	18 YR																														X
WM00970	18 YR																														X
WM00971	18 YR																														X
WM00973	18 YR																														X
WM00974	18 YR																														X
WM00976	18 YR																														X
WM00981	18 YR																														X
WM00986	18 YR																														X
WM00006	6 YR																														X
WM00011	18 YR																														X
WM00072	18 YR																														X
WM00079	18 YR																														X
WM00087	18 YR																														X
WM00160	18 YR																														X
WM00980	18 YR																														X
WM00001	18 YR																														X
WM00002	18 YR																														X
WM00070	18 YR																														X
WM00081	18 YR																														X
WM00088	18 YR																														X
WM00092	18 YR																														X
WM00095	18 YR																														X
WM00099	18 YR																														X
WM00100	18 YR																														X
WM00103	18 YR																														X
WM00104	18 YR																														X
WM00108	18 YR																														X
WM00111	18 YR																														X
WM00137	18 YR																														X
WM00353	18 YR																														X
WM00439	18 YR																														X
DAY = Days																															
WK = Weeks																															
YR = Years																															
MON = Months																															
HRS = Hours																															

Task	Limit	Operating hours [HRS]																													
		15500	16000	16500	17000	17500	18000	18500	19000	19500	20000	20500	21000	21500	22000	22500	23000	23500	24000	24500	25000	25500	26000	26500	27000	27500	28000	28500	29000	29500	30000
WM00945	18 YR																														X
WM01490	3 MON	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
WM00222	1 YR																														
WM00148	3 YR																														
WM00979	18 YR																														X
WM01701	1 DAY																														
WM01702	1 DAY																														
WM01703	1 WK																														
WM01704	1 WK																														
WM01705	1 WK																														
WM01706	1 YR						X											X													X
WM01707	1 YR						X											X													X
WM01708	1 YR						X											X													X
WM01709	1 YR						X											X													X
WM01710	1 YR						X											X													X
WM01711	18 YR																														X
WM01699	1 YR						X											X													X
WM00258	1 DAY																														
WM00265	-		X		X		X		X		X		X		X		X		X		X		X		X		X		X		X
WM00266	6 MON						X					X						X						X							X
WM00260	-		X															X													
WM00259	1 YR		X															X													
WM00262	1 YR		X															X													
WM00264	1 YR		X															X													
WM00267	1 YR		X															X													
WM00293	1 YR		X															X													
WM00215	1 DAY																														
WM01717	1 WK																														
WM00214	2 YR		X		X		X		X		X		X		X		X		X		X		X		X		X		X		X
WM00233	1 WK																														
WM01700	1 WK																														
WM01712	1 WK																														
WM01713	1 WK																														
WM01714	1 WK																														
WM01715	1 WK																														
WM01716	18 YR																														X
WM00287	1 DAY																														
WM00076	3 YR						X					X					X						X								X
DAY = Days																															
WK = Weeks																															
YR = Years																															
MON = Months																															
HRS = Hours																															

1.7 Cyclical maintenance tasks 30000 HRS

Qualification	Interval [HRS]	Limit	Item	Maintenance tasks	Option	Task
Engine						
QL1	-	1 DAY	LABELS AND MISCELLANEOUS MATERIALS	Check emissions label for presence, legibility and contents		WM00112
QL1	-	1 DAY	ENGINE OPERATIONAL MONITORING	Check engine oil level		WM00285
QL1	-	1 DAY	ENGINE OPERATIONAL MONITORING	Visually inspect for leaks and general condition of engine		WM00286
QL1	-	1 DAY	ENGINE OPERATIONAL MONITORING	Check relief bore of coolant pump		WM00288
QL1	-	1 DAY	ENGINE OPERATIONAL MONITORING	When engine is running, check for abnormal running noises, exhaust gas color and vibrations		WM00289
QL1	-	1 WK	EMERGENCY AIR SHUT-OFF FLAPS	Check operation of emergency air shut-off flaps	X	WM00174
QL1	-	1 YR	TORSIONALLY RESILIENT COUPLING	Visually inspect and clean coupling for hydraulic pump. Replace damaged or faulty parts		WM01698
QL1	-	2 YR	LUBE OIL SYSTEM	Replace oil filter at every engine oil change, or when the time limit (years) is reached, at the latest	X	WM00067
QL1	500	2 YR	LUBE OIL SYSTEM	Automatic centrifugal oil filter, check layer thickness of oil residue, clean, and replace paper element at every engine oil change at the latest	X	WM00063
QL1	1000	2 YR	FUEL SYSTEM (LOW PRESSURE)	Additional filter, replace easy-change fuel filter	X	WM00085
QL1	1000	2 YR	FUEL SYSTEM (LOW PRESSURE)	Replace easy-change fuel filter		WM00086
QL1	1000	2 YR	AUXILIARY POWER TAKE-OFF	Check belt condition, replace if necessary. Adjust tension.	X	WM00170
QL1	3000	3 YR	COOLANT SYSTEM	Replace valve cover	X	WM00664
QL1	3000	3 YR	CRANKCASE BREATHER	Replace filter or filter element (coalescer filter)		WM00776
QL1	3000	18 YR	VALVE GEAR	Check valve clearance, adjust if necessary. ATTENTION! First adjustment after 1,000 operating hours on a new engine and after 1,000 operating hours following each cylinder head overhaul.		WM00094
QL1	3000	18 YR	EXHAUST RETURN	Check articulated rod for wear		WM00282
QL1	3000	18 YR	EXHAUST RETURN	Check axial clearance of EGR flaps		WM00292
QL1	5000	6 YR	SENSOR TECHNOLOGY AND WIRING HARNESS	Replace NOx sensor	X	WM00150
QL1	5000	6 YR	SENSOR TECHNOLOGY AND WIRING HARNESS	Replace Lambda sensor		WM00151
QL1	6000	18 YR	GOVERNOR	Reset drift correction parameters (CDC)		WM00089
QL1	6000	18 YR	FUEL SYSTEM (HIGH PRESSURE)	Replace fuel injection valve/injector		WM00090
QL1	6000	18 YR	CYLINDER HEAD	Measure valve protrusion		WM00098
QL1	6000	18 YR	RUNNING GEAR	Inspect cylinder liner with endoscope		WM00110
QL3	5000	18 YR	FUEL SYSTEM (HIGH PRESSURE)	Replace HP pump		WM00091
QL3	15000	6 YR	RUBBER SLEEVE	Replace rubber sleeve		WM00008
QL3	15000	18 YR	COOLANT SYSTEM	Check LT thermostat housing and replace thermal actuator		WM00054
QL3	15000	18 YR	COOLANT SYSTEM	Check HT thermostat housing and replace thermal actuator		WM00056
QL3	15000	18 YR	LUBE OIL SYSTEM	Check centrifugal oil filter for wear	X	WM00062
QL3	15000	18 YR	VALVE GEAR	Check rocker arm and valve bridge for wear. Visually inspect swing follower with endoscope through pushrod bore		WM00093
DAY = Days WK = Weeks YR = Years HRS = Hours MON = Months						

Qualification	Interval [HRS]	Limit	Item	Maintenance tasks	Option	Task
QL3	15000	18 YR	VALVE GEAR	Visually inspect camshaft running surfaces with endoscope through pushrod bore		WM00096
QL3	15000	18 YR	AIR PIPING TO CYLINDERS	Clean air piping		WM00164
QL3	15000	18 YR	COOLANT SYSTEM	Replace sealing material for installation of coolant pump(s) and thermostat(s) (only LT and HT)		WM00921
QL3	15000	18 YR	EXHAUST TURBOCHARGER	Overhaul or replace exhaust turbocharger		WM00970
QL3	15000	18 YR	STARTING SYSTEM	Overhaul or replace starter	X	WM00971
QL3	15000	18 YR	COOLANT SYSTEM	Overhaul or replace coolant pump in LT circuit		WM00973
QL3	15000	18 YR	COOLANT SYSTEM	Overhaul or replace coolant pump in HT circuit		WM00974
QL3	15000	18 YR	GENERATOR	Overhaul or replace battery-charging generator	X	WM00976
QL3	15000	18 YR	LUBE OIL SYSTEM	Clean oil cooler and check for leaks or replace		WM00981
QL3	15000	18 YR	AIR PIPING TO CYLINDERS	Clean intercooler and check for leaks or replace		WM00986
QL3	30000	6 YR	HOSE	Replace hose line		WM00006
QL3	30000	18 YR	FUEL SYSTEM (HIGH PRESSURE)	Replace HP fuel sensor		WM00011
QL3	30000	18 YR	EXHAUST SYSTEM	Replace exhaust pipe bellows		WM00072
QL3	30000	18 YR	EXHAUST TURBOCHARGER	Replace compressor wheel of exhaust turbocharger		WM00079
QL3	30000	18 YR	FUEL SYSTEM (LOW PRESSURE)	Replace pump		WM00087
QL3	30000	18 YR	EXHAUST RETURN	Replace flaps		WM00160
QL3	30000	18 YR	CYLINDER HEAD	Overhaul or replace cylinder head		WM00980
QL4	30000	18 YR	ENGINE, GENERAL	Replace elastomer parts and seals		WM00001
QL4	30000	18 YR	ENGINE, GENERAL	Disassemble engine completely. Check engine components according to assembly instructions, replace or repair as necessary		WM00002
QL4	30000	18 YR	LUBE OIL SYSTEM	Check pump, replace if necessary		WM00070
QL4	30000	18 YR	EXHAUST TURBOCHARGER	Replace turbine wheel		WM00081
QL4	30000	18 YR	FUEL SYSTEM (HIGH PRESSURE)	Replace pressure relief valve		WM00088
QL4	30000	18 YR	VALVE GEAR	Replace swing follower and swing follower shaft		WM00092
QL4	30000	18 YR	VALVE GEAR	Replace thrust bearing flange		WM00095
QL4	30000	18 YR	RUNNING GEAR	Replace conrod bearings		WM00099
QL4	30000	18 YR	RUNNING GEAR	Replace rings		WM00100
QL4	30000	18 YR	RUNNING GEAR	Replace crankshaft bearings		WM00103
QL4	30000	18 YR	GEAR TRAIN	Check tooth flanks in gear train for wear (visual inspection), replace bushing		WM00104
QL4	30000	18 YR	RUNNING GEAR	Replace cylinder liners		WM00108
QL4	30000	18 YR	CAMSHAFT	Replace camshaft bearings		WM00111
QL4	30000	18 YR	SENSOR TECHNOLOGY AND WIRING HARNESS	Replace wiring harness		WM00137
QL4	30000	18 YR	RUNNING GEAR	Replace conrod		WM00353
QL4	30000	18 YR	RUNNING GEAR	Replace vibration damper		WM00439
QL4	30000	18 YR	EXHAUST RETURN	Replace EGR cooler		WM00945
Starter						
QL1	500	3 MON	STARTING SYSTEM	Check acid level in starting battery, top up if required. Clean poles if necessary		WM01490
Preheater						
QL1	-	1 YR	PREHEATING	Preheater, check for function and leaks		WM00222
QL1	-	3 YR	PREHEATING	Preheater, replace thermostat (electric)		WM00148
QL1	30000	18 YR	PREHEATING	Overhaul or replace preheating unit		WM00979

DAY = Days
WK = Weeks
YR = Years
HRS = Hours
MON = Months

TIM-ID: 0000000000 - 000

Qualification	Interval [HRS]	Limit	Item	Maintenance tasks	Option	Task
Fan drive						
QL1	-	1 DAY	FAN DRIVE	Check hydraulic oil level, top up as necessary		WM01701
QL1	-	1 DAY	FAN DRIVE	Check filter contamination indicator, replace return filter as necessary		WM01702
QL1	-	1 WK	FAN DRIVE	Visually inspect fan drive hoses for leaks and damage, replace as necessary		WM01703
QL1	-	1 WK	FAN DRIVE	Visually inspect connections for leak-tightness. Re-tighten screw joints, replace as necessary. Replace damaged O-rings or seals		WM01704
QL1	-	1 WK	FAN DRIVE	Check air dehumidifier, replace as necessary		WM01705
QL1	6000	1 YR	FAN DRIVE	Check purity of hydraulic oil, replace hydraulic oil if purity is not within specifications		WM01706
QL1	6000	1 YR	FAN DRIVE	Check suction strainers, clean or replace as necessary		WM01707
QL1	6000	1 YR	FAN DRIVE	Check hydraulic pump, replace as necessary		WM01708
QL1	6000	1 YR	FAN DRIVE	Check hydraulic motor, replace as necessary		WM01709
QL1	6000	1 YR	FAN DRIVE	Check maximum speed of fan		WM01710
QL4	30000	18 YR	FAN DRIVE	Replace pump, motor and elastomer seals. Drain water from system and top up with hydraulic oil		WM01711
Coupling						
QL1	6000	1 YR	RESILIENT COUPLING	Visually inspect rubber element for damage		WM01699
Leroy Somer generator						
QL1	-	1 DAY	GENERATOR	Check winding temperature		WM00258
QL1	1000	-	GENERATOR	Clean terminal box and check screw connections for secure seating		WM00265
QL1	3000	6 MON	GENERATOR	Lubricate bearing		WM00266
QL1	8000	-	GENERATOR	Clean air inlet and air outlet		WM00260
QL1	8000	1 YR	GENERATOR	Check tightening torques of securing screws of sleeve bearings		WM00259
QL1	8000	1 YR	GENERATOR	Check polarization index		WM00262
QL1	8000	1 YR	GENERATOR	Re-tighten securing screws of diodes		WM00264
QL1	8000	1 YR	GENERATOR	Check protective devices		WM00267
QL1	8000	1 YR	GENERATOR	Clean diode		WM00293
Fuel prefilter						
QL1	-	1 DAY	FUEL SYSTEM (LOW PRESSURE)	Drain water and contaminants from fuel prefilter		WM00215
QL1	-	1 WK	FUEL SYSTEM (LOW PRESSURE)	Check function of suction pump		WM01717
QL1	1000	2 YR	FUEL SYSTEM (LOW PRESSURE)	Replace filter element		WM00214
Exhaust silencer						
QL1	-	1 WK	EXHAUST SILENCER	Check drain of silencer		WM00233
QL1	-	1 WK	EXHAUST SILENCER	Check spark arrester, clean as necessary		WM01700
Radiator						
QL1	-	1 WK	COOLING SYSTEM	Visually inspect cooler hoses, replace as necessary		WM01712
QL1	-	1 WK	COOLING SYSTEM	Visually inspect connections, re-tighten or replace as necessary		WM01713
QL1	-	1 WK	COOLING SYSTEM	Check general condition of cooling system		WM01714
QL1	-	1 WK	COOLING SYSTEM	Check coolant level, top up as necessary		WM01715
QL4	30000	18 YR	COOLING SYSTEM	Clean, flush and top up cooling system		WM01716
Combustion air ducting						
QL1	-	1 DAY	ENGINE OPERATIONAL MONITORING	Check maintenance indicator of air filter		WM00287
QL1	3000	3 YR	AIR SUPPLY SYSTEM	Replace air filter		WM00076

DAY = Days
 WK = Weeks
 YR = Years
 HRS = Hours
 MON = Months