



Maintenance Schedule

Diesel Engine

12V4000T95

12V4000T95L

12V4000T95R

16V4000T95

Application group 4D

MS50172/06E

Engine model	kW/cyl.	Application group
12V4000T95	155 kW/cyl.	4D, Frac-operation (continuous operation with low load)
12V4000T95L	162 kW/cyl.	4D, Frac-operation (continuous operation with low load)
12V4000T95R	140 kW/cyl.	4D, Frac-operation (continuous operation with low load)
16V4000T95	140 kW/cyl.	4D, Frac-operation (continuous operation with low load)

Table 1: Applicability

Rolls-Royce Solutions refers to Rolls-Royce Solutions GmbH or an affiliated company pursuant to § 15 AktG (German Stock Corporation Act) or a controlled company (joint venture), and Rolls-Royce Solutions Ruhstorf GmbH.

© Copyright Rolls-Royce Solutions

This publication is protected by copyright and may not be used in any way, whether in whole or in part, without the prior written consent of Rolls-Royce Solutions. This particularly applies to its reproduction, distribution, editing, translation, microfilming and storage and/or processing in electronic systems including databases and online services.

All information in this publication was the latest information available at the time of going to print. Rolls-Royce Solutions reserves the right to change, delete or supplement the information provided as and when required.

Table of contents

1	Maintenance Schedule		1.9	Maintenance Schedule Matrix 18000 HRS	21
1.1	Preface	4	1.10	Cyclical maintenance tasks 18000 HRS	25
1.2	Maintenance task tolerances	5	1.11	Maintenance Schedule Matrix 15000 HRS	27
1.3	Allocation matrix application group 4D	6	1.12	Cyclical maintenance tasks 15000 HRS	31
1.4	Noncyclical maintenance tasks	8	1.13	Maintenance Schedule Matrix 12000 HRS	33
1.5	Maintenance Schedule Matrix 24000 HRS	9	1.14	Cyclical maintenance tasks 12000 HRS	35
1.6	Cyclical maintenance tasks 24000 HRS	13	1.15	Maintenance Schedule Matrix 6000 HRS	37
1.7	Maintenance Schedule Matrix 21000 HRS	15	1.16	Cyclical maintenance tasks 6000 HRS	39
1.8	Cyclical maintenance tasks 21000 HRS	19			

1 Maintenance Schedule

1.1 Preface

This manual provides instructions for your product from the manufacturer Rolls-Royce Solutions.

Maintenance concept

The maintenance system for Rolls-Royce Solutions products is based on a preventive maintenance concept. Preventive maintenance facilitates advance operational planning and ensures a high level of equipment availability. The maintenance intervals as well as the required scopes of maintenance tasks are based on operational experience and therefore to be considered as recommendations. Additional maintenance work and/or changes to the maintenance intervals may be required in the case of difficult operational and ambient conditions.

Adherence to the specified maintenance intervals is essential to maintain product safety.

The intervals according to which the maintenance tasks have to be carried out are specified as operating hours and time limits. Whichever value is reached first shall apply.

The maintenance intervals are determined and verified by the load profile. Load profiles can be evaluated by the Service Partner of Rolls-Royce Solutions. Reading out load profile data is recommended for the first time after between 500 and 1000 operating hours depending on the application concerned, or after changing the duty profile or operating area.

The individual maintenance intervals are assigned to the qualification levels QL1 to QL4.

QL1: Operational monitoring and maintenance work which does not require disassembly of the product.

QL2: Exchange of components and parts in case of repair (corrective only, not part of the maintenance schedule).

QL3: Maintenance work which requires partial disassembly of the product.

QL4: Maintenance work which requires complete disassembly of the product.

Additional notes on maintenance and preservation:

The relevant component manufacturer's instructions apply with respect to the maintenance of any components which do not appear in this maintenance schedule.

For the change intervals of fluids and lubricants, refer to the corresponding Fluids and Lubricants Specifications.

If the product is to remain out of service for a longer time period, Rolls-Royce Solutions recommends to carry out a monthly test run until engine operating temperature is reached. If the engine is scheduled to remain out of service for > 1 month, carry out engine preservation procedures in accordance with the Preservation and Represervation Specifications

The latest version of the specifications is available at <http://www.mtu-solutions.com>.

1.2 Maintenance task tolerances

Maintenance tasks shall be completed within certain tolerances comprising a percentage and a maximum value, whereby the smaller value shall apply. Taking full advantage of such tolerances does not influence the scheduled timing of the ensuing maintenance task.

Interval (HRS)/limit	Limit in %	Limit max.
Operating hours	± 10%	± 500 hrs
Years	± 10%	± 30 days
Example 1	Task every 1000 hrs	Between 900 hrs and 1100 hrs (10% of 1000 hrs)
Example 2	Task every 30000 hrs	Between 29500 hrs and 30500 hrs (10% of 30000 hrs, but max. 500 hrs)

1.3 Allocation matrix application group 4D

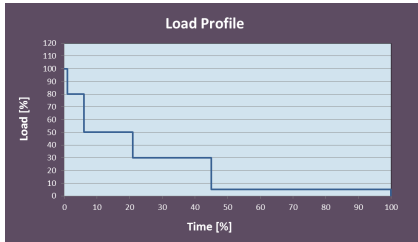
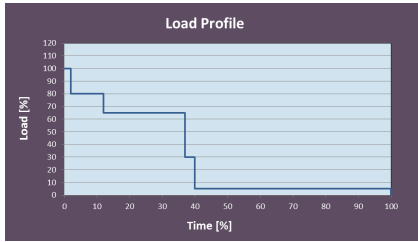
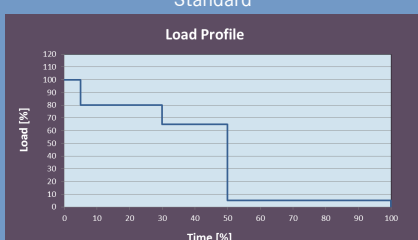
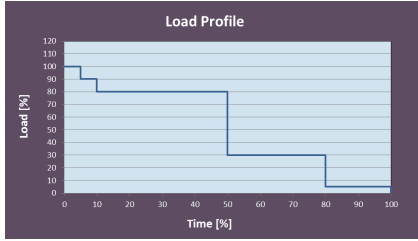
Load profile		12V/16V4000T95 / 12V4000T95x						
Load %	Time %	Load factor %	Load indicator %	121 to 140 kW/cyl.	141 to 163 kW/cyl.			
110 ₍₁₀₀₋₁₁₀₎	—	0 to 22	≤ 2	24,000	18,000	—	—	
100 ₍₉₀₋₁₀₀₎	1							
90 ₍₈₀₋₉₀₎	—							
80 ₍₆₅₋₈₀₎	5							
65 ₍₅₀₋₆₅₎	—							
50 ₍₃₀₋₅₀₎	15							
30 ₍₅₋₃₀₎	24							
Idle Speed ₍₀₋₅₎	55							
110 ₍₁₀₀₋₁₁₀₎	—	23 to 30	≤ 4	21,000	15,000	—	—	
100 ₍₉₀₋₁₀₀₎	2							
90 ₍₈₀₋₉₀₎	—							
80 ₍₆₅₋₈₀₎	10							
65 ₍₅₀₋₆₅₎	25							
50 ₍₃₀₋₅₀₎	—							
30 ₍₅₋₃₀₎	3							
Idle Speed ₍₀₋₅₎	60							
110 ₍₁₀₀₋₁₁₀₎	—	31 to 41	≤ 9	18,000	15,000	—	—	
100 ₍₉₀₋₁₀₀₎	5							
90 ₍₈₀₋₉₀₎	—							
80 ₍₆₅₋₈₀₎	25							
65 ₍₅₀₋₆₅₎	20							
50 ₍₃₀₋₅₀₎	—							
30 ₍₅₋₃₀₎	—							
Idle Speed ₍₀₋₅₎	50							
110 ₍₁₀₀₋₁₁₀₎	—	42 to 52	≤ 12	15,000	12,000	—	—	
100 ₍₉₀₋₁₀₀₎	5							
90 ₍₈₀₋₉₀₎	5							
80 ₍₆₅₋₈₀₎	40							
65 ₍₅₀₋₆₅₎	—							
50 ₍₃₀₋₅₀₎	—							
30 ₍₅₋₃₀₎	30							
Idle Speed ₍₀₋₅₎	20							

Table 2: Allocation matrix application group 4D

12V/16V4000T95 / 12V4000T95x							
Load profile		Load factor %	Load indicator %	121 to 140 kW/cyl.	141 to 163 kW/cyl.		
Load %	Time %						
110 ₍₁₀₀₋₁₁₀₎	—	53 to 61	≤ 20	12,000	—	—	—
100 ₍₉₀₋₁₀₀₎	10						
90 ₍₈₀₋₉₀₎	15						
80 ₍₆₅₋₈₀₎	35						
65 ₍₅₀₋₆₅₎	—						
50 ₍₃₀₋₅₀₎	—						
30 ₍₅₋₃₀₎	30						
Idle Speed ₍₀₋₅₎	10						

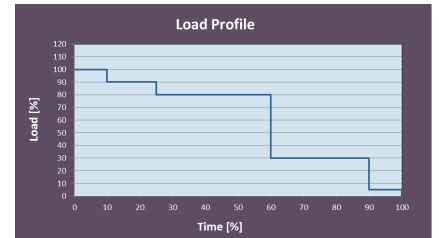


Table 3: Allocation matrix application group 4D

1.4 Noncyclical maintenance tasks

No.	Qualification	Task	Maintenance tasks	Reference task	Offset	Value	Unit	Option
0010	QL1	WM00094	Check valve clearance, adjust if necessary. ATTENTION! First adjustment after 1,000 operating hours on a new engine and after 1,000 operating hours following each cylinder head overhaul.		0	1000	HRS	
Reference task: Name of the maintenance task the offset refers to Offset: Interval of a maintenance task which depends on another interval Value: Fixed value for binding execution of a maintenance task								

1.5 Maintenance Schedule Matrix 24000 HRS

500 to 15000 Operating hours

Task	Limit	Operating hours [HRS]																													
		500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000	6500	7000	7500	8000	8500	9000	9500	10000	10500	11000	11500	12000	12500	13000	13500	14000	14500	15000
WM00233	1 DAY																														
WM00285	1 DAY																														
WM00286	1 DAY																														
WM00287	1 DAY																														
WM00289	1 DAY																														
WM00290	1 DAY																														
WM00174	1 WK																														
WM00288	1 WK																														
WM00136	1 YR																														
WM00067	2 YR																														
WM00063	2 YR	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
WM00084	2 YR		X		X		X		X		X		X		X		X		X		X		X		X		X		X		X
WM00085	2 YR		X		X		X		X		X		X		X		X		X		X		X		X		X		X		X
WM00086	2 YR		X		X		X		X		X		X		X		X		X		X		X		X		X		X		X
WM00170	2 YR		X		X		X		X		X		X		X		X		X		X		X		X		X		X		X
WM00050	1 YR						X					X						X							X						X
WM00076	3 YR						X					X						X							X						X
WM00664	3 YR						X					X						X							X						X
WM00094	18 YR		X				X					X						X							X						X
WM00776	3 YR								X								X								X						
WM00150	6 YR											X													X						
WM00151	6 YR											X													X						
WM00089	18 YR																X														
WM00090	18 YR																X														
WM00098	18 YR																X														
WM00110	18 YR																X														
WM00093	18 YR																X														
WM00054	18 YR																								X						
WM00056	18 YR																								X						
WM00062	18 YR																								X						
WM00091	18 YR																								X						
WM00096	18 YR																								X						
WM00164	18 YR																								X						
WM00283	18 YR																								X						
WM00921	18 YR																								X						
WM00970	18 YR																								X						
WM00971	18 YR																								X						
WM00973	18 YR																								X						
WM00974	18 YR																								X						
WM00976	18 YR																								X						
WM00986	18 YR																								X						

DAY = Days

WK = Weeks

YR = Years

HRS = Hours

[illegible]

Task	Limit	Operating hours [HRS]																	
		15500	16000	16500	17000	17500	18000	18500	19000	19500	20000	20500	21000	21500	22000	22500	23000	23500	24000
WM00100	18 YR																		X
WM00103	18 YR																	X	
WM00104	18 YR																	X	
WM00108	18 YR																	X	
WM00111	18 YR																	X	
WM00127	18 YR																	X	
DAY = Days																			
WK = Weeks																			
YR = Years																			
HRS = Hours																			

1.6 Cyclical maintenance tasks 24000 HRS

Qualification	Interval [HRS]	Limit	Item	Maintenance tasks	Option	Task
Engine						
QL1	-	1 DAY	EXHAUST SILENCER	Check drain of silencer	X	WM00233
QL1	-	1 DAY	ENGINE OPERATIONAL MONITORING	Check engine oil level		WM00285
QL1	-	1 DAY	ENGINE OPERATIONAL MONITORING	Visually inspect for leaks and general condition of engine		WM00286
QL1	-	1 DAY	ENGINE OPERATIONAL MONITORING	Check maintenance indicator of air filter	X	WM00287
QL1	-	1 DAY	ENGINE OPERATIONAL MONITORING	When engine is running, check for abnormal running noises, exhaust gas color and vibrations		WM00289
QL1	-	1 DAY	ENGINE OPERATIONAL MONITORING	Drain water and contaminants from fuel prefilter	X	WM00290
QL1	-	1 WK	EMERGENCY AIR SHUT-OFF FLAPS	Check operation of emergency air shut-off flaps	X	WM00174
QL1	-	1 WK	ENGINE OPERATIONAL MONITORING	Check relief bore of coolant pump		WM00288
QL1	-	1 YR	ENGINE MOUNTING	Check securing screws for secure seating		WM00136
QL1	-	2 YR	LUBE OIL SYSTEM	Replace oil filter at every engine oil change, or when the time limit (years) is reached, at the latest		WM00067
QL1	500	2 YR	LUBE OIL SYSTEM	Automatic centrifugal oil filter, check layer thickness of oil residue, clean, and replace paper element at every engine oil change at the latest		WM00063
QL1	1000	2 YR	FUEL SYSTEM (LOW PRESSURE)	Fuel prefilter, replace filter	X	WM00084
QL1	1000	2 YR	FUEL SYSTEM (LOW PRESSURE)	Additional filter, replace easy-change fuel filter		WM00085
QL1	1000	2 YR	FUEL SYSTEM (LOW PRESSURE)	Replace easy-change fuel filter		WM00086
QL1	1000	2 YR	AUXILIARY POWER TAKE-OFF	Check belt condition, replace if necessary. Adjust tension.	X	WM00170
QL1	3000	1 YR	ENGINE MOUNTING	Check general condition of rubber mounts (visual inspection)		WM00050
QL1	3000	3 YR	AIR SUPPLY SYSTEM	Replace air filter	X	WM00076
QL1	3000	3 YR	COOLANT SYSTEM	Replace valve cover	X	WM00664
QL1	3000	18 YR	VALVE GEAR	Check valve clearance, adjust if necessary. ATTENTION! First adjustment after 1,000 operating hours on a new engine and after 1,000 operating hours following each cylinder head overhaul.		WM00094
QL1	4000	3 YR	CRANKCASE VENTILATION	Replace filter or filter element (coalescer filter)		WM00776
QL1	6000	6 YR	SENSOR TECHNOLOGY AND WIRING HARNESS	Replace NOx sensor(s)		WM00150
QL1	6000	6 YR	SENSOR TECHNOLOGY AND WIRING HARNESS	Replace Lambda sensor		WM00151
QL1	8000	18 YR	GOVERNOR	Reset drift correction parameters (DC)		WM00089
QL1	8000	18 YR	FUEL SYSTEM (HIGH PRESSURE)	Replace fuel injection valve/injector		WM00090
QL1	8000	18 YR	CYLINDER HEAD	Measure valve protrusion		WM00098
QL1	8000	18 YR	RUNNING GEAR	Inspect cylinder liner with endoscope		WM00110
QL3	8000	18 YR	VALVE GEAR	Check rocker arm and valve bridge for wear. Visually inspect swing follower with endoscope through pushrod bore.		WM00093
QL3	12000	18 YR	COOLANT SYSTEM	Check LT thermostat housing and replace thermal actuator		WM00054
QL3	12000	18 YR	COOLANT SYSTEM	Check HT thermostat housing and replace thermal actuator		WM00056
QL3	12000	18 YR	LUBE OIL SYSTEM	Check centrifugal oil filter for wear		WM00062

DAY = Days
WK = Weeks
YR = Years
HRS = Hours

Qualification	Interval [HRS]	Limit	Item	Maintenance tasks	Option	Task
QL3	12000	18 YR	FUEL SYSTEM (HIGH PRES-SURE)	Replace HP pump		WM00091
QL3	12000	18 YR	VALVE GEAR	Visually inspect camshaft running surfaces with endoscope through pushrod bore		WM00096
QL3	12000	18 YR	AIR PIPING TO CYLINDERS	Clean air piping		WM00164
QL3	12000	18 YR	AUXILIARY POWER TAKE-OFF	Replace auxiliary power take-off	X	WM00283
QL3	12000	18 YR	COOLANT SYSTEM	Replace sealing material for installation of coolant pump(s) and thermostat(s) (only LT and HT)		WM00921
QL3	12000	18 YR	EXHAUST TURBOCHARGER	Overhaul or replace exhaust turbocharger		WM00970
QL3	12000	18 YR	STARTING SYSTEM	Overhaul or replace starter		WM00971
QL3	12000	18 YR	COOLANT SYSTEM	Overhaul or replace coolant pump in LT circuit		WM00973
QL3	12000	18 YR	COOLANT SYSTEM	Overhaul or replace coolant pump in HT circuit		WM00974
QL3	12000	18 YR	GENERATOR	Overhaul or replace battery-charging generator		WM00976
QL3	12000	18 YR	AIR PIPING TO CYLINDERS	Clean intercooler and check for leaks or replace		WM00986
QL3	24000	6 YR	HOSE	Replace hose line		WM00006
QL3	24000	18 YR	FUEL SYSTEM (HIGH PRES-SURE)	Replace HP fuel sensor		WM00011
QL3	24000	18 YR	EXHAUST TURBOCHARGER	Replace aluminum compressor wheel of secondary exhaust turbo-charger		WM00080
QL3	24000	18 YR	FUEL SYSTEM (LOW PRES-SURE)	Replace pump		WM00087
QL3	24000	18 YR	EXHAUST RETURN	Replace flaps		WM00160
QL3	24000	18 YR	RUNNING GEAR	Replace vibration damper		WM00439
QL3	24000	18 YR	BENDING / TORSIONALLY RESILIENT COUPLING	Replace coupling or coupling element(s)		WM00925
QL3	24000	18 YR	EXHAUST RETURN	Replace EGR cooler		WM00945
QL3	24000	18 YR	CYLINDER HEAD	Overhaul or replace cylinder head		WM00980
QL4	24000	18 YR	ENGINE, GENERAL	Replace elastomeric members and gaskets		WM00001
QL4	24000	18 YR	ENGINE, GENERAL	Disassemble engine completely. Check engine components according to assembly instructions, replace or repair as necessary		WM00002
QL4	24000	18 YR	LUBE OIL SYSTEM	Check pump, replace if necessary		WM00070
QL4	24000	18 YR	EXHAUST SYSTEM	Replace exhaust pipe bellows		WM00072
QL4	24000	18 YR	FUEL SYSTEM (HIGH PRES-SURE)	Replace pressure relief valve		WM00088
QL4	24000	18 YR	VALVE GEAR	Replace swing follower and swing follower shaft		WM00092
QL4	24000	18 YR	VALVE GEAR	Replace thrust bearing flange		WM00095
QL4	24000	18 YR	RUNNING GEAR	Replace conrod bearings		WM00099
QL4	24000	18 YR	RUNNING GEAR	Replace rings		WM00100
QL4	24000	18 YR	RUNNING GEAR	Replace crankshaft bearings		WM00103
QL4	24000	18 YR	GEAR TRAIN	Check tooth flanks in gear train for wear (visual inspection), replace bushing		WM00104
QL4	24000	18 YR	RUNNING GEAR	Replace cylinder liners		WM00108
QL4	24000	18 YR	CAMSHAFT	Replace camshaft bearings		WM00111
QL4	24000	18 YR	ENGINE MOUNTING	Replace rubber element of rubber mounts		WM00127
DAY = Days WK = Weeks YR = Years HRS = Hours						

TIM-ID: 0000000000 - 000

1.7 Maintenance Schedule Matrix 21000 HRS

500 to 14500 Operating hours

[illegible]

DAY = Days

WK = Weeks

YR = Years

HRS = Hours

TIM-ID: 000.0000000 - 000

Task	Limit	Operating hours [HRS]																			
		1500	1550	1575	1600	1650	1700	1750	1800	1850	1900	1950	2000	2050	2100						
WM00086	2 YR	X			X		X		X		X		X		X						
WM00170	2 YR	X			X		X		X		X		X		X						
WM00050	1 YR	X							X						X						
WM00076	3 YR	X							X						X						
WM00664	3 YR	X							X						X						
WM00094	18 YR	X							X						X						
WM00776	3 YR							X							X						
WM00150	6 YR			X											X						
WM00151	6 YR			X											X						
WM00089	18 YR														X						
WM00090	18 YR														X						
WM00098	18 YR														X						
WM00110	18 YR														X						
WM00093	18 YR														X						
WM00054	18 YR														X						
WM00056	18 YR														X						
WM00062	18 YR														X						
WM00091	18 YR														X						
WM00096	18 YR														X						
WM00164	18 YR														X						
WM00283	18 YR														X						
WM00921	18 YR														X						
WM00970	18 YR														X						
WM00971	18 YR														X						
WM00973	18 YR														X						
WM00974	18 YR														X						
WM00976	18 YR														X						
WM00986	18 YR														X						
WM00006	6 YR														X						
WM00011	18 YR														X						
WM00080	18 YR														X						
WM00087	18 YR														X						
WM00160	18 YR														X						
WM00439	18 YR														X						
WM00925	18 YR														X						
WM00945	18 YR														X						
WM00980	18 YR														X						
WM00001	18 YR														X						
WM00002	18 YR														X						
WM00070	18 YR														X						
WM00072	18 YR														X						
WM00088	18 YR														X						
WM00092	18 YR														X						
WM00095	18 YR														X						
WM00099	18 YR														X						
DAY = Days																					
WK = Weeks																					
YR = Years																					
HRS = Hours																					

Task	Limit	Operating hours [HRS]																							
		15000	15500	15750	16000	16500	17000	17500	18000	18500	19000	19500	20000	20500	21000										
WM00100	18 YR														X										
WM00103	18 YR														X										
WM00104	18 YR														X										
WM00108	18 YR														X										
WM00111	18 YR														X										
WM00127	18 YR														X										
DAY = Days WK = Weeks YR = Years HRS = Hours																									

1.8 Cyclical maintenance tasks 21000 HRS

Qualification	Interval [HRS]	Limit	Item	Maintenance tasks	Option	Task
Engine						
QL1	-	1 DAY	EXHAUST SILENCER	Check drain of silencer	X	WM00233
QL1	-	1 DAY	ENGINE OPERATIONAL MONITORING	Check engine oil level		WM00285
QL1	-	1 DAY	ENGINE OPERATIONAL MONITORING	Visually inspect for leaks and general condition of engine		WM00286
QL1	-	1 DAY	ENGINE OPERATIONAL MONITORING	Check maintenance indicator of air filter	X	WM00287
QL1	-	1 DAY	ENGINE OPERATIONAL MONITORING	When engine is running, check for abnormal running noises, exhaust gas color and vibrations		WM00289
QL1	-	1 DAY	ENGINE OPERATIONAL MONITORING	Drain water and contaminants from fuel prefilter	X	WM00290
QL1	-	1 WK	EMERGENCY AIR SHUT-OFF FLAPS	Check operation of emergency air shut-off flaps	X	WM00174
QL1	-	1 WK	ENGINE OPERATIONAL MONITORING	Check relief bore of coolant pump		WM00288
QL1	-	1 YR	ENGINE MOUNTING	Check securing screws for secure seating		WM00136
QL1	-	2 YR	LUBE OIL SYSTEM	Replace oil filter at every engine oil change, or when the time limit (years) is reached, at the latest		WM00067
QL1	500	2 YR	LUBE OIL SYSTEM	Automatic centrifugal oil filter, check layer thickness of oil residue, clean, and replace paper element at every engine oil change at the latest		WM00063
QL1	1000	2 YR	FUEL SYSTEM (LOW PRESSURE)	Fuel prefilter, replace filter	X	WM00084
QL1	1000	2 YR	FUEL SYSTEM (LOW PRESSURE)	Additional filter, replace easy-change fuel filter		WM00085
QL1	1000	2 YR	FUEL SYSTEM (LOW PRESSURE)	Replace easy-change fuel filter		WM00086
QL1	1000	2 YR	AUXILIARY POWER TAKE-OFF	Check belt condition, replace if necessary. Adjust tension.	X	WM00170
QL1	3000	1 YR	ENGINE MOUNTING	Check general condition of rubber mounts (visual inspection)		WM00050
QL1	3000	3 YR	AIR SUPPLY SYSTEM	Replace air filter	X	WM00076
QL1	3000	3 YR	COOLANT SYSTEM	Replace valve cover	X	WM00664
QL1	3000	18 YR	VALVE GEAR	Check valve clearance, adjust if necessary. ATTENTION! First adjustment after 1,000 operating hours on a new engine and after 1,000 operating hours following each cylinder head overhaul.		WM00094
QL1	3500	3 YR	CRANKCASE VENTILATION	Replace filter or filter element (coalescer filter)		WM00776
QL1	5250	6 YR	SENSOR TECHNOLOGY AND WIRING HARNESS	Replace NOx sensor(s)		WM00150
QL1	5250	6 YR	SENSOR TECHNOLOGY AND WIRING HARNESS	Replace Lambda sensor		WM00151
QL1	7000	18 YR	GOVERNOR	Reset drift correction parameters (DC)		WM00089
QL1	7000	18 YR	FUEL SYSTEM (HIGH PRESSURE)	Replace fuel injection valve/injector		WM00090
QL1	7000	18 YR	CYLINDER HEAD	Measure valve protrusion		WM00098
QL1	7000	18 YR	RUNNING GEAR	Inspect cylinder liner with endoscope		WM00110
QL3	7000	18 YR	VALVE GEAR	Check rocker arm and valve bridge for wear. Visually inspect swing follower with endoscope through pushrod bore.		WM00093
QL3	10500	18 YR	COOLANT SYSTEM	Check LT thermostat housing and replace thermal actuator		WM00054
QL3	10500	18 YR	COOLANT SYSTEM	Check HT thermostat housing and replace thermal actuator		WM00056
QL3	10500	18 YR	LUBE OIL SYSTEM	Check centrifugal oil filter for wear		WM00062

DAY = Days
WK = Weeks
YR = Years
HRS = Hours

Qualification	Interval [HRS]	Limit	Item	Maintenance tasks	Option	Task
QL3	10500	18 YR	FUEL SYSTEM (HIGH PRES-SURE)	Replace HP pump		WM00091
QL3	10500	18 YR	VALVE GEAR	Visually inspect camshaft running surfaces with endoscope through pushrod bore		WM00096
QL3	10500	18 YR	AIR PIPING TO CYLINDERS	Clean air piping		WM00164
QL3	10500	18 YR	AUXILIARY POWER TAKE-OFF	Replace auxiliary power take-off	X	WM00283
QL3	10500	18 YR	COOLANT SYSTEM	Replace sealing material for installation of coolant pump(s) and thermostat(s) (only LT and HT)		WM00921
QL3	10500	18 YR	EXHAUST TURBOCHARGER	Overhaul or replace exhaust turbocharger		WM00970
QL3	10500	18 YR	STARTING SYSTEM	Overhaul or replace starter		WM00971
QL3	10500	18 YR	COOLANT SYSTEM	Overhaul or replace coolant pump in LT circuit		WM00973
QL3	10500	18 YR	COOLANT SYSTEM	Overhaul or replace coolant pump in HT circuit		WM00974
QL3	10500	18 YR	GENERATOR	Overhaul or replace battery-charging generator		WM00976
QL3	10500	18 YR	AIR PIPING TO CYLINDERS	Clean intercooler and check for leaks or replace		WM00986
QL3	21000	6 YR	HOSE	Replace hose line		WM00006
QL3	21000	18 YR	FUEL SYSTEM (HIGH PRES-SURE)	Replace HP fuel sensor		WM00011
QL3	21000	18 YR	EXHAUST TURBOCHARGER	Replace aluminum compressor wheel of secondary exhaust turbo-charger		WM00080
QL3	21000	18 YR	FUEL SYSTEM (LOW PRES-SURE)	Replace pump		WM00087
QL3	21000	18 YR	EXHAUST RETURN	Replace flaps		WM00160
QL3	21000	18 YR	RUNNING GEAR	Replace vibration damper		WM00439
QL3	21000	18 YR	BENDING / TORSIONALLY RESILIENT COUPLING	Replace coupling or coupling element(s)		WM00925
QL3	21000	18 YR	EXHAUST RETURN	Replace EGR cooler		WM00945
QL3	21000	18 YR	CYLINDER HEAD	Overhaul or replace cylinder head		WM00980
QL4	21000	18 YR	ENGINE, GENERAL	Replace elastomeric members and gaskets		WM00001
QL4	21000	18 YR	ENGINE, GENERAL	Disassemble engine completely. Check engine components according to assembly instructions, replace or repair as necessary		WM00002
QL4	21000	18 YR	LUBE OIL SYSTEM	Check pump, replace if necessary		WM00070
QL4	21000	18 YR	EXHAUST SYSTEM	Replace exhaust pipe bellows		WM00072
QL4	21000	18 YR	FUEL SYSTEM (HIGH PRES-SURE)	Replace pressure relief valve		WM00088
QL4	21000	18 YR	VALVE GEAR	Replace swing follower and swing follower shaft		WM00092
QL4	21000	18 YR	VALVE GEAR	Replace thrust bearing flange		WM00095
QL4	21000	18 YR	RUNNING GEAR	Replace conrod bearings		WM00099
QL4	21000	18 YR	RUNNING GEAR	Replace rings		WM00100
QL4	21000	18 YR	RUNNING GEAR	Replace crankshaft bearings		WM00103
QL4	21000	18 YR	GEAR TRAIN	Check tooth flanks in gear train for wear (visual inspection), replace bushing		WM00104
QL4	21000	18 YR	RUNNING GEAR	Replace cylinder liners		WM00108
QL4	21000	18 YR	CAMSHAFT	Replace camshaft bearings		WM00111
QL4	21000	18 YR	ENGINE MOUNTING	Replace rubber element of rubber mounts		WM00127
DAY = Days WK = Weeks YR = Years HRS = Hours						

TIM-ID: 0000000000 - 000

1.9 Maintenance Schedule Matrix 18000 HRS

500 to 15000 Operating hours

Task	Limit	Operating hours [HRS]																													
		500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000	6500	7000	7500	8000	8500	9000	9500	10000	10500	11000	11500	12000	12500	13000	13500	14000	14500	15000
WM00233	1 DAY																														
WM00285	1 DAY																														
WM00286	1 DAY																														
WM00287	1 DAY																														
WM00289	1 DAY																														
WM00290	1 DAY																														
WM00174	1 WK																														
WM00288	1 WK																														
WM00136	1 YR																														
WM00067	2 YR																														
WM00063	2 YR	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
WM00084	2 YR		X		X		X		X		X		X		X		X		X		X		X		X		X		X		X
WM00085	2 YR		X		X		X		X		X		X		X		X		X		X		X		X		X		X		X
WM00086	2 YR		X		X		X		X		X		X		X		X		X		X		X		X		X		X		X
WM00170	2 YR		X		X		X		X		X		X		X		X		X		X		X		X		X		X		X
WM00050	1 YR						X					X						X							X						X
WM00076	3 YR						X					X						X							X						X
WM00664	3 YR						X					X						X							X						X
WM00094	18 YR		X				X					X						X							X						X
WM00776	3 YR									X								X										X			
WM00150	6 YR											X													X						
WM00151	6 YR											X													X						
WM00089	18 YR											X													X						
WM00090	18 YR											X													X						
WM00098	18 YR											X													X						
WM00110	18 YR											X													X						
WM00093	18 YR											X													X						
WM00054	18 YR																		X												
WM00056	18 YR																		X												
WM00062	18 YR																		X												
WM00096	18 YR																		X												
WM00164	18 YR																		X												
WM00283	18 YR																		X												
WM00921	18 YR																		X												
WM00970	18 YR																		X												
WM00971	18 YR																		X												
WM00973	18 YR																		X												
WM00974	18 YR																		X												
WM00976	18 YR																		X												
WM00986	18 YR																		X												
WM00091	18 YR																			X											

DAY = Days
WK = Weeks
YR = Years
HRS = Hours

Task	Limit	Operating hours [HRS]																													
		500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000	6500	7000	7500	8000	8500	9000	9500	10000	10500	11000	11500	12000	12500	13000	13500	14000	14500	15000
WM00006	6 YR																														
WM00011	18 YR																														
WM00080	18 YR																														
WM00087	18 YR																														
WM00160	18 YR																														
WM00439	18 YR																														
WM00925	18 YR																														
WM00945	18 YR																														
WM00980	18 YR																														
WM00001	18 YR																														
WM00002	18 YR																														
WM00070	18 YR																														
WM00072	18 YR																														
WM00088	18 YR																														
WM00092	18 YR																														
WM00095	18 YR																														
WM00099	18 YR																														
WM00100	18 YR																														
WM00103	18 YR																														
WM00104	18 YR																														
WM00108	18 YR																														
WM00111	18 YR																														
WM00127	18 YR																														
DAY = Days																															
WK = Weeks																															
YR = Years																															
HRS = Hours																															

15500 to 18000 Operating hours

Task	Limit	Operating hours [HRS]																			
		15500	16000	16500	17000	17500	18000														
WM00233	1 DAY																				
WM00285	1 DAY																				
WM00286	1 DAY																				
WM00287	1 DAY																				
WM00289	1 DAY																				
WM00290	1 DAY																				
WM00174	1 WK																				
WM00288	1 WK																				
WM00136	1 YR																				
WM00067	2 YR																				
WM00063	2 YR	X	X	X	X	X	X														
WM00084	2 YR		X		X		X														
WM00085	2 YR		X		X		X														
DAY = Days																					
WK = Weeks																					
YR = Years																					
HRS = Hours																					

TIM-ID: 0000000000 - 000

TIM-ID: 000000000 - 000

Task	Limit	Operating hours [HRS]																											
		15500	16000	16500	17000	17500	18000																						
WM00086	2 YR		X		X		X																						
WM00170	2 YR		X		X		X																						
WM00050	1 YR						X																						
WM00076	3 YR						X																						
WM00664	3 YR						X																						
WM00094	18 YR						X																						
WM00776	3 YR						X																						
WM00150	6 YR						X																						
WM00151	6 YR						X																						
WM00089	18 YR						X																						
WM00090	18 YR						X																						
WM00098	18 YR						X																						
WM00110	18 YR						X																						
WM00093	18 YR						X																						
WM00054	18 YR						X																						
WM00056	18 YR						X																						
WM00062	18 YR						X																						
WM00096	18 YR						X																						
WM00164	18 YR						X																						
WM00283	18 YR						X																						
WM00921	18 YR						X																						
WM00970	18 YR						X																						
WM00971	18 YR						X																						
WM00973	18 YR						X																						
WM00974	18 YR						X																						
WM00976	18 YR						X																						
WM00986	18 YR						X																						
WM00091	18 YR																												
WM00006	6 YR						X																						
WM00011	18 YR						X																						
WM00080	18 YR						X																						
WM00087	18 YR						X																						
WM00160	18 YR						X																						
WM00439	18 YR						X																						
WM00925	18 YR						X																						
WM00945	18 YR						X																						
WM00980	18 YR						X																						
WM00001	18 YR						X																						
WM00002	18 YR						X																						
WM00070	18 YR						X																						
WM00072	18 YR						X																						
WM00088	18 YR						X																						
WM00092	18 YR						X																						
WM00095	18 YR						X																						
WM00099	18 YR						X																						
DAY = Days WK = Weeks YR = Years HRS = Hours																													

Task	Limit	Operating hours [HRS]																											
		15500	16000	16500	17000	17500	18000																						
WM00100	18 YR						X																						
WM00103	18 YR						X																						
WM00104	18 YR						X																						
WM00108	18 YR						X																						
WM00111	18 YR						X																						
WM00127	18 YR						X																						
DAY = Days WK = Weeks YR = Years HRS = Hours																													

1.10 Cyclical maintenance tasks 18000 HRS

Qualification	Interval [HRS]	Limit	Item	Maintenance tasks	Option	Task
Engine						
QL1	-	1 DAY	EXHAUST SILENCER	Check drain of silencer	X	WM00233
QL1	-	1 DAY	ENGINE OPERATIONAL MONITORING	Check engine oil level		WM00285
QL1	-	1 DAY	ENGINE OPERATIONAL MONITORING	Visually inspect for leaks and general condition of engine		WM00286
QL1	-	1 DAY	ENGINE OPERATIONAL MONITORING	Check maintenance indicator of air filter	X	WM00287
QL1	-	1 DAY	ENGINE OPERATIONAL MONITORING	When engine is running, check for abnormal running noises, exhaust gas color and vibrations		WM00289
QL1	-	1 DAY	ENGINE OPERATIONAL MONITORING	Drain water and contaminants from fuel prefilter	X	WM00290
QL1	-	1 WK	EMERGENCY AIR SHUT-OFF FLAPS	Check operation of emergency air shut-off flaps	X	WM00174
QL1	-	1 WK	ENGINE OPERATIONAL MONITORING	Check relief bore of coolant pump		WM00288
QL1	-	1 YR	ENGINE MOUNTING	Check securing screws for secure seating		WM00136
QL1	-	2 YR	LUBE OIL SYSTEM	Replace oil filter at every engine oil change, or when the time limit (years) is reached, at the latest		WM00067
QL1	500	2 YR	LUBE OIL SYSTEM	Automatic centrifugal oil filter, check layer thickness of oil residue, clean, and replace paper element at every engine oil change at the latest		WM00063
QL1	1000	2 YR	FUEL SYSTEM (LOW PRESSURE)	Fuel prefilter, replace filter	X	WM00084
QL1	1000	2 YR	FUEL SYSTEM (LOW PRESSURE)	Additional filter, replace easy-change fuel filter		WM00085
QL1	1000	2 YR	FUEL SYSTEM (LOW PRESSURE)	Replace easy-change fuel filter		WM00086
QL1	1000	2 YR	AUXILIARY POWER TAKE-OFF	Check belt condition, replace if necessary. Adjust tension.	X	WM00170
QL1	3000	1 YR	ENGINE MOUNTING	Check general condition of rubber mounts (visual inspection)		WM00050
QL1	3000	3 YR	AIR SUPPLY SYSTEM	Replace air filter	X	WM00076
QL1	3000	3 YR	COOLANT SYSTEM	Replace valve cover	X	WM00664
QL1	3000	18 YR	VALVE GEAR	Check valve clearance, adjust if necessary. ATTENTION! First adjustment after 1,000 operating hours on a new engine and after 1,000 operating hours following each cylinder head overhaul.		WM00094
QL1	4500	3 YR	CRANKCASE VENTILATION	Replace filter or filter element (coalescer filter)		WM00776
QL1	6000	6 YR	SENSOR TECHNOLOGY AND WIRING HARNESS	Replace NOx sensor(s)		WM00150
QL1	6000	6 YR	SENSOR TECHNOLOGY AND WIRING HARNESS	Replace Lambda sensor		WM00151
QL1	6000	18 YR	GOVERNOR	Reset drift correction parameters (DC)		WM00089
QL1	6000	18 YR	FUEL SYSTEM (HIGH PRESSURE)	Replace fuel injection valve/injector		WM00090
QL1	6000	18 YR	CYLINDER HEAD	Measure valve protrusion		WM00098
QL1	6000	18 YR	RUNNING GEAR	Inspect cylinder liner with endoscope		WM00110
QL3	6000	18 YR	VALVE GEAR	Check rocker arm and valve bridge for wear. Visually inspect swing follower with endoscope through pushrod bore.		WM00093
QL3	9000	18 YR	COOLANT SYSTEM	Check LT thermostat housing and replace thermal actuator		WM00054
QL3	9000	18 YR	COOLANT SYSTEM	Check HT thermostat housing and replace thermal actuator		WM00056
QL3	9000	18 YR	LUBE OIL SYSTEM	Check centrifugal oil filter for wear		WM00062
DAY = Days WK = Weeks YR = Years HRS = Hours						

Qualification	Interval [HRS]	Limit	Item	Maintenance tasks	Option	Task
QL3	9000	18 YR	VALVE GEAR	Visually inspect camshaft running surfaces with endoscope through pushrod bore		WM00096
QL3	9000	18 YR	AIR PIPING TO CYLINDERS	Clean air piping		WM00164
QL3	9000	18 YR	AUXILIARY POWER TAKE-OFF	Replace auxiliary power take-off	X	WM00283
QL3	9000	18 YR	COOLANT SYSTEM	Replace sealing material for installation of coolant pump(s) and thermostat(s) (only LT and HT)		WM00921
QL3	9000	18 YR	EXHAUST TURBOCHARGER	Overhaul or replace exhaust turbocharger		WM00970
QL3	9000	18 YR	STARTING SYSTEM	Overhaul or replace starter		WM00971
QL3	9000	18 YR	COOLANT SYSTEM	Overhaul or replace coolant pump in LT circuit		WM00973
QL3	9000	18 YR	COOLANT SYSTEM	Overhaul or replace coolant pump in HT circuit		WM00974
QL3	9000	18 YR	GENERATOR	Overhaul or replace battery-charging generator		WM00976
QL3	9000	18 YR	AIR PIPING TO CYLINDERS	Clean intercooler and check for leaks or replace		WM00986
QL3	9500	18 YR	FUEL SYSTEM (HIGH PRESSURE)	Replace HP pump		WM00091
QL3	18000	6 YR	HOSE	Replace hose line		WM00006
QL3	18000	18 YR	FUEL SYSTEM (HIGH PRESSURE)	Replace HP fuel sensor		WM00011
QL3	18000	18 YR	EXHAUST TURBOCHARGER	Replace aluminum compressor wheel of secondary exhaust turbocharger		WM00080
QL3	18000	18 YR	FUEL SYSTEM (LOW PRESSURE)	Replace pump		WM00087
QL3	18000	18 YR	EXHAUST RETURN	Replace flaps		WM00160
QL3	18000	18 YR	RUNNING GEAR	Replace vibration damper		WM00439
QL3	18000	18 YR	BENDING / TORSIONALLY RESILIENT COUPLING	Replace coupling or coupling element(s)		WM00925
QL3	18000	18 YR	EXHAUST RETURN	Replace EGR cooler		WM00945
QL3	18000	18 YR	CYLINDER HEAD	Overhaul or replace cylinder head		WM00980
QL4	18000	18 YR	ENGINE, GENERAL	Replace elastomeric members and gaskets		WM00001
QL4	18000	18 YR	ENGINE, GENERAL	Disassemble engine completely. Check engine components according to assembly instructions, replace or repair as necessary		WM00002
QL4	18000	18 YR	LUBE OIL SYSTEM	Check pump, replace if necessary		WM00070
QL4	18000	18 YR	EXHAUST SYSTEM	Replace exhaust pipe bellows		WM00072
QL4	18000	18 YR	FUEL SYSTEM (HIGH PRESSURE)	Replace pressure relief valve		WM00088
QL4	18000	18 YR	VALVE GEAR	Replace swing follower and swing follower shaft		WM00092
QL4	18000	18 YR	VALVE GEAR	Replace thrust bearing flange		WM00095
QL4	18000	18 YR	RUNNING GEAR	Replace conrod bearings		WM00099
QL4	18000	18 YR	RUNNING GEAR	Replace rings		WM00100
QL4	18000	18 YR	RUNNING GEAR	Replace crankshaft bearings		WM00103
QL4	18000	18 YR	GEAR TRAIN	Check tooth flanks in gear train for wear (visual inspection), replace bushing		WM00104
QL4	18000	18 YR	RUNNING GEAR	Replace cylinder liners		WM00108
QL4	18000	18 YR	CAMSHAFT	Replace camshaft bearings		WM00111
QL4	18000	18 YR	ENGINE MOUNTING	Replace rubber element of rubber mounts		WM00127
DAY = Days WK = Weeks YR = Years HRS = Hours						

TIM-ID: 0000000000 - 000

1.11 Maintenance Schedule Matrix 15000 HRS

500 to 14000 Operating hours

Task	Limit	Operating hours [HRS]																													
		500	1000	1500	2000	2500	3000	3500	3750	4000	4500	5000	5500	6000	6500	7000	7500	8000	8500	9000	9500	10000	10500	11000	11250	11500	12000	12500	13000	13500	14000
WM00233	1 DAY																														
WM00285	1 DAY																														
WM00286	1 DAY																														
WM00287	1 DAY																														
WM00289	1 DAY																														
WM00290	1 DAY																														
WM00174	1 WK																														
WM00288	1 WK																														
WM00136	1 YR																														
WM00067	2 YR																														
WM00063	2 YR	X	X	X	X	X	X	X		X	X	X	X	X	X	X	X	X	X	X	X	X	X	X		X	X	X	X	X	X
WM00084	2 YR		X		X		X			X		X		X		X		X		X		X		X			X		X		X
WM00085	2 YR		X		X		X			X		X		X		X		X		X		X		X			X		X		X
WM00086	2 YR		X		X		X			X		X		X		X		X		X		X		X			X		X		X
WM00170	2 YR		X		X		X			X		X		X		X		X		X		X		X			X		X		X
WM00050	1 YR						X							X						X							X				
WM00076	3 YR						X							X						X							X				
WM00664	3 YR						X							X						X							X				
WM00094	18 YR		X				X							X						X							X				
WM00776	3 YR								X								X								X						
WM00150	6 YR											X										X									
WM00151	6 YR											X									X										
WM00089	18 YR																X														
WM00090	18 YR																X														
WM00098	18 YR																X														
WM00110	18 YR																X														
WM00054	18 YR																X														
WM00056	18 YR																X														
WM00091	18 YR																X														
WM00093	18 YR																X														
WM00096	18 YR																X														
WM00164	18 YR																X														
WM00921	18 YR																X														
WM00971	18 YR																X														
WM00973	18 YR																X														
WM00974	18 YR																X														
WM00986	18 YR																X														
WM00006	6 YR																														
WM00011	18 YR																														
WM00062	18 YR																														
WM00080	18 YR																														

DAY = Days

WK = Weeks

YR = Years

HRS = Hours

Task	Limit	Operating hours [HRS]																														
		500	1000	1500	2000	2500	3000	3500	3750	4000	4500	5000	5500	6000	6500	7000	7500	8000	8500	9000	9500	10000	10500	11000	11250	11500	12000	12500	13000	13500	14000	
WM00087	18 YR																															
WM00160	18 YR																															
WM00283	18 YR																															
WM00439	18 YR																															
WM00925	18 YR																															
WM00945	18 YR																															
WM00970	18 YR																															
WM00976	18 YR																															
WM00980	18 YR																															
WM00001	18 YR																															
WM00002	18 YR																															
WM00070	18 YR																															
WM00072	18 YR																															
WM00088	18 YR																															
WM00092	18 YR																															
WM00095	18 YR																															
WM00099	18 YR																															
WM00100	18 YR																															
WM00103	18 YR																															
WM00104	18 YR																															
WM00108	18 YR																															
WM00111	18 YR																															
WM00127	18 YR																															
DAY = Days																																
WK = Weeks																																
YR = Years																																
HRS = Hours																																

14500 to 15000 Operating hours

Task	Limit	Operating hours [HRS]																														
		14500	15000																													
WM00233	1 DAY																															
WM00285	1 DAY																															
WM00286	1 DAY																															
WM00287	1 DAY																															
WM00289	1 DAY																															
WM00290	1 DAY																															
WM00174	1 WK																															
WM00288	1 WK																															
WM00136	1 YR																															
WM00067	2 YR																															
WM00063	2 YR	X	X																													
WM00084	2 YR		X																													
WM00085	2 YR		X																													
DAY = Days																																
WK = Weeks																																
YR = Years																																
HRS = Hours																																

TIM-ID: 0000000000 - 000

Task	Limit	Operating hours [HRS]																											
		14500	15000																										
WM00086	2 YR		X																										
WM00170	2 YR		X																										
WM00050	1 YR		X																										
WM00076	3 YR		X																										
WM00664	3 YR		X																										
WM00094	18 YR		X																										
WM00776	3 YR		X																										
WM00150	6 YR		X																										
WM00151	6 YR		X																										
WM00089	18 YR		X																										
WM00090	18 YR		X																										
WM00098	18 YR		X																										
WM00110	18 YR		X																										
WM00054	18 YR		X																										
WM00056	18 YR		X																										
WM00091	18 YR		X																										
WM00093	18 YR		X																										
WM00096	18 YR		X																										
WM00164	18 YR		X																										
WM00921	18 YR		X																										
WM00971	18 YR		X																										
WM00973	18 YR		X																										
WM00974	18 YR		X																										
WM00986	18 YR		X																										
WM00006	6 YR		X																										
WM00011	18 YR		X																										
WM00062	18 YR		X																										
WM00080	18 YR		X																										
WM00087	18 YR		X																										
WM00160	18 YR		X																										
WM00283	18 YR		X																										
WM00439	18 YR		X																										
WM00925	18 YR		X																										
WM00945	18 YR		X																										
WM00970	18 YR		X																										
WM00976	18 YR		X																										
WM00980	18 YR		X																										
WM00001	18 YR		X																										
WM00002	18 YR		X																										
WM00070	18 YR		X																										
WM00072	18 YR		X																										
WM00088	18 YR		X																										
WM00092	18 YR		X																										
WM00095	18 YR		X																										
WM00099	18 YR		X																										
DAY = Days																													
WK = Weeks																													
YR = Years																													
HRS = Hours																													

Task	Limit	Operating hours [HRS]																											
		14500	15000																										
WM00100	18 YR		X																										
WM00103	18 YR		X																										
WM00104	18 YR		X																										
WM00108	18 YR		X																										
WM00111	18 YR		X																										
WM00127	18 YR		X																										
DAY = Days																													
WK = Weeks																													
YR = Years																													
HRS = Hours																													

1.12 Cyclical maintenance tasks 15000 HRS

Qualification	Interval [HRS]	Limit	Item	Maintenance tasks	Option	Task
Engine						
QL1	-	1 DAY	EXHAUST SILENCER	Check drain of silencer	X	WM00233
QL1	-	1 DAY	ENGINE OPERATIONAL MONITORING	Check engine oil level		WM00285
QL1	-	1 DAY	ENGINE OPERATIONAL MONITORING	Visually inspect for leaks and general condition of engine		WM00286
QL1	-	1 DAY	ENGINE OPERATIONAL MONITORING	Check maintenance indicator of air filter	X	WM00287
QL1	-	1 DAY	ENGINE OPERATIONAL MONITORING	When engine is running, check for abnormal running noises, exhaust gas color and vibrations		WM00289
QL1	-	1 DAY	ENGINE OPERATIONAL MONITORING	Drain water and contaminants from fuel prefilter	X	WM00290
QL1	-	1 WK	EMERGENCY AIR SHUT-OFF FLAPS	Check operation of emergency air shut-off flaps	X	WM00174
QL1	-	1 WK	ENGINE OPERATIONAL MONITORING	Check relief bore of coolant pump		WM00288
QL1	-	1 YR	ENGINE MOUNTING	Check securing screws for secure seating		WM00136
QL1	-	2 YR	LUBE OIL SYSTEM	Replace oil filter at every engine oil change, or when the time limit (years) is reached, at the latest		WM00067
QL1	500	2 YR	LUBE OIL SYSTEM	Automatic centrifugal oil filter, check layer thickness of oil residue, clean, and replace paper element at every engine oil change at the latest		WM00063
QL1	1000	2 YR	FUEL SYSTEM (LOW PRESSURE)	Fuel prefilter, replace filter	X	WM00084
QL1	1000	2 YR	FUEL SYSTEM (LOW PRESSURE)	Additional filter, replace easy-change fuel filter		WM00085
QL1	1000	2 YR	FUEL SYSTEM (LOW PRESSURE)	Replace easy-change fuel filter		WM00086
QL1	1000	2 YR	AUXILIARY POWER TAKE-OFF	Check belt condition, replace if necessary. Adjust tension.	X	WM00170
QL1	3000	1 YR	ENGINE MOUNTING	Check general condition of rubber mounts (visual inspection)		WM00050
QL1	3000	3 YR	AIR SUPPLY SYSTEM	Replace air filter	X	WM00076
QL1	3000	3 YR	COOLANT SYSTEM	Replace valve cover	X	WM00664
QL1	3000	18 YR	VALVE GEAR	Check valve clearance, adjust if necessary. ATTENTION! First adjustment after 1,000 operating hours on a new engine and after 1,000 operating hours following each cylinder head overhaul.		WM00094
QL1	3750	3 YR	CRANKCASE VENTILATION	Replace filter or filter element (coalescer filter)		WM00776
QL1	5000	6 YR	SENSOR TECHNOLOGY AND WIRING HARNESS	Replace NOx sensor(s)		WM00150
QL1	5000	6 YR	SENSOR TECHNOLOGY AND WIRING HARNESS	Replace Lambda sensor		WM00151
QL1	7500	18 YR	GOVERNOR	Reset drift correction parameters (DC)		WM00089
QL1	7500	18 YR	FUEL SYSTEM (HIGH PRESSURE)	Replace fuel injection valve/injector		WM00090
QL1	7500	18 YR	CYLINDER HEAD	Measure valve protrusion		WM00098
QL1	7500	18 YR	RUNNING GEAR	Inspect cylinder liner with endoscope		WM00110
QL3	7500	18 YR	COOLANT SYSTEM	Check LT thermostat housing and replace thermal actuator		WM00054
QL3	7500	18 YR	COOLANT SYSTEM	Check HT thermostat housing and replace thermal actuator		WM00056
QL3	7500	18 YR	FUEL SYSTEM (HIGH PRESSURE)	Replace HP pump		WM00091
DAY = Days WK = Weeks YR = Years HRS = Hours						

TIM-ID: 000000000 - 000

Qualification	Interval [HRS]	Limit	Item	Maintenance tasks	Option	Task
QL3	7500	18 YR	VALVE GEAR	Check rocker arm and valve bridge for wear. Visually inspect swing follower with endoscope through pushrod bore.		WM00093
QL3	7500	18 YR	VALVE GEAR	Visually inspect camshaft running surfaces with endoscope through pushrod bore		WM00096
QL3	7500	18 YR	AIR PIPING TO CYLINDERS	Clean air piping		WM00164
QL3	7500	18 YR	COOLANT SYSTEM	Replace sealing material for installation of coolant pump(s) and thermostat(s) (only LT and HT)		WM00921
QL3	7500	18 YR	STARTING SYSTEM	Overhaul or replace starter		WM00971
QL3	7500	18 YR	COOLANT SYSTEM	Overhaul or replace coolant pump in LT circuit		WM00973
QL3	7500	18 YR	COOLANT SYSTEM	Overhaul or replace coolant pump in HT circuit		WM00974
QL3	7500	18 YR	AIR PIPING TO CYLINDERS	Clean intercooler and check for leaks or replace		WM00986
QL3	15000	6 YR	HOSE	Replace hose line		WM00006
QL3	15000	18 YR	FUEL SYSTEM (HIGH PRESSURE)	Replace HP fuel sensor		WM00011
QL3	15000	18 YR	LUBE OIL SYSTEM	Check centrifugal oil filter for wear		WM00062
QL3	15000	18 YR	EXHAUST TURBOCHARGER	Replace aluminum compressor wheel of secondary exhaust turbocharger		WM00080
QL3	15000	18 YR	FUEL SYSTEM (LOW PRESSURE)	Replace pump		WM00087
QL3	15000	18 YR	EXHAUST RETURN	Replace flaps		WM00160
QL3	15000	18 YR	AUXILIARY POWER TAKE-OFF	Replace auxiliary power take-off	X	WM00283
QL3	15000	18 YR	RUNNING GEAR	Replace vibration damper		WM00439
QL3	15000	18 YR	BENDING / TORSIONALLY RESILIENT COUPLING	Replace coupling or coupling element(s)		WM00925
QL3	15000	18 YR	EXHAUST RETURN	Replace EGR cooler		WM00945
QL3	15000	18 YR	EXHAUST TURBOCHARGER	Overhaul or replace exhaust turbocharger		WM00970
QL3	15000	18 YR	GENERATOR	Overhaul or replace battery-charging generator		WM00976
QL3	15000	18 YR	CYLINDER HEAD	Overhaul or replace cylinder head		WM00980
QL4	15000	18 YR	ENGINE, GENERAL	Replace elastomeric members and gaskets		WM00001
QL4	15000	18 YR	ENGINE, GENERAL	Disassemble engine completely. Check engine components according to assembly instructions, replace or repair as necessary		WM00002
QL4	15000	18 YR	LUBE OIL SYSTEM	Check pump, replace if necessary		WM00070
QL4	15000	18 YR	EXHAUST SYSTEM	Replace exhaust pipe bellows		WM00072
QL4	15000	18 YR	FUEL SYSTEM (HIGH PRESSURE)	Replace pressure relief valve		WM00088
QL4	15000	18 YR	VALVE GEAR	Replace swing follower and swing follower shaft		WM00092
QL4	15000	18 YR	VALVE GEAR	Replace thrust bearing flange		WM00095
QL4	15000	18 YR	RUNNING GEAR	Replace conrod bearings		WM00099
QL4	15000	18 YR	RUNNING GEAR	Replace rings		WM00100
QL4	15000	18 YR	RUNNING GEAR	Replace crankshaft bearings		WM00103
QL4	15000	18 YR	GEAR TRAIN	Check tooth flanks in gear train for wear (visual inspection), replace bushing		WM00104
QL4	15000	18 YR	RUNNING GEAR	Replace cylinder liners		WM00108
QL4	15000	18 YR	CAMSHAFT	Replace camshaft bearings		WM00111
QL4	15000	18 YR	ENGINE MOUNTING	Replace rubber element of rubber mounts		WM00127
DAY = Days WK = Weeks YR = Years HRS = Hours						

TIM-ID: 0000000000 - 000

1.13 Maintenance Schedule Matrix 12000 HRS

500 to 12000 Operating hours

Task	Limit	Operating hours [HRS]																							
		500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000	6500	7000	7500	8000	8500	9000	9500	10000	10500	11000	11500	12000
WM00233	1 DAY																								
WM00285	1 DAY																								
WM00286	1 DAY																								
WM00287	1 DAY																								
WM00289	1 DAY																								
WM00290	1 DAY																								
WM00174	1 WK																								
WM00288	1 WK																								
WM00136	1 YR																								
WM00067	2 YR																								
WM00063	2 YR	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
WM00084	2 YR		X		X		X		X		X		X		X		X		X		X		X		X
WM00085	2 YR		X		X		X		X		X		X		X		X		X		X		X		X
WM00086	2 YR		X		X		X		X		X		X		X		X		X		X		X		X
WM00170	2 YR		X		X		X		X		X		X		X		X		X		X		X		X
WM00050	1 YR						X						X						X					X	
WM00076	3 YR						X						X						X					X	
WM00664	3 YR						X						X						X					X	
WM00094	18 YR		X				X						X						X					X	
WM00776	3 YR								X							X								X	
WM00150	6 YR												X											X	
WM00151	6 YR												X											X	
WM00089	18 YR												X											X	
WM00090	18 YR												X											X	
WM00098	18 YR												X											X	
WM00110	18 YR												X											X	
WM00054	18 YR												X											X	
WM00056	18 YR												X											X	
WM00091	18 YR												X											X	
WM00093	18 YR												X											X	
WM00096	18 YR												X											X	
WM00164	18 YR												X											X	
WM00921	18 YR												X											X	
WM00971	18 YR												X											X	
WM00973	18 YR												X											X	
WM00974	18 YR												X											X	
WM00986	18 YR												X											X	
WM00006	6 YR																							X	
WM00011	18 YR																							X	
WM00062	18 YR																							X	
WM00080	18 YR																							X	

DAY = Days

WK = Weeks

YR = Years

HRS = Hours

Task	Limit	Operating hours [HRS]																													
		500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000	6500	7000	7500	8000	8500	9000	9500	10000	10500	11000	11500	12000						
WM00087	18 YR																								X						
WM00160	18 YR																								X						
WM00283	18 YR																								X						
WM00439	18 YR																								X						
WM00925	18 YR																								X						
WM00945	18 YR																								X						
WM00970	18 YR																								X						
WM00976	18 YR																								X						
WM00980	18 YR																								X						
WM00001	18 YR																								X						
WM00002	18 YR																								X						
WM00070	18 YR																								X						
WM00072	18 YR																								X						
WM00088	18 YR																								X						
WM00092	18 YR																								X						
WM00095	18 YR																								X						
WM00099	18 YR																								X						
WM00100	18 YR																								X						
WM00103	18 YR																								X						
WM00104	18 YR																								X						
WM00108	18 YR																								X						
WM00111	18 YR																								X						
WM00127	18 YR																								X						
DAY = Days																															
WK = Weeks																															
YR = Years																															
HRS = Hours																															

1.14 Cyclical maintenance tasks 12000 HRS

Qualification	Interval [HRS]	Limit	Item	Maintenance tasks	Option	Task
Engine						
QL1	-	1 DAY	EXHAUST SILENCER	Check drain of silencer	X	WM00233
QL1	-	1 DAY	ENGINE OPERATIONAL MONITORING	Check engine oil level		WM00285
QL1	-	1 DAY	ENGINE OPERATIONAL MONITORING	Visually inspect for leaks and general condition of engine		WM00286
QL1	-	1 DAY	ENGINE OPERATIONAL MONITORING	Check maintenance indicator of air filter	X	WM00287
QL1	-	1 DAY	ENGINE OPERATIONAL MONITORING	When engine is running, check for abnormal running noises, exhaust gas color and vibrations		WM00289
QL1	-	1 DAY	ENGINE OPERATIONAL MONITORING	Drain water and contaminants from fuel prefilter	X	WM00290
QL1	-	1 WK	EMERGENCY AIR SHUT-OFF FLAPS	Check operation of emergency air shut-off flaps	X	WM00174
QL1	-	1 WK	ENGINE OPERATIONAL MONITORING	Check relief bore of coolant pump		WM00288
QL1	-	1 YR	ENGINE MOUNTING	Check securing screws for secure seating		WM00136
QL1	-	2 YR	LUBE OIL SYSTEM	Replace oil filter at every engine oil change, or when the time limit (years) is reached, at the latest		WM00067
QL1	500	2 YR	LUBE OIL SYSTEM	Automatic centrifugal oil filter, check layer thickness of oil residue, clean, and replace paper element at every engine oil change at the latest		WM00063
QL1	1000	2 YR	FUEL SYSTEM (LOW PRESSURE)	Fuel prefilter, replace filter	X	WM00084
QL1	1000	2 YR	FUEL SYSTEM (LOW PRESSURE)	Additional filter, replace easy-change fuel filter		WM00085
QL1	1000	2 YR	FUEL SYSTEM (LOW PRESSURE)	Replace easy-change fuel filter		WM00086
QL1	1000	2 YR	AUXILIARY POWER TAKE-OFF	Check belt condition, replace if necessary. Adjust tension.	X	WM00170
QL1	3000	1 YR	ENGINE MOUNTING	Check general condition of rubber mounts (visual inspection)		WM00050
QL1	3000	3 YR	AIR SUPPLY SYSTEM	Replace air filter	X	WM00076
QL1	3000	3 YR	COOLANT SYSTEM	Replace valve cover	X	WM00664
QL1	3000	18 YR	VALVE GEAR	Check valve clearance, adjust if necessary. ATTENTION! First adjustment after 1,000 operating hours on a new engine and after 1,000 operating hours following each cylinder head overhaul.		WM00094
QL1	4000	3 YR	CRANKCASE VENTILATION	Replace filter or filter element (coalescer filter)		WM00776
QL1	6000	6 YR	SENSOR TECHNOLOGY AND WIRING HARNESS	Replace NOx sensor(s)		WM00150
QL1	6000	6 YR	SENSOR TECHNOLOGY AND WIRING HARNESS	Replace Lambda sensor		WM00151
QL1	6000	18 YR	GOVERNOR	Reset drift correction parameters (DC)		WM00089
QL1	6000	18 YR	FUEL SYSTEM (HIGH PRESSURE)	Replace fuel injection valve/injector		WM00090
QL1	6000	18 YR	CYLINDER HEAD	Measure valve protrusion		WM00098
QL1	6000	18 YR	RUNNING GEAR	Inspect cylinder liner with endoscope		WM00110
QL3	6000	18 YR	COOLANT SYSTEM	Check LT thermostat housing and replace thermal actuator		WM00054
QL3	6000	18 YR	COOLANT SYSTEM	Check HT thermostat housing and replace thermal actuator		WM00056
QL3	6000	18 YR	FUEL SYSTEM (HIGH PRESSURE)	Replace HP pump		WM00091
DAY = Days WK = Weeks YR = Years HRS = Hours						

TIM-ID: 000000000 - 000

Qualification	Interval [HRS]	Limit	Item	Maintenance tasks	Option	Task
QL3	6000	18 YR	VALVE GEAR	Check rocker arm and valve bridge for wear. Visually inspect swing follower with endoscope through pushrod bore.		WM00093
QL3	6000	18 YR	VALVE GEAR	Visually inspect camshaft running surfaces with endoscope through pushrod bore		WM00096
QL3	6000	18 YR	AIR PIPING TO CYLINDERS	Clean air piping		WM00164
QL3	6000	18 YR	COOLANT SYSTEM	Replace sealing material for installation of coolant pump(s) and thermostat(s) (only LT and HT)		WM00921
QL3	6000	18 YR	STARTING SYSTEM	Overhaul or replace starter		WM00971
QL3	6000	18 YR	COOLANT SYSTEM	Overhaul or replace coolant pump in LT circuit		WM00973
QL3	6000	18 YR	COOLANT SYSTEM	Overhaul or replace coolant pump in HT circuit		WM00974
QL3	6000	18 YR	AIR PIPING TO CYLINDERS	Clean intercooler and check for leaks or replace		WM00986
QL3	12000	6 YR	HOSE	Replace hose line		WM00006
QL3	12000	18 YR	FUEL SYSTEM (HIGH PRESSURE)	Replace HP fuel sensor		WM00011
QL3	12000	18 YR	LUBE OIL SYSTEM	Check centrifugal oil filter for wear		WM00062
QL3	12000	18 YR	EXHAUST TURBOCHARGER	Replace aluminum compressor wheel of secondary exhaust turbocharger		WM00080
QL3	12000	18 YR	FUEL SYSTEM (LOW PRESSURE)	Replace pump		WM00087
QL3	12000	18 YR	EXHAUST RETURN	Replace flaps		WM00160
QL3	12000	18 YR	AUXILIARY POWER TAKE-OFF	Replace auxiliary power take-off	X	WM00283
QL3	12000	18 YR	RUNNING GEAR	Replace vibration damper		WM00439
QL3	12000	18 YR	BENDING / TORSIONALLY RESILIENT COUPLING	Replace coupling or coupling element(s)		WM00925
QL3	12000	18 YR	EXHAUST RETURN	Replace EGR cooler		WM00945
QL3	12000	18 YR	EXHAUST TURBOCHARGER	Overhaul or replace exhaust turbocharger		WM00970
QL3	12000	18 YR	GENERATOR	Overhaul or replace battery-charging generator		WM00976
QL3	12000	18 YR	CYLINDER HEAD	Overhaul or replace cylinder head		WM00980
QL4	12000	18 YR	ENGINE, GENERAL	Replace elastomeric members and gaskets		WM00001
QL4	12000	18 YR	ENGINE, GENERAL	Disassemble engine completely. Check engine components according to assembly instructions, replace or repair as necessary		WM00002
QL4	12000	18 YR	LUBE OIL SYSTEM	Check pump, replace if necessary		WM00070
QL4	12000	18 YR	EXHAUST SYSTEM	Replace exhaust pipe bellows		WM00072
QL4	12000	18 YR	FUEL SYSTEM (HIGH PRESSURE)	Replace pressure relief valve		WM00088
QL4	12000	18 YR	VALVE GEAR	Replace swing follower and swing follower shaft		WM00092
QL4	12000	18 YR	VALVE GEAR	Replace thrust bearing flange		WM00095
QL4	12000	18 YR	RUNNING GEAR	Replace conrod bearings		WM00099
QL4	12000	18 YR	RUNNING GEAR	Replace rings		WM00100
QL4	12000	18 YR	RUNNING GEAR	Replace crankshaft bearings		WM00103
QL4	12000	18 YR	GEAR TRAIN	Check tooth flanks in gear train for wear (visual inspection), replace bushing		WM00104
QL4	12000	18 YR	RUNNING GEAR	Replace cylinder liners		WM00108
QL4	12000	18 YR	CAMSHAFT	Replace camshaft bearings		WM00111
QL4	12000	18 YR	ENGINE MOUNTING	Replace rubber element of rubber mounts		WM00127
DAY = Days WK = Weeks YR = Years HRS = Hours						

TIM-ID: 0000000000 - 000

1.15 Maintenance Schedule Matrix 6000 HRS

500 to 6000 Operating hours

Task	Limit	Operating hours [HRS]																							
		500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000												
WM00233	1 DAY																								
WM00285	1 DAY																								
WM00286	1 DAY																								
WM00287	1 DAY																								
WM00289	1 DAY																								
WM00290	1 DAY																								
WM00174	1 WK																								
WM00288	1 WK																								
WM00136	1 YR																								
WM00067	2 YR																								
WM00063	2 YR	X	X	X	X	X	X	X	X	X	X	X	X												
WM00084	2 YR		X		X		X		X		X		X												
WM00085	2 YR		X		X		X		X		X		X												
WM00086	2 YR		X		X		X		X		X		X												
WM00170	2 YR		X		X		X		X		X		X												
WM00050	1 YR						X						X												
WM00076	3 YR						X						X												
WM00664	3 YR						X						X												
WM00776	3 YR						X						X												
WM00094	18 YR		X				X						X												
WM00150	6 YR										X														
WM00151	6 YR										X														
WM00089	18 YR												X												
WM00090	18 YR												X												
WM00098	18 YR												X												
WM00110	18 YR												X												
WM00054	18 YR						X						X												
WM00056	18 YR						X						X												
WM00091	18 YR						X						X												
WM00096	18 YR						X						X												
WM00921	18 YR						X						X												
WM00971	18 YR						X						X												
WM00973	18 YR						X						X												
WM00974	18 YR						X						X												
WM00986	18 YR						X						X												
WM00006	6 YR												X												
WM00011	18 YR												X												
WM00062	18 YR												X												
WM00080	18 YR												X												
WM00087	18 YR												X												
WM00093	18 YR												X												
WM00160	18 YR												X												

DAY = Days
WK = Weeks
YR = Years
HRS = Hours

Task	Limit	Operating hours [HRS]																									
		500	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000														
WM00164	18 YR												X														
WM00283	18 YR												X														
WM00439	18 YR												X														
WM00925	18 YR												X														
WM00945	18 YR												X														
WM00970	18 YR												X														
WM00976	18 YR												X														
WM00980	18 YR												X														
WM00001	18 YR												X														
WM00002	18 YR												X														
WM00070	18 YR												X														
WM00072	18 YR												X														
WM00088	18 YR												X														
WM00092	18 YR												X														
WM00095	18 YR												X														
WM00099	18 YR												X														
WM00100	18 YR												X														
WM00103	18 YR												X														
WM00104	18 YR												X														
WM00108	18 YR												X														
WM00111	18 YR												X														
WM00127	18 YR												X														
DAY = Days WK = Weeks YR = Years HRS = Hours																											

1.16 Cyclical maintenance tasks 6000 HRS

Qualification	Interval [HRS]	Limit	Item	Maintenance tasks	Option	Task
Engine						
QL1	-	1 DAY	EXHAUST SILENCER	Check drain of silencer	X	WM00233
QL1	-	1 DAY	ENGINE OPERATIONAL MONITORING	Check engine oil level		WM00285
QL1	-	1 DAY	ENGINE OPERATIONAL MONITORING	Visually inspect for leaks and general condition of engine		WM00286
QL1	-	1 DAY	ENGINE OPERATIONAL MONITORING	Check maintenance indicator of air filter	X	WM00287
QL1	-	1 DAY	ENGINE OPERATIONAL MONITORING	When engine is running, check for abnormal running noises, exhaust gas color and vibrations		WM00289
QL1	-	1 DAY	ENGINE OPERATIONAL MONITORING	Drain water and contaminants from fuel prefilter	X	WM00290
QL1	-	1 WK	EMERGENCY AIR SHUT-OFF FLAPS	Check operation of emergency air shut-off flaps	X	WM00174
QL1	-	1 WK	ENGINE OPERATIONAL MONITORING	Check relief bore of coolant pump		WM00288
QL1	-	1 YR	ENGINE MOUNTING	Check securing screws for secure seating		WM00136
QL1	-	2 YR	LUBE OIL SYSTEM	Replace oil filter at every engine oil change, or when the time limit (years) is reached, at the latest		WM00067
QL1	500	2 YR	LUBE OIL SYSTEM	Automatic centrifugal oil filter, check layer thickness of oil residue, clean, and replace paper element at every engine oil change at the latest		WM00063
QL1	1000	2 YR	FUEL SYSTEM (LOW PRESSURE)	Fuel prefilter, replace filter	X	WM00084
QL1	1000	2 YR	FUEL SYSTEM (LOW PRESSURE)	Additional filter, replace easy-change fuel filter		WM00085
QL1	1000	2 YR	FUEL SYSTEM (LOW PRESSURE)	Replace easy-change fuel filter		WM00086
QL1	1000	2 YR	AUXILIARY POWER TAKE-OFF	Check belt condition, replace if necessary. Adjust tension.	X	WM00170
QL1	3000	1 YR	ENGINE MOUNTING	Check general condition of rubber mounts (visual inspection)		WM00050
QL1	3000	3 YR	AIR SUPPLY SYSTEM	Replace air filter	X	WM00076
QL1	3000	3 YR	COOLANT SYSTEM	Replace valve cover	X	WM00664
QL1	3000	3 YR	CRANKCASE VENTILATION	Replace filter or filter element (coalescer filter)		WM00776
QL1	3000	18 YR	VALVE GEAR	Check valve clearance, adjust if necessary. ATTENTION! First adjustment after 1,000 operating hours on a new engine and after 1,000 operating hours following each cylinder head overhaul.		WM00094
QL1	5000	6 YR	SENSOR TECHNOLOGY AND WIRING HARNESS	Replace NOx sensor(s)		WM00150
QL1	5000	6 YR	SENSOR TECHNOLOGY AND WIRING HARNESS	Replace Lambda sensor		WM00151
QL1	6000	18 YR	GOVERNOR	Reset drift correction parameters (DC)		WM00089
QL1	6000	18 YR	FUEL SYSTEM (HIGH PRESSURE)	Replace fuel injection valve/injector		WM00090
QL1	6000	18 YR	CYLINDER HEAD	Measure valve protrusion		WM00098
QL1	6000	18 YR	RUNNING GEAR	Inspect cylinder liner with endoscope		WM00110
QL3	3000	18 YR	COOLANT SYSTEM	Check LT thermostat housing and replace thermal actuator		WM00054
QL3	3000	18 YR	COOLANT SYSTEM	Check HT thermostat housing and replace thermal actuator		WM00056
QL3	3000	18 YR	FUEL SYSTEM (HIGH PRESSURE)	Replace HP pump		WM00091
DAY = Days WK = Weeks YR = Years HRS = Hours						

TIM-ID: 000000000 - 000

Qualification	Interval [HRS]	Limit	Item	Maintenance tasks	Option	Task
QL3	3000	18 YR	VALVE GEAR	Visually inspect camshaft running surfaces with endoscope through pushrod bore		WM00096
QL3	3000	18 YR	COOLANT SYSTEM	Replace sealing material for installation of coolant pump(s) and thermostat(s) (only LT and HT)		WM00921
QL3	3000	18 YR	STARTING SYSTEM	Overhaul or replace starter		WM00971
QL3	3000	18 YR	COOLANT SYSTEM	Overhaul or replace coolant pump in LT circuit		WM00973
QL3	3000	18 YR	COOLANT SYSTEM	Overhaul or replace coolant pump in HT circuit		WM00974
QL3	3000	18 YR	AIR PIPING TO CYLINDERS	Clean intercooler and check for leaks or replace		WM00986
QL3	6000	6 YR	HOSE	Replace hose line		WM00006
QL3	6000	18 YR	FUEL SYSTEM (HIGH PRESSURE)	Replace HP fuel sensor		WM00011
QL3	6000	18 YR	LUBE OIL SYSTEM	Check centrifugal oil filter for wear		WM00062
QL3	6000	18 YR	EXHAUST TURBOCHARGER	Replace aluminum compressor wheel of secondary exhaust turbocharger		WM00080
QL3	6000	18 YR	FUEL SYSTEM (LOW PRESSURE)	Replace pump		WM00087
QL3	6000	18 YR	VALVE GEAR	Check rocker arm and valve bridge for wear. Visually inspect swing follower with endoscope through pushrod bore.		WM00093
QL3	6000	18 YR	EXHAUST RETURN	Replace flaps		WM00160
QL3	6000	18 YR	AIR PIPING TO CYLINDERS	Clean air piping		WM00164
QL3	6000	18 YR	AUXILIARY POWER TAKE-OFF	Replace auxiliary power take-off	X	WM00283
QL3	6000	18 YR	RUNNING GEAR	Replace vibration damper		WM00439
QL3	6000	18 YR	BENDING / TORSIONALLY RESILIENT COUPLING	Replace coupling or coupling element(s)		WM00925
QL3	6000	18 YR	EXHAUST RETURN	Replace EGR cooler		WM00945
QL3	6000	18 YR	EXHAUST TURBOCHARGER	Overhaul or replace exhaust turbocharger		WM00970
QL3	6000	18 YR	GENERATOR	Overhaul or replace battery-charging generator		WM00976
QL3	6000	18 YR	CYLINDER HEAD	Overhaul or replace cylinder head		WM00980
QL4	6000	18 YR	ENGINE, GENERAL	Replace elastomeric members and gaskets		WM00001
QL4	6000	18 YR	ENGINE, GENERAL	Disassemble engine completely. Check engine components according to assembly instructions, replace or repair as necessary		WM00002
QL4	6000	18 YR	LUBE OIL SYSTEM	Check pump, replace if necessary		WM00070
QL4	6000	18 YR	EXHAUST SYSTEM	Replace exhaust pipe bellows		WM00072
QL4	6000	18 YR	FUEL SYSTEM (HIGH PRESSURE)	Replace pressure relief valve		WM00088
QL4	6000	18 YR	VALVE GEAR	Replace swing follower and swing follower shaft		WM00092
QL4	6000	18 YR	VALVE GEAR	Replace thrust bearing flange		WM00095
QL4	6000	18 YR	RUNNING GEAR	Replace conrod bearings		WM00099
QL4	6000	18 YR	RUNNING GEAR	Replace rings		WM00100
QL4	6000	18 YR	RUNNING GEAR	Replace crankshaft bearings		WM00103
QL4	6000	18 YR	GEAR TRAIN	Check tooth flanks in gear train for wear (visual inspection), replace bushing		WM00104
QL4	6000	18 YR	RUNNING GEAR	Replace cylinder liners		WM00108
QL4	6000	18 YR	CAMSHAFT	Replace camshaft bearings		WM00111
QL4	6000	18 YR	ENGINE MOUNTING	Replace rubber element of rubber mounts		WM00127
DAY = Days WK = Weeks YR = Years HRS = Hours						

TIM-ID: 0000000000 - 000