

MTU_ValueService **Technical Documentation**

Diesel Engine

12 V 4000 R41

12 V 4000 R41L

12 V 4000 R41R

16 V 4000 R41

16 V 4000 R41L

16 V 4000 R41R

Instructions for Exchange
of Sub-assemblies

MS22030/00E



Printed in Germany

© 2008 Copyright MTU Friedrichshafen GmbH

This Publication is protected by copyright and may not be used in any way whether in whole or in part without the prior written permission of MTU Friedrichshafen GmbH. This restriction also applies to copyright, distribution, translation, microfilming and storage or processing on electronic systems including data bases and online services. This handbook is provided for use by maintenance and operating personnel in order to avoid malfunctions or damage during operation.

Subject to alterations and amendments.

1	General Information	07
1.1	Important Notes	07
1.1.1	Prerequisites for maintenance work and general assembly instructions	07
1.2	General Regulations	09
1.2.1	General Instructions	09
1.2.2	Personnel and organizational requirements	10
1.2.3	Safety precautions when working on the engine	11
1.2.4	Auxiliary materials, fire prevention and environmental protection	14
1.2.5	Standards for warning notices in the publication	16
1.2.6	General information regarding the Tolerances and Wear Limits List	17
1.2.7	Engine side and cylinder designations	18
1.2.8	Torque specifications for screws, nuts and bolts	19
1.2.9	Settings	38
1.2.10	Conversion tables	40
1.2.11	Repairing threaded bores with threaded inserts (Heli-Coil)	46
1.2.12	Abbreviations	48
2	Task Descriptions	51
2.1	Crankcase and Add-on Components	51
2.1.1	Inspection port cover – Overview	51
2.1.2	Inspection port cover – Preparatory steps	53
2.1.3	Inspection port cover – Removal	54
2.1.4	Inspection port cover – Cleaning sealing faces	55
2.1.5	Inspection port cover – Check	56
2.1.6	Inspection port cover – Installation	57
2.1.7	Inspection port cover – Final steps	58
2.1.8	Cylinder liner – Overview	59
2.1.9	Cylinder liner – Preparatory steps	61
2.1.10	Cylinder liner – Removal	62
2.1.11	Cylinder liner – Cleaning	64
2.1.12	Cylinder liner – Check	65
2.1.13	Cylinder liner – Tolerances	66
2.1.14	Cylinder liner – Installation	69
2.1.15	Cylinder liner – Final steps	72
2.2	Crank Drive	73
2.2.1	Crankshaft PTO, Free end – Overview	73
2.2.2	Vibration damper on PTO, free end – Removal	75
2.2.3	Vibration damper on PTO, free end – Installation	78
2.2.4	Piston and conrod – Overview	82
2.2.5	Piston and conrod – Preparatory steps	84
2.2.6	Piston and conrod – Removal	85
2.2.7	Piston – Cleaning	88
2.2.8	Piston – Check	89
2.2.9	Piston – Tolerances	92
2.2.10	Conrod – Check	100
2.2.11	Conrod – Tolerances	102
2.2.12	Conrod – Assembly	106

2.2.13	Piston – Assembly	109
2.2.14	Piston and conrod – Installation	112
2.2.15	Piston and conrod – Final steps	116
2.3	Cylinder Head	117
2.3.1	Cylinder head and attachments – Overview	117
2.3.2	Cylinder head – Preparatory steps	120
2.3.3	Cylinder head – Removal	121
2.3.4	Cylinder head – Cleaning	124
2.3.5	Cylinder head – Installation	125
2.3.6	Cylinder head – Final steps	129
2.4	Valve Gear	130
2.4.1	Valve gear – Overview	130
2.4.2	Valve drive – Overview	131
2.4.3	Valve drive – Preparatory steps	134
2.4.4	Valve drive – Removal	135
2.4.5	Valve drive – Cleaning	136
2.4.6	Valve drive – Check	137
2.4.7	Valve drive – Installation	138
2.4.8	Valve drive – Final steps	140
2.5	Fuel System – High Pressure	141
2.5.1	HP fuel system – Overview	141
2.5.2	High-pressure pump – Preparatory steps	142
2.5.3	HP pump – Removal	143
2.5.4	High-pressure pump – Check	145
2.5.5	HP pump – Installation	146
2.5.6	High-pressure pump – Final steps	148
2.5.7	High-pressure line – Overview	149
2.5.8	High-pressure line – Removal	154
2.5.9	High-pressure line – Installation	155
2.6	Fuel System – Low Pressure	156
2.6.1	L.P. fuel system – Overview	156
2.6.2	Fuel delivery pump – Overview	157
2.6.3	Fuel delivery pump – Preparatory steps	158
2.6.4	Fuel delivery pump – Removal	159
2.6.5	Fuel delivery pump – Cleaning	160
2.6.6	Fuel delivery pump – Check	161
2.6.7	Fuel delivery pump – Installation	162
2.6.8	Fuel delivery pump – Final steps	163
2.6.9	Fuel pipework from fuel delivery pump to fuel filter – Overview	164
2.6.10	Fuel system from fuel delivery pump to fuel filter – Preparatory steps	165
2.6.11	Fuel lines from fuel delivery pump to fuel filter – Removal	166
2.6.12	Fuel lines from fuel delivery pump to fuel filter – Installation	167
2.6.13	Fuel lines from fuel delivery pump to fuel filter – Final steps	168
2.6.14	Fuel duplex filter – Overview	169
2.6.15	Fuel duplex filter – Preparatory steps	170
2.6.16	Fuel duplex filter – Removal	171
2.6.17	Fuel filter – Cleaning	172
2.6.18	Fuel filter – Check	173

2.6.19	Fuel duplex filter – Installation	174
2.6.20	Fuel duplex filter – Final steps	175
2.6.21	Fuel pipework from fuel filter to HP pump – Overview	176
2.6.22	Leak-off fuel lines – Overview	177
2.7	Exhaust Turbocharger	179
2.7.1	Exhaust turbochargers – Overview	179
2.7.2	Exhaust turbocharger – Overview	180
2.7.3	Exhaust turbochargers – Overview	181
2.7.4	Exhaust turbocharger – Preparatory steps	182
2.7.5	Exhaust turbocharger – Removal	183
2.7.6	Exhaust turbocharger – Cleaning	184
2.7.7	Turbocharger inspection	185
2.7.8	Exhaust turbocharger – Installation	186
2.7.9	Exhaust turbocharger – Final steps	187
2.8	Air Intake / Air Supply	188
2.8.1	Air intake / air supply – Overview	188
2.8.2	Intake housing – Overview	189
2.8.3	Intake housing – Removal	191
2.8.4	Intake housing – Installation	192
2.8.5	Intake air system to cylinders, left – Overview	193
2.8.6	Air supply system to cylinders, left-hand side – Removal	194
2.8.7	Air supply system to cylinders, left-hand side – Installation	195
2.8.8	Air supply system to cylinders, right – Overview	196
2.8.9	Air supply system to cylinders, right-hand side – Removal	197
2.8.10	Air supply system to cylinders, right-hand side – Installation	198
2.8.11	Air pipework from exhaust turbocharger to intercooler – Overview	199
2.8.12	Air pipework from exhaust turbocharger to intercooler – Removal	201
2.8.13	Air pipework from turbocharger to intercooler – Installation	202
2.9	Exhaust System	203
2.9.1	Exhaust system – Overview	203
2.9.2	Exhaust pipework after cylinder head – Overview	204
2.9.3	Exhaust pipework after cylinder head – Preparatory steps	205
2.9.4	Exhaust pipework after cylinder head – Removal	206
2.9.5	Exhaust pipework after cylinder head – Installation	208
2.9.6	Exhaust pipework after cylinder head – Final steps	211
2.9.7	Exhaust pipework after exhaust turbocharger – Overview	212
2.9.8	Exhaust pipework after exhaust turbocharger – Removal	214
2.9.9	Exhaust pipework after exhaust turbocharger – Installation	215
2.10	Starting Equipment	216
2.10.1	Starter – Overview	216
2.10.2	Starter – Preparatory steps	217
2.10.3	Starter – Removal	218
2.10.4	Starter – Cleaning	219
2.10.5	Starter – Check	220
2.10.6	Starter – Installation	221
2.10.7	Starter – Final steps	222
2.11	Lube Oil System / Lube Oil Circuit	223
2.11.1	Turbocharger oil supply – Overview	223

2.11.2	Turbocharger oil supply – Removal	224
2.11.3	Turbocharger oil supply – Cleaning	225
2.11.4	Turbocharger oil supply – Check	226
2.11.5	Turbocharger oil supply – Installation	227
2.12	Coolant System	228
2.12.1	Engine coolant pump – Overview	228
2.12.2	Engine coolant pump – Preparatory steps	230
2.12.3	Engine coolant pump – Removal	231
2.12.4	Engine coolant pump – Cleaning	232
2.12.5	Engine coolant pump – Check	233
2.12.6	Engine coolant pump – Installation	234
2.12.7	Engine coolant pump – Final steps	236
2.12.8	Coolant pipework of engine coolant pump, intake side – Overview	237
2.12.9	Coolant pipework for engine coolant pump, intake side – Preparatory steps	240
2.12.10	Coolant pipework for engine coolant pump, intake side – Removal	241
2.12.11	Coolant pipework for engine coolant pump, intake side – Installation	242
2.12.12	Coolant pipework for engine coolant pump, intake side – Final steps	243
2.12.13	Coolant pipework from/to exhaust turbochargers – Overview	244
2.12.14	Coolant pipework from/to exhaust turbochargers – Preparatory steps	245
2.12.15	Coolant pipework from/to exhaust turbochargers – Removal	246
2.12.16	Coolant pipework from/to exhaust turbochargers – Cleaning	247
2.12.17	Coolant pipework from/to turbochargers – Check	248
2.12.18	Coolant pipework from/to exhaust turbochargers – Installation	249
2.12.19	Coolant pipework from/to exhaust turbochargers – Final steps	250
2.12.20	Charge-air coolant pump – Overview	251
2.12.21	Charge-air coolant pump – Preparatory steps	253
2.12.22	Charge-air coolant pump – Removal	254
2.12.23	Charge-air coolant pump – Cleaning functional and sealing faces	255
2.12.24	Charge-air coolant pump – Check	256
2.12.25	Charge-air coolant pump – Installation	257
2.12.26	Charge-air coolant pump – Final steps	259
2.12.27	Coolant pipework from/to intercooler – Overview	260
2.12.28	Coolant pipework with thermostat – Overview	262
2.12.29	Thermostat – Preparatory steps	263
2.12.30	Thermostat – Removal	264
2.12.31	Thermostat – Cleaning sealing faces	267
2.12.32	Thermostat – Check	268
2.12.33	Thermostat – Installation	270
2.12.34	Thermostat – Final steps	273
2.13	Mounting / Support	274
2.13.1	Engine mounting – Overview	274
2.13.2	Engine mount – Preparatory steps	277
2.13.3	Engine mount – Removal	278
2.13.4	Engine mounting – Installation	279
2.13.5	Engine mounting – Final steps	280
2.14	Monitoring, Control and Regulation Equipment	281
2.14.1	Cabling and engine wiring harnesses – Overview	281
2.14.2	Injector cabling – Removal and installation	286

2.14.3	Sensors, actuators and injectors – Overview	287
2.14.4	Sensors, actuators and injectors – Preparatory steps	289
2.14.5	Sensors, actuators and injectors – Removal	290
2.14.6	Sensors, actuators and injectors – Check	294
2.14.7	Sensors, actuators and injectors – Installation	295
2.14.8	Sensors – Final steps	299
3	Special Tools	301
3.1	Standard tools – Overview	301
3.2	Special tools – Overview	302
3.3	General workshop equipment – Overview	335
4	Appendix	341
4.1	MTU contact/service partner	341
4.2	Index	343

1 General Information

1.1 Important Notes

1.1.1 Prerequisites for maintenance work and general assembly instructions

This maintenance manual is intended for the technical personnel assigned to exchange of assemblies.

Contents: Instructions on exchange of assemblies

Prerequisites for maintenance work

If maintenance work is carried out by the customer, the following needs to be ensured:

- Observance of safety regulations.
- Deployment of trained and qualified personnel.
- Suitable shop equipment and general tools.
- Suitable testing equipment.
- Approved special tools.

General assembly instructions

Always use new sealing and securing elements for assembly.

Components that come into contact with oil, fuel, engine coolant and combustion air must be clean. Prior to assembly, clean components with "Special cleanness" requirement (e.g. oil and fuel-carrying parts) using suitable cleaning methods and then check for cleanness. Remove any packaging from components immediately before assembly.

Do not wash elastomer components (e.g. rubber, etc.) using diesel fuel, solvent or cold cleaner.

- Remove any oil or fuel film. Wipe parts down with a dry cloth to clean them.
- Do not paint elastomer components, such as e.g. engine mounts, damping elements, clutches and V-belts. Only install them after painting the engine or cover them prior to painting.


Radial shaft seals that have been treated with oil by the manufacturer, have a defined moisture expansion on delivery. Prior to installation, they may only be cleaned using abrasion-proof paper (not washed).

If not otherwise specified, the surfaces of parts that slide on each other should be moistened with SAE 30 engine oil.

If not otherwise specified, O-rings and surfaces (bores or shafts) that slide along them during installation, should be coated with grease. During the assembly of O-rings with counterrings in coolant pumps, observe the assembly instructions. After assembling O-rings in the grooves on shafts, push a rounded scribe under the O-ring in circumferential direction, if the O-ring diameter is large enough. The O-ring may not be damaged.

Prior to assembling shaft seals:

- Coat shaft and sealing lip of shaft seal with grease and coat shaft running surface with thin-film lubricant or SAE 30 engine oil.
- If no other information is specified on the drawing, coat the outer surface of mounting bores on metal outer liners with surface sealant. Coat the outer surface of elastomer outer liners or combined metal/elastomer outer liners with ethanol.

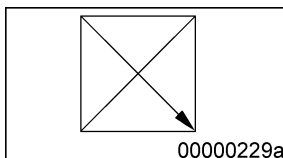

Graphical symbol applies to radial shaft seals and depends on the position. Dimension arrow indicates the position of the sealing lip.

Use sealing paste to fix the position of flat gaskets. Apply sealing paste thinly and in the form of dots on the flat gasket or opposite surface. Flat gaskets should be attached to a component shortly after applying the sealing paste and the sealing point should then be bolted (at the latest after 20 minutes)

Prior to installing antifriction bearings, lubricate the bearing seats. Only take bearings out of their original packaging immediately before installation. Do not remove corrosion inhibitor from bearings in original packaging. To clean the antifriction bearings, use denatured spirit or acid-free kerosene. After cleaning, lubricate bearings with SAE 30 engine oil.

- Do not apply assembly forces (axial) over rolling elements and do not knock bearing rings with hammers (use assembly aids).
- Do not use naked flames to heat inner bearing races!
- The temperature should be between 80°C and 100°C and may not exceed 120°C.
- Freezing as a method for the assembly of anti-friction bearings is not permitted (danger of cracks, rust formation due to condensate).

Do not lubricate dry bearings with oil.

When installing gears, use SAE 30 engine oil to moisten teeth.

Prior to assembly, mating and contact surfaces of components (e.g. contact surfaces for centering, flange and sealing faces, joint surfaces of interference fit assemblies) must be clean, bright or have the specified surface protection and also be free of surface irregularities and damage. Remove any corrosion inhibitor (e.g. oil, grease) from mating and contact surfaces.

After joining components that are chilled with liquid nitrogen, remove any condensate and preserve with SAE 30 engine oil.

Prior to installation in immersion sleeves, coat the sensor area of measuring sensors with long-life lubricant.

Preassemble line links with cutting ring union in the bench vise and tighten; coat thread with thin-film lubricant first.

If components need to be marked by means of etching, use neutralization agent to remove the marking solution afterwards. Preserve the relevant areas with SAE 30 engine oil.

The mating/contact surfaces of components used in the hot-component area (e.g. V-belt clamps, bellows, plug-in pipes), should be coated with assembly paste, if not otherwise specified.

The assembly surfaces of screws, nuts, washer components and parts to be tensioned must be clean, bright or have surface protection and also be free of surface irregularities and damage. Remove any corrosion inhibitors (e.g. oil, grease). Prior to assembly according to tightening specifications, coat threads and screw bearing surfaces with lubricant.

If not otherwise specified, use SAE 30 engine oil as lubricant and in the hot-component area assembly paste.

Screw connections without tightening specification can be tightened freely, i.e. machine-tightening with screwdriver or hand-tightening with open-end wrench or box wrench. For machine-tightening, take the torque specification for thread size and property class from the general tightening specifications.

Screw connections with tightening specification:

- Establish the screw connections by hand-tightening with snap wrench or torque indicator wrench. Apply tightening torque without taking the tolerance specified on the snap wrench into account. If a torque indicator wrench is used, the torque must be within the tightening torque limit range. Proceed in the same way for connections protected against torsion. This information also applies to test torques.
- If no tolerance is specified for the tightening torque, the tightening tolerance is +10 % of the specified torque.
- Rotation angle tightening:
The angles of further rotation specified in the torque specification must be established. They may be exceeded within the specified tolerance range. If no tightening torque is specified, maintain the following tolerances: +5 ° for angle of further rotation below/equal 90 ° +10 ° for angle of further rotation above 90 °. Prior to rotation angle tightening, apply a color line mark to each screw head to allow the inspection of the correct angle of rotation after tightening (exception: the color line mark is not required for tightening using self-monitoring NC screwdrivers).
- Elongation tightening:
Tighten according to tightening specification, taking the tightening tolerance into account.