

FG FG DESIGNATION

004 LABELS AND MISCELLANEQUS MATERIALS

011 CRANKCASE

014 OIL PAN

015 ENGINE MOUNTING

016 END HOUSING, MAIN PTO END AND AUX PTO END

018 CRANKCASE BREATHER

024 GEARCASE, AUX PTO END

031 CRANKSHAFT

032 CRANKSHAFT SUPPORT BEARINGS, MAIN PTO END

035 CRANKSHAFT, PTO, AUX PTO END

036 CRANKSHAFT TRANSPORTATION LOCKING DEVICE

037 PISTON

038 CONROD

041 CYLINDER HEAD

051 CAMSHAFT

055 VALVE DRIVE

073 INJECTION PUMP / HP PUMP

075 FUEL INJECTOR

077 HP FUEL LINE / HP LINE

081 FUEL PIPEWORK BEFORE DELIVERY PUMP

083 FUEL FILTER

101 TURBOCHARGER (H.P)

111 CHARGE AIR COOLING, IF REQUIRED, LEFT SIDE

121 AIR FILTER

123 AIR SYSTEM

124 AIR SUPPLY TO CYLINDERS

126 AIR TRANSFER, LEFT - RIGHT SIDE, MAIN PTO END

128 CONTROL BLOCK FOR AIR AND EXHAUST FLOW CONTROL FLAPS

142 CONSTANT-PRESSURE EXHAUST MANIFOLD

143 CARRIER HOUSING

144 EXHAUST FLOW CONTROL FLAP WITH CONTROLS

146 EXHAUST SYSTEM AFTER ENGINE

172 ELECTRIC STARTING

173 AIR STARTER

181 LUBE OIL PUMP AND DRIVE

183 OIL FILTRATION/COOLING

185 TURBOCHARGER OIL SUPPLY

202 HIGH-TEMPERATURE CIRCUIT

203 LOW-TEMPERATURE CIRCUIT

204 HEAT EXCHANGER PLATES

206 COOLANT PIPEWORK WITH THERMOSTAT

207 RAW WATER PUMPE WITH CONNECTIONS

208 COOLANT EXPANSION TANK

231 ENGINE MOUNTING

251 STEEL-SPRING COUPLING

255 BENDING-RESILIENT COUPLING

301 GENERAL ACCESSORIES

FG FG DESIGNATION

- 342 DRIVE SYSTEM
- 405 TRANSMISSIONS/GENERATORS
- 507 GENERAL WIRING, ENGINE/GEARBOX/PLANT
- 508 ENGINE GOVERNOR (ELECTRONIC) CONTROL SYSTEM
- 511 ALARM SYSTEM
- 515 PRESSURE/TEMPERATURE MONITORING SYSTEMS (EXCL. EXHAUST GAS)
- 517 EMERGENCY INSTRUMENTATION (CONTROL STAND)

TYPE: 16V4000M90
SERIAL NO.: 527101997

527101997

FG/FGS: 004
BOM NO.:

GROUP NUMBER (FG)
GROUP NAME
BOM NO.

Warning

Do not open hot crankcase for at least 10 minutes after shutdown of engine.
Do not restart overheated engine before cause of overheating has been remedied.

30 MIN 425

PLATE
010.00055

E0043001a0

Achtung! Motorenöl nur bis zur oberen Markierung am Ölmeßstab einfüllen
ATTENTION! Fill engine oil only up to the upper mark on dipstick
ATTENTION! Ne remplir de l'huile moteur que jusqu'au repère supérieur sur la jauge d'huile
Atención! Rellenar aceite motor sólo hasta la marcación superior de la varilla medidora del nivel de aceite
Atenção! Encher óleo de motor só até a marcação superior da vareta medidora do nível de óleo
Attenzione! Introdurre olio motore solo fino alla graduazione superiore dell'asta livello olio
Dikkat! Motor yağını, yağ seviyesi ölçme çubuğunun sadece üst işaretine kadar doldurunuz

30 MIN 425

PLATE
010.00056

E0043002a0

Achtung

Dieser Anlage ist ein ausführliches Bedienungshandbuch beigelegt, welches wichtige Anweisungen für Betrieb und sichere Handhabung enthält. Vor der Inbetriebnahme ist dieses Handbuch sorgfältig zu lesen. Die Nichtbeachtung der Anweisungen kann zu schweren Schäden an der Anlage oder Verletzungen des Bedienungspersonals führen.

Warning

This unit is shipped with a detailed operator's manual containing important information on equipment operation and safe use. Carefully read the manual prior to starting, as failure to adhere to the instructions may cause serious equipment damage or injury to personnel.


Ersatz-Handbücher können angefordert werden bei:
For replacement manuals please contact:
MTU Motoren- und Turbinen-Union Friedrichshafen GmbH,
Postfach/P.O. Box, D-7090 Friedrichshafen/West Germany

30 MIN 425

PLATE
010.00057

E0043003a0

10

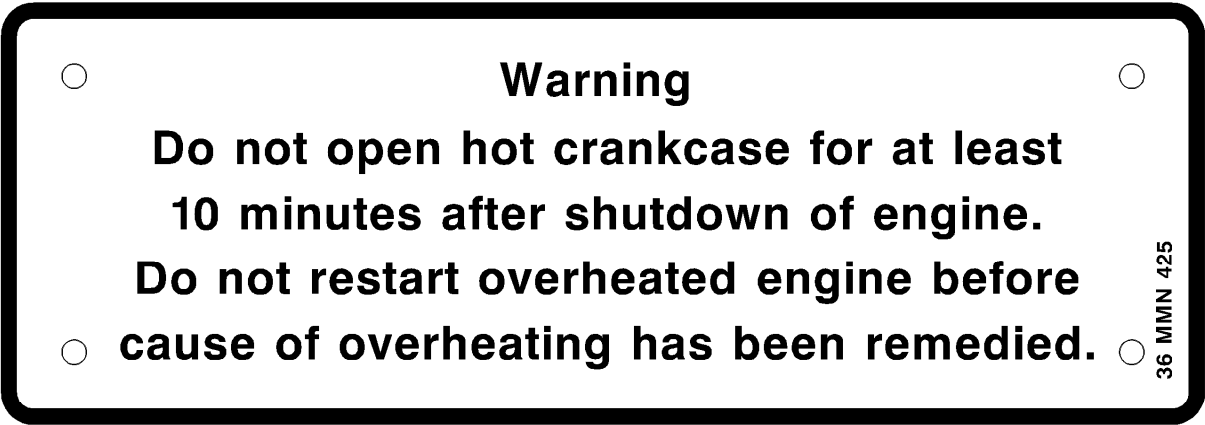

E0043001a0

POS.	PART NO.	DESIGNATION	QTY.	UNITS	MEASUREMENT	STANDARD
10	700425000039	PLATE	1	PC	36	MMN425

10

Achtung! Motorenöl nur bis zur oberen Markierung am Ölmeßstab einfüllen

ATTENTION! Fill engine oil only up to the upper mark on dipstick

ATTENTION! Ne remplir de l'huile-moteur que jusqu'au repère supérieur sur la jauge d'huile

Atención! Rellenar aceite motor sólo hasta la marcación superior de la varilla indicadora del nivel de aceite

Atenção! Encher óleo de motor só até á marcação superior da vareta medidora do nível de óleo

Attenzione! Introdurre olio motore solo fino alla graduazione superiore dell'asta livello olio

Dikkat! Motor yáginı, yág seviyesi ölçme çubugunun sadece üst isaretine kadar doldurunuz

61 MMN 425

E0043002a0

POS.	PART NO.	DESIGNATION	QTY.	UNITS	MEASUREMENT	STANDARD
10	700425000115	PLATE	1	PC	61	MMN425

10

Achtung

Dieser Anlage ist ein ausführliches Bedienungshandbuch beigelegt, welches wichtige Anweisungen für Betrieb und sichere Handhabung enthält. Vor der Inbetriebnahme ist dieses Handbuch sorgfältig zu lesen. Die Nichtbeachtung der Anweisungen kann zu schweren Schäden an der Anlage oder Verletzungen des Betriebspersonals führen.

Warning

This unit is shipped with a detailed operator's manual containing important information on equipment operation and safe use. Carefully read the manual prior to starting, as failure to adhere to the instructions may cause serious equipment damage or injury to personnel.

Ersatz-Handbücher können angefordert werden bei:
For replacement manuals please contact:

MTU Motoren- und Turbinen-Union Friedrichshafen GmbH,
Postfach/P.O. Box, D-7990 Friedrichshafen/West Germany

36.1 MMN 425


E0043003a0

POS.	PART NO.	DESIGNATION	QTY.	UNITS	MEASUREMENT	STANDARD
10	700425000052	PLATE	1	PC	36.1	MMN425

GROUP NUMBER (FG)


GROUP NAME

BOM NO.

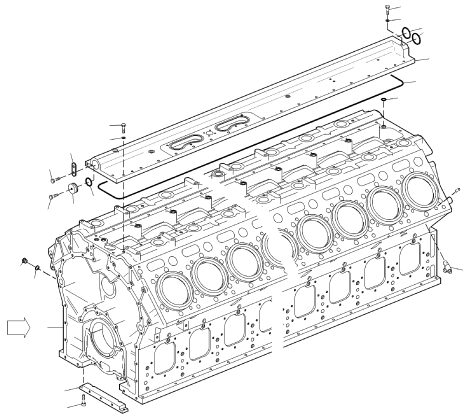


CRANKCASE
010.00476

01100744s

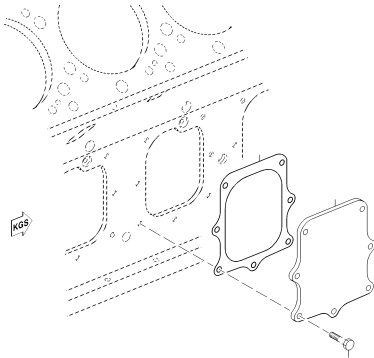


INSPECT PORT COVER
010.00021

E0113048b1

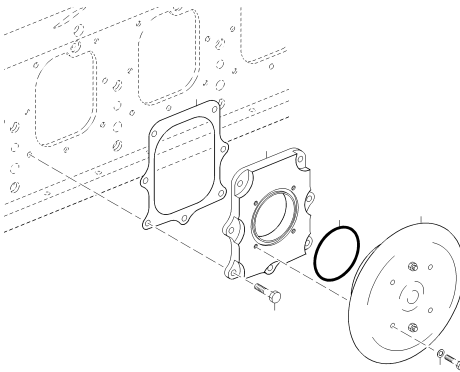

INSPECT PORT COVER ABS ACCEPTANCE
010.00223

E0113042b0

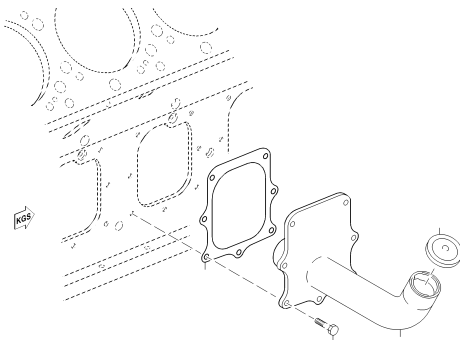

OIL FILLER NECK LEFT
010.00002

E0113046b0

TYPE: 16V4000M90
SERIAL NO.: 527101997


527101997

FG/FGS: 011
BOM NO.:

GROUP NUMBER (FG)

GROUP NAME

BOM NO.

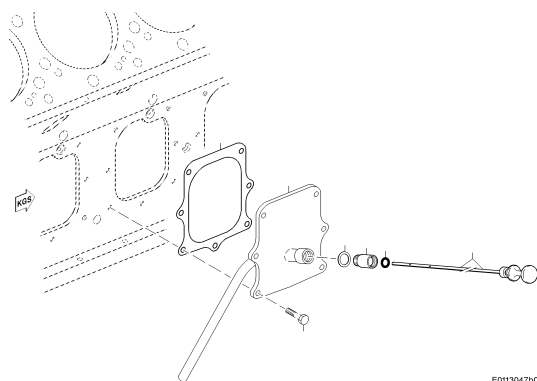


OIL DIPSTICK LEFT
010.00022

E0113047b0

TYPE: 16V4000M90
SERIAL NO.: 527101997

CRANKCASE

FG/FGS: 011 05
BOM NO.: 010.00476

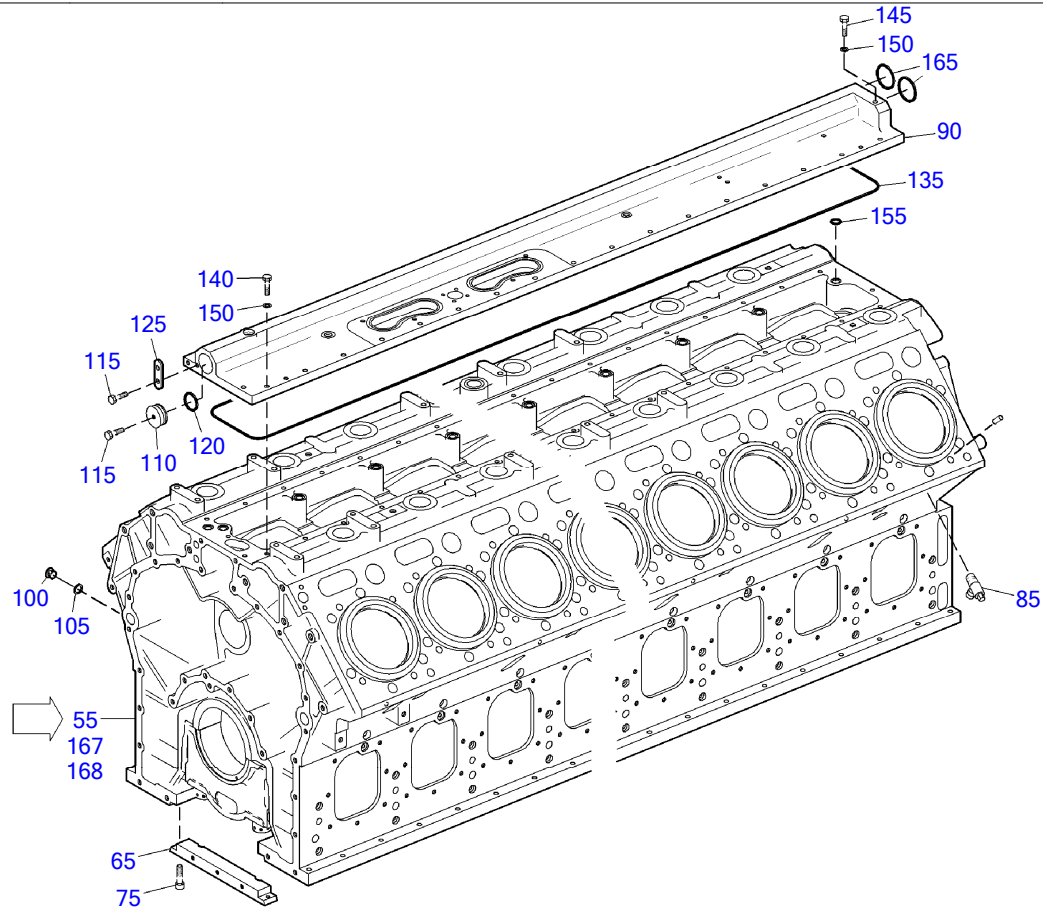


01100744a

TYPE: 16V4000M90
SERIAL NO.: 527101997

CRANKCASE

FG/FGS: 011 05
BOM NO.: 010.00476

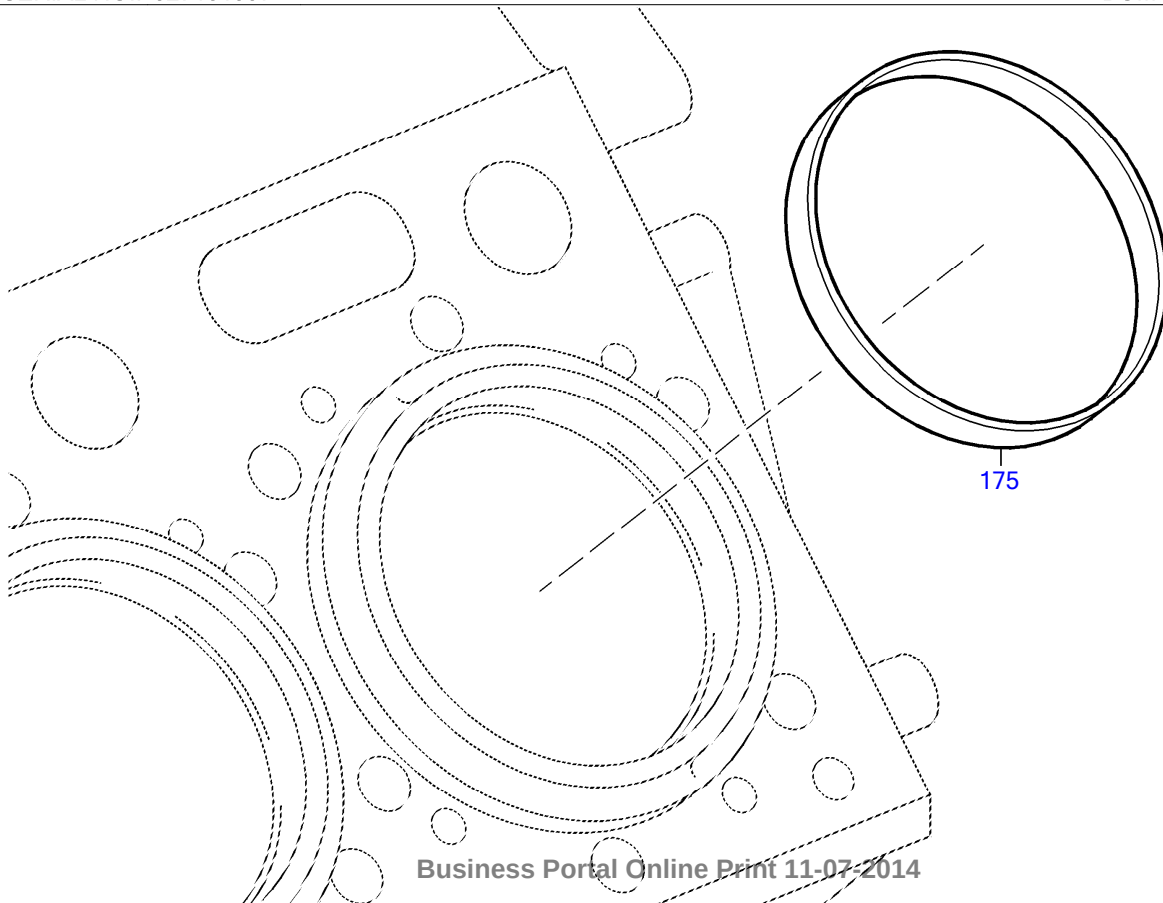

Business Portal Online Print 11-07-2014

01300318a

TYPE: 16V4000M90
SERIAL NO.: 527101997

527101997

FG/FGS: 011 05
BOM NO.: 010.00476

POS.	PART NO.	DESIGNATION	QTY.	UNITS	FN	MEASUREMENT	STANDARD
55	5270101805	CRANKCASE	1	PC			
65	5240110440	STRIP	1	PC			
75	000912008115	SCREW	2	PC		M 8 X 16	DIN912
85	0049976736	DRAIN VALVE	2	PC			
90	5270101714	COVER	1	PC	NN		
100	000908014001	PLUG	1	PC		M 14 X 1,5	DIN908
105	007603014102	SEALING RING	1	PC		A 14 X 18	DIN7603
110	735084050000	PLUG	1	PC		50	MTN5084
115	000933010089	SCREW	2	PC		M 10 X 20	DIN933
120	700429042000	O-RING	1	PC		42 X 5	MMN429
125	5249950159	STRAP	1	PC			
135	5279970345	O-RING	1	PC		1357X5	
140	000933010093	SCREW	54	PC		M 10 X 35	DIN933
145	000931010237	SCREW	1	PC		M 10 X 90	DIN931
150	000125010524	WASHER	59	PC		A 10,5	DIN125
155	700429018005	O-RING	9	PC		18 X 4	MMN429
165	700429055001	O-RING	2	PC		55 X 5	MMN429
167	R5270101805	CRANKCASE	1	PC	MN		
168	E5270101805	CRANKCASE	1	PC	MN		
175	5240110159	CARBON SCRAPER RING	16	PC			