

FG FG DESIGNATION

004 LABELS AND AUXILIARY MATERIALS

011 CRANKCASE

014 OIL PAN

015 ENGINE MOUNTING

016 END HOUSING, DRIVING END AND FREE END

018 CRANKCASE BREATHER

024 GEARCASE, AUX PTO END

031 CRANKSHAFT WITH BEARINGS

032 CRANKSHAFT, PTO ON DRIVING END

035 CRANKSHAFT, PTO ON AUX PTO END

036 CRANKSHAFT TRANSPORTATION LOCKING DEVICE

037 PISTON

038 CONNECTING ROD

041 CYLINDER HEAD

051 CAMSHAFT

055 VALVE DRIVE

073 INJECTION PUMP / HP PUMP

075 FUEL INJECTOR

077 INJECTION LINE / HP FUEL LINE

081 FUEL PIPEWORK BEFORE DELIVERY PUMP

083 FUEL FILTER

101 EXHAUST TURBOCHARGER, GENERAL OR H.P. TURBOCHARGER

111 CHARGE AIR COOLING, GERENAL, LEFT SIDE

121 AIR FILTER

123 AIR SYSTEM

124 AIR SUPPLY TO CYLINDERS

126 AIR TRANSFER, LEFT - RIGHT SIDE, DRIVING END

128 CONTROL BLOCK FOR AIR AND EXHAUST FLOW CONTROL FLAPS

142 CONSTANT-PRESSURE EXHAUST MANIFOLD

143 CARRIER HOUSING

144 EXHAUST FLOW CONTROL FLAP WITH CONTROLS

146 EXHAUST SYSTEM AFTER ENGINE (EXTERNAL)

172 ELECTRIC STARTING

173 AIR STARTER

181 LUBE OIL PUMP AND DRIVE

183 OIL FILTRATION/COOLING

185 TURBOCHARGER OIL SUPPLY

202 COOLANT CIRCUIT, GENERAL, HT CIRCUIT

203 LOW-TEMPERATURE CIRCUIT

204 HEAT EXCHANGER PLATES

206 COOLANT PIPEWORK WITH THERMOSTAT

207 RAW WATER PUMP WITH CONNECTIONS

208 COOLANT EXPANSION TANK

231 ENGINE MOUNTING

251 STEEL-SPRING COUPLING

255 BENDING-RESILIENT COUPLING

301 GENERAL ACCESSORIES

FG FG DESIGNATION

342 DRIVE SYSTEM

405 TRANSMISSIONS/GENERATORS

507 WIRING, GEBERAL, FOR ENGINE/GEARBOX/PLANT

508 ACCESSORIES FOR ENGINE GOVERNOR (ELECTRONIC) CONTROL SYSTEM

511 ALARM SYSTEM

515 PRESSURE/TEMPERATURE MONITORING SYSTEMS (EXCL. EXHAUST GAS)

517 EMERGENCY INSTRUMENTATION (CONTROL STAND)

TYPE: 16V4000M90
SERIAL NO.: 527102139

527102139

FG/FGS: 004
BOM NO.:

GROUP NUMBER (FG)
GROUP NAME
BOM NO.

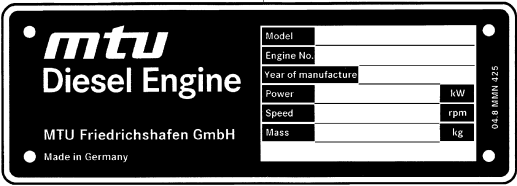


PLATE ENGLISH
000.00897

00400027a

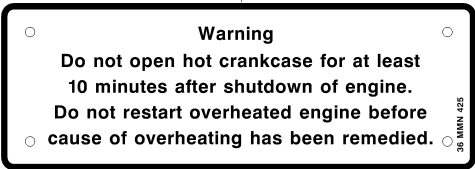


PLATE
010.00055

E0043001a0

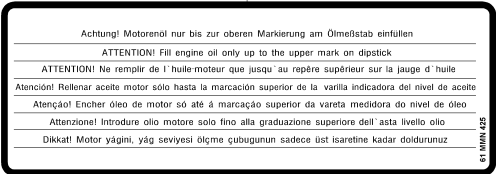



PLATE
010.00056

E0043002a0



PLATE
010.00057


E0043003a0

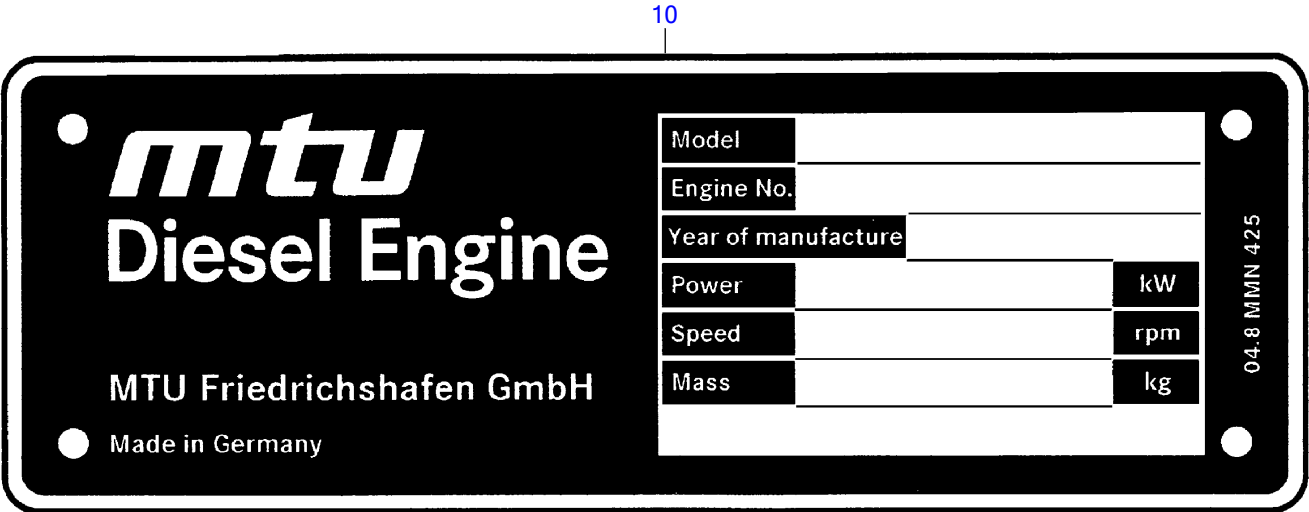

00400027a

POS.	PART NO.	DESIGNATION	QTY.	UNITS	MEASUREMENT	STANDARD
10	700425000158	"PLATE"	1	PC	04.13	MMN425

10

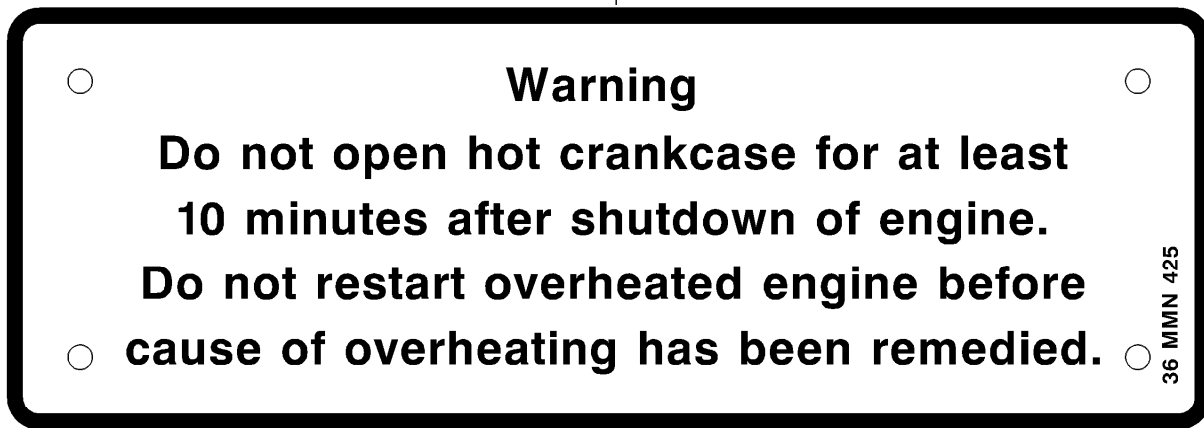

E0043001a0

POS.	PART NO.	DESIGNATION	QTY.	UNITS	MEASUREMENT	STANDARD
10	700425000039	"PLATE"	1	PC	36	MMN425

10

Achtung! Motorenöl nur bis zur oberen Markierung am Ölmeßstab einfüllen

ATTENTION! Fill engine oil only up to the upper mark on dipstick

ATTENTION! Ne remplir de l'huile-moteur que jusqu'au repère supérieur sur la jauge d'huile

Atención! Rellenar aceite motor sólo hasta la marcación superior de la varilla indicadora del nivel de aceite

Atenção! Encher óleo de motor só até á marcação superior da vareta medidora do nível de óleo

Attenzione! Introdurre olio motore solo fino alla graduazione superiore dell'asta livello olio


Dikkat! Motor yáginı, yág seviyesi ölçme çubugunun sadece üst isaretine kadar doldurunuz

61 MMN 425

E0043002a0

POS.	PART NO.	DESIGNATION	QTY.	UNITS	MEASUREMENT	STANDARD
10	700425000115	"PLATE"	1	PC	61	MMN425

10

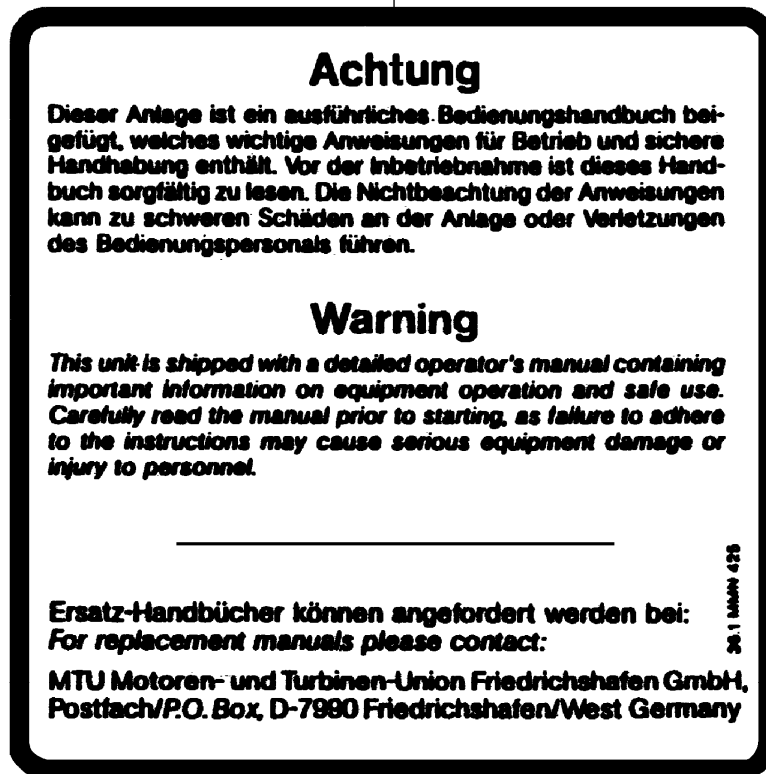


E0043003a0

POS.	PART NO.	DESIGNATION	QTY.	UNITS	MEASUREMENT	STANDARD
10	700425000052	"PLATE"	1	PC	36.1	MMN425

GROUP NUMBER (FG)


GROUP NAME

BOM NO.

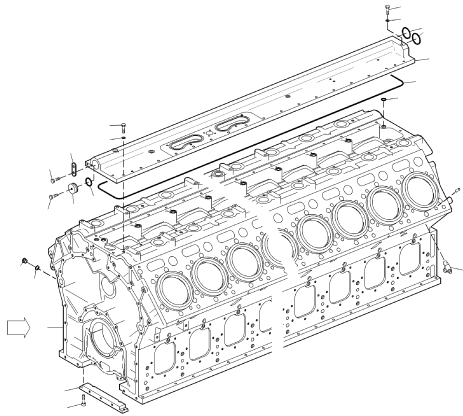


CRANKCASE
010.00476

01100744s

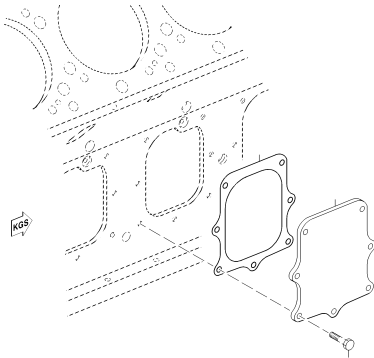


INSPECT PORT COVER
010.00021

E0113048b1

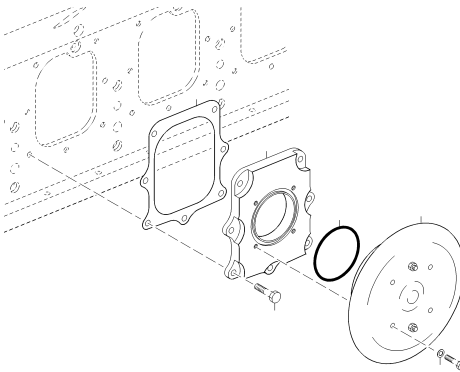

INSPECT PORT COVER ABS ACCEPTANCE
010.00223

E0113042b0

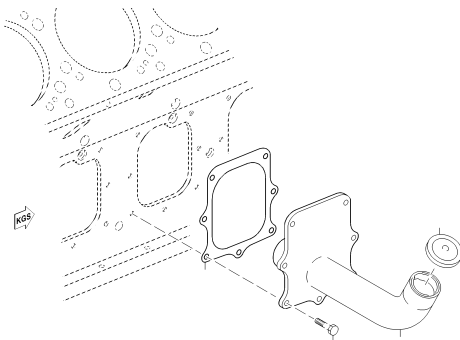

OIL FILLER NECK LEFT
010.00002

E0113046b0

TYPE: 16V4000M90
SERIAL NO.: 527102139


527102139

FG/FGS: 011
BOM NO.:

GROUP NUMBER (FG)

GROUP NAME

BOM NO.

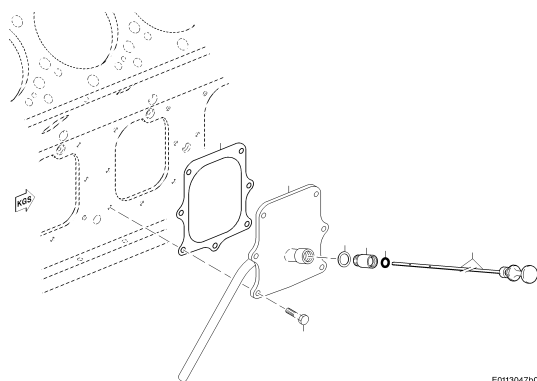


OIL DIPSTICK LEFT
010.00022

TYPE: 16V4000M90
SERIAL NO.: 527102139

CRANKCASE

FG/FGS: 011 05
BOM NO.: 010.00476

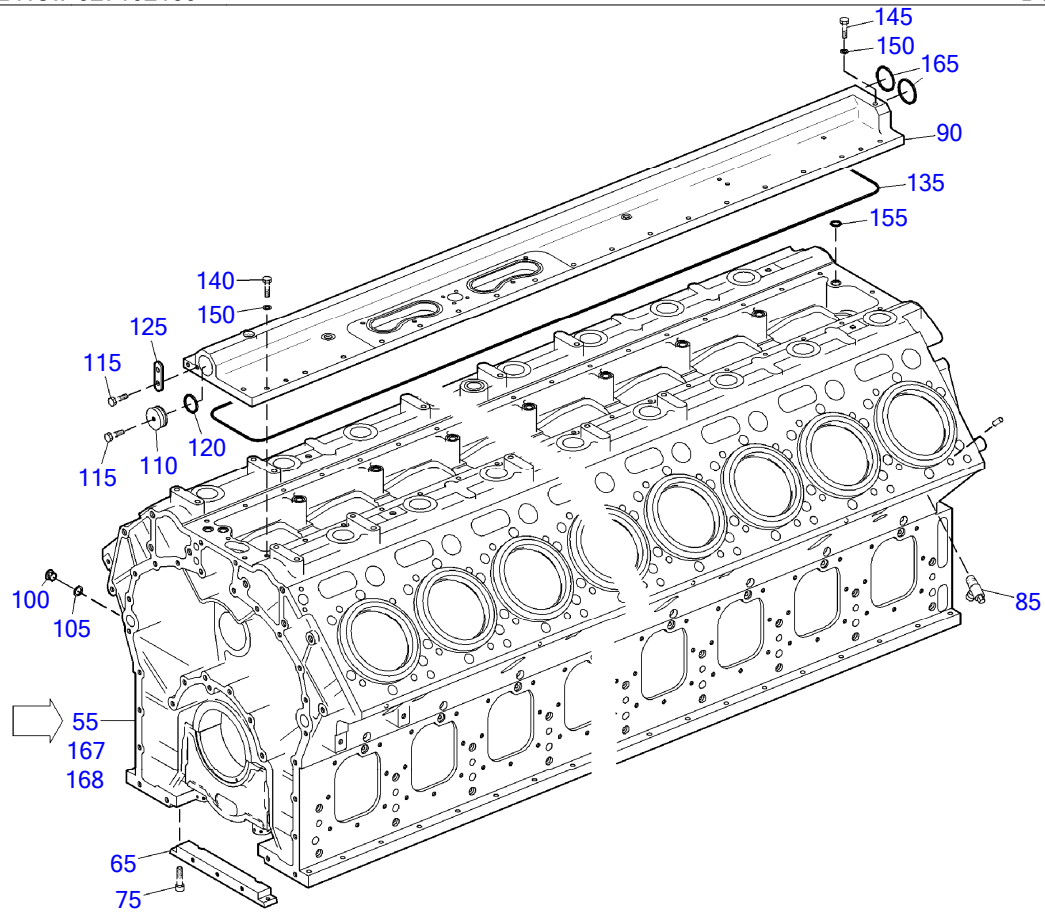


01100744a

TYPE: 16V4000M90
SERIAL NO.: 527102139

CRANKCASE

FG/FGS: 011 05
BOM NO.: 010.00476

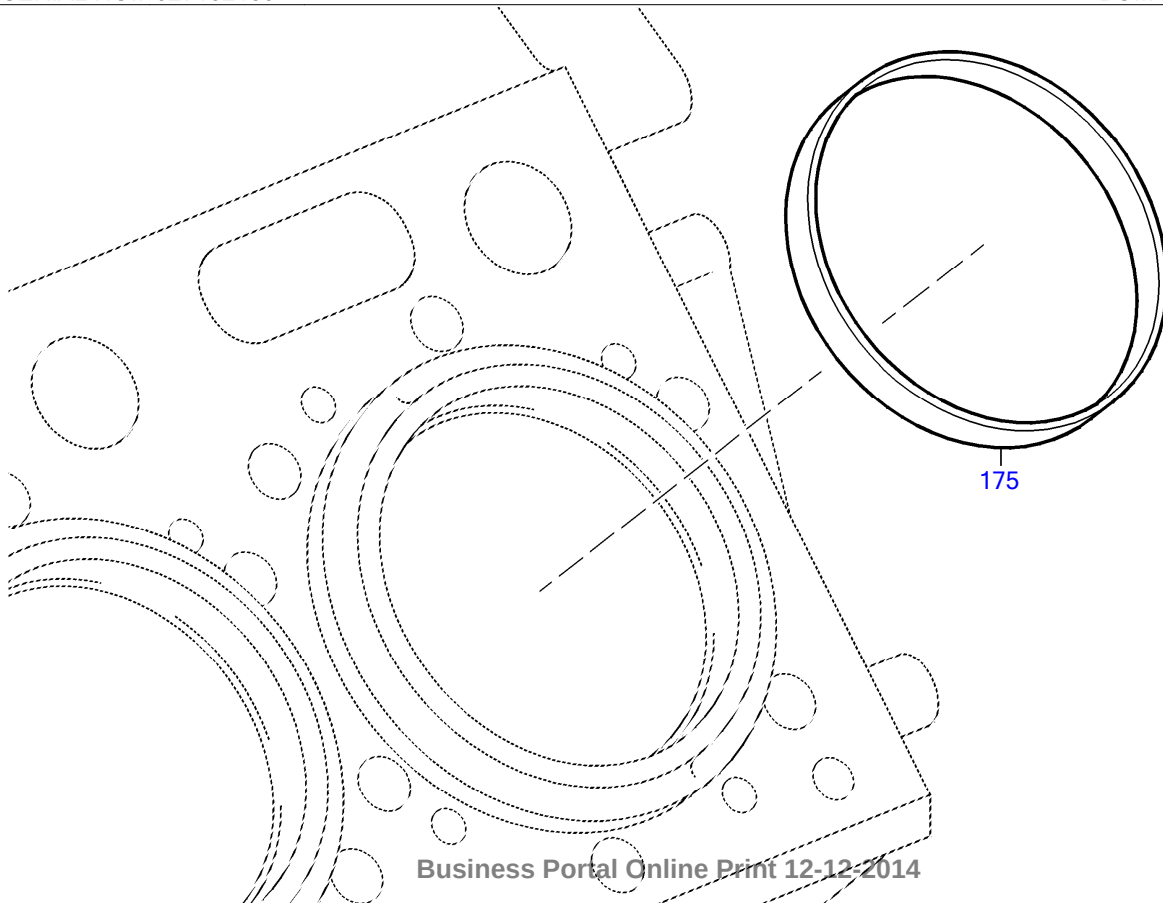

Business Portal Online Print 12-12-2014

01300318a