

FG	FG DESIGNATION
004	LABELS AND AUXILIARY MATERIALS
011	CRANKCASE
014	OIL PAN
015	ENGINE MOUNTING
016	END HOUSING, DRIVING END AND FREE END
018	CRANKCASE BREATHER
024	GEARCASE, AUX PTO END
031	CRANKSHAFT WITH BEARINGS
032	CRANKSHAFT, PTO ON DRIVING END
035	CRANKSHAFT, PTO ON AUX PTO END
036	TRANSPORT LOCK/LOCK FOR CRANKSHAFT
037	PISTON
038	CONNECTING ROD
041	CYLINDER HEAD
051	CAMSHAFT
055	VALVE DRIVE
073	INJECTION PUMP / HP PUMP
075	FUEL INJECTOR
077	INJECTION LINE / HP FUEL LINE
080	L.P. FUEL SYSTEM; (ALSO GAS ENGINES)
081	FUEL PIPEWORK BEFORE DELIVERY PUMP
082	FUEL PIPEWORK FROM DELIVERY PUMP TO FILTER
083	FUEL FILTER
086	LEAK-OFF FUEL PIPEWORK
101	EXHAUST TURBOCHARGER, GENERAL OR H.P. TURBOCHARGER
110	CHARGE-AIR COOLING
121	AIR FILTER
123	AIR SYSTEM
124	AIR SUPPLY TO CYLINDERS
126	AIR TRANSFER, LEFT - RIGHT SIDE, DRIVING END
128	CONTROL BLOCK FOR AIR AND EXHAUST FLOW CONTROL FLAPS
142	CONSTANT-PRESSURE EXHAUST MANIFOLD
143	CARRIER HOUSING
144	EXHAUST FLOW CONTROL FLAP WITH CONTROLS
146	EXHAUST SYSTEM AFTER ENGINE (EXTERNAL)
172	ELECTRIC STARTING
181	LUBE OIL PUMP AND DRIVE
183	OIL FILTRATION/COOLING
185	TURBOCHARGER OIL SUPPLY
189	OIL REPLENISHMENT PUMP
202	COOLANT CIRCUIT, GENERAL, HT CIRCUIT
203	LOW-TEMPERATURE CIRCUIT
204	HEAT EXCHANGER PLATES
205	COOLANT COOLER ATTACHING H/WARE
206	COOLANT PIPEWORK WITH THERMOSTAT
207	RAW WATER PUMP WITH CONNECTIONS
208	COOLANT EXPANSION TANK

FG FG DESIGNATION

213 GENERATOR
231 ENGINE MOUNTING
250 MAIN AND AUXILIARY PTO SYSTEMS (COUPLINGS)
251 STEEL-SPRING COUPLING
301 GENERAL ACCESSORIES
342 DRIVE SYSTEM
368 RAW WATER SUPPLY AND DISCHARGE SYSTEM
411 COOLING SYSTEM
507 WIRING, GEBERAL, FOR ENGINE/GEARBOX/PLANT
508 ACCESSORIES FOR ENGINE GOVERNOR (ELECTRONIC) CONTROL SYSTEM
511 ALARM SYSTEM
517 EMERGENCY INSTRUMENTATION (CONTROL STAND)
535 TEST AND MAINTENANCE EQUIPMENT

TYPE: 16V4000M90
SERIAL NO.: 527103258

527103258

FG/FGS: 004
BOM NO.:

GROUP NUMBER (FG)

GROUP NAME

BOM NO.

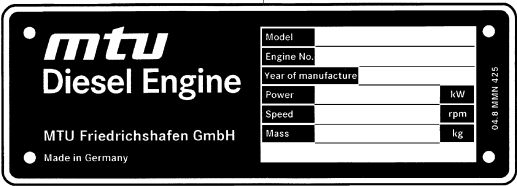


PLATE ENGLISH
000.00897

00400027a

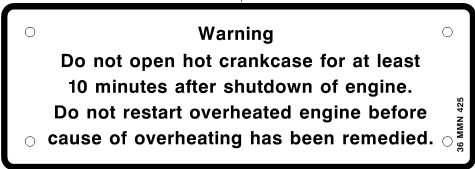


PLATE
010.00055

E0043001a0

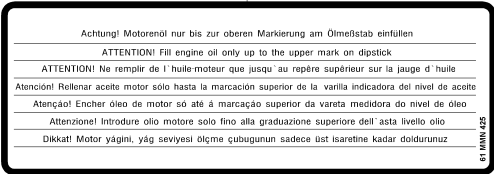



PLATE
010.00056

E0043002a0



PLATE
010.00057


E0043003a0

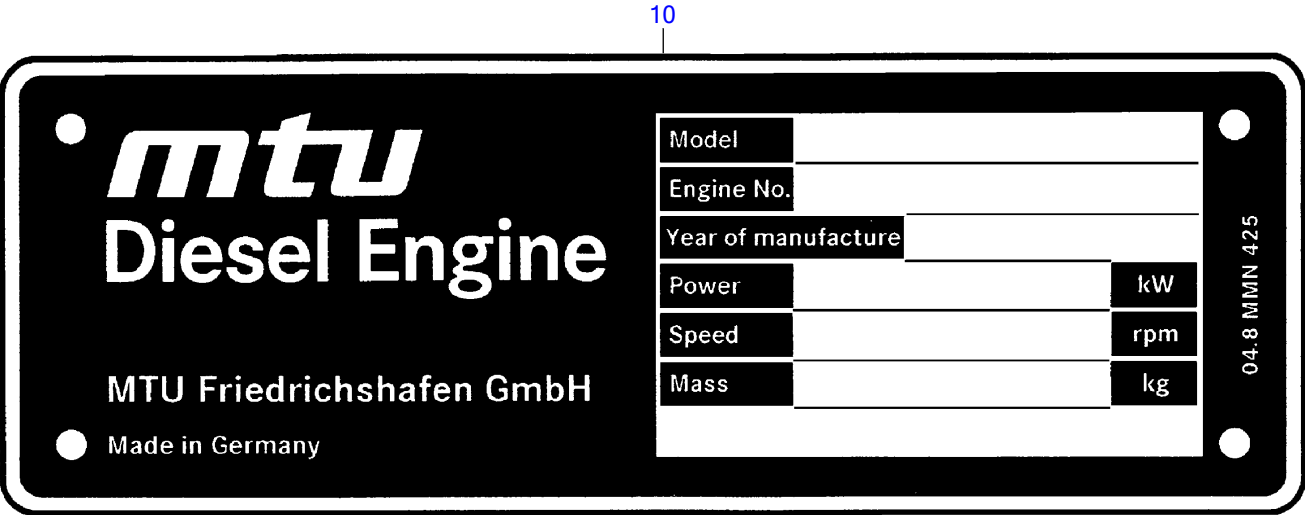

00400027a

POS.	PART NO.	DESIGNATION	QTY.	UNITS	MEASUREMENT	STANDARD
10	700425000158	PLATE	1	PC	04.13	MMN425

10

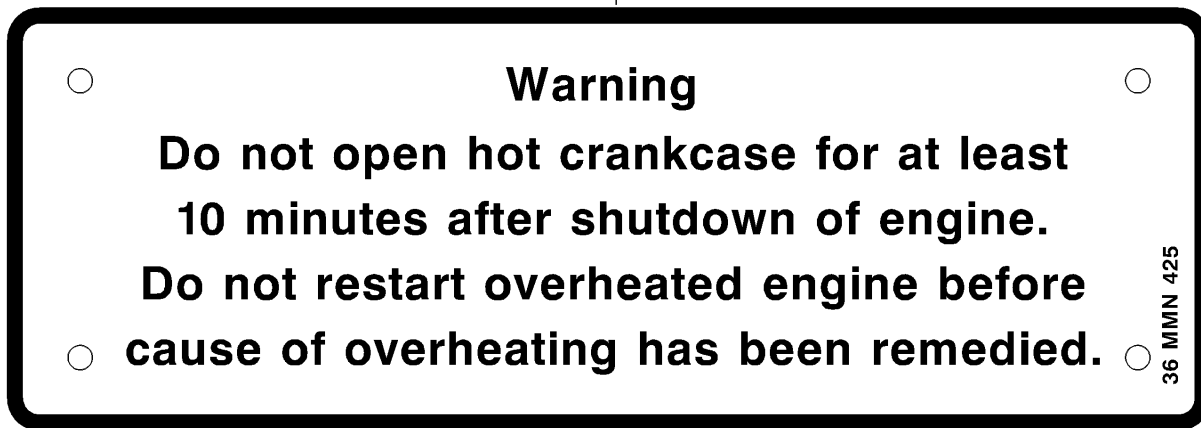

E0043001a0

POS.	PART NO.	DESIGNATION	QTY.	UNITS	MEASUREMENT	STANDARD
10	700425000039	PLATE	1	PC	36	MMN425

10

Achtung! Motorenöl nur bis zur oberen Markierung am Ölmeßstab einfüllen

ATTENTION! Fill engine oil only up to the upper mark on dipstick

ATTENTION! Ne remplir de l'huile-moteur que jusqu'au repère supérieur sur la jauge d'huile

Atención! Rellenar aceite motor sólo hasta la marcación superior de la varilla indicadora del nivel de aceite

Atenção! Encher óleo de motor só até á marcação superior da vareta medidora do nível de óleo

Attenzione! Introdurre olio motore solo fino alla graduazione superiore dell'asta livello olio

Dikkat! Motor yágini, yág seviyesi ölçme çubugunun sadece üst isaretine kadar doldurunuz

61 MMN 425

E0043002a0

POS.	PART NO.	DESIGNATION	QTY.	UNITS	MEASUREMENT	STANDARD
10	700425000115	PLATE	1	PC	61	MMN425

10

Achtung

Dieser Anlage ist ein ausführliches Bedienungshandbuch beigelegt, welches wichtige Anweisungen für Betrieb und sichere Handhabung enthält. Vor der Inbetriebnahme ist dieses Handbuch sorgfältig zu lesen. Die Nichtbeachtung der Anweisungen kann zu schweren Schäden an der Anlage oder Verletzungen des Bedienungspersonals führen.

Warning

This unit is shipped with a detailed operator's manual containing important information on equipment operation and safe use. Carefully read the manual prior to starting, as failure to adhere to the instructions may cause serious equipment damage or injury to personnel.

Ersatz-Handbücher können angefordert werden bei:
For replacement manuals please contact:

MTU Motoren- und Turbinen-Union Friedrichshafen GmbH,
Postfach/P.O. Box, D-7990 Friedrichshafen/West Germany

36.1 MMN 425

E0043003a0

POS.	PART NO.	DESIGNATION	QTY.	UNITS	MEASUREMENT	STANDARD
10	700425000052	PLATE	1	PC	36.1	MMN425

TYPE: 16V4000M90
SERIAL NO.: 527103258


527103258

FG/FGS: 011
BOM NO.:

GROUP NUMBER (FG)


GROUP NAME

BOM NO.

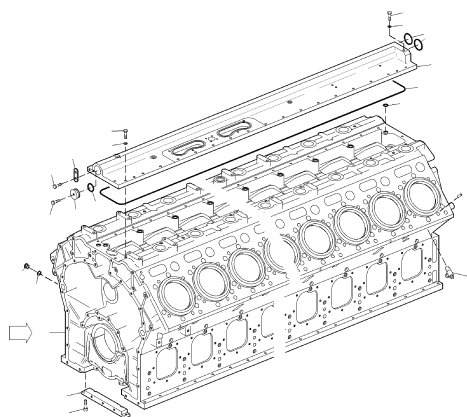


CRANKCASE
010.00476

01100744s

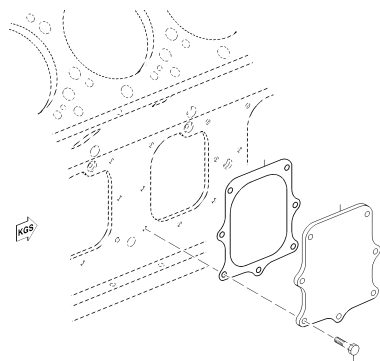


INSPECT PORT COVER
010.00021

E0113048b1

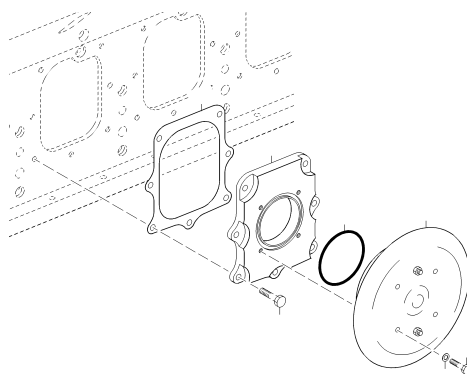

INSPECT PORT COVER W/SAFETY VALVE
010.00369

E0113042b0

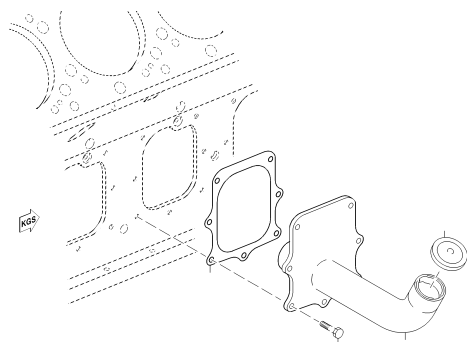

OIL FILLER NECK LEFT
010.00002

E0113046b0

TYPE: 16V4000M90
SERIAL NO.: 527103258


527103258

FG/FGS: 011
BOM NO.:

GROUP NUMBER (FG)

GROUP NAME

BOM NO.

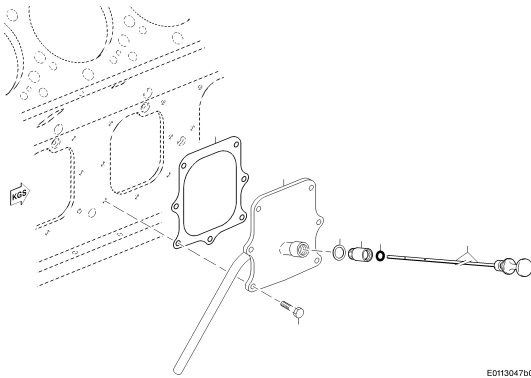


OIL DIPSTICK LEFT
010.00022

TYPE: 16V4000M90
SERIAL NO.: 527103258

CRANKCASE

FG/FGS: 011 05
BOM NO.: 010.00476

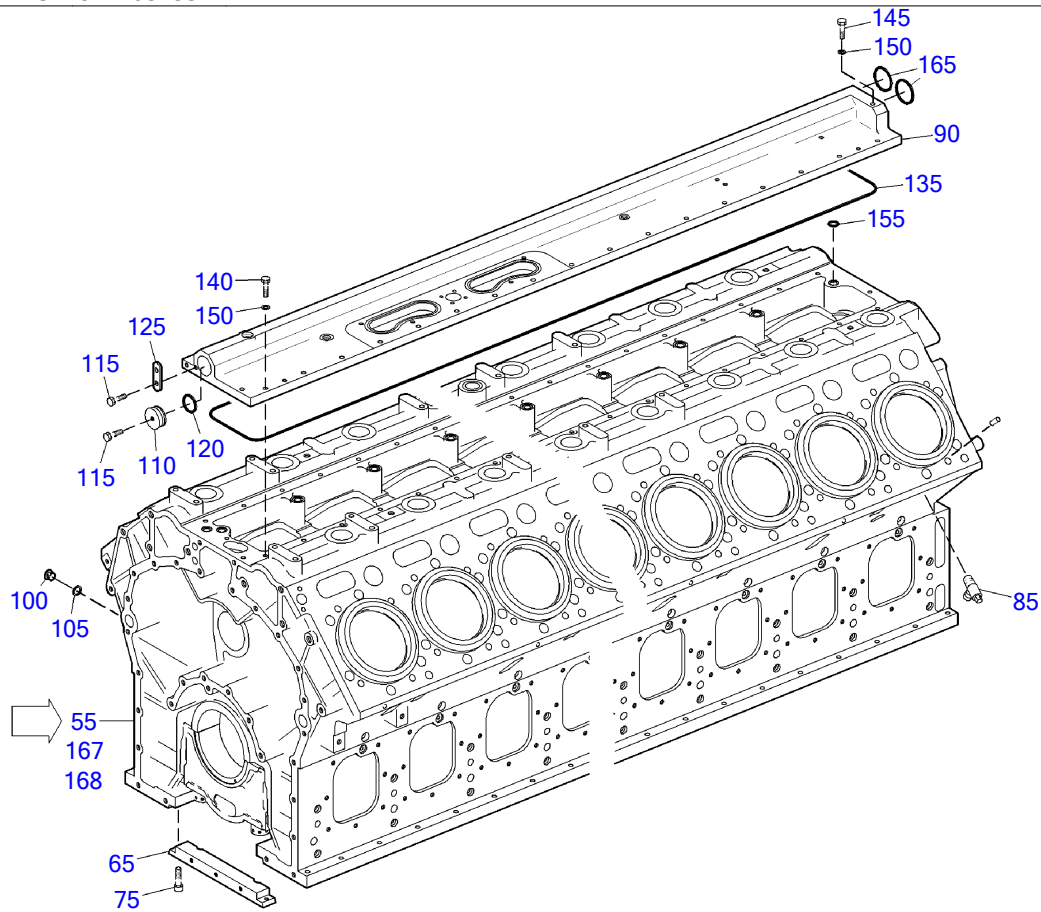

01100744a

TYPE: 16V4000M90
SERIAL NO.: 527103258

CRANKCASE

FG/FGS: 011 05
BOM NO.: 010.00476

