

FG	FG DESIGNATION
004	LABELS AND AUXILIARY MATERIALS
011	CRANKCASE
014	OIL PAN
015	ENGINE MOUNTING
016	END HOUSING, DRIVING END AND FREE END
018	CRANKCASE BREATHER
024	GEARCASE, AUX PTO END
031	CRANKSHAFT WITH BEARINGS
032	CRANKSHAFT, PTO ON DRIVING END
035	CRANKSHAFT, PTO ON AUX PTO END
036	TRANSPORT LOCK/LOCK FOR CRANKSHAFT
037	PISTON
038	CONNECTING ROD
041	CYLINDER HEAD
051	CAMSHAFT
055	VALVE DRIVE
073	INJECTION PUMP / HP PUMP
075	FUEL INJECTOR
077	INJECTION LINE / HP FUEL LINE
081	FUEL PIPEWORK BEFORE DELIVERY PUMP
083	FUEL FILTER
086	LEAK-OFF FUEL PIPEWORK
101	EXHAUST TURBOCHARGER, GENERAL OR H.P. TURBOCHARGER
111	CHARGE AIR COOLING, GENERAL, LEFT SIDE
121	AIR FILTER
123	AIR SYSTEM
124	AIR SUPPLY TO CYLINDERS
126	AIR TRANSFER, LEFT - RIGHT SIDE, DRIVING END
128	CONTROL BLOCK FOR AIR AND EXHAUST FLOW CONTROL FLAPS
140	EXHAUST SYSTEM
142	CONSTANT-PRESSURE EXHAUST MANIFOLD
143	CARRIER HOUSING
144	EXHAUST FLOW CONTROL FLAP WITH CONTROLS
146	EXHAUST SYSTEM AFTER ENGINE (EXTERNAL)
173	AIR STARTER
180	LUBRICATING OIL SYSTEM
181	LUBE OIL PUMP AND DRIVE
183	OIL FILTRATION/COOLING
185	TURBOCHARGER OIL SUPPLY
189	OIL REPLENISHMENT PUMP
202	COOLANT CIRCUIT, GENERAL, HT CIRCUIT
203	LOW-TEMPERATURE CIRCUIT
206	COOLANT PIPEWORK WITH THERMOSTAT
207	RAW WATER PUMP WITH CONNECTIONS
230	MOUNTING / SUPPORT
231	ENGINE MOUNTING
250	MAIN AND AUXILIARY PTO SYSTEMS (COUPLINGS)

FG FG DESIGNATION

251 STEEL-SPRING COUPLING
253 HYDRODYNAMIC COUPLING
340 DRIVE, ELECTRIC POWER AND SAFETY SYSTEMS
362 COMPRESSED AIR SUPPLY SYSTEM
364 FUEL SUPPLY SYSTEM (FOR PERIPHERAL APPLICATIONS)
366 LUBE-OIL SUPPLY AND DISPOSAL SYSTEM
367 COOLANT SUPPLY SYSTEM
500 MONITORING AND CONTROL SYSTEM, GENERAL ELECTRICAL EQUIPMENT
507 WIRING, GEBERAL, FOR ENGINE/GEARBOX/PLANT
508 ACCESSORIES FOR ENGINE GOVERNOR (ELECTRONIC) CONTROL SYSTEM
511 ALARM SYSTEM
517 EMERGENCY INSTRUMENTATION (CONTROL STAND)

TYPE: 12V4000P81
SERIAL NO.: 526103966

526103966

FG/FGS: 004
BOM NO.:

GROUP NUMBER (FG)

GROUP NAME

BOM NO.

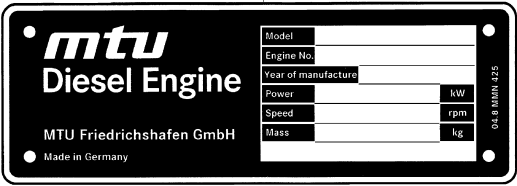


PLATE ENGLISH
000.00897


00400027a

PLATE
000.00899



00400053a

NON-EPA LABEL
XS524000.00019

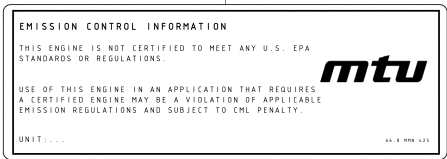

00400106a

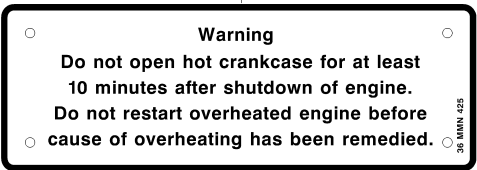


PLATE
010.00055

E0043001a0

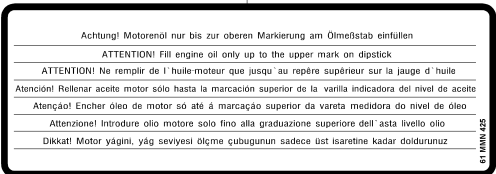


PLATE
010.00056

E0043002a0

TYPE: 12V4000P81
SERIAL NO.: 526103966

526103966

FG/FGS: 004
BOM NO.:

GROUP NUMBER (FG)

GROUP NAME

BOM NO.


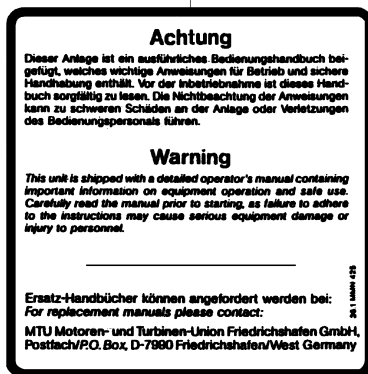



PLATE
010.00057

E0043003a0

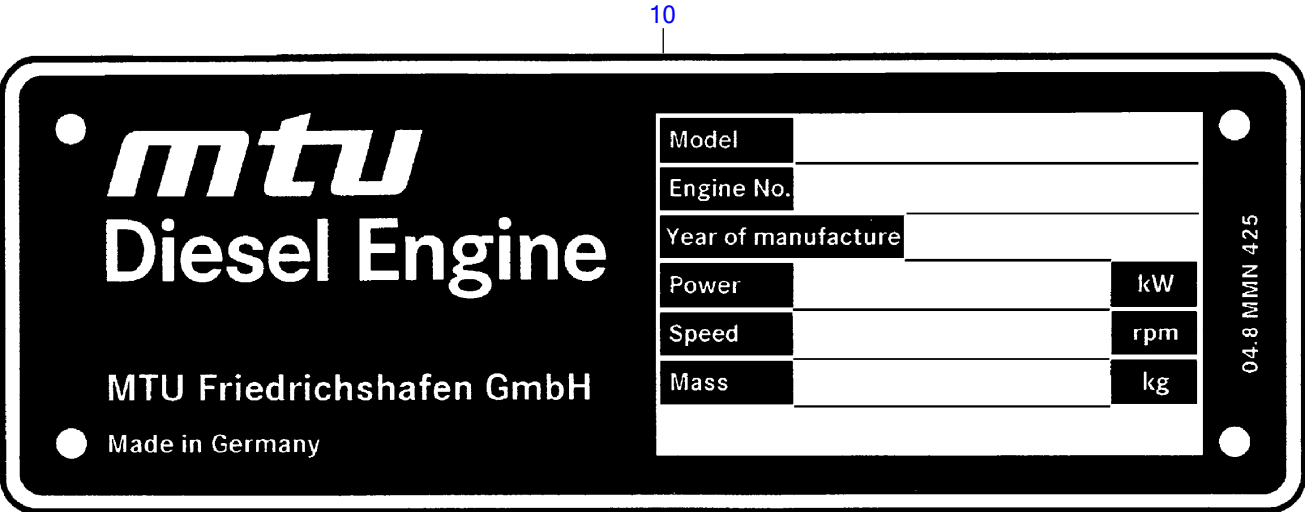

00400027a

POS.	PART NO.	DESIGNATION	QTY.	UNITS	MEASUREMENT	STANDARD
10	700425000158	PLATE	1	PC	04.13	MMN425

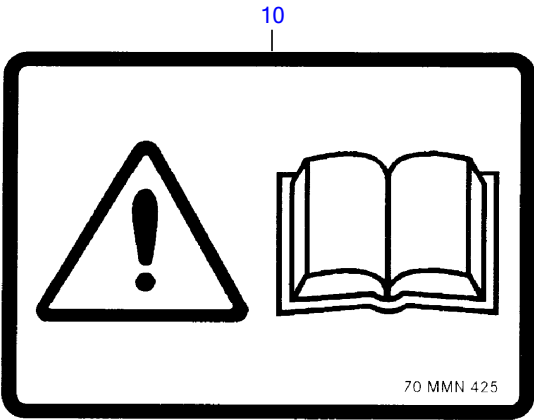

00400053a

POS.	PART NO.	DESIGNATION	QTY.	UNITS	MEASUREMENT	STANDARD
10	700425000155	PLATE	1	PC	70	MMN425

100

EMISSION CONTROL INFORMATION

THIS ENGINE IS NOT CERTIFIED TO MEET ANY U.S. EPA
STANDARDS OR REGULATIONS.



USE OF THIS ENGINE IN AN APPLICATION THAT REQUIRES
A CERTIFIED ENGINE MAY BE A VIOLATION OF APPLICABLE
EMISSION REGULATIONS AND SUBJECT TO CML PENALTY.

UNIT: . . .

66.8 MMN 425

00400106a

POS.	PART NO.	DESIGNATION	QTY.	UNITS	FN	MEASUREMENT	STANDARD
100	700425000182	PLATE NON-EPA	1	PC	NN	66.8	MMN425

10
|

Warning

Do not open hot crankcase for at least
10 minutes after shutdown of engine.
Do not restart overheated engine before
cause of overheating has been remedied.

36 MMN 425

E0043001a0

POS.	PART NO.	DESIGNATION	QTY.	UNITS	MEASUREMENT	STANDARD
10	700425000039	PLATE	1	PC	36	MMN425

10

Achtung! Motorenöl nur bis zur oberen Markierung am Ölmeßstab einfüllen

ATTENTION! Fill engine oil only up to the upper mark on dipstick

ATTENTION! Ne remplir de l'huile-moteur que jusqu'au repère supérieur sur la jauge d'huile

Atención! Rellenar aceite motor sólo hasta la marcación superior de la varilla indicadora del nivel de aceite

Atenção! Encher óleo de motor só até á marcação superior da vareta medidora do nível de óleo

Attenzione! Introdurre olio motore solo fino alla graduazione superiore dell'asta livello olio

Dikkat! Motor yáginı, yág seviyesi ölçme çubugunun sadece üst isaretine kadar doldurunuz

61 MMN 425

E0043002a0

POS.	PART NO.	DESIGNATION	QTY.	UNITS	MEASUREMENT	STANDARD
10	700425000115	PLATE	1	PC	61	MMN425

10

Achtung

Dieser Anlage ist ein ausführliches Bedienungshandbuch beigelegt, welches wichtige Anweisungen für Betrieb und sichere Handhabung enthält. Vor der Inbetriebnahme ist dieses Handbuch sorgfältig zu lesen. Die Nichtbeachtung der Anweisungen kann zu schweren Schäden an der Anlage oder Verletzungen des Betriebspersonals führen.

Warning

This unit is shipped with a detailed operator's manual containing important information on equipment operation and safe use. Carefully read the manual prior to starting, as failure to adhere to the instructions may cause serious equipment damage or injury to personnel.

Ersatz-Handbücher können angefordert werden bei:
For replacement manuals please contact:

MTU Motoren- und Turbinen-Union Friedrichshafen GmbH,
Postfach/P.O. Box, D-7990 Friedrichshafen/West Germany

36.1 MMN 425

E0043003a0

POS.	PART NO.	DESIGNATION	QTY.	UNITS	MEASUREMENT	STANDARD
10	700425000052	PLATE	1	PC	36.1	MMN425