

EQUIPMENT TYPE

PRODUCT TYPE
SERIAL NUMBER

Engine

20V4000G63
528102321

Automation

AUTOMATION
1103032000_000004

Generator

GENERATOR
1103032000_000004

System

DP03075D5SFW
9030101054

EQUI TYPE: Engine

PRODUCT TYPE: 20V4000G63
DIESEL ENGINE

SERIAL NUMBER: 528102321
FG/FGS:
BOM-No.:

DESCRIPTION
DIESEL ENGINE

FG FG DESIGNATION**004 LABELS AND AUXILIARY MATERIALS**

011 CRANKCASE

014 OIL PAN

015 ENGINE MOUNTING

016 END HOUSING, DRIVING END AND FREE END

018 CRANKCASE BREATHER

024 GEARCASE, AUX PTO END

031 CRANKSHAFT WITH BEARINGS

032 CRANKSHAFT, PTO ON DRIVING END

035 CRANKSHAFT, PTO ON AUX PTO END

036 TRANSPORT LOCK/LOCK FOR CRANKSHAFT

037 PISTON

038 CONNECTING ROD

041 CYLINDER HEAD

051 CAMSHAFT

055 VALVE DRIVE

070 FUEL SYSTEM (HIGH PRESSURE)

073 INJECTION PUMP / HP PUMP

075 FUEL INJECTOR

080 L.P. FUEL SYSTEM; (ALSO GAS ENGINES)

081 FUEL PIPEWORK BEFORE DELIVERY PUMP

082 FUEL PIPEWORK FROM DELIVERY PUMP TO FILTER

083 FUEL FILTER

086 LEAK-OFF FUEL LINE / FUEL RETURN

101 EXHAUST TURBOCHARGER, GENERAL OR H.P. TURBOCHARGER

111 CHARGE AIR COOLING, GENERAL, LEFT SIDE

120 AIR SYSTEM / AIR DUCTING

123 AIR SYSTEM

124 AIR SUPPLY TO CYLINDERS

140 EXHAUST SYSTEM

141 EXHAUST SYSTEM AFTER CYLINDER HEAD

172 ELECTRIC STARTING

180 LUBRICATING OIL SYSTEM

181 LUBE OIL PUMP AND DRIVE

183 OIL FILTRATION/COOLING

184 CRANKCASE-INTERNAL OIL SUPPLY

200 COOLANT SYSTEM

202 COOLANT CIRCUIT, GENERAL, HT CIRCUIT

203 LOW-TEMPERATURE CIRCUIT

206 COOLANT PIPEWORK WITH THERMOSTAT

207 RAW WATER PUMP WITH CONNECTIONS

213 GENERATOR

231 ENGINE MOUNTING

507 WIRING, GENERAL, FOR ENGINE/GEARBOX/PLANT

508 ACCESSORIES FOR ENGINE GOVERNOR (ELECTRONIC) CONTROL SYSTEM

GROUP NUMBER (FG)

GROUP NAME


BOM-No.

PLATE

000.00899



00400053a

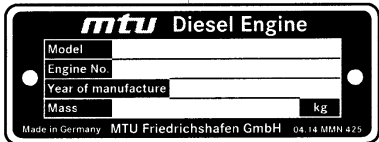

NAMEPLATE


X00027331



00400086a

NON-EPA LABEL


XS524000.00019

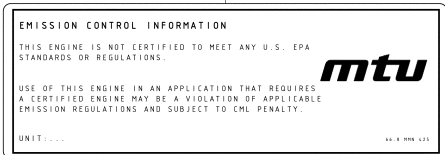

00400106a

PLACARD POS. EXPL: HAZARD

XS524000.00104



00400107a

EQUI TYPE: Engine

PRODUCT TYPE: 20V4000G63
LABELS AND AUXILIARY MATERIALS

SERIAL NUMBER: 528102321

FG/FGS: 004

BOM-No.:


GROUP NUMBER (FG)

GROUP NAME


BOM-No.

PLACARD

XSD01000.00004





00403146

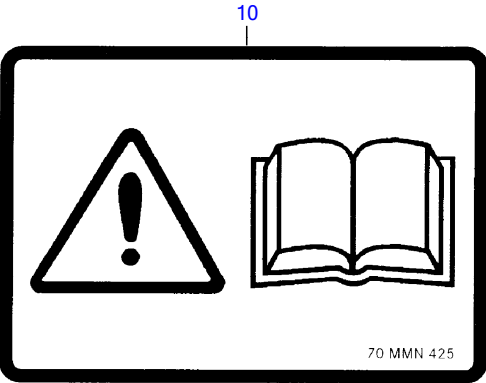

00400053a


POS.	PART NO.	DESIGNATION	QTY.	UNITS	WEIGHT	MEASUREMENT
10	700425000155	PLATE	1	PC	1 G	70

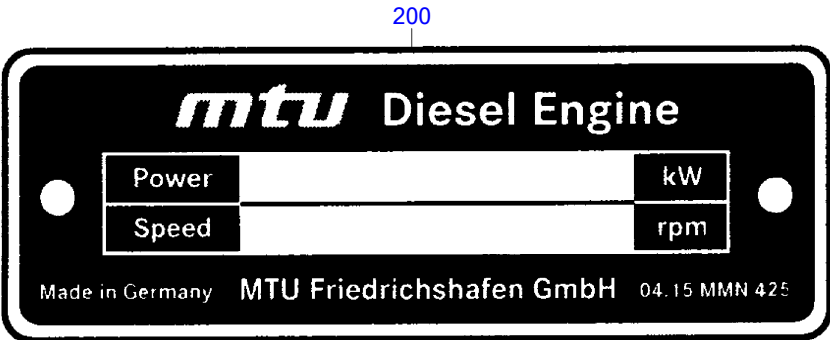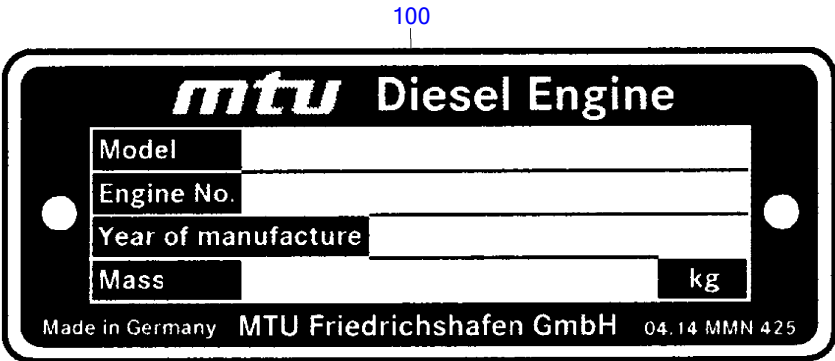

00400086a

POS.	PART NO.	DESIGNATION	QTY.	UNITS	WEIGHT	FN	MEASUREMENT
100	700425000169	PLATE	1	PC	1 G	EM	04.14
200	700425000170	PLATE	1	PC	1 G	EM	04.15


100

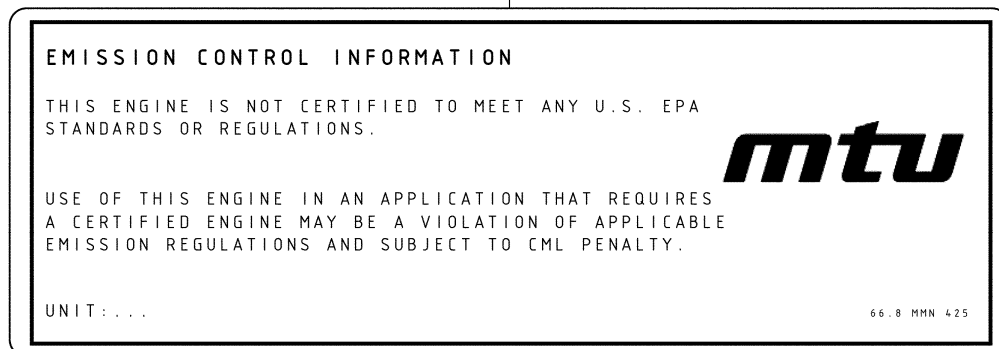

00400106a

POS.	PART NO.	DESIGNATION	QTY.	UNITS	FN	MEASUREMENT
100	700425000182	EMI-LABEL NON-EPA	1	PC	EM	66.8

150

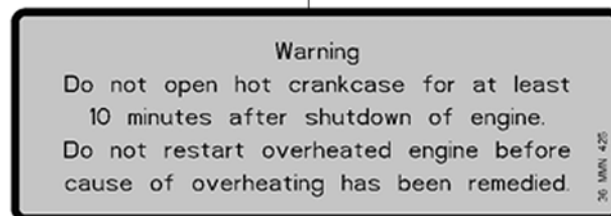

00400161

POS.	PART NO.	DESIGNATION	QTY.	UNITS	WEIGHT	MEASUREMENT
150	700425000039	PLATE	4	PC	3,100 G	36

100



Achtung! Motor nicht ohne Schutzblech starten oder betreiben.
Vor dem Abbau des Schutzbleches muss die
Energieversorgung der Anlasser unterbrochen werden.

Warning! Do not start or run engine without guard plate.
Before demounting guard plate the power supply of the
starters have to be disconnected.

00400146

POS.	PART NO.	DESIGNATION	QTY.	UNITS	WEIGHT
100	XD0100400001	PLACARD	2	PC	10 G