



System Documentation

Electronics
Electronic Engine Governor
ECU 9
Application: FRAC
Series 4000T94

E532843/01E

Rolls-Royce Solutions refers to Rolls-Royce Solutions GmbH or an affiliated company pursuant to § 15 AktG (German Stock Corporation Act) or a controlled company (joint venture), and Rolls-Royce Solutions Ruhstorf GmbH.

© Copyright Rolls-Royce Solutions

This publication is protected by copyright and may not be used in any way, whether in whole or in part, without the prior written consent of Rolls-Royce Solutions. This particularly applies to its reproduction, distribution, editing, translation, microfilming and storage and/or processing in electronic systems including databases and online services.

All information in this publication was the latest information available at the time of going to print. Rolls-Royce Solutions reserves the right to change, delete or supplement the information provided as and when required.

Table of Contents

1	Safety		2.6.2.1.7 Exhaust gas pressure sensor	102
1.1	Safety regulations for startup and operation	4	2.6.2.2 Temperature Sensors	106
1.2	Safety regulations for maintenance and repair work	5	2.6.2.2.1 Temperature sensor	106
2	Design and Function		2.6.2.2.2 Exhaust gas temperature sensor (-40 to 900 °C)	109
2.1	System Layout	8	2.6.2.3 Sensors with CAN Bus Capability	113
2.1.1	System design - Electronic Engine Control		2.6.2.3.1 NOx sensor	113
	System ECS with Engine Control Unit ECU 9	8	2.6.2.3.2 TRICAN sensor	116
2.1.2	Bus topology	11	2.6.2.4 Level Sensors	120
2.1.3	ECU - Installation on engine	12	2.6.2.4.1 Level sensor	120
2.1.4	Scope of delivery for close-coupled electronics	14	2.6.2.4.2 Level sensor	124
2.2	Devices and Functions	16	2.6.2.5 Speed Sensors	128
2.2.1	Engine Control Unit ECU 9	16	2.6.2.5.1 Speed sensor	128
2.2.2	Medium Attachment Unit MAU - Operation	17	2.6.2.5.2 Turbocharger speed sensor	131
2.3	Technical Data	19	2.6.2.6 Special Sensors	134
2.3.1	ECU 9 - Mechanical design	19	2.6.2.6.1 Lambda sensor	134
2.3.2	Engine Control Unit ECU 9	21	2.6.2.6.2 Engine Identification Label EIL - Design and function	137
2.3.3	Operating voltage ECU 9	23	2.6.3 Actuators	138
2.3.4	MAU adapter	26	2.6.3.1 Injectors	138
2.4	Interfaces	27	2.6.3.2 Turbine bypass flap	141
2.4.1	Plant and engine inputs and outputs ECU 9 - Circuit design	27	2.6.3.3 Donor cylinder flap	144
2.4.2	Inputs and outputs - Plant	40	2.6.3.4 Shutoff cylinder flap	146
2.4.3	Engine inputs and outputs	47	2.7 Functions	149
2.5	Cabling	51	2.7.1 Engine CAN bus	149
2.5.1	Plant cable W001 - ECU 9 at connector X1	51	2.7.2 Exhaust gas recirculation	152
2.5.2	Plant cable W001 with DEUTSCH plug connectors - ECU 9 on connector X1	55	3 Operational Basics	
2.5.3	Sensor wiring harness Series 4000T04	59	3.1 Engine - Start	153
2.5.4	Injector wiring harness 12V4000T04	69	3.2 Engine - Stop	154
2.6	Sensors, Actuators and Injectors on the Engine	72	3.3 Emergency stop	155
2.6.1	Sensors and actuators - Installation positions	72	3.4 Overspeed test	156
2.6.2	Sensors	76	4 Repair	
2.6.2.1	Pressure Sensors	76	4.1 Diagnosis and Programming	157
2.6.2.1.1	Pressure sensor (0 to 10 bar)	76	4.1.1 ECU - Self-test	157
2.6.2.1.2	Pressure sensor (0 to 15 bar)	80	4.1.2 Test functions	158
2.6.2.1.3	Pressure sensor 6 bar	85	4.1.3 ECU 9 fault messages	159
2.6.2.1.4	Pressure sensor 0.5 to 6 bar (absolute value)	90	4.2 Engine governor ECU 9 - Removal and installation	174
2.6.2.1.5	Pressure sensor (±70 mbar)	94	5 Appendix A	
2.6.2.1.6	Rail pressure high-pressure sensor	98	5.1 Contact person/Service partner	175
			5.2 Abbreviations	176

1 Safety

1.1 Safety regulations for startup and operation

Safety regulations for startup

- Prior to initial operation all official approvals must have been granted and the prerequisites for commissioning met.
- The product must be installed as instructed and accepted to manufacturer's standards before being put into operation for the first time.
- When putting the product into operation, always ensure that:
 - All maintenance and repair work has been completed
 - All loose parts have been removed from rotating machine components
 - All personnel is clear of the danger zone represented by rotating machine components
- Immediately after putting the product into operation, make sure that all control and display instruments as well as the monitoring, signaling and alarm systems are working properly.

Safety regulations for equipment operation

- The operator must be familiar with the controls and displays.
- The operator must be familiar with the consequences of any operations performed.
- During operation, the display instruments and monitoring units must be permanently observed with regard to present operating status, violation of limit values and warning or alarm messages.

Malfunctions and emergency stop

- The procedures for cases of emergency, in particular, emergency stop, must be practiced regularly.
- The following steps must be taken if a malfunction of the system is recognized or reported by the system:
 - Inform supervisor(s) in charge.
 - Analyze the message.
 - If required, carry out emergency operations e.g. emergency stop.

Operation

Note the following requirements before starting the product:

- Wear ear protectors.
- Ensure that the engine room is well-ventilated.
- Do not inhale the exhaust gases of the product.
- The exhaust system is leak-tight and that the gases are vented to atmosphere.
- Mop up any leaked or spilled fluids and lubricants immediately or soak up with a suitable binder agent.
- Protect battery terminals, generator terminals or cables against accidental contact.

Operation of electrical equipment

When electrical equipment is in operation, certain components of these appliances are electrically live.

- Observe the safety instructions for these devices.

1.2 Safety regulations for maintenance and repair work

Before commencing maintenance and repair work

- Have maintenance or repair work carried out by qualified and authorized personnel only.
- Allow the product to cool down to less than 50°C (risk of explosion of oil vapors, fluids and lubricants, risk of burning).
- Relieve pressure in fluid and lubricant systems and compressed-air lines which are to be opened. Use suitable containers of adequate capacity to catch fluids and lubricants.
- When changing the oil or working on the fuel system, ensure that the engine room is adequately ventilated.
- Never carry out maintenance and repair work with the product in operation.
- Do not test operation with the product running unless expressly instructed to do so.
- Secure the product against unintentional starting, e.g. with start interlock.
- Attach “Do not operate” sign in the operating area or to control equipment.
- Disconnect the battery. Lock contactors.
- Close the main valve on the compressed-air system and vent the compressed-air line when pneumatic starters are fitted.
- Disconnect the control equipment from the product.

In addition for starters equipped with copper beryllium pinions:

- Wear a breathing mask (filter class P2) when performing maintenance work to eliminate the health risk presented by the beryllium in the pinion.
- Do not blow out the interior of the flywheel housing or the starter with compressed air.
- Furthermore, the interior of the flywheel housing must be cleaned with a class H dust extraction device.

During maintenance and repair work

- Take special care when removing ventilation or plug screws from the product.
- Cover the screw or plug with a cloth to prevent fluids escaping under pressure when removing vent screws or plugs.
- Take care when draining hot fluids and lubricants (risk of burning).
- Use only proper and calibrated tools. Observe the specified tightening torques during assembly or disassembly.
- Carry out work only on assemblies or plants which are properly secured.
- Never use lines for climbing.
- Keep fuel injection lines and connections clean.
- Always seal connections with caps or covers if a line is removed or opened.
- Take care not to damage lines, in particular fuel lines, during maintenance and repair work.
- Ensure that all retainers and dampers are installed correctly.
- Ensure that all fuel injection and pressurized oil lines are installed with enough clearance to prevent contact with other components. Do not place fuel or oil lines near hot components.
- Do not touch elastomeric seals if they have carbonized or resinous appearance unless hands are properly protected.
- Note cooling time for components which are heated for installation or removal (risk of burning).
- When working high on the equipment, always use suitable ladders and work platforms.
- Make sure components or assemblies are placed on stable surfaces.
- Ensure particular cleanliness during maintenance and repair work on the product. After completion of maintenance and repair work, make sure that no unattached parts are in/on the product (e.g. cloths and cable ties).

After completing maintenance and repair work

- Ensure that all personnel is clear of the danger zone presented by the product before cranking.
- Check that all guards have been reinstalled and that all tools and loose parts have been removed after working on the product (in particular, the barring tool).

Welding work

Welding on the product or mounted units are not permitted.

- Remove parts (e.g. exhaust pipes) which are to be welded from the product beforehand.
- Cover the product when welding in surrounding areas.

Before starting welding work:

- Switch off the power supply master switch.
- Disconnect the battery.
- Separate the electrical ground of electronic equipment from the ground of the unit.

When welding in the vicinity of the product:

- Do not perform other maintenance and repair work on the product. Risk of explosion or fire due to oil vapors and highly flammable fluids and lubricants.
- Do not use product as ground terminal.
- Never position the welding power supply cable adjacent to, or crossing wiring harnesses of the product. The welding current may otherwise induce an interference voltage in the wiring harnesses which could conceivably damage the electrical system.

Hydraulic installation and removal

- Check satisfactory function and safe operating condition of tools, jigs and fixtures to be used. Use only the specified jigs and fixtures for hydraulic removal/installation procedures.
- Observe the max. permissible force-on pressure specified for the jig/fixture.
- Do not attempt to bend or apply force to lines.
- During hydraulic installation and removal, ensure that nobody is standing in the immediate vicinity of the component to be installed/removed.

Before starting work, pay attention to the following:

- Vent the hydraulic installation/removal tool, the pumps and the lines at the relevant points for the system to be used (e.g. open vent plugs, pump until bubble-free air emerges, close vent plugs).
- For hydraulic installation, screw on the jig with the piston retracted.
- For hydraulic removal, screw on the jig with the piston extended.
- For a hydraulic installation/removal jig with central expansion pressure supply, screw spindle into shaft end until correct sealing is established.

Working with batteries

- Observe the safety instructions of the battery manufacturer when working with batteries.

Gases emanating from the battery are explosive.

- Avoid sparks and naked flames.
- Never place tools on the battery.
- Before connecting the cable to the battery, check the battery polarity.

Battery pole reversal may lead to injury through the sudden discharge of acid or bursting of the battery body.

- Never place tools on the battery.
- Do not allow electrolyte to come in contact with skin or clothing.
- Wear goggles and protective gloves.

Working on electrical and electronic assemblies

- Always obtain the permission of the person in charge before commencing maintenance and repair work or switching off any part of the electronic system required to do so.
- De-energize the appropriate areas prior to working on assemblies.
- Do not damage cabling during removal work.
- When reinstalling ensure that wiring is not damaged during operation by contact with sharp objects, by rubbing against other components or by a hot surface.
- Do not secure cables on lines carrying fluids.
- Do not use cable straps to secure cables.
- Always use connector pliers to tighten union nuts on connectors.
- Subject the device as well as the product to a function check on completion of all repair work. In particular, check the function of the engine emergency stop feature.
- Store spare parts properly prior to replacement, i.e. protect them against moisture in particular.
- Pack defective electronic components and assemblies in a suitable manner when dispatched for repair, i.e. protected, in particular, against moisture and impact and wrapped in antistatic foil if necessary.

Working with laser equipment

- When working with laser equipment, always wear special laser-protection goggles (hazard due to heavily focused radiation).

Laser equipment must be equipped with the protective devices necessary for safe operation according to type and application.

For conducting light-beam procedures and measurement work, only the following laser devices must be used:

- Laser devices of classes 1, 2 or 3A.
- Laser devices of class 3B, which have maximum output in the visible wavelength range (400 to 700 nm), a maximum output of 5 mW, and in which the beam axis and surface are designed to prevent any risk to the eyes.

2 Design and Function

2.1 System Layout

2.1.1 System design - Electronic Engine Control System ECS with Engine Control Unit ECU 9

Design of Engine Control System ECS

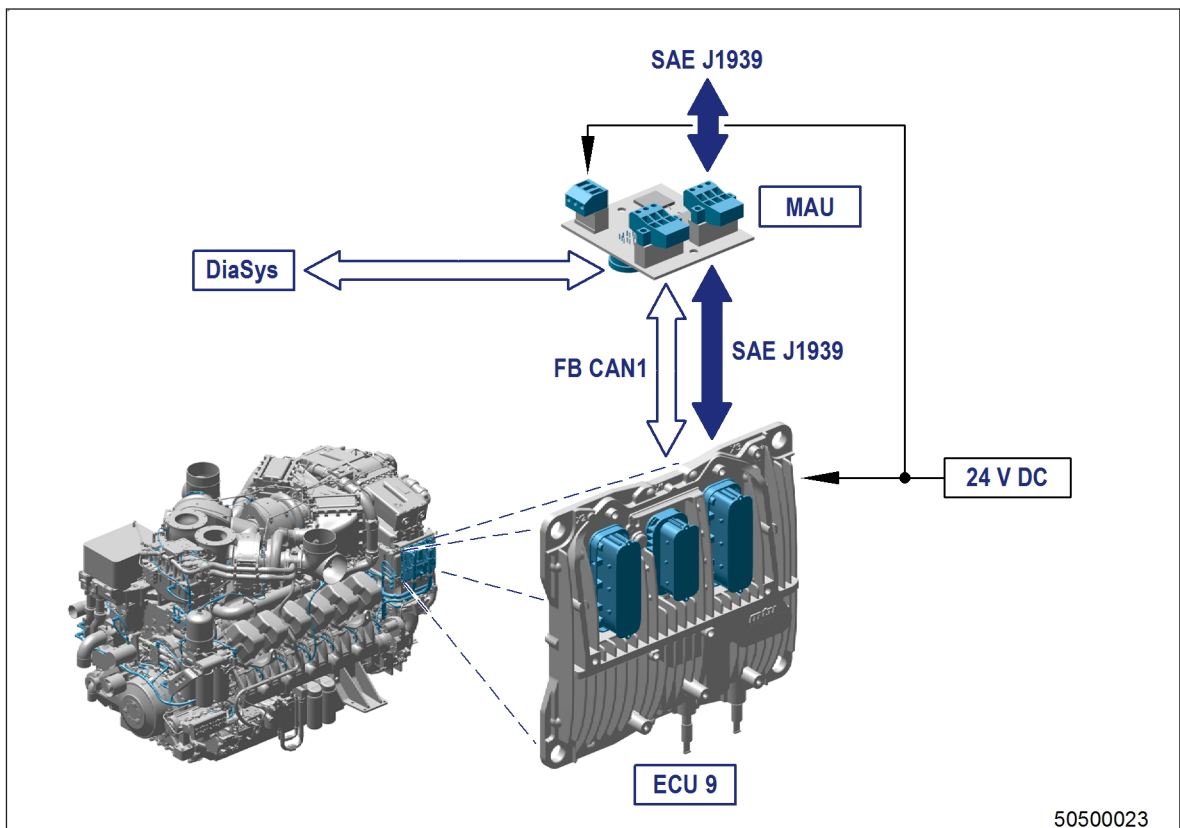


Figure 1: Engine control system with ECU 9

Designation	Meaning
SAE J1939	CAN interface as per J1939 standard
DiaSys	Dialog system for setting/diagnostics of ECU using its parameters PR
FB CAN1	mtu CAN bus – only transmitting for DiaSys
ECU 9	Engine Control Unit
24 V DC	External voltage supply
MAU	Connection adapter
24 V DC	Supply voltage

The Engine Control System for the Series 4000T94 FRAC engines consists of the following devices:

- Engine Control Unit ECU 9
- Sensors on the engine
- Actuators on the engine
- Injectors on the engine
- Wiring harnesses on the engine
- Connecting cable W001, on one side with a connector fitting X1 of ECU 9, on the other side with open end or DEUTSCH connectors (optional)
- MAU adapter for connection of dialog system DiaSys (optional)

Engine Control Unit ECU 9

Key functions of Engine Control Unit ECU 9:

- Electronic engine management and control
- Monitoring of inadmissible engine operating states
- Transmission of operating data as per J1939 to ECU 9
- Output of fault messages and fault codes to the J1939 interface
- Hardware interfaces to a higher-level control system (optional)
- Inputs for plant sensors (option)
- Engine safety features including engine shutdown
- Integrated fault diagnostic system ITS
- Integrated load profile recorder
- Automatic engine power reduction for safety as a function of:
 - Intake air temperature
 - Operating site (e.g. altitude above sea level)
 - Other parameters
- Monitoring of exhaust gas values

EMC

EMC design of the fully integrated system is based on a two-pole ungrounded power supply. This is particularly relevant to CE labeling as per EMC directive.

Ground connection

The ground of the power supply (battery negative) and all electronic devices should not be connected to ground. The entire electronic system is electrically isolated from ground. This also applies to the sensors. None of the signal cables and/or supply cables for the sensors are connected with the housing of the relevant sensor.

Signal-to-noise ratio

Electrical isolation between mechanical and electronic components significantly enhances the signal-to-noise ratio. A good signal-to-noise ratio on all electrical lines is essential for satisfactory transmission of data on the CAN bus and all analog and binary sensor signals.

Connection to plant

Interface MAU

For this use case, a cable with open end is supplied (→ Page 51); the customer must apply this on a terminal strip.

The Engine Control Unit's two CAN buses CAN 1 (mtu field bus) and CAN 2 (J1939) can be connected to the MAU and, if necessary, terminated with a termination resistor there. The two buses thus terminate here. In this case, CAN 1 transfers data as per the proprietary Rolls-Royce Solutions PCS-5 protocol (field bus FB). CAN 2 is configured as J1939. If external monitoring devices are connected here, the bus is not terminated with the termination resistor until the last device connected on this bus.

In this way, the Rolls-Royce Solutions dialog socket is available on the MAU.

Cable with bayonet plug connectors

In this use case, a special cable with two DEUTSCH plug connectors (voltage supply and signals) is supplied (→ Page 55). This must be adapted and wired in a switchgear cabinet on the customer side, with the customer ensuring correct wiring and termination of the two CAN buses with termination resistor.